

PUBLISHED: 07-JUN-2017
2015.0 RANGE ROVER (LG), 303-01

ENGINE - TDV8 4.4L DIESEL

INTAKE MANIFOLD PLENUM CHAMBER

(G1509175)

REMOVAL AND INSTALLATION

30.15.02	MANIFOLD - INTAKE - LH /FRONT /EACH - RENEW	4400 CC, TDV8	1.5	USED WITHINS	
----------	--	------------------	-----	-----------------	--

PART(S)

STEP	REPLACE PART / RENEW PART	PART NAME	
Removal Step 6	Renew Part	EGR outlet pipe to throttle body gasket	1


REMOVAL

1. Refer to: [Engine Cover - 4.4L V8 - TdV8](#) (501-05 Interior Trim and Ornamentation, Removal and Installation).


2. Refer to: [Secondary Bulkhead Centre Panel - TDV8 4.4L Diesel](#) (501-02 Front End Body Panels, Removal and Installation).

3.  **CAUTION:**


Before disconnecting any components, make sure the area is clean and free from foreign material. When disconnected all openings must be sealed.

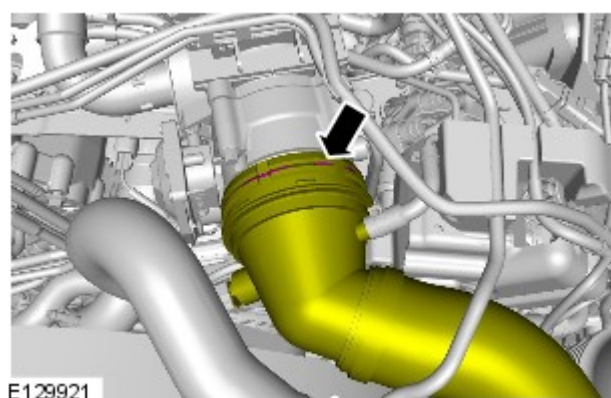

4.

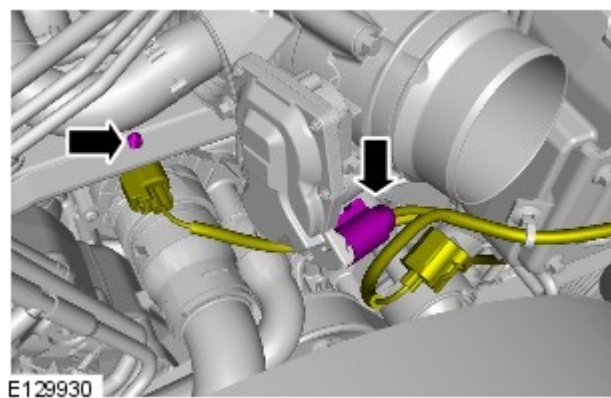

5.

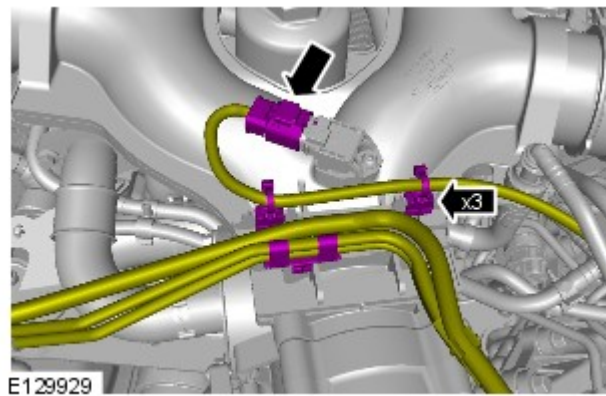


6.



NOTES:


- Remove and discard the gasket.
- Install a new gasket.

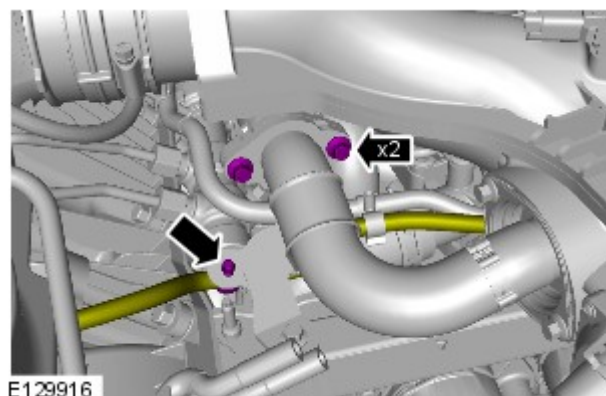

Renew Part: *EGR outlet pipe to throttle body gasket : 1 .*


Torque: 10 Nm

7.

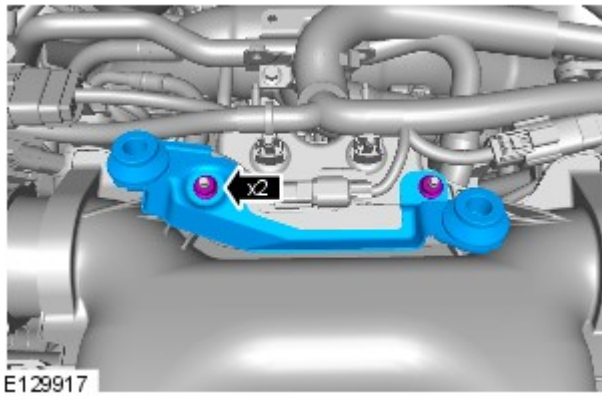

Torque: 10 Nm

8.

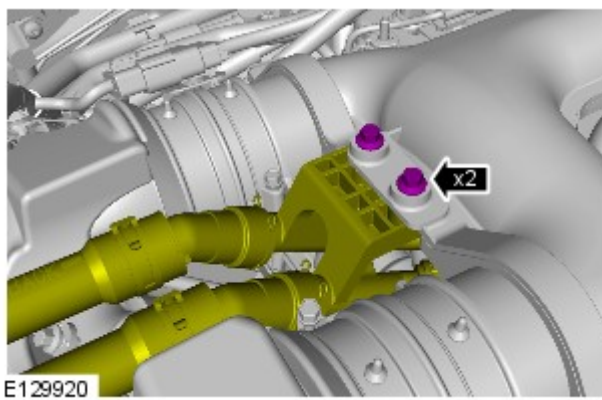


Torque: 10 Nm

9.


⚠ **CAUTION:**

Take extra care not to damage the component.

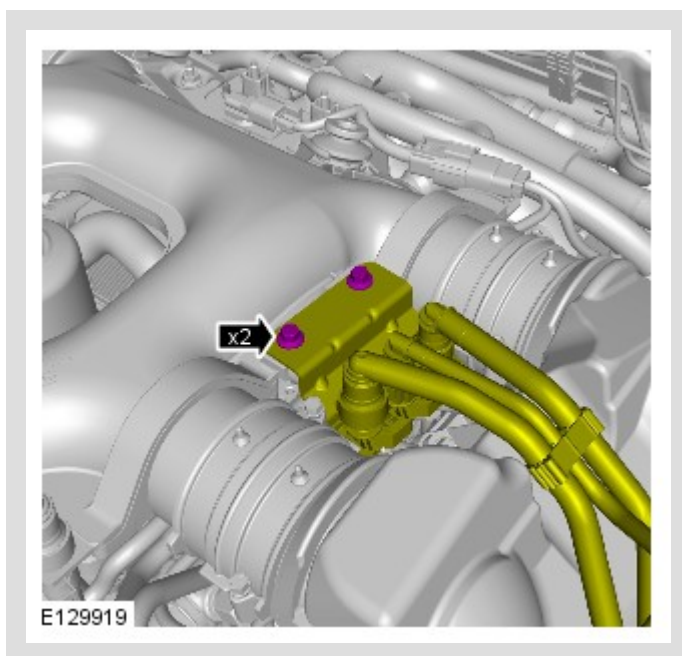


Torque: 10 Nm


10.

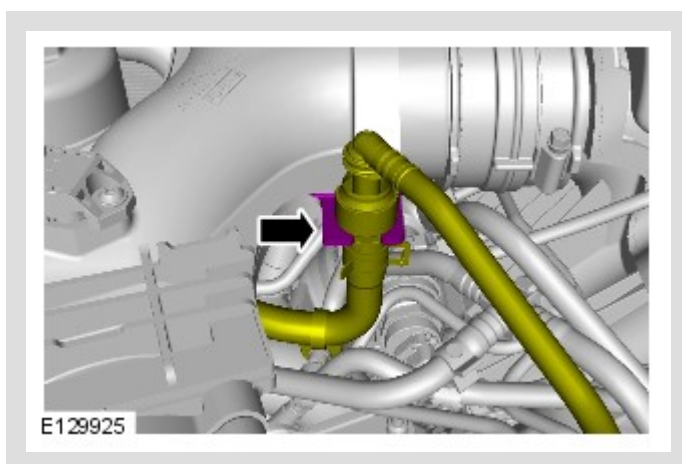

11.

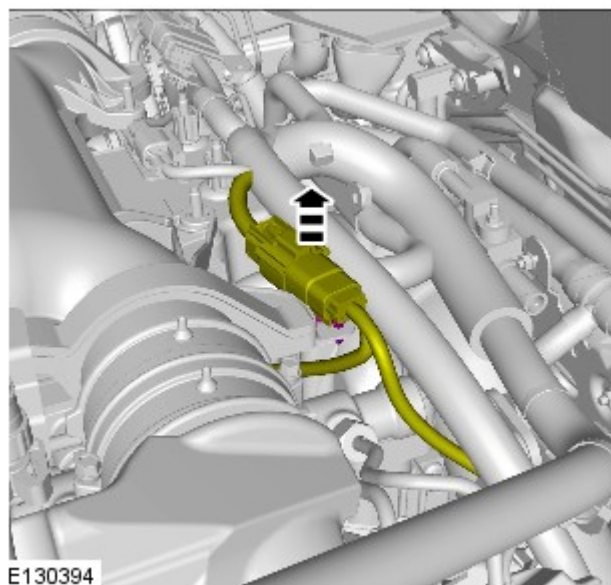

12.

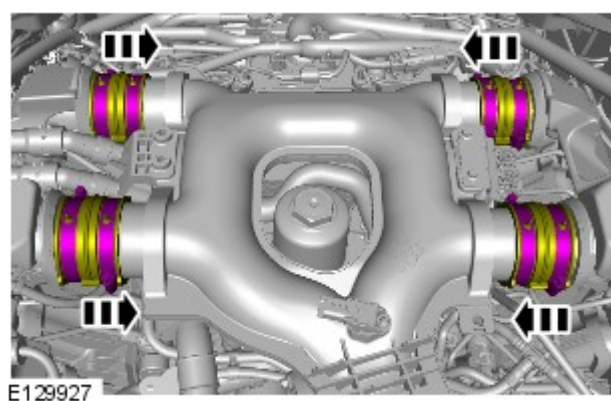


Torque: 5 Nm

13.

⚠ CAUTION:

Before disconnecting any components, make sure the area is clean and free from foreign material. When disconnected all openings must be sealed.

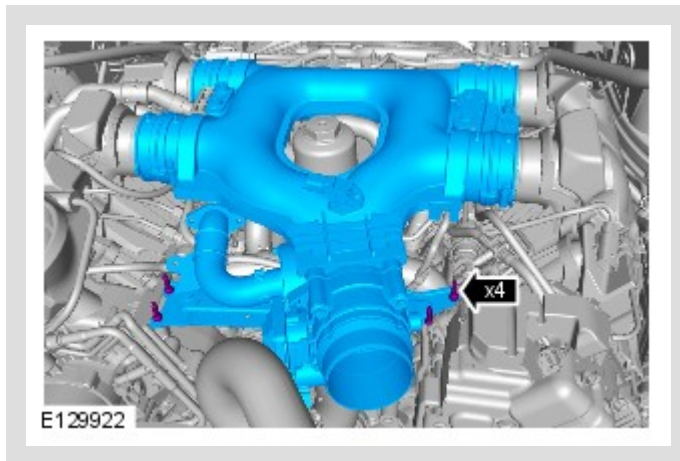

Torque: 10 Nm

14.




CAUTION:

Before disconnecting any components, make sure the area is clean and free from foreign material. When disconnected all openings must be sealed.



NOTE:

Do not disassemble further if the component is removed for access only.

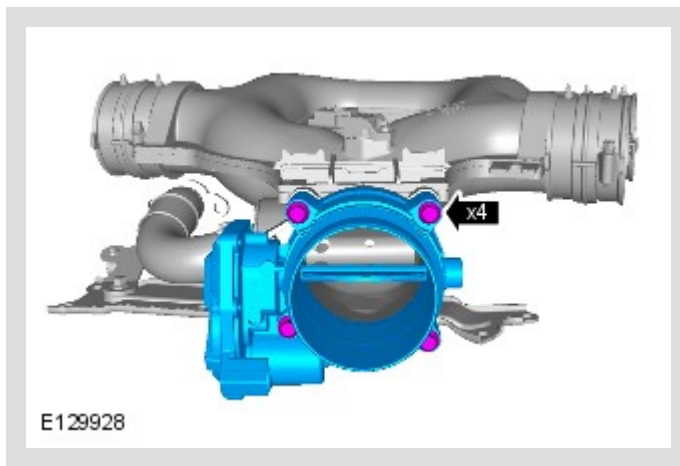


Torque: 12 Nm


15.

⚠ CAUTION:

Before disconnecting any components, make sure the area is clean and free from foreign material. When disconnected all openings must be sealed.

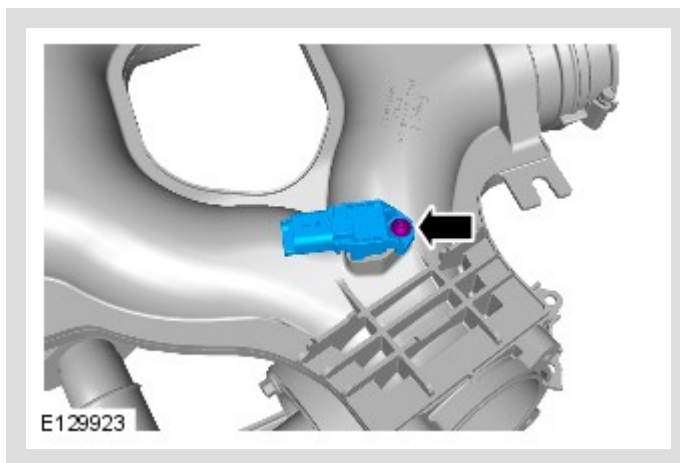


16.

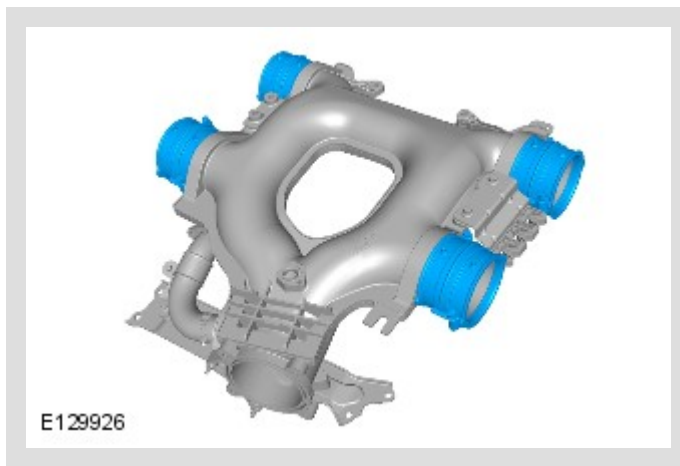

17.


⚠ CAUTION:

Before disconnecting any components, make sure the area is clean and free from foreign material. When disconnected all openings must be sealed.

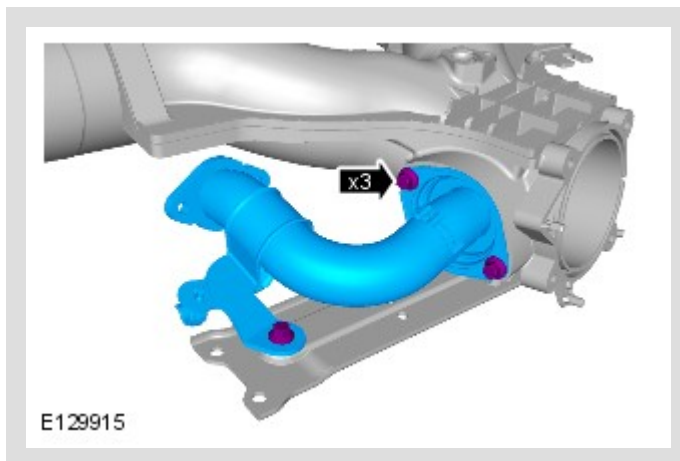

Torque: 10 Nm

18.

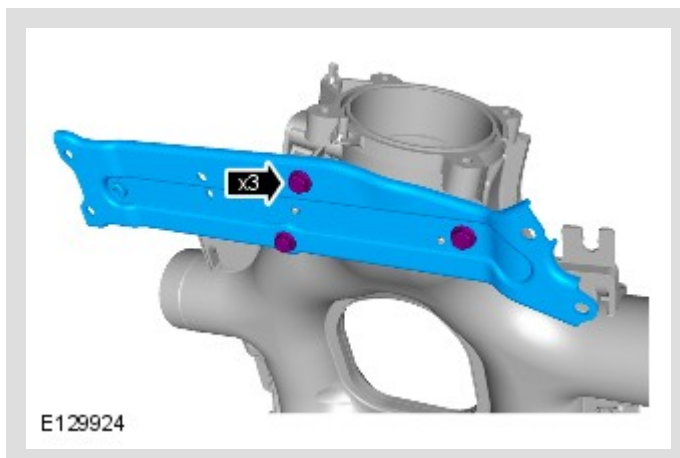

Torque: 10 Nm

INSTALLATION

1. To install, reverse the removal procedure.