

PUBLISHED: 03-MAY-2017
2015.0 RANGE ROVER (LG), 303-01


ENGINE - TDV8 4.4L DIESEL

LEFT VALVE COVER (G1509181)

REMOVAL AND INSTALLATION

12.29.43	COVER - CAMSHAFT /ROCKER OR CYLINDER HEAD - EACH - RENEW	4400 CC, TDV8	4.3	USED WITHINS	
----------	---	------------------	-----	-----------------	--

SPECIAL TOOL(S)

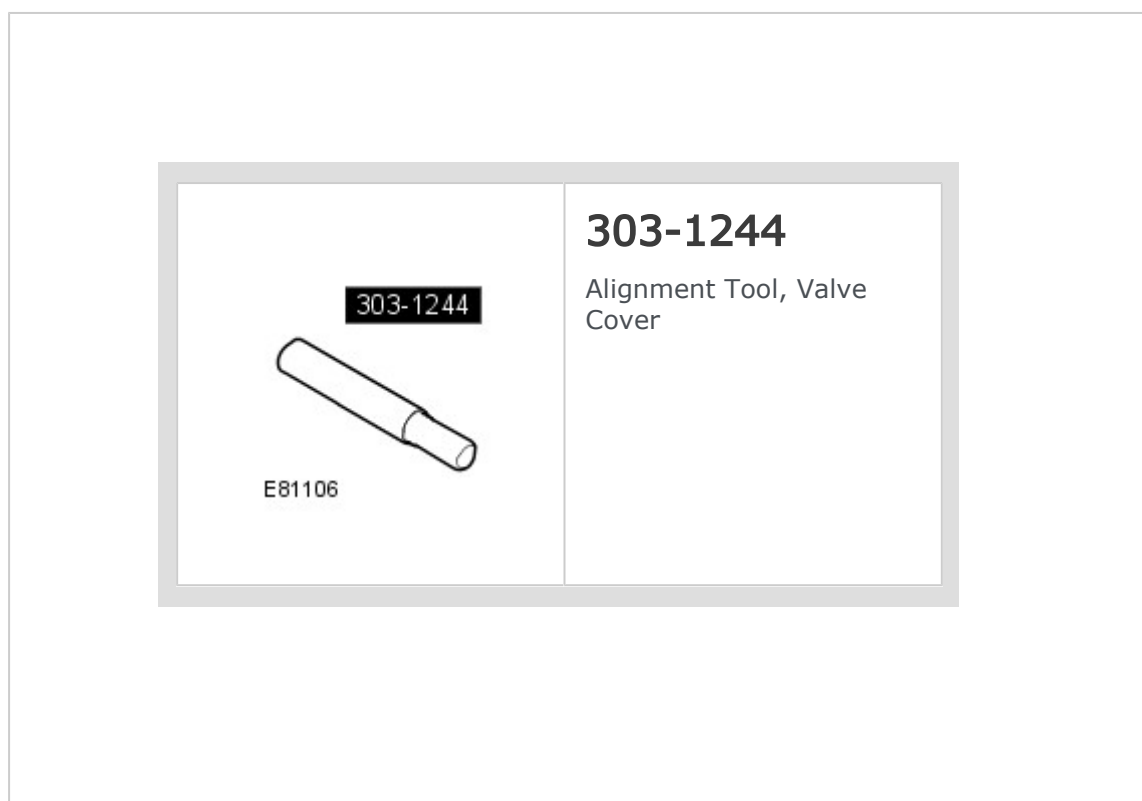

PART(S)

STEP	REPLACE PART / RENEW PART	PART NAME	
Installation Step 7	Renew Part	Fuel injector high pressure pipes	1
Installation Step 8	Renew Part	Fuel injector high pressure pipes	1

REMOVAL



CAUTION:

The use of an electronic torque and angle gauge is recommended during the high pressure fuel pipe tightening procedure.



NOTES:

- Some variation in the illustrations may occur, but the essential information is always correct.
- Engine shown removed for clarity.

1.

Refer to: [Diesel Fuel System Health and Safety Precautions](#) (100-00 General Information, Description and Operation).

2.

Disconnect the battery ground cable.

Refer to: [Specifications](#) (414-00 Battery and Charging System - General Information, Specifications).


3.

Refer to: [Intake Manifold Plenum Chamber](#) (303-01E Engine - TDV8 4.4L Diesel, Removal and Installation).


4.

Refer to: [Left Fuel Injectors](#) (303-04F Fuel Charging and Controls - TDV8 4.4L Diesel, Removal and Installation).


5.

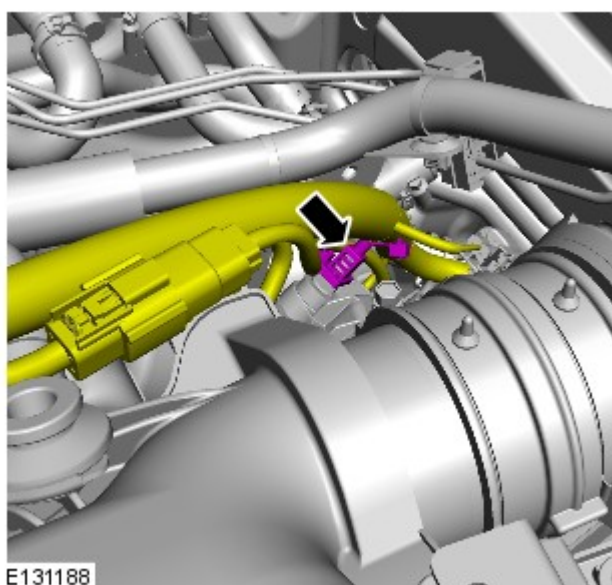

6.

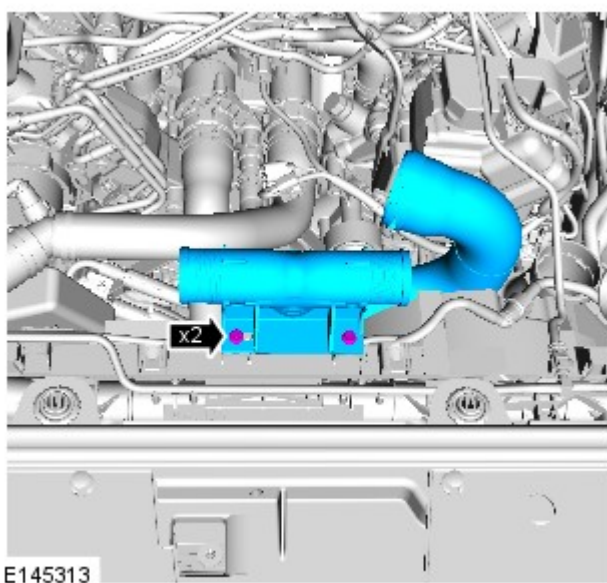


7.

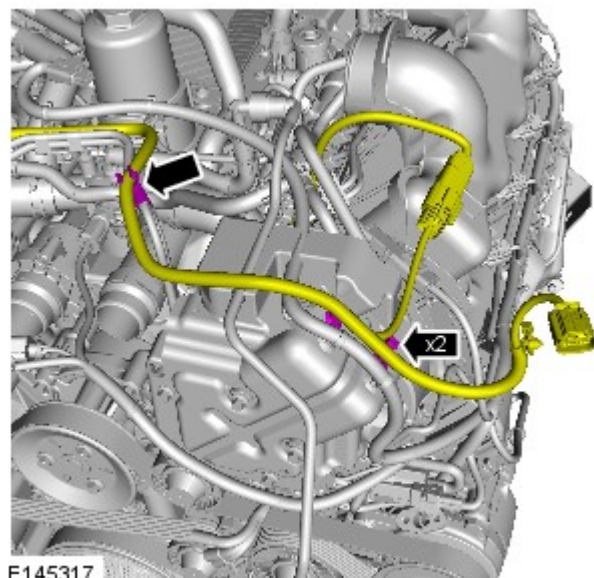


E145317

8.

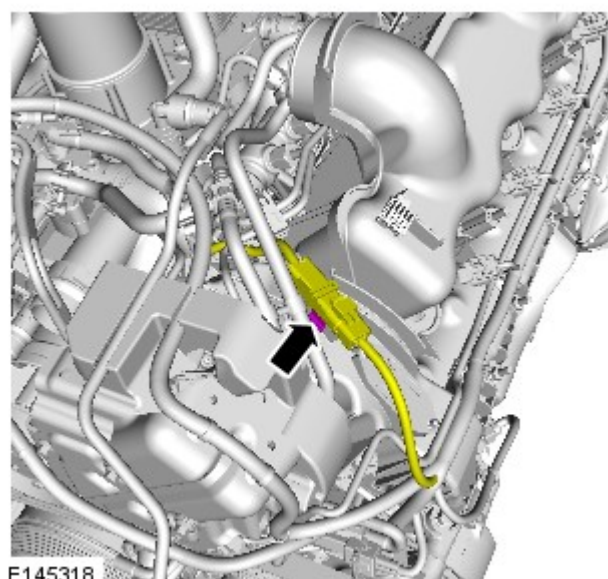


E145318

9.


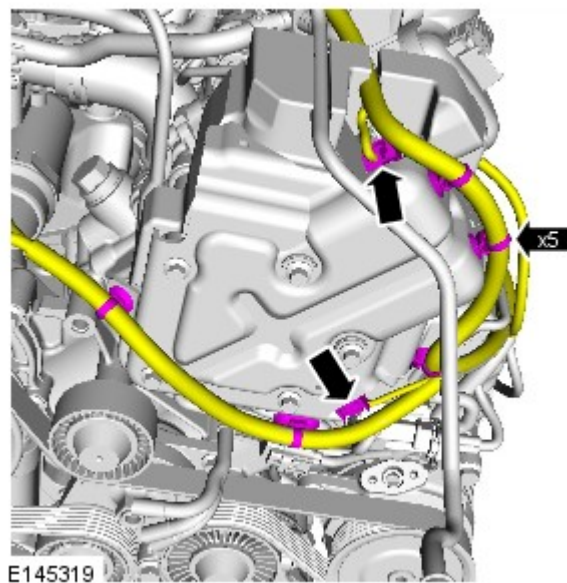


10.

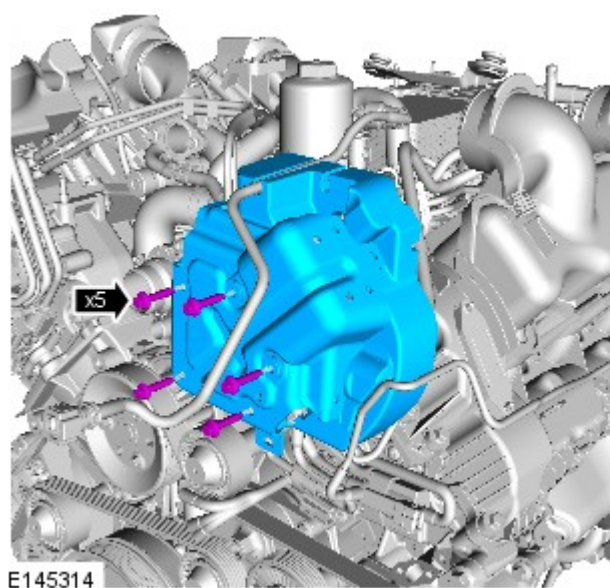

11.


Refer to: [Fuel Injection Component Cleaning](#) (303-04F Fuel Charging and Controls - TDV8 4.4L Diesel, General Procedures).

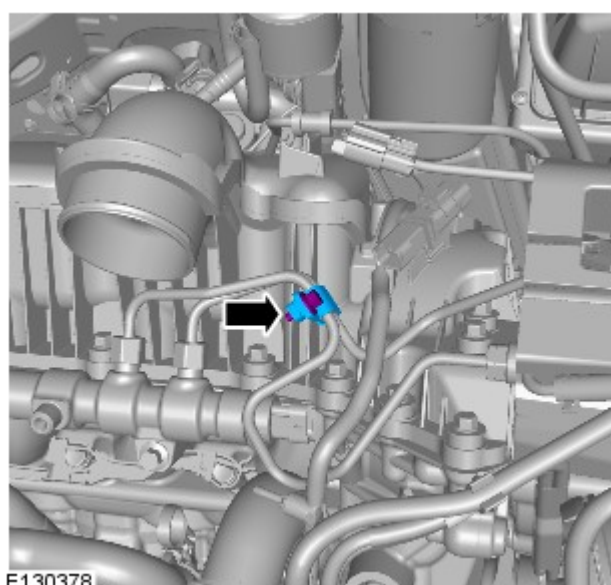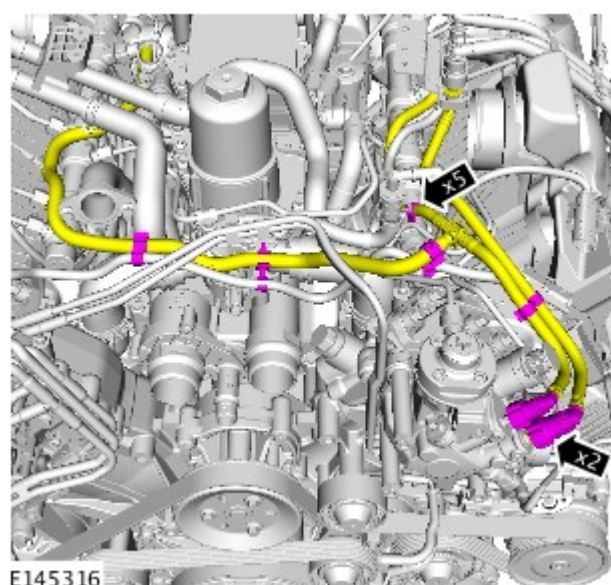



CAUTION:

Discard the fuel pipes.

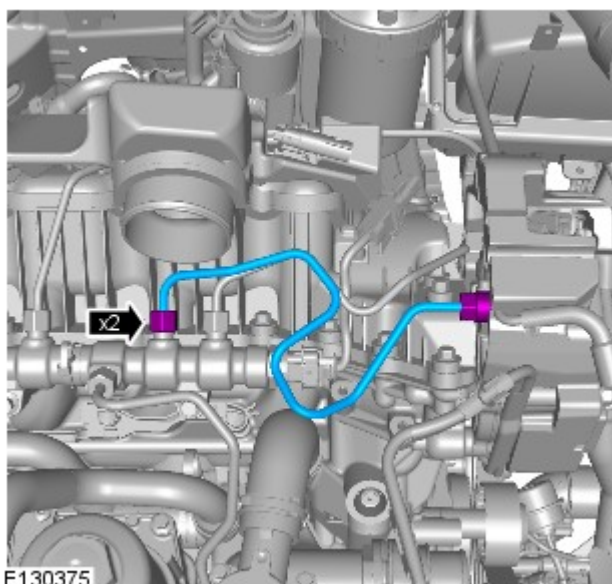


15.




CAUTION:

Discard the fuel pipes.

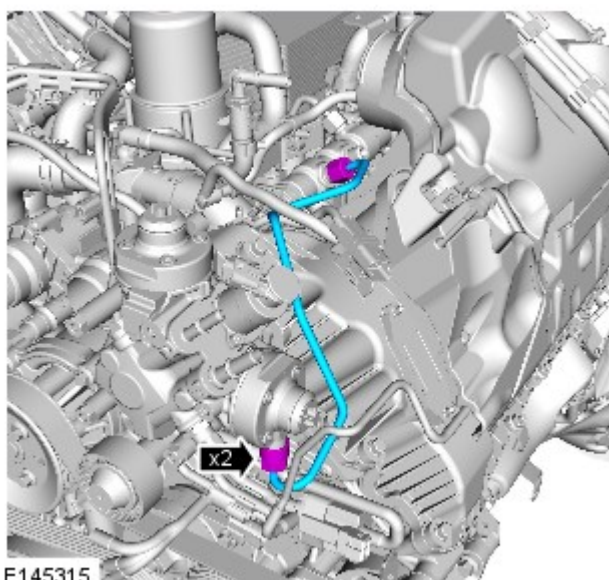

16.

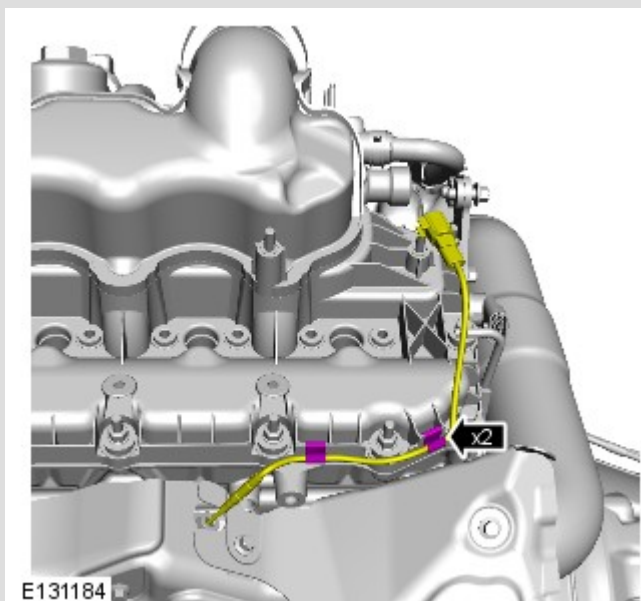


17.



NOTE:

Make sure that all traces of the old sealant are removed from the mating faces.

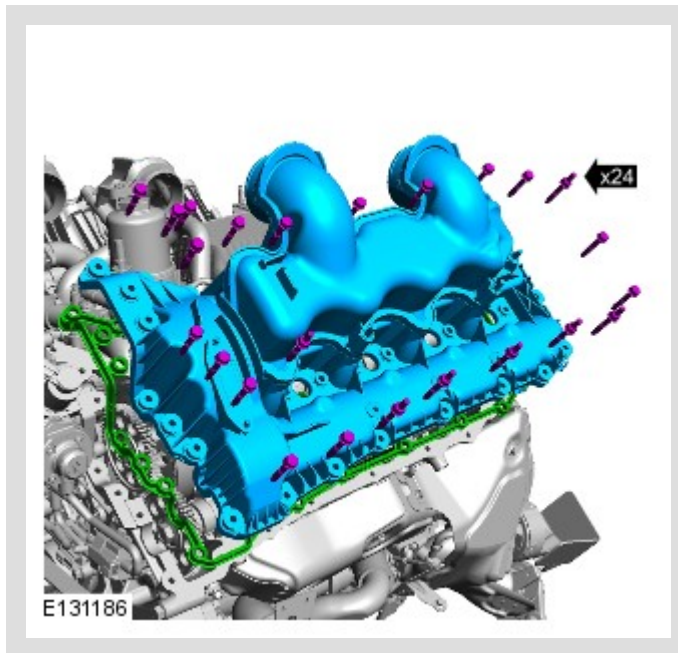


INSTALLATION

1.



CAUTIONS:

- Make sure that the mating faces are clean and free of foreign material.
- The component must be installed within 5 minutes and the bolts torqued within 10 minutes of the sealant application.

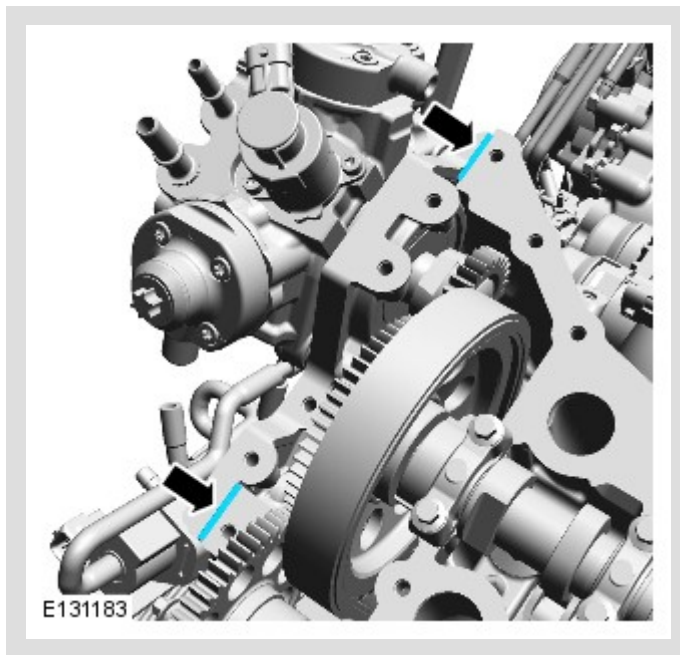



Apply RTV sealant in the position shown.

2.

⚠ CAUTION:

Only tighten the bolts finger-tight at this stage.

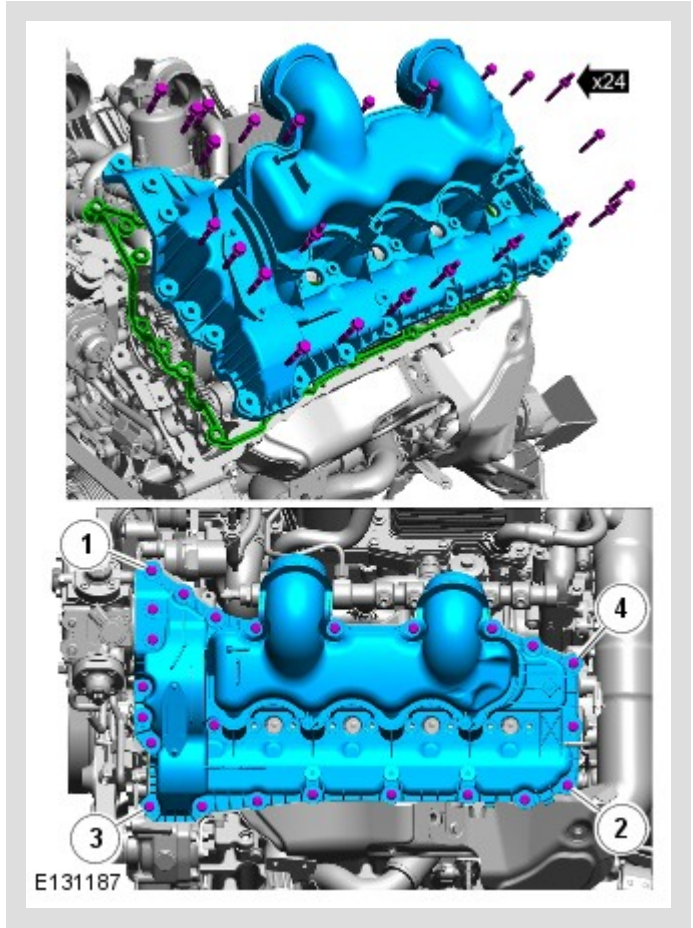

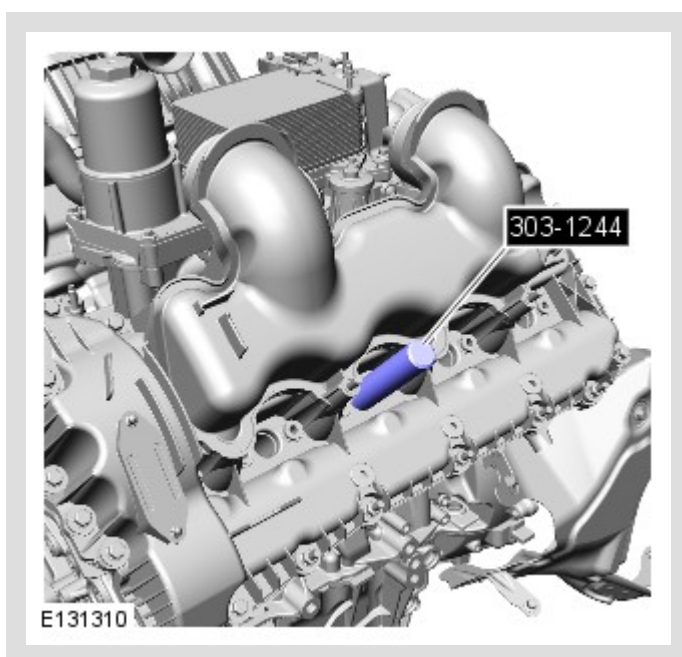


Special Tool(s): [303-1244](#)

4.



CAUTION:

Tighten the bolts in the sequence shown.

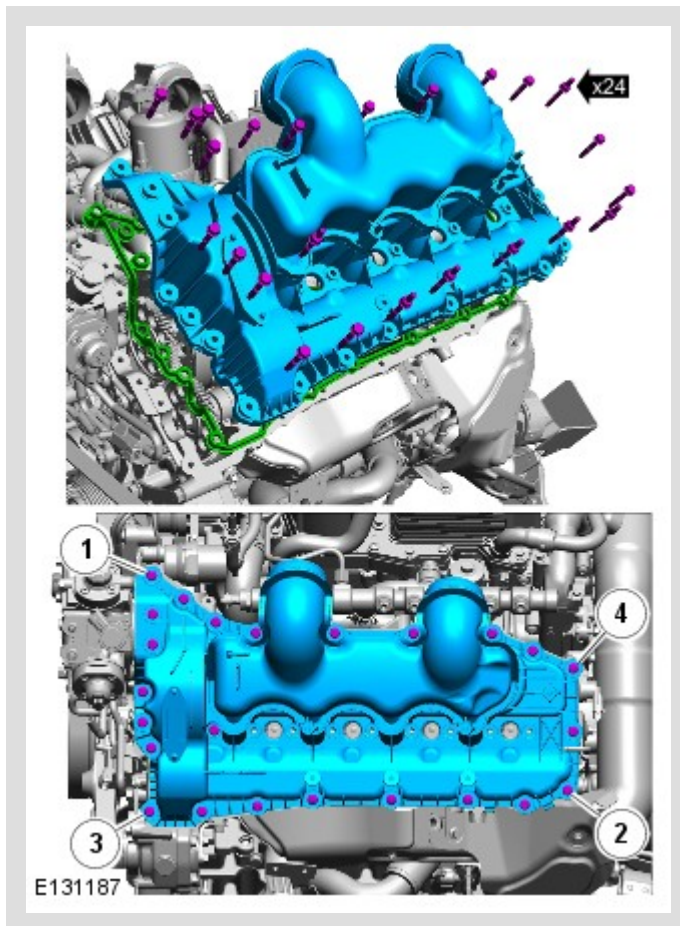


Torque:

Stage 1: Bolts 1-4 **10 Nm**

Stage 2: Remaining Bolts **10 Nm**

5. Remove the special tools.

6.

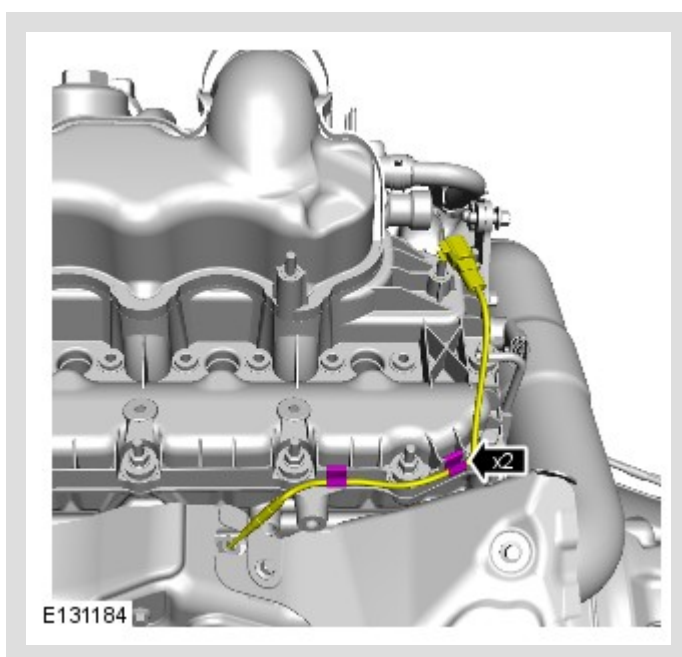

7.




CAUTION:

Install new fuel pipes.



NOTE:

Do not tighten at this stage.

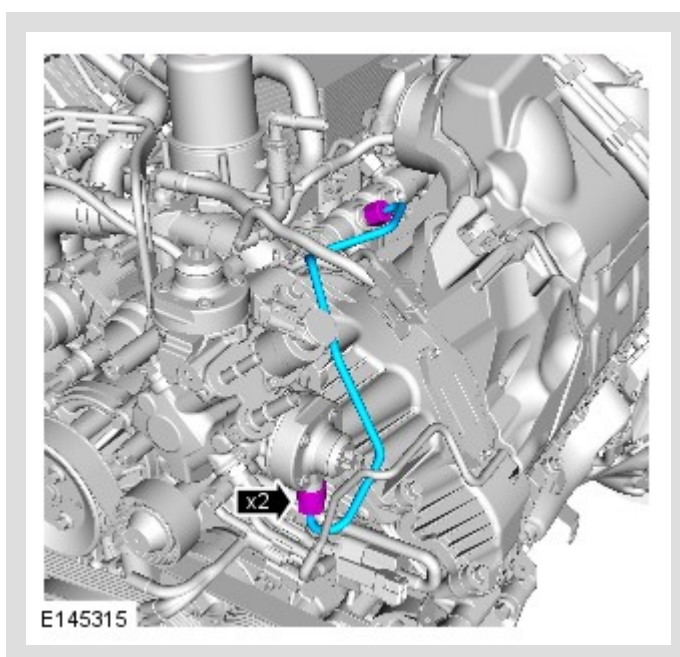

Renew Part: *Fuel injector high pressure pipes* : 1 .


8.

⚠ CAUTION:

Install new fuel pipes.

⚠ NOTE:

Do not tighten at this stage.

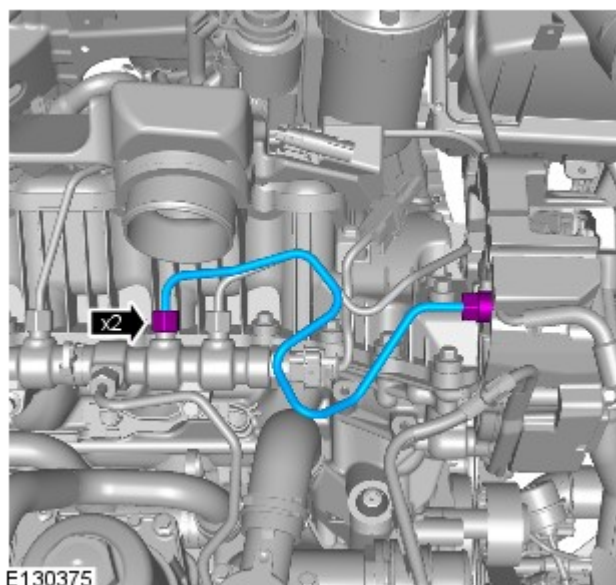


Renew Part: *Fuel injector high pressure pipes : 1 .*

9.




NOTE:

Do not tighten at this stage.

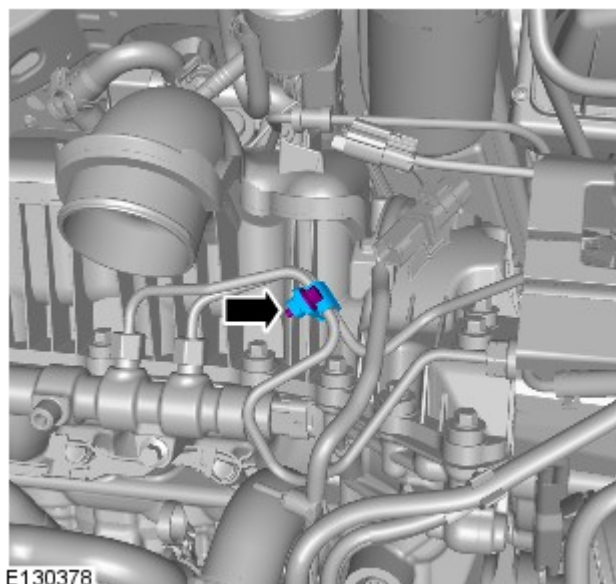


10.

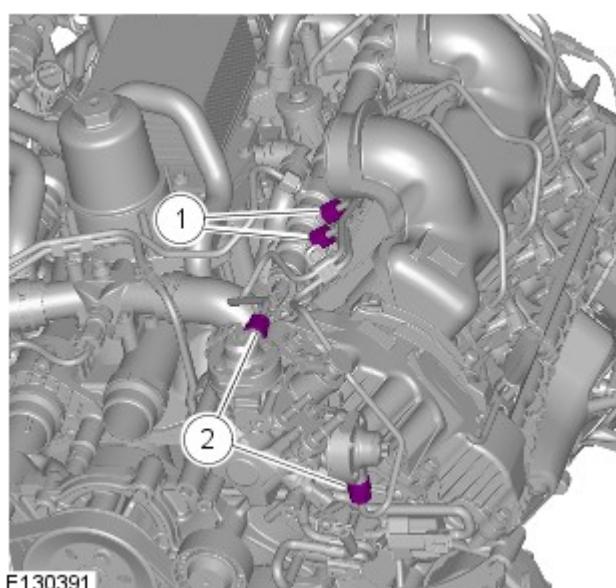

Tighten all.
Torque: 10 Nm

11.

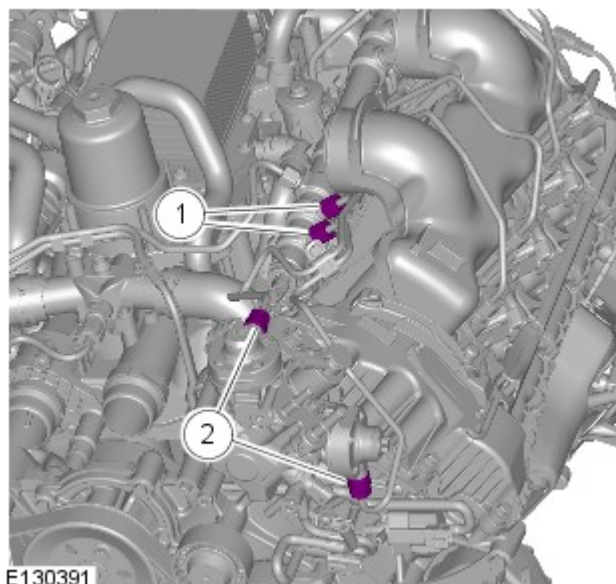


Torque:

Stage 1: 73°


Stage 2: 80°

12.

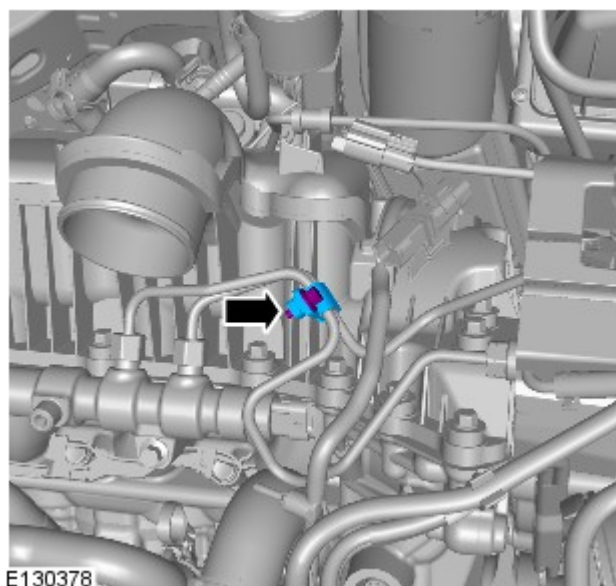


Torque: 10 Nm

13.

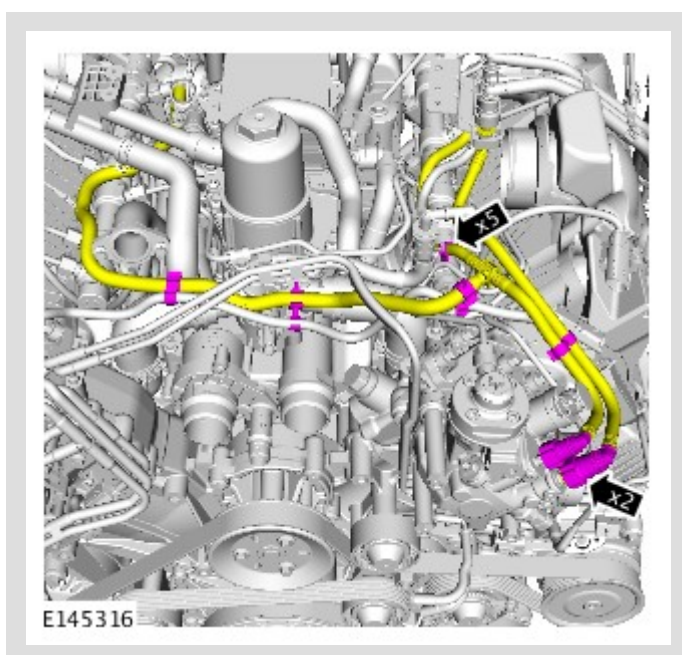


14.

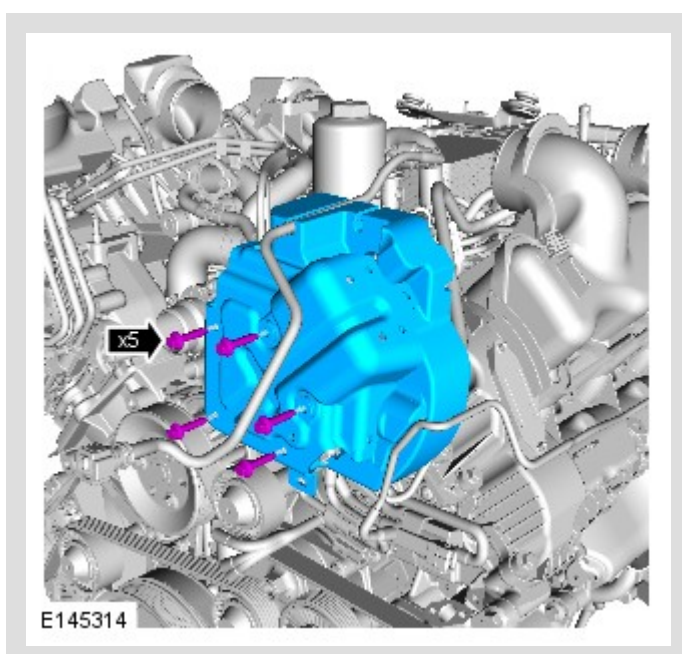


Torque: 10 Nm


15.

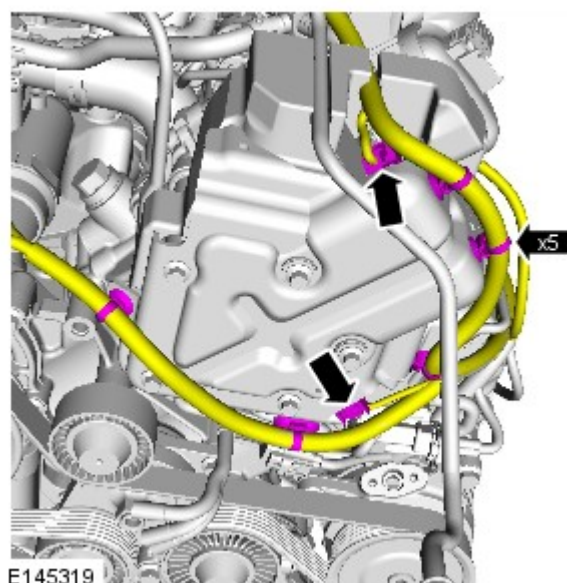

16.

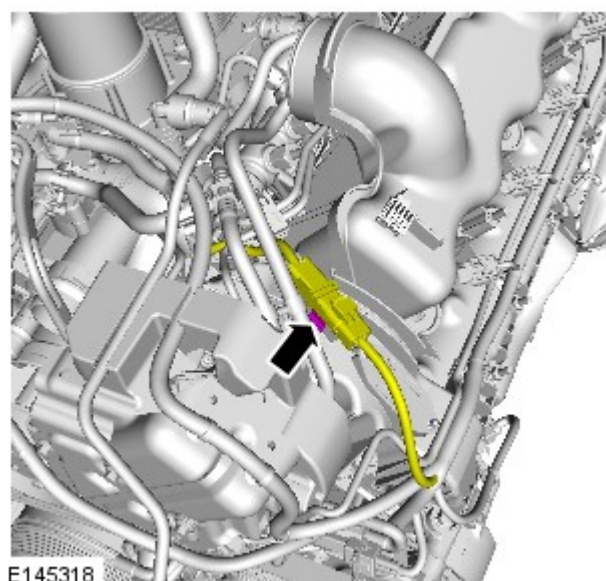


17.

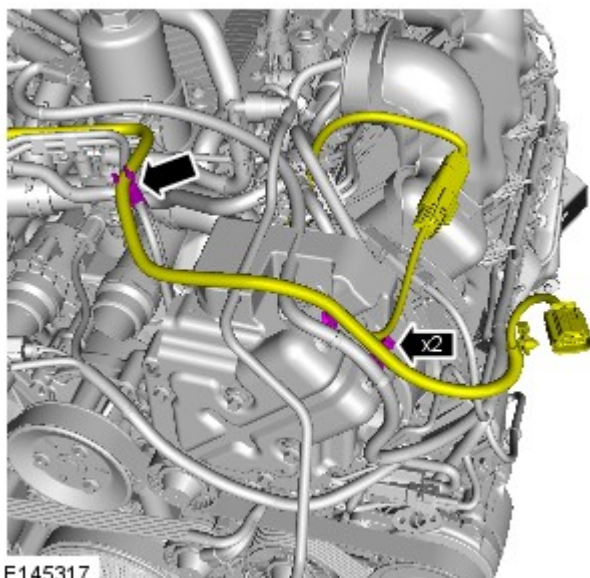


E145317

18.

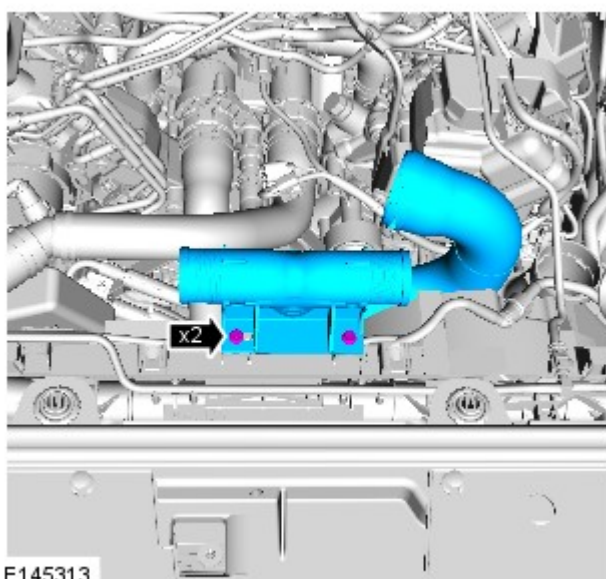

E145313

19.

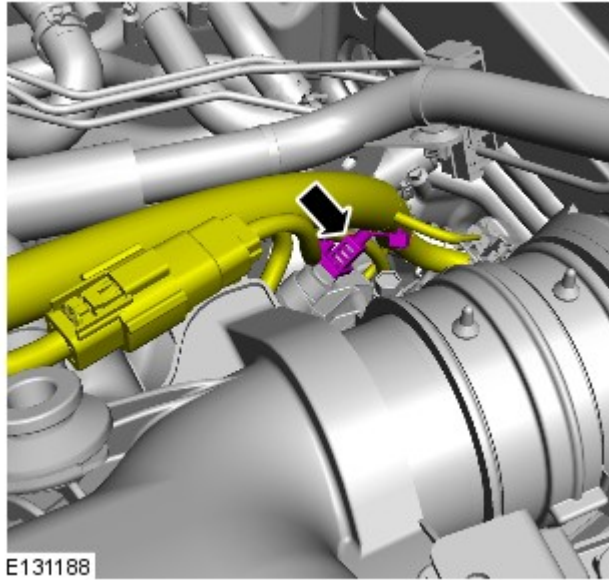

20. Refer to: [Left Fuel Injectors](#) (303-04F Fuel Charging and Controls - TDV8 4.4L Diesel, Removal and Installation).

21. Refer to: [Intake Manifold Plenum Chamber](#) (303-01E Engine - TDV8 4.4L Diesel, Removal and Installation).

22. Connect the battery ground cable.
Refer to: [Specifications](#) (414-00 Battery and Charging System - General Information, Specifications).