

PUBLISHED: 07-JUN-2017  
2015.0 RANGE ROVER (LG), 303-01

ENGINE - TDV8 4.4L DIESEL

# **OIL COOLER** (G1509176)

## REMOVAL AND INSTALLATION


|          |                            |                  |   |                 |  |
|----------|----------------------------|------------------|---|-----------------|--|
| 12.60.68 | COOLER -<br>OIL -<br>RENEW | 4400 CC,<br>TDV8 | 2 | USED<br>WITHINS |  |
|----------|----------------------------|------------------|---|-----------------|--|

### REMOVAL

#### NOTES:


- Some variation in the illustrations may occur, but the essential information is always correct.
- Removal steps in this procedure may contain installation details.

1. Disconnect the battery ground cable.  
Refer to: [Specifications](#) (414-01 Battery, Mounting and Cables, Specifications).

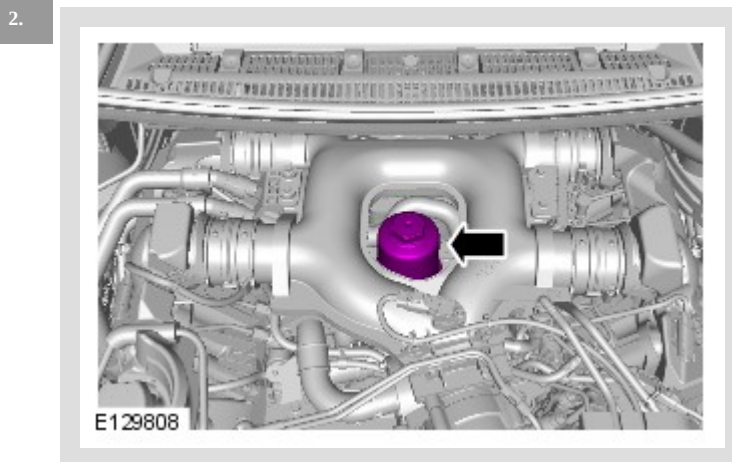


- Loosen the oil filter cover 3 turns and allow the engine oil to drain.
3. Refer to: [Intake Manifold Plenum Chamber](#) (303-01E Engine - TDV8 4.4L Diesel, Removal and Installation).

4.

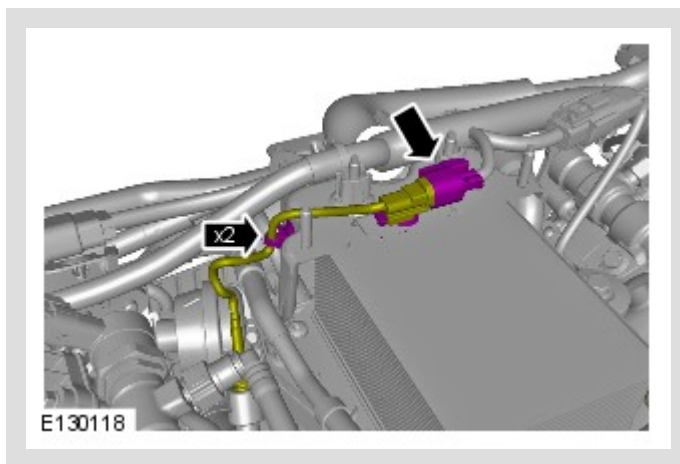

5.

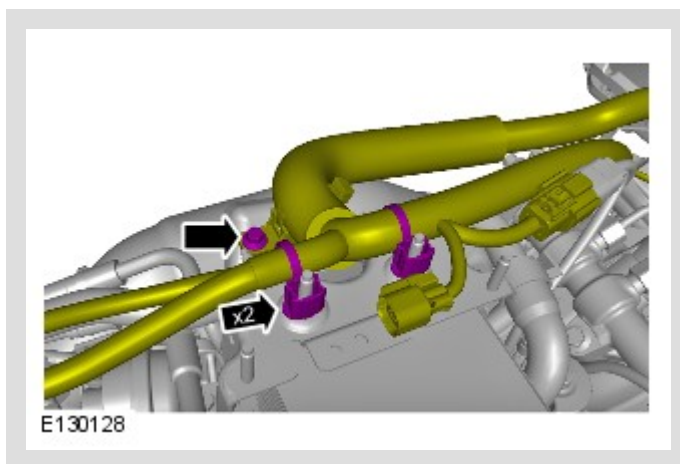


*Torque: 10 Nm*

6.


**⚠ CAUTION:**

Before disconnecting any components, make sure the area is clean and free from foreign material. When disconnected all openings must be sealed.

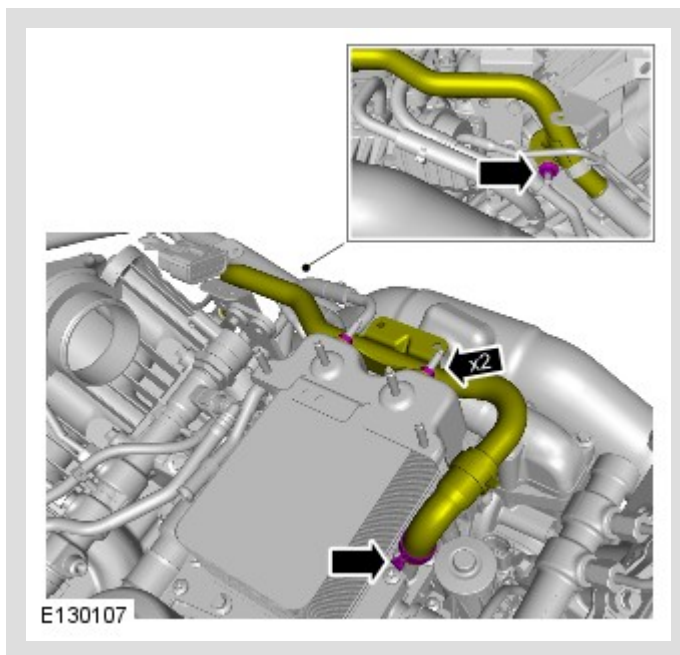

*Torque: 10 Nm*

7.

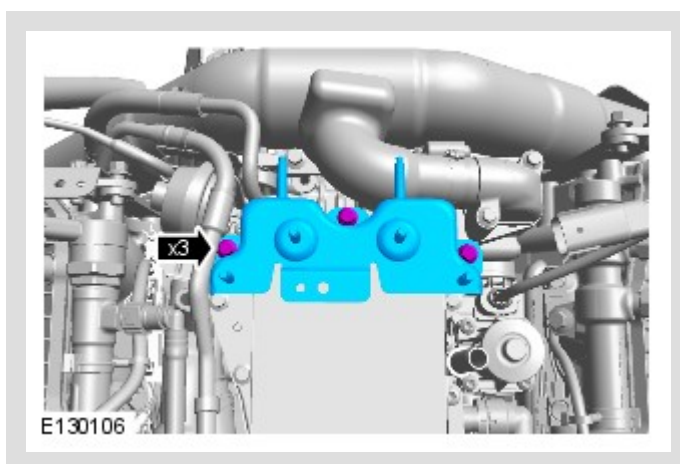


*Torque: 10 Nm*

8.

**⚠ CAUTIONS:**

- Be prepared to collect escaping oil.

- Before disconnecting any components, make sure the area is clean and free from foreign material. When disconnected all openings must be sealed.


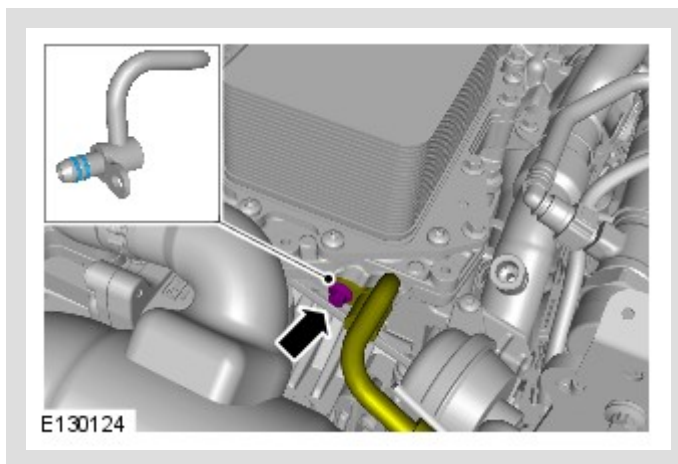


*Torque: 10 Nm*

9.

#### ⚠ CAUTIONS:

- Be prepared to collect escaping oil.
- Be prepared to collect escaping coolant.
- Make sure that the mating faces are clean and free of foreign material.
- Make sure the seal is installed correctly.

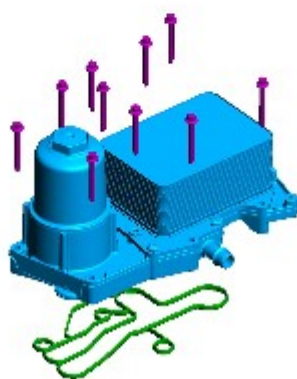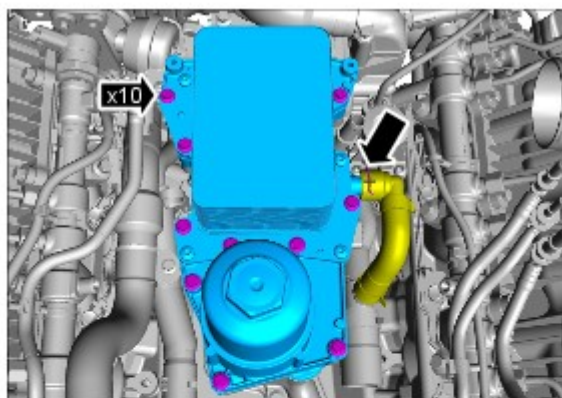

E130123

*Torque: 13 Nm*

## INSTALLATION

1. To install, reverse the removal procedure.