

PUBLISHED: 16-AUG-2017
2015.0 RANGE ROVER (LG), 303-01

ENGINE - TDV8 4.4L DIESEL

OIL PAN (G1509178)

REMOVAL AND INSTALLATION

12.60.44	PAN - OIL - RENEW	LEFT HAND DRIVE, 4400 CC, TDV8, WITH PARTICULATE FILTER	8.1	USED WITHINS
----------	----------------------	--	-----	-----------------

PART(S)

STEP	REPLACE PART / RENEW PART	PART NAME	
Step 1	Renew Part	Oil pan gasket	1
Step 4	Renew Part	Retaining clip	1
Step 6	Renew Part	Turbocharger oil return pipe gasket	1
Step 6	Renew Part	Retaining clip	1
Step 7	Renew Part	Turbocharger oil return pipe gasket	1
Step 7	Renew Part	Retaining clip	1
Step 14	Renew Part	Exhaust downpipe RH to DPF gasket	1

REMOVAL



NOTES:

- Some variation in the illustrations may occur, but the essential information is always correct.
- Removal steps in this procedure may contain installation details.
- Engine shown removed for clarity.

All vehicles

1. Refer to: [Engine Oil Vacuum Draining and Filling](#) (303-01E Engine - TDV8 4.4L Diesel, General Procedures).

2.


Refer to: [Differential Case](#) (205-03 Front Drive Axle/Differential, Removal and Installation).

Left-hand drive vehicles


1. Refer to: [Steering Gear](#) (211-02 Power Steering, Removal and Installation).

All vehicles

1.

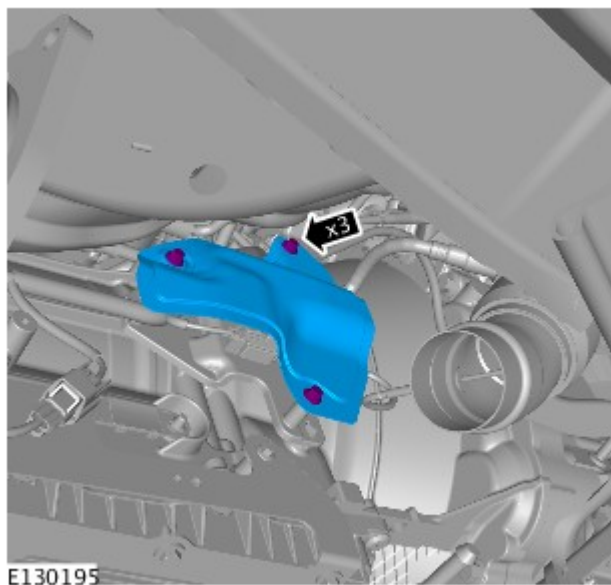

2.

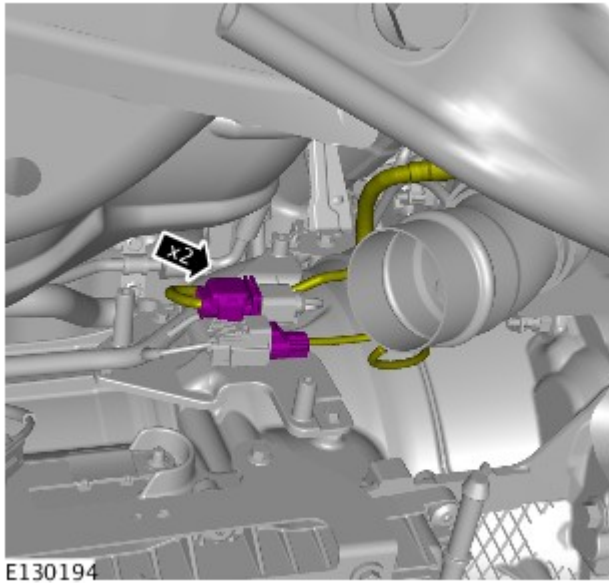


3.



NOTE:

Remove and discard the gasket.

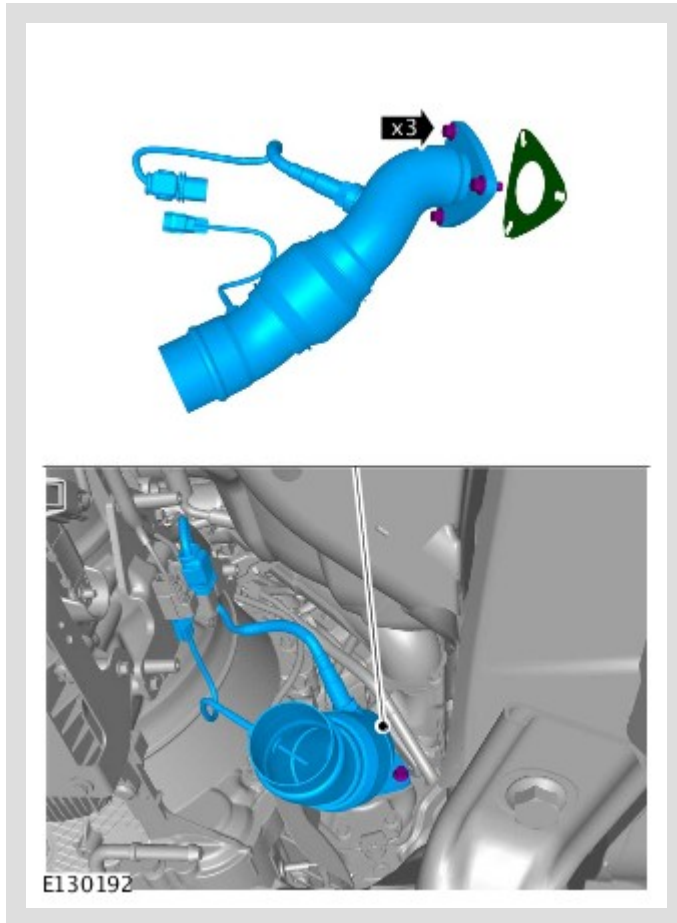




4.




NOTE:


Note the position of the wiring harnesses to aid installation.

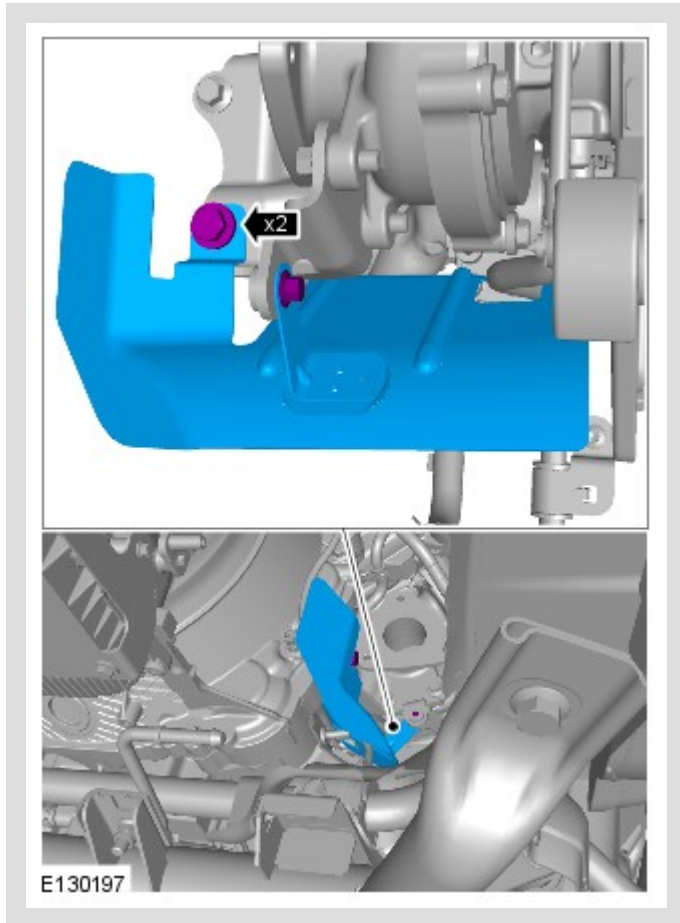

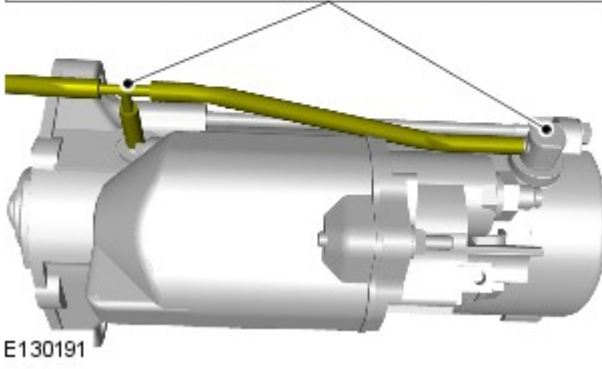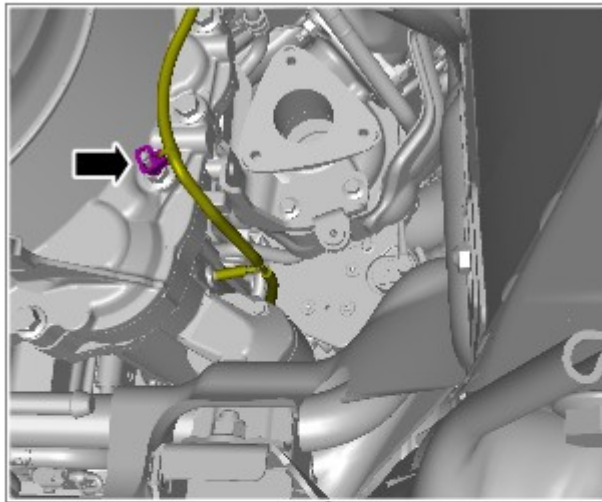


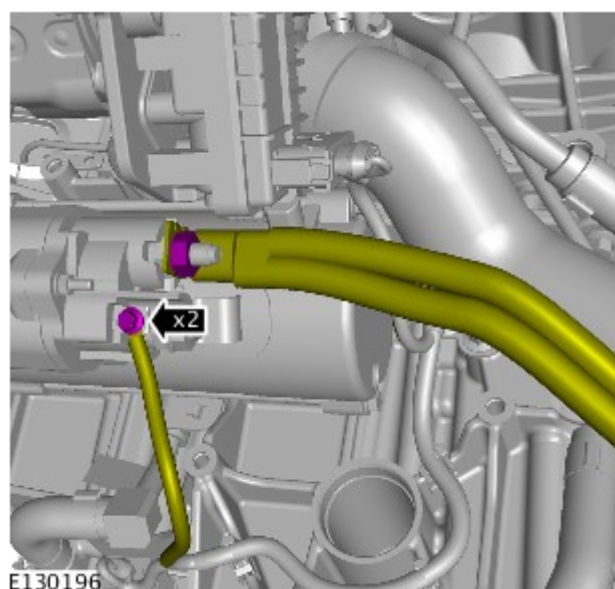


7.

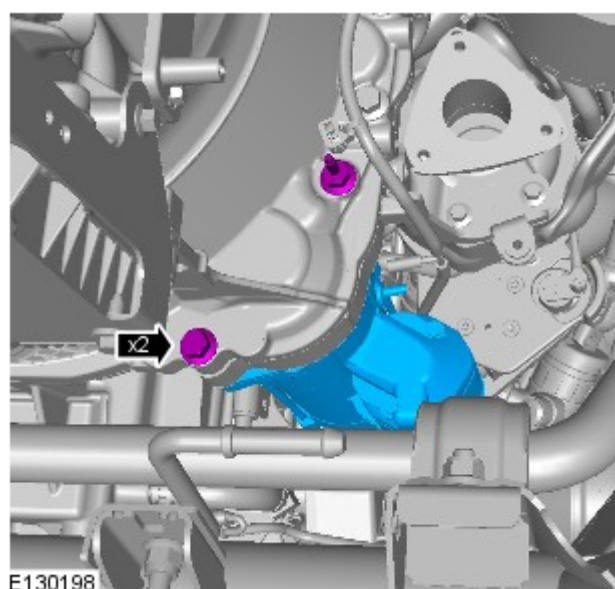

8.

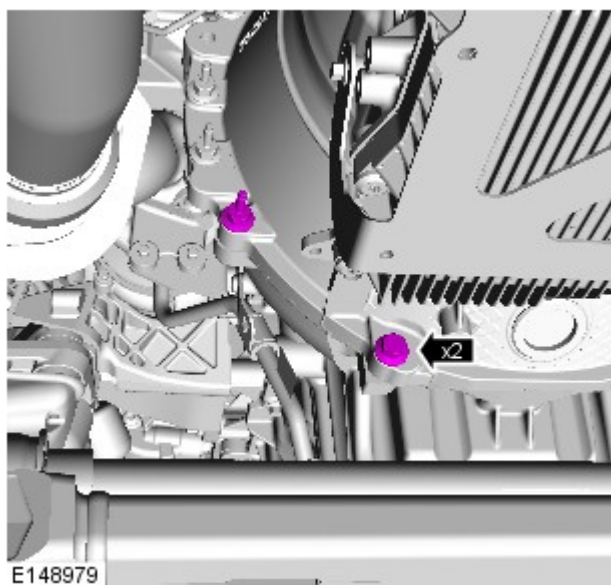

9.

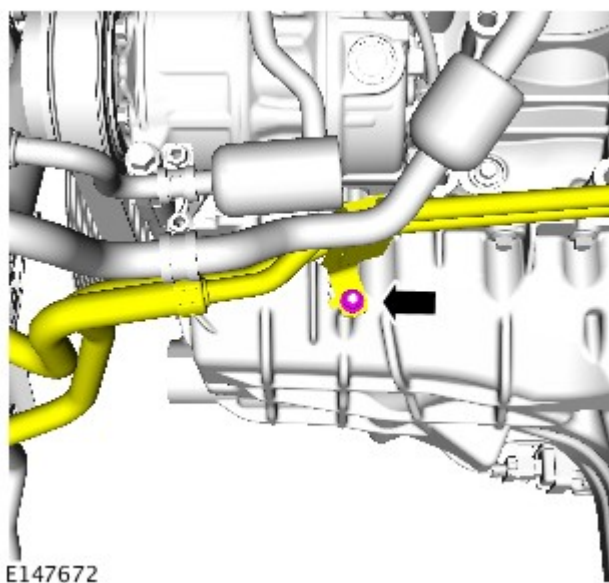

10.


ⓘ CAUTIONS:

- Be prepared to collect escaping oil.
- Before disconnecting any components, make sure the area is clean and free from foreign material. When disconnected all openings must be sealed.



NOTES:

- Remove and discard the gasket.
- Discard the retaining clip.

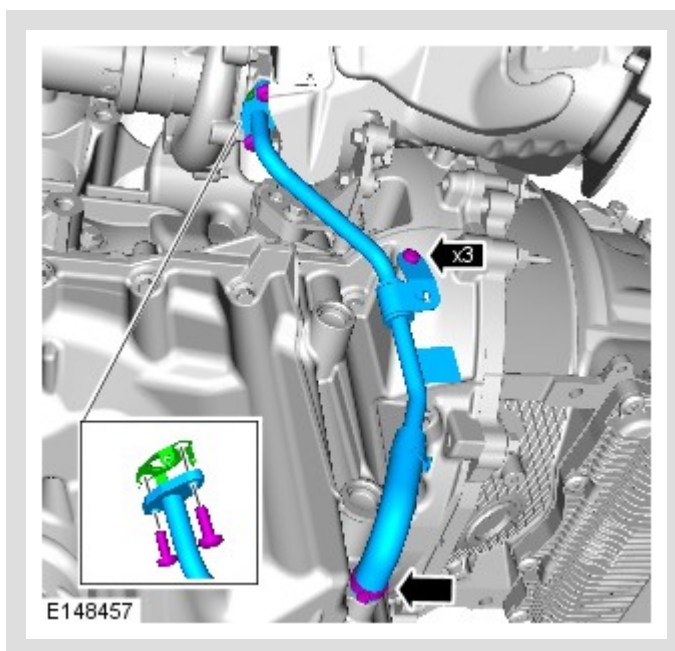

11.




CAUTIONS:

- Be prepared to collect escaping oil.
- Before disconnecting any components, make sure the area is clean and free from foreign material. When disconnected all openings must be sealed.




NOTES:

- Remove and discard the gasket.
- Discard the retaining clip.

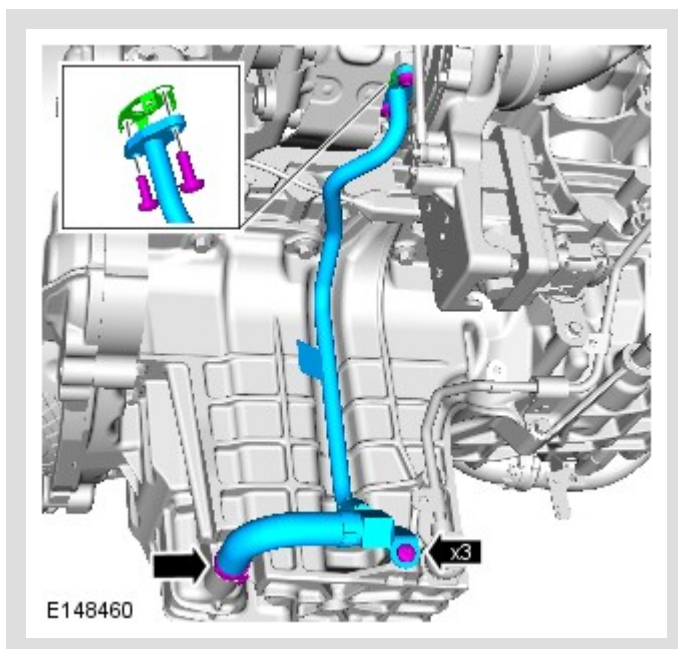

12.

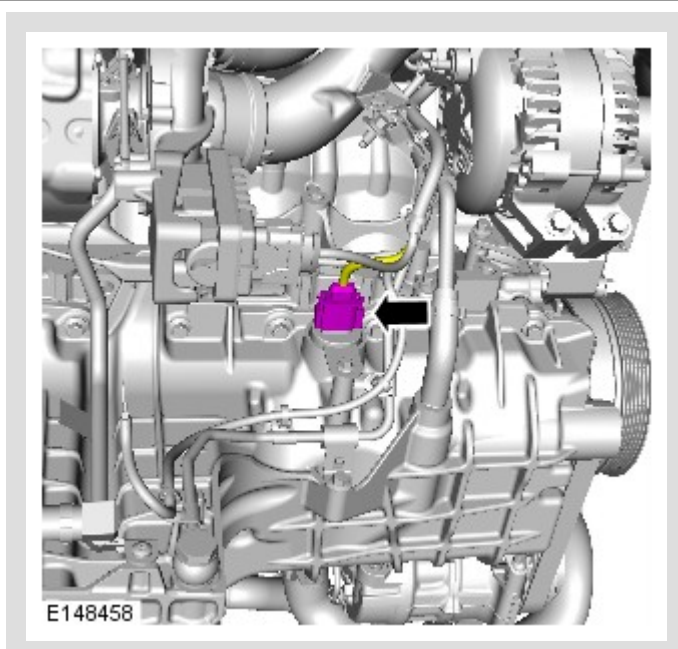

13.




CAUTION:

Be prepared to collect escaping oil.

**NOTE:**

Discard the retaining clip.

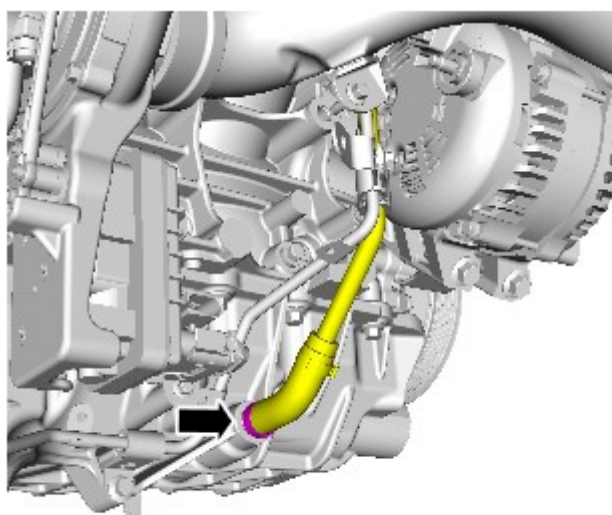


E148459


14.

**CAUTIONS:**

- Be prepared to collect escaping oil.
- Inspect the seals, replace if damaged.

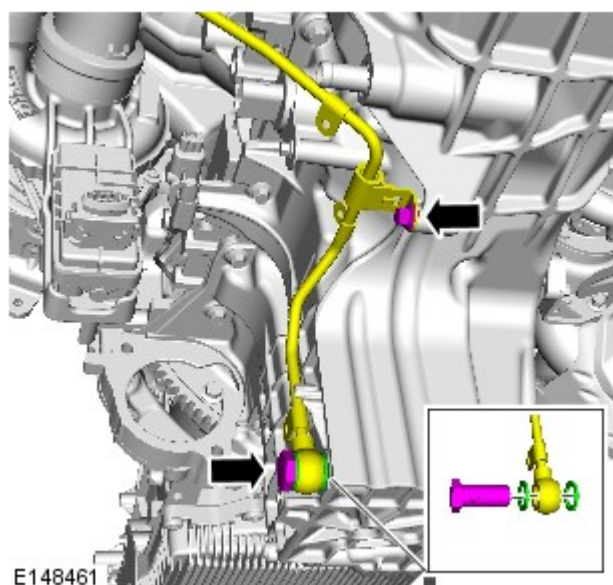

15.

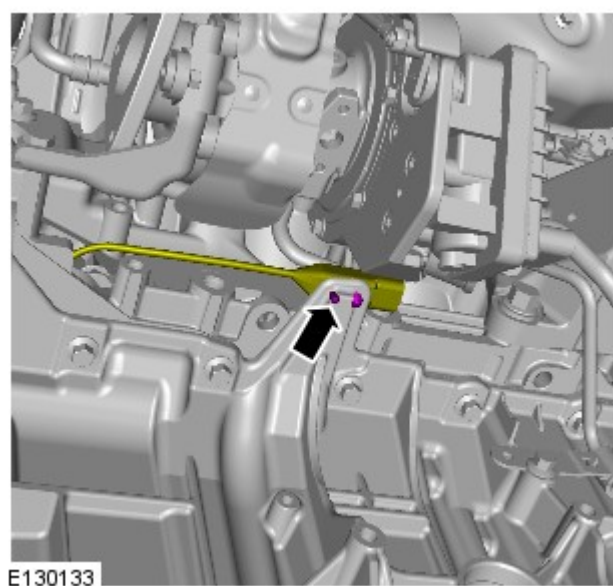


16.



NOTE:

Remove and discard the gasket.

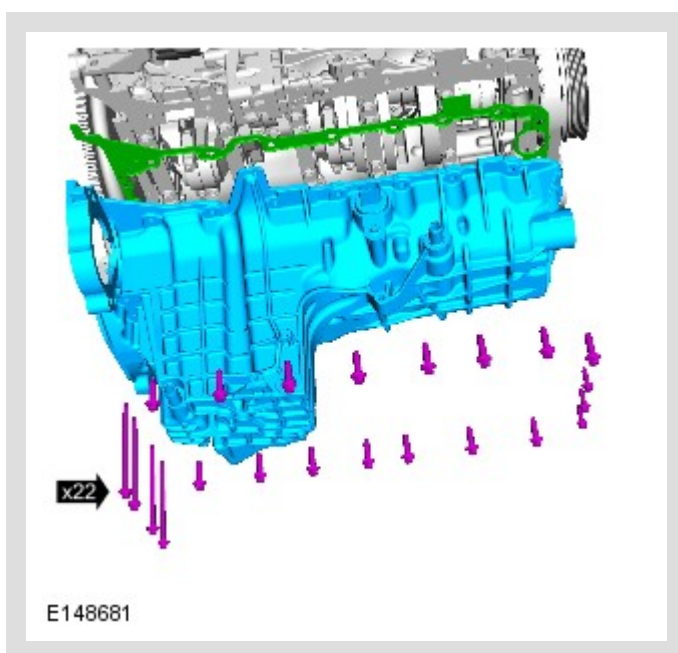

INSTALLATION

All vehicles


1.

⚠ CAUTIONS:

- Make sure that the mating faces are clean and free of foreign material.
- Install all the bolts finger tight before final tightening.

⚠ NOTES:

- Install a new gasket.
- Tighten the bolts in the indicated sequence.

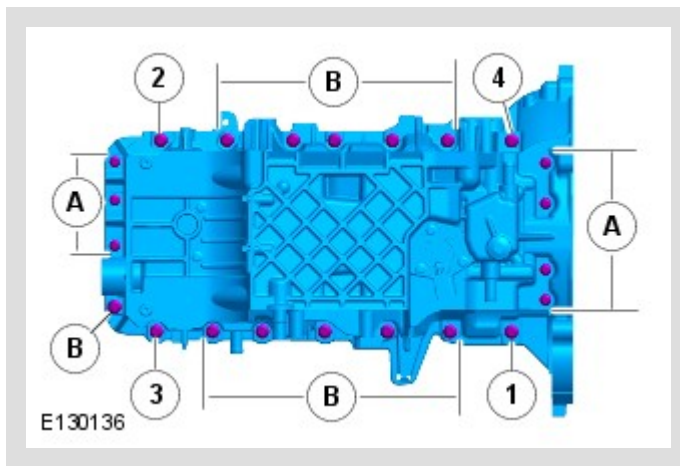

Renew Part: *Oil pan gasket* : 1 .


Torque:

1-4 23 Nm

B 23 Nm

A 10 Nm

2.

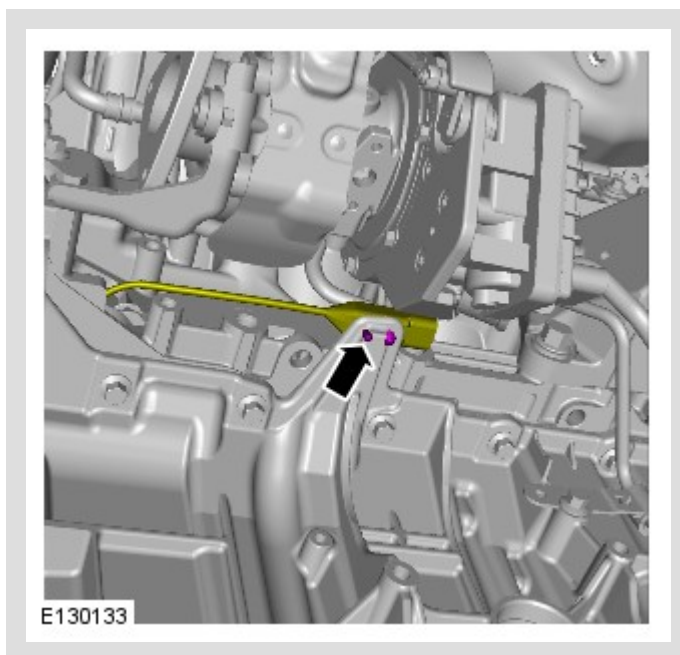


3.



CAUTION:

Make sure that the mating faces are clean and free of corrosion and foreign material.

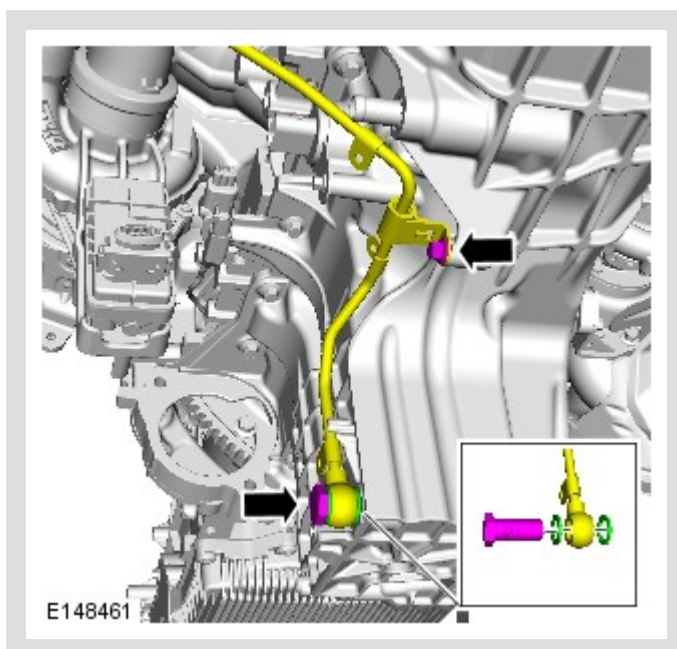

Torque:

M8 25 Nm


Banjo bolt 45 Nm

4.



NOTE:


Install a new retaining clip.

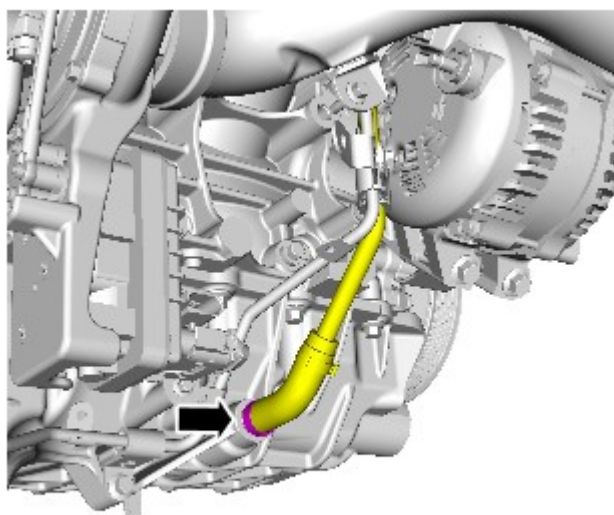

E148459

Renew Part: *Retaining clip* : 1 .

5.

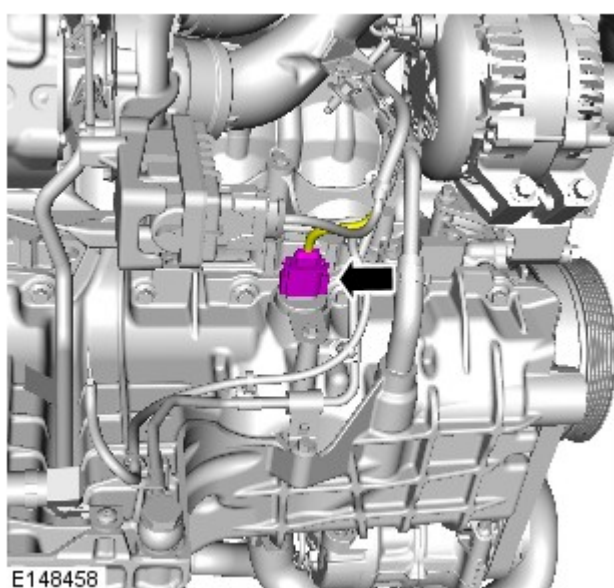


E148458

6.



NOTES:

- Remove and discard the blanking caps.
- Install a new gasket.
- Install a new retaining clip.

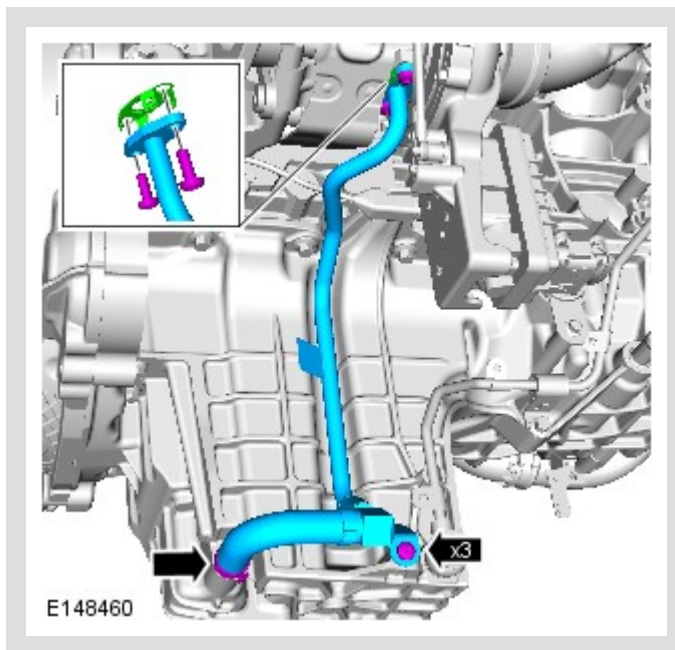

Renew Part: *Turbocharger oil return pipe gasket* : 1 .

Renew Part: *Retaining clip* : 1 .


Torque: 10 Nm

7.



NOTES:


- Remove and discard the blanking caps.
- Install a new gasket.
- Install a new retaining clip.

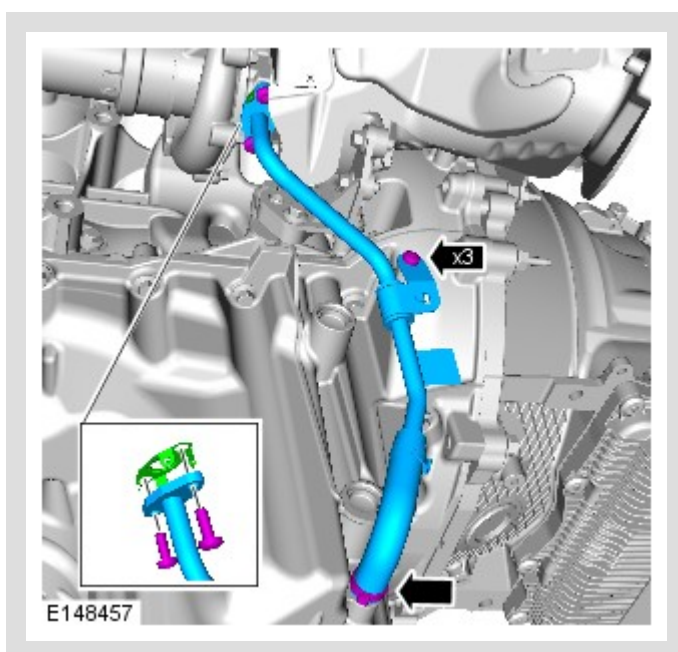


Renew Part: *Turbocharger oil return pipe gasket* : 1 .

Renew Part: *Retaining clip* : 1 .


Torque: 10 Nm

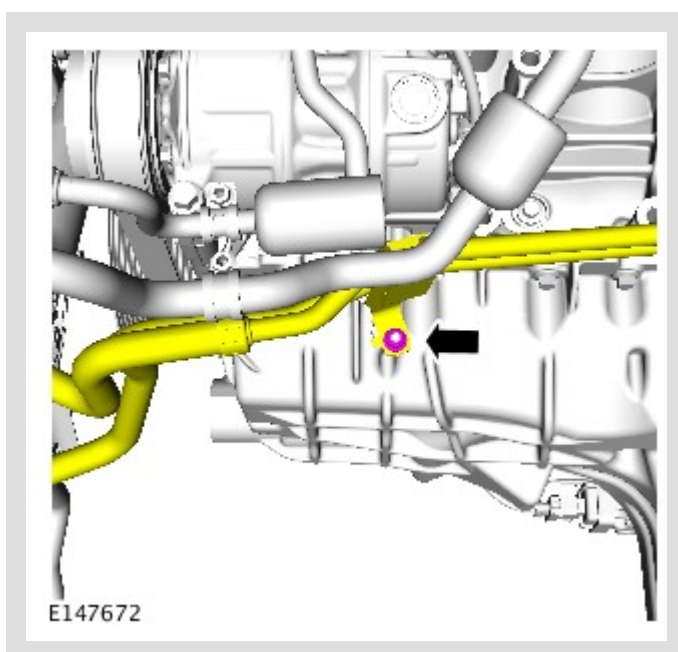


Torque: 9 Nm

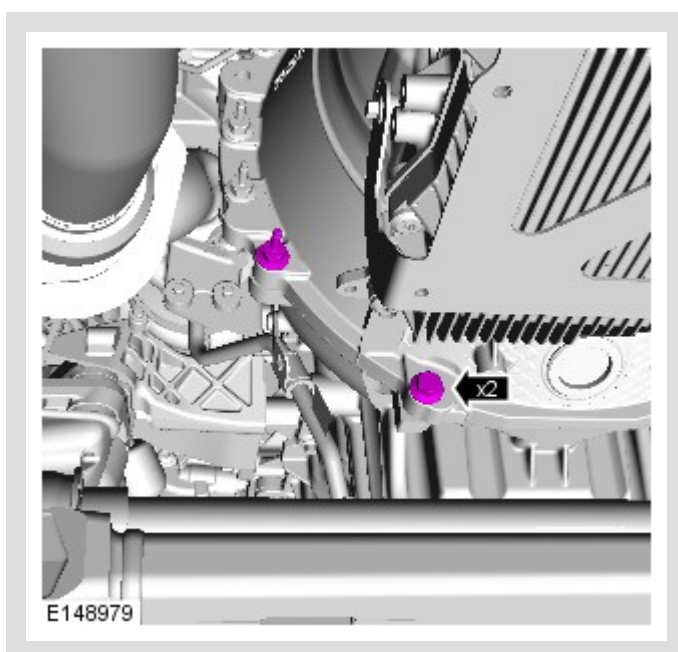

Torque: 40 Nm

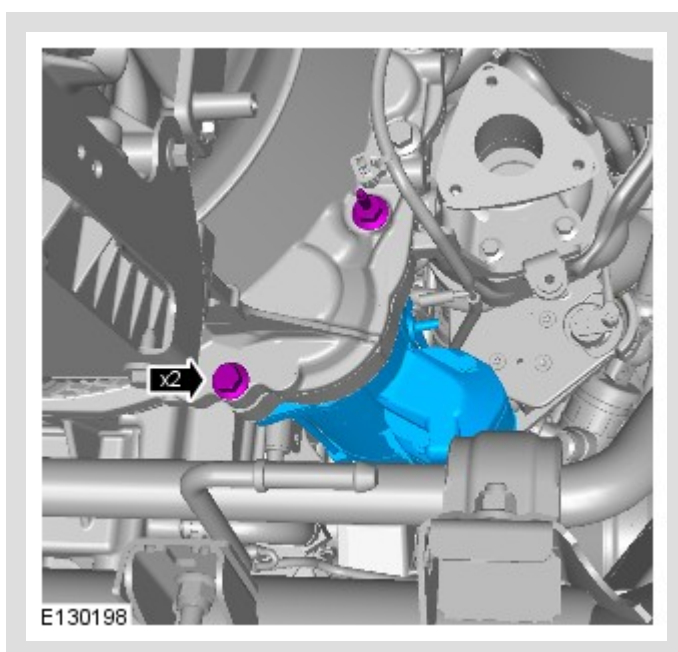


Torque: 45 Nm

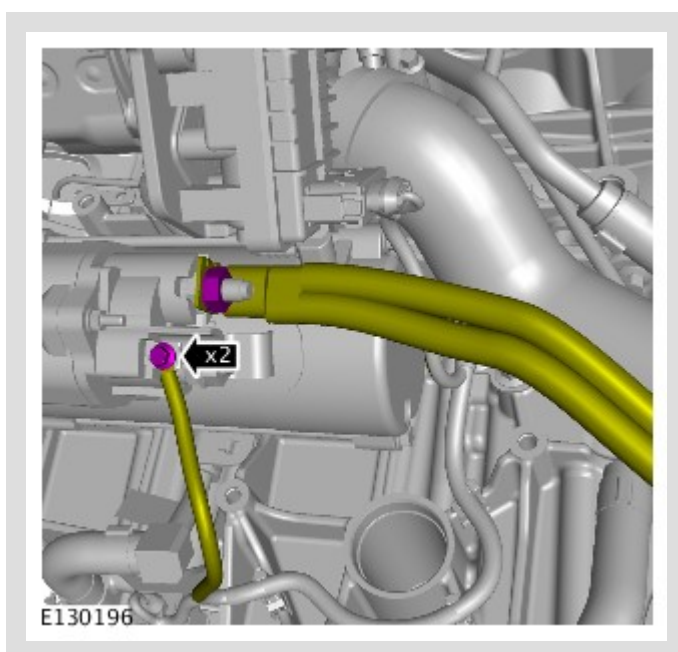


Torque:

M8 nut **22 Nm**

M6 bolt **4 Nm**

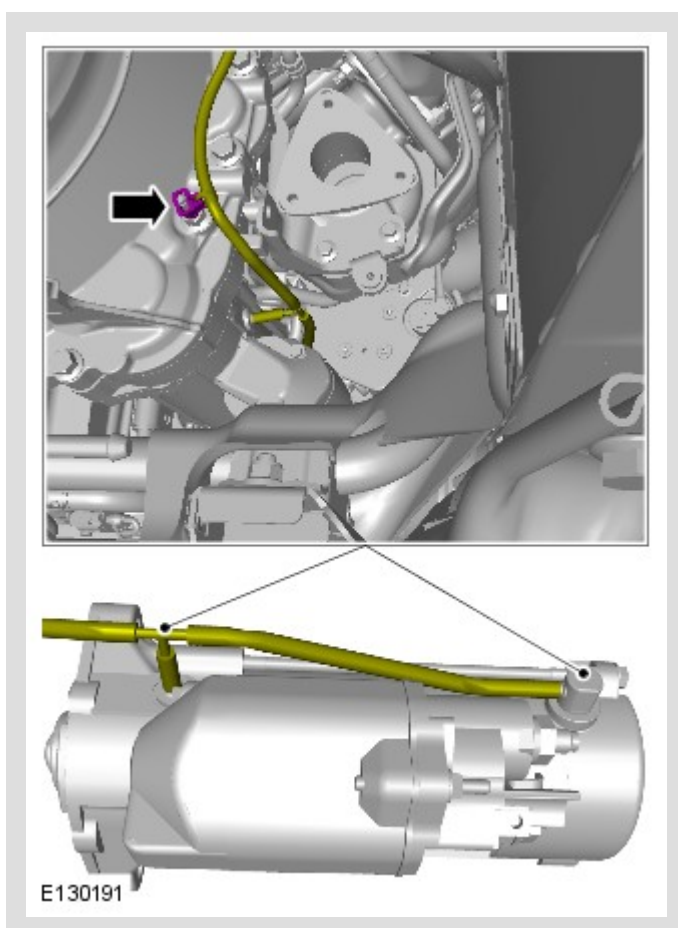

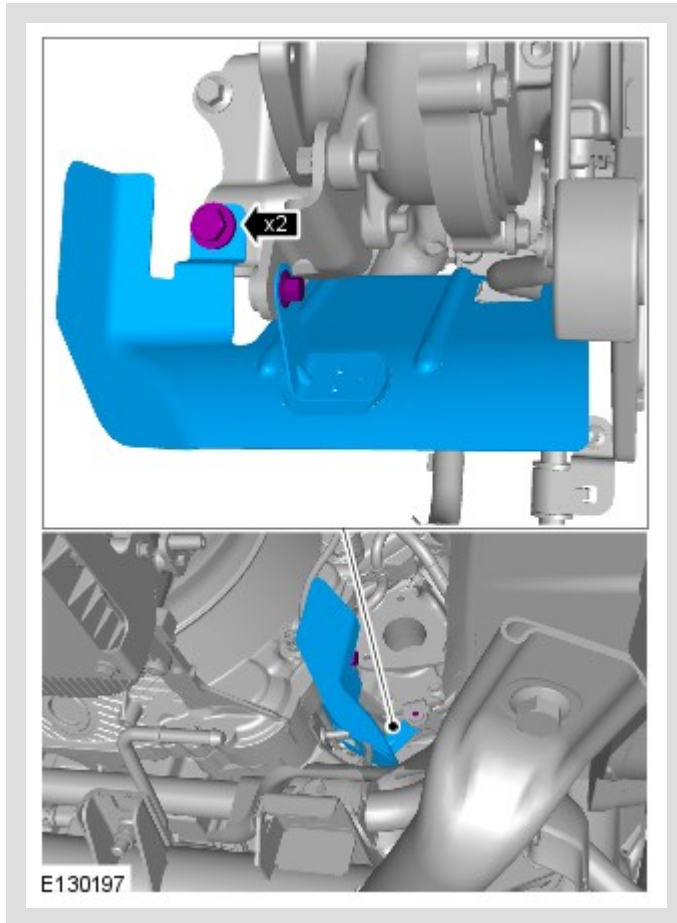


Torque: 10 Nm

14.




NOTE:

Install a new gasket.

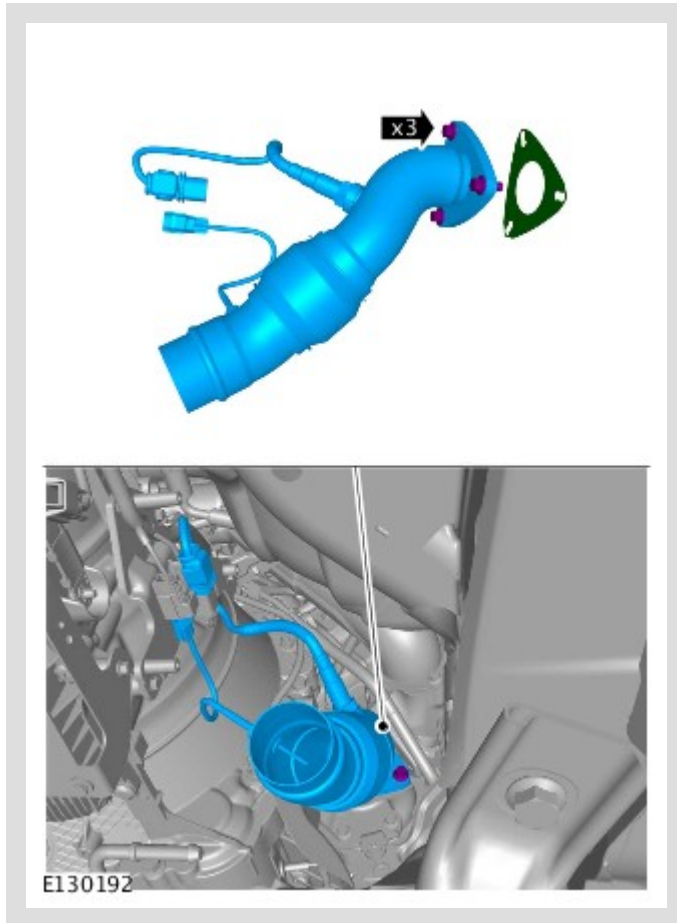


Renew Part: *Exhaust downpipe RH to DPF gasket* : 1 .

Torque: 21 Nm

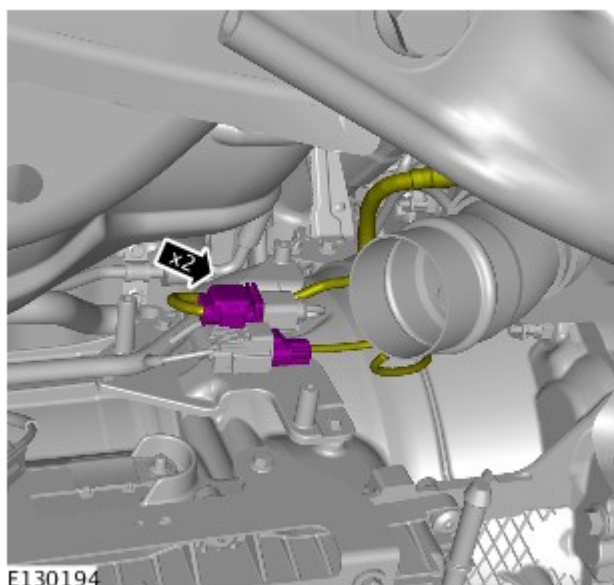

16.

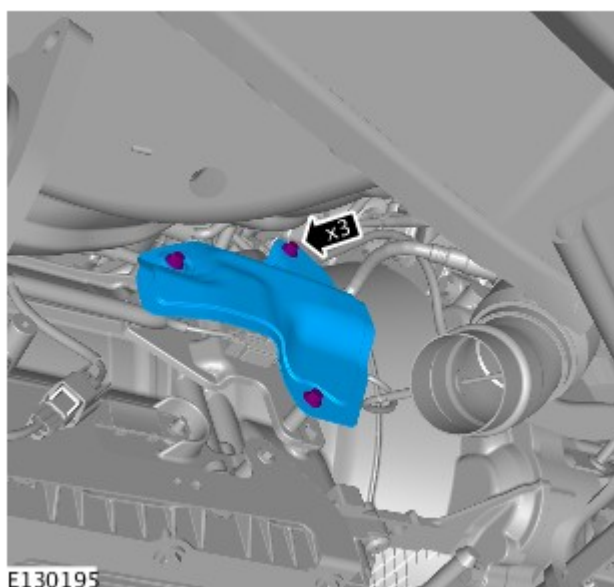

Torque: 10 Nm

Left-hand drive vehicles

1. Refer to: [Steering Gear](#) (211-02 Power Steering, Removal and Installation).

All vehicles

1. Refer to: [Differential Case](#) (205-03 Front Drive Axle/Differential, Removal and Installation).

2. Refer to: [Engine Oil Vacuum Draining and Filling](#) (303-01E Engine - TDV8 4.4L Diesel, General Procedures).