

PUBLISHED: 25-AUG-2017
2015.0 RANGE ROVER (LG), 303-01

ENGINE - TDV8 4.4L DIESEL

RIGHT CYLINDER HEAD (G1509168)

REMOVAL AND INSTALLATION

12.29.05	CYLINDER HEAD - ASSEMBLY - RIGHT - RENEW	LEFT HAND DRIVE, 4400 CC, TDV8, WITH PARTICULATE FILTER, WITHOUT FUEL FIRED BOOSTER HEATER	12.1	USED WITHINS
----------	--	--	------	--------------

PART(S)

STEP	REPLACE PART / RENEW PART	PART NAME	
Installation Step 5	Renew Part	Cylinder head gasket	1
Installation Step 5	Renew Part	Cylinder head bolts	10
Installation Step 5	Renew Part	Cylinder head bolts	3
Installation Step 13	Renew Part	Fuel rail balance pipe	1

REMOVAL



NOTES:

- Some variation in the illustrations may occur, but the essential information is always correct.
- Removal steps in this procedure may contain installation details.
- Engine shown removed for clarity.

1.



WARNING:

Make sure to support the vehicle with axle stands.

Raise and support the vehicle.

2. Disconnect the battery ground cable.
Refer to: [Specifications](#) (414-01 Battery, Mounting and Cables, Specifications).

-
3. Refer to: [Right Exhaust Manifold](#) (303-01E Engine - TDV8 4.4L Diesel, Removal and Installation).


-
4. Refer to: [Right Camshaft](#) (303-01E Engine - TDV8 4.4L Diesel, Removal and Installation).

-
5.  **CAUTION:**


LH illustration shown, RH is similar.

- 
- NOTE:**

Note the position of the components prior to removal.

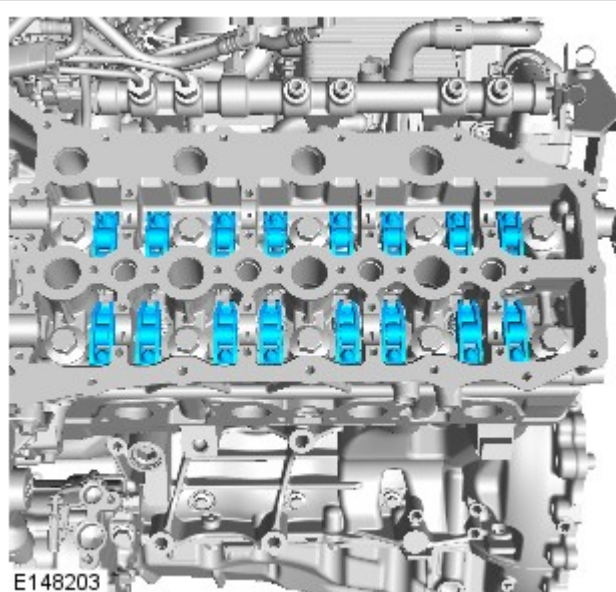


6.

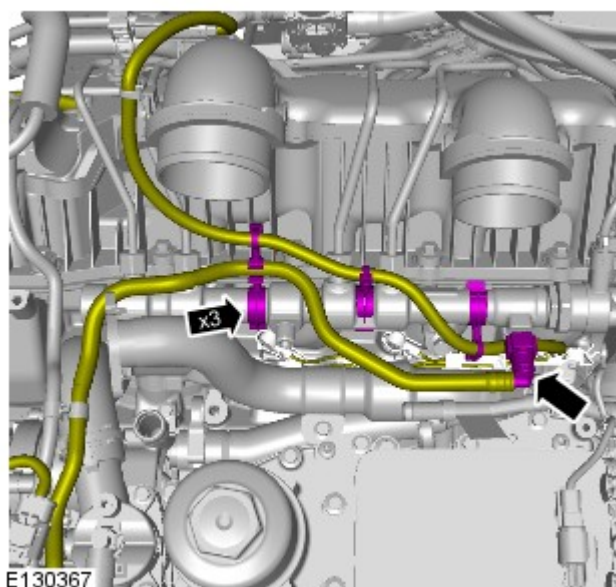


7.

⚠ CAUTION:


Discard the fuel pipes.

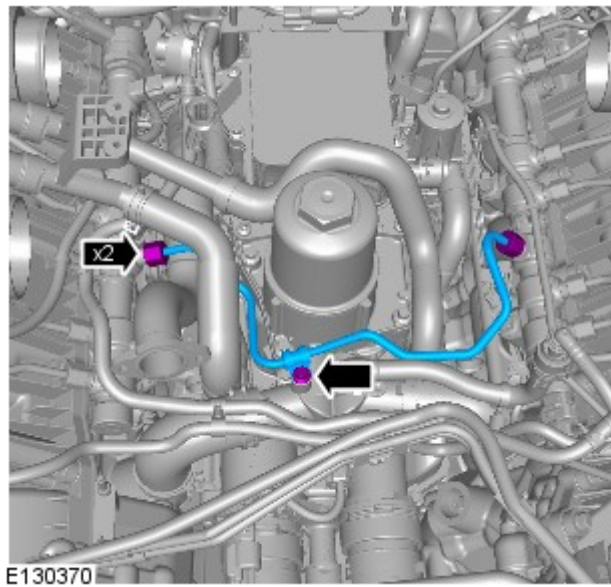


8.

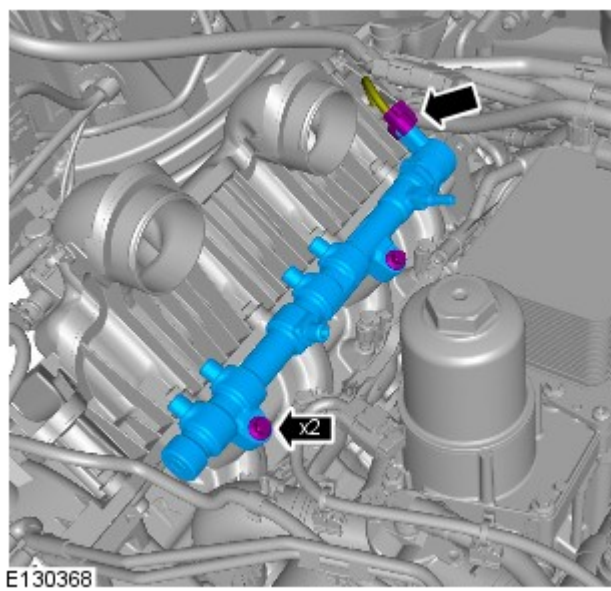


9.

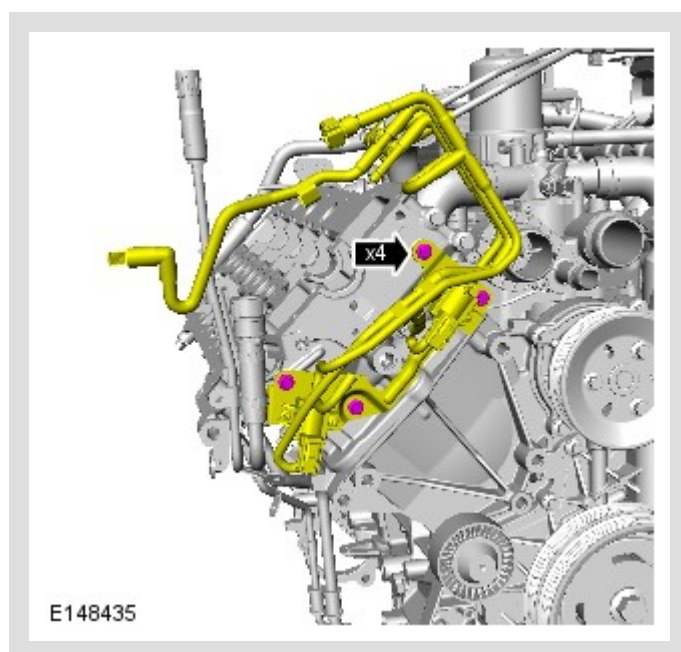


10.

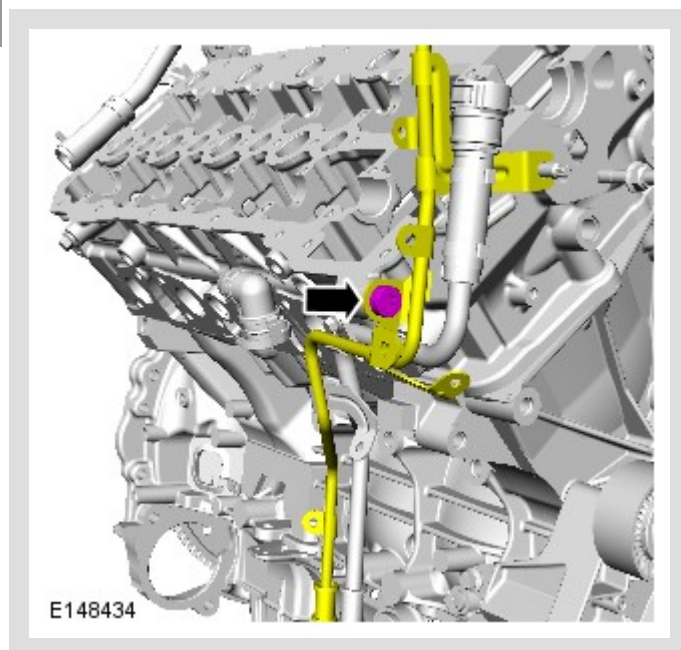

11.

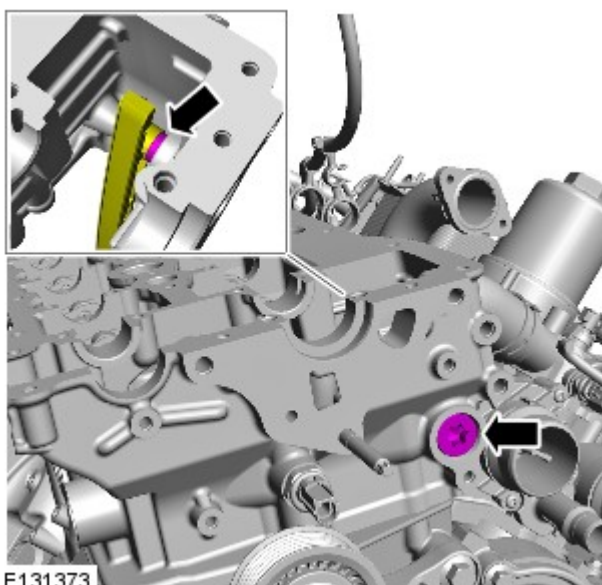

12.

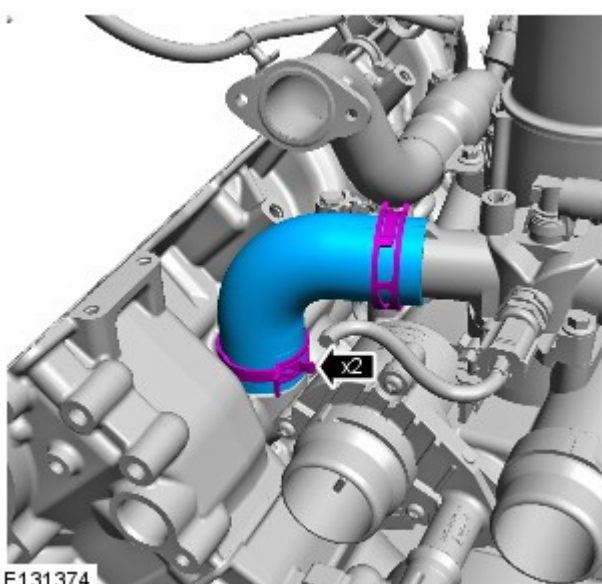

13.


⚠ CAUTION:

Discard the bolts.



NOTE:

Discard the gasket.

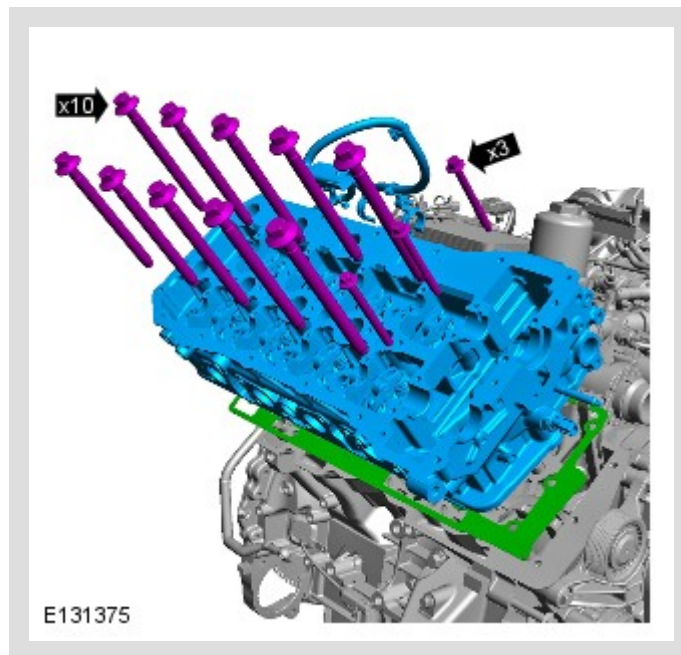


14.



CAUTION:

Take extra care not to damage the component.

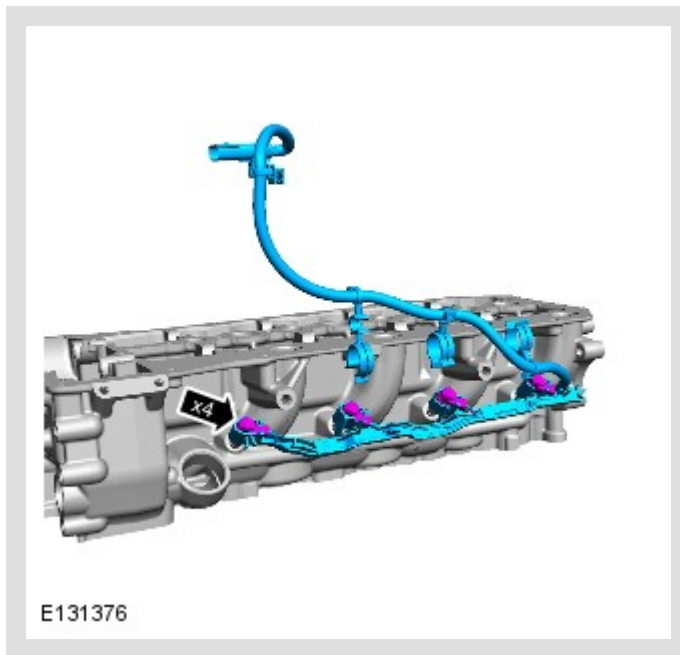


Do not disassemble further if removed for access only

15.




CAUTIONS:

- Take extra care not to damage the component.
- If accidentally dropped or knocked install a new glow plug.

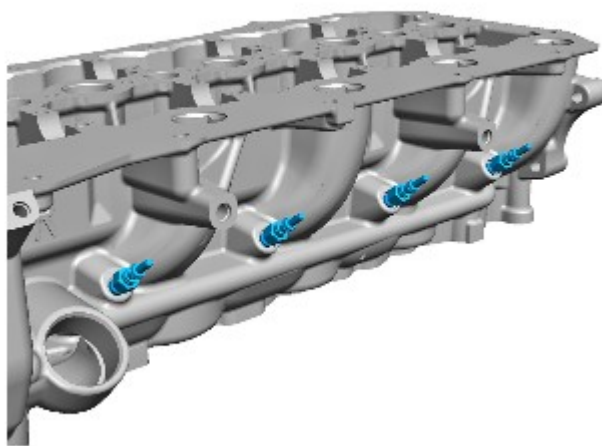

E131377

16.

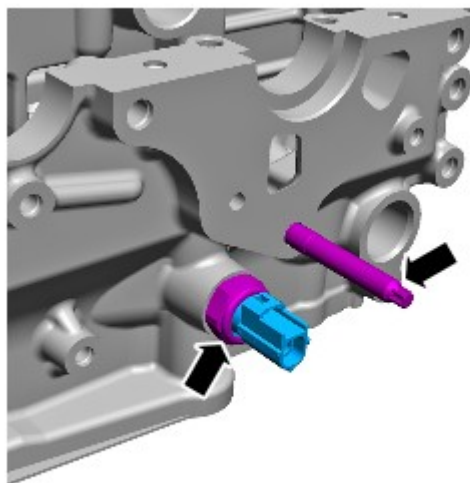

E131378


INSTALLATION

1.




CAUTIONS:

- Make sure that the mating faces are clean and free of foreign material.
- An acceptable flatness of the cylinder head is 0.2mm.

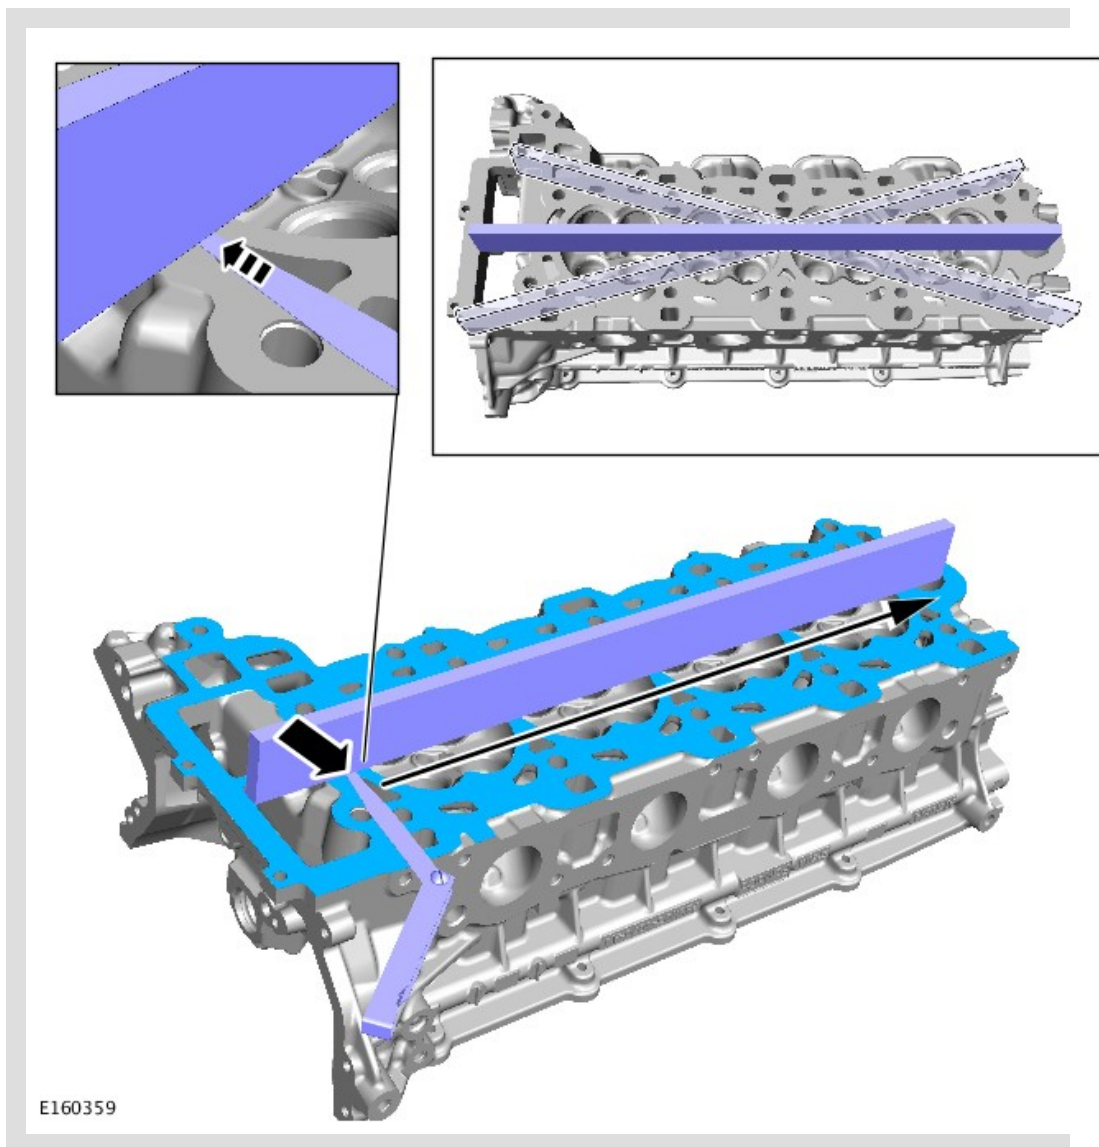

- Clean and inspect the cylinder head and cylinder block.
 - Check the cylinder head face for distortion, across the center and from corner to corner.
- Refer to: [Cylinder Head Distortion](#) (303-00 Engine System - General Information, General Procedures).

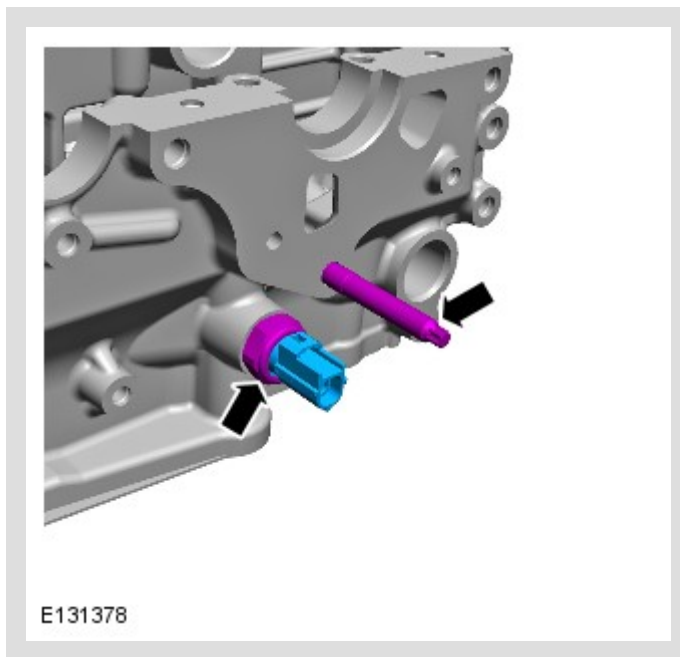


Torque: 13 Nm

3.

⚠ CAUTIONS:

- Take extra care not to damage the component.
- If accidentally dropped or knocked install a new glow plug.

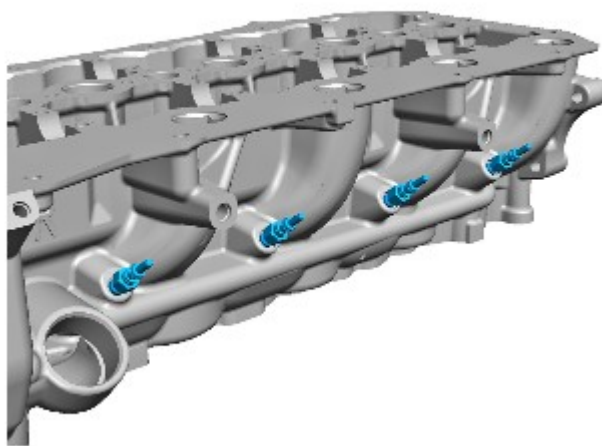


E131377

Torque: 10 Nm

4.

⚠ CAUTION:

Take extra care not to damage the component.

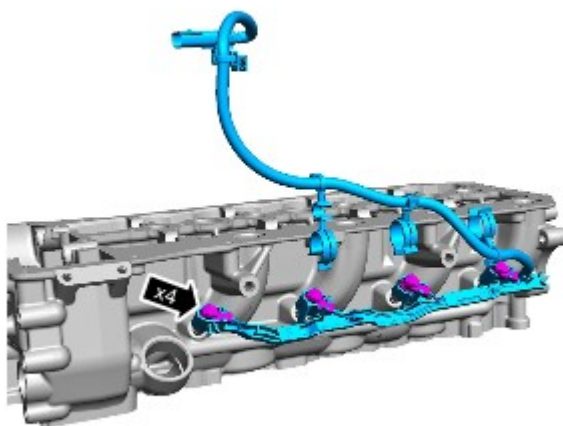

E131376

5.




CAUTIONS:

- Make sure that the mating faces are clean and free of foreign material.
- Make sure that new cylinder head bolts are installed.
- Only tighten the bolts finger-tight at this stage.



NOTE:

Install a new cylinder head gasket.

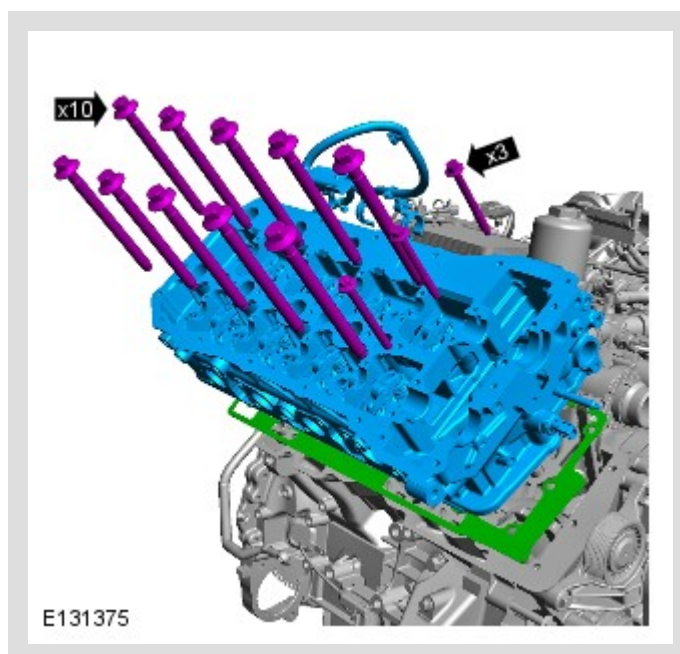

Renew Part: *Cylinder head gasket* : 1 .

Renew Part: *Cylinder head bolts* : 10 .


Renew Part: *Cylinder head bolts* : 3 .

6.



CAUTION:

Tighten the bolts in the sequence shown.

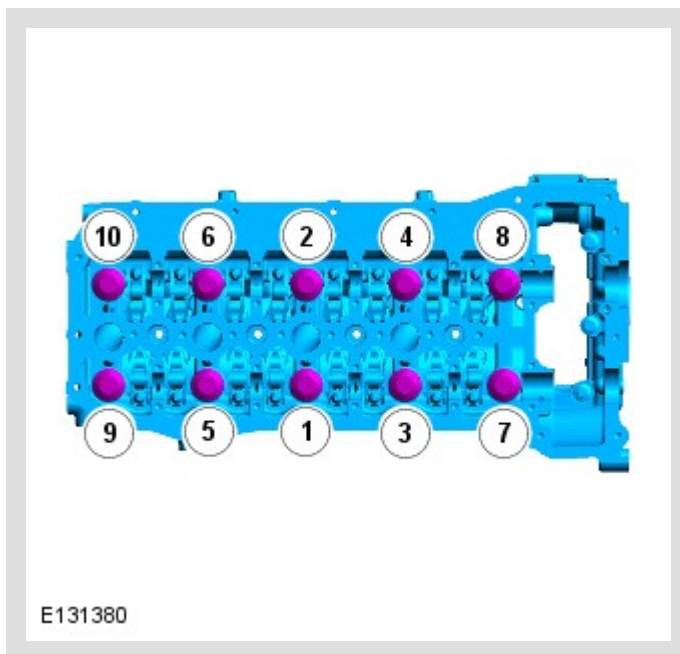

Torque:

Stage 1: 20 Nm

Stage 2: 40 Nm

Stage 3: 80 Nm


Stage 4: 180°

7.




CAUTION:

Tighten the bolts in the sequence shown.

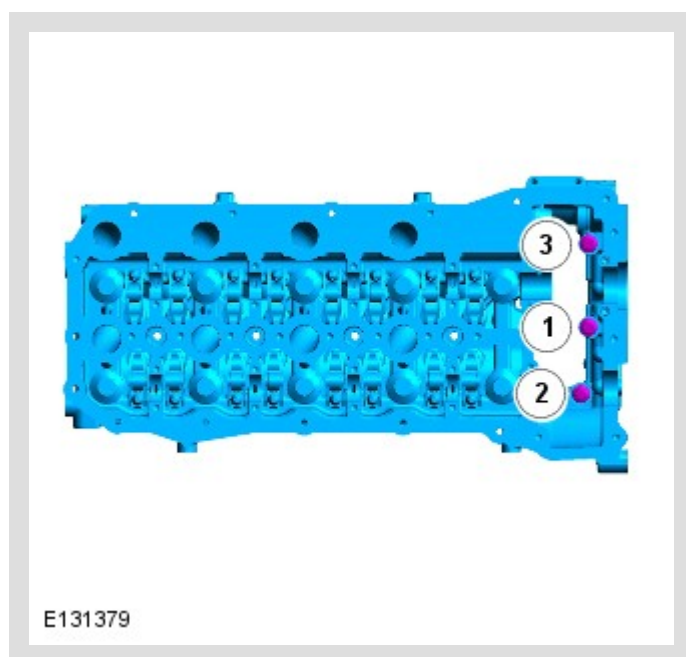


Torque: 12 Nm

8.

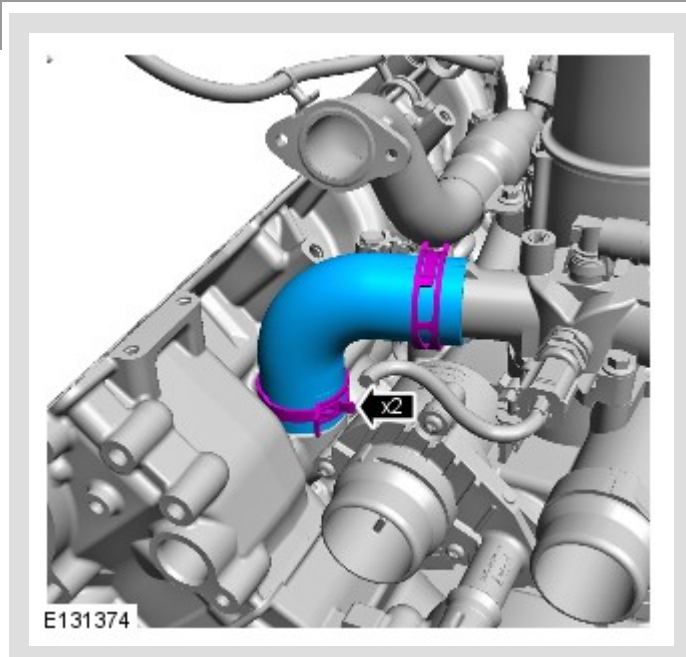


9.

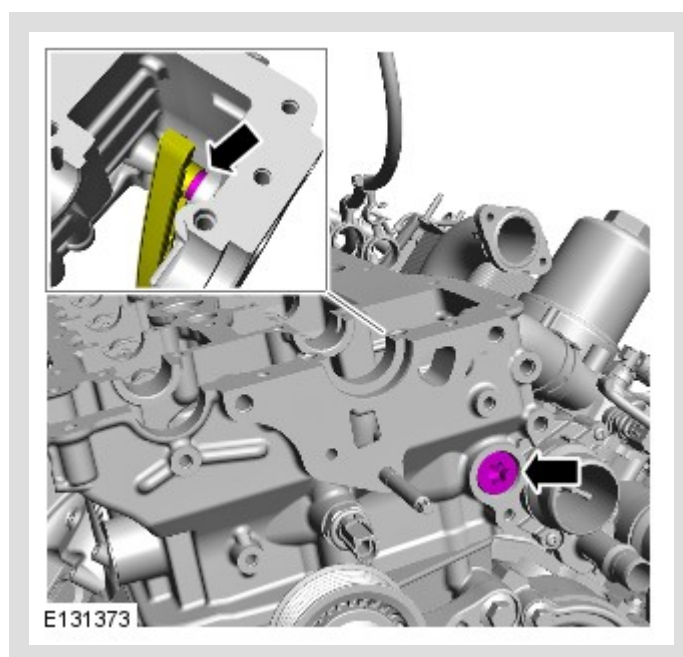


Torque: 27 Nm

10.

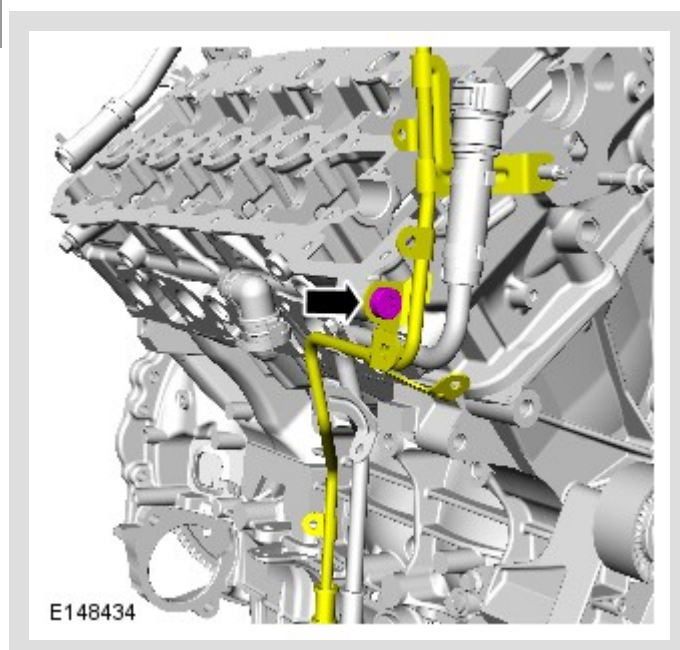


Torque: 23 Nm

11.

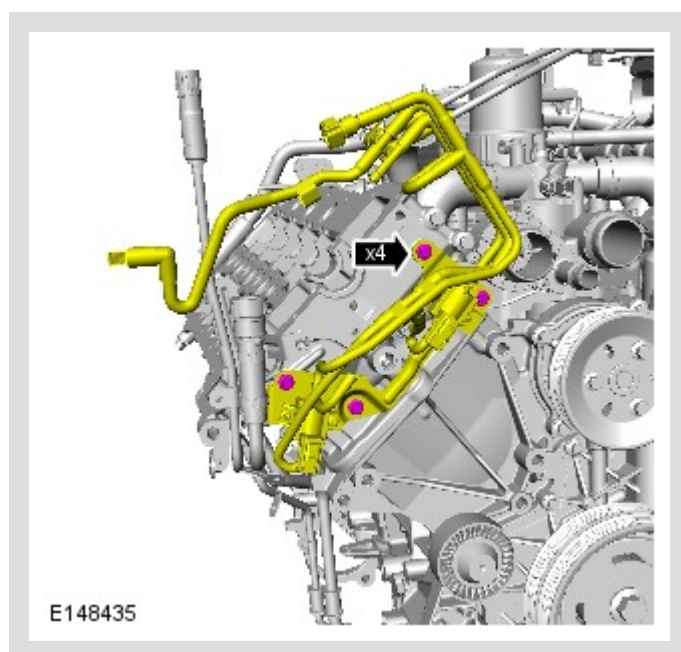

Torque: 10 Nm

12.

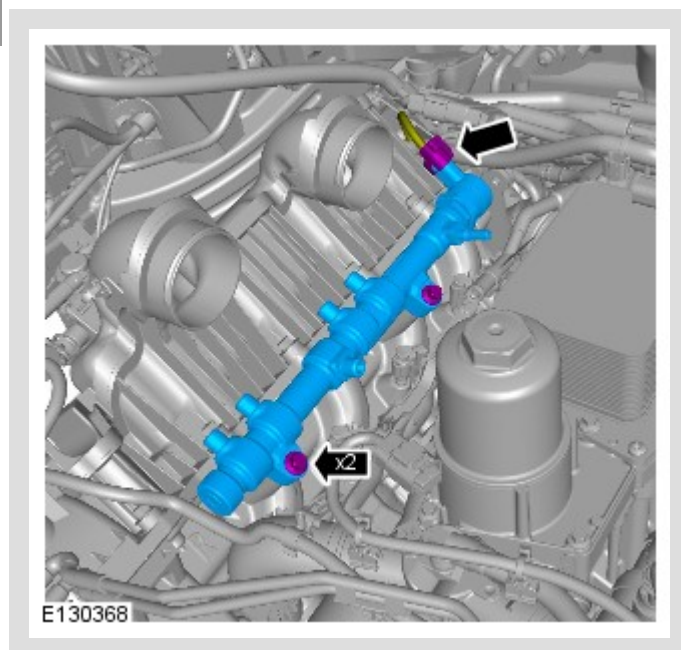


13.




CAUTIONS:

- Install a new fuel pipe.
- Only tighten the unions finger-tight at this stage.
- Only tighten the bolt finger-tight at this stage.

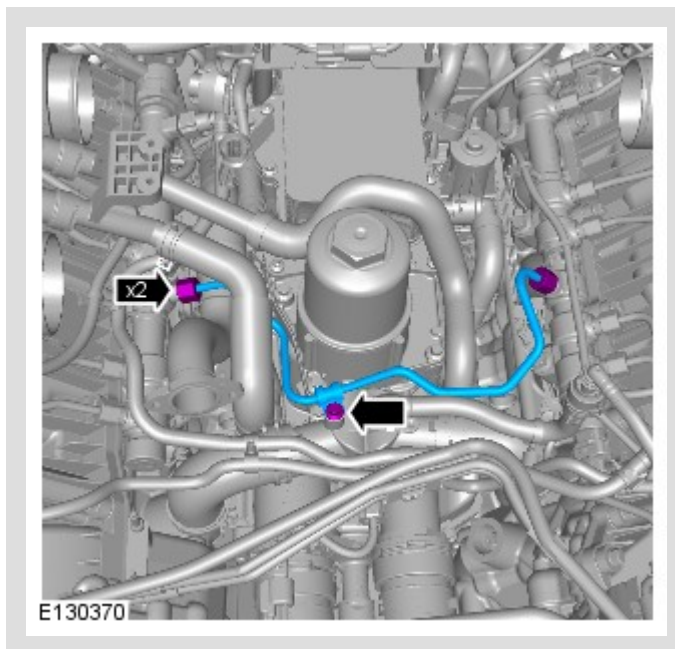


Renew Part: *Fuel rail balance pipe* : 1 .

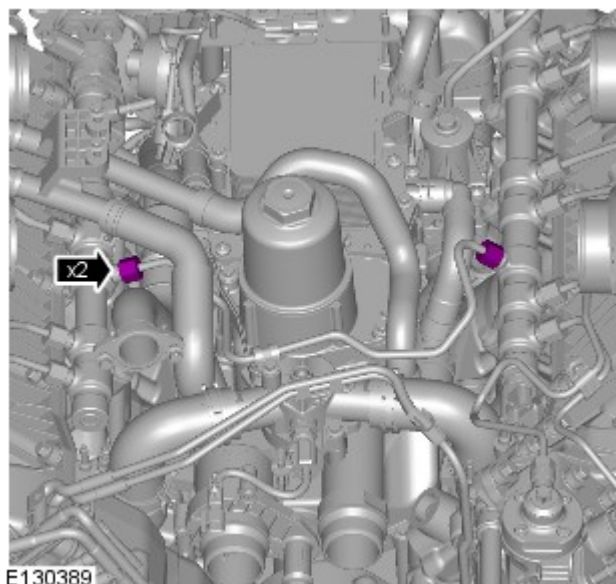

Torque: 10 Nm

15.

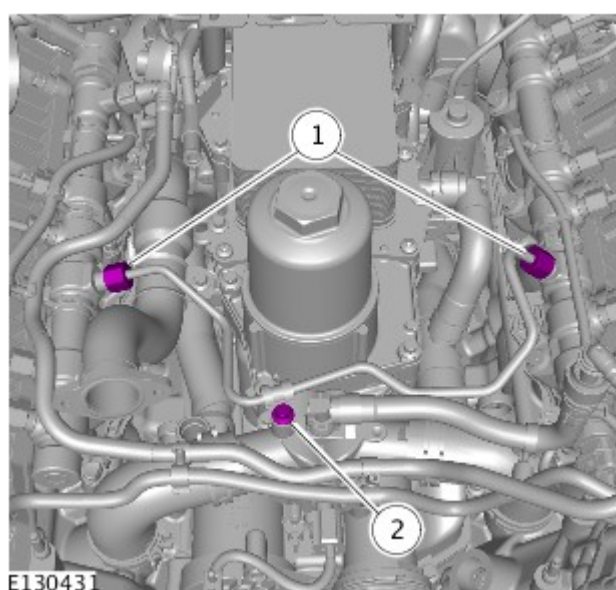


Torque:
Unions 73°

16.



CAUTIONS:

- LH illustration shown, RH is similar.
- Make sure that the components are installed to the noted position in the removal steps.

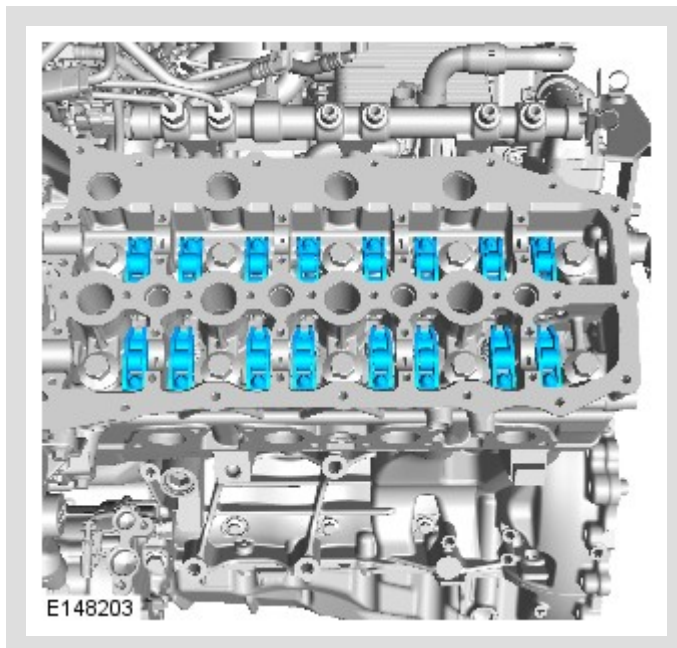

17.

Refer to: [Right Camshaft](#) (303-01E Engine - TDV8 4.4L Diesel, Removal and Installation).

18.

Refer to: [Right Exhaust Manifold](#) (303-01E Engine - TDV8 4.4L Diesel, Removal and Installation).

19.

Connect the battery ground cable.

Refer to: [Specifications](#) (414-01 Battery, Mounting and Cables, Specifications).