

PUBLISHED: 03-MAY-2017
2015.0 RANGE ROVER (LG), 303-01

ENGINE - TDV8 4.4L DIESEL

RIGHT ENGINE MOUNT (G1509170)

REMOVAL AND INSTALLATION

12.45.12	MOUNTING - RH - RENEW	LEFT HAND DRIVE, 4400 CC, TDV8	4.3	USED WITHINS	
----------	-----------------------------	--	-----	-----------------	--

PART(S)

STEP	REPLACE PART / RENEW PART	PART NAME	
Installation Step 3	Renew Part	Engine mounting bracket to subframe bolts	1

REMOVAL



NOTES:

- Some variation in the illustrations may occur, but the essential information is always correct.
- Removal steps in this procedure may contain installation details.
- Engine shown removed for clarity.

1.



WARNING:

Make sure to support the vehicle with axle stands.

Raise and support the vehicle.

2.


Disconnect the battery ground cable.

Refer to: [Specifications](#) (414-00 Battery and Charging System - General Information, Specifications).


3.

Refer to: [Generator](#) (414-02B Generator and Regulator - TDV8 4.4L Diesel, Removal and Installation).


4.

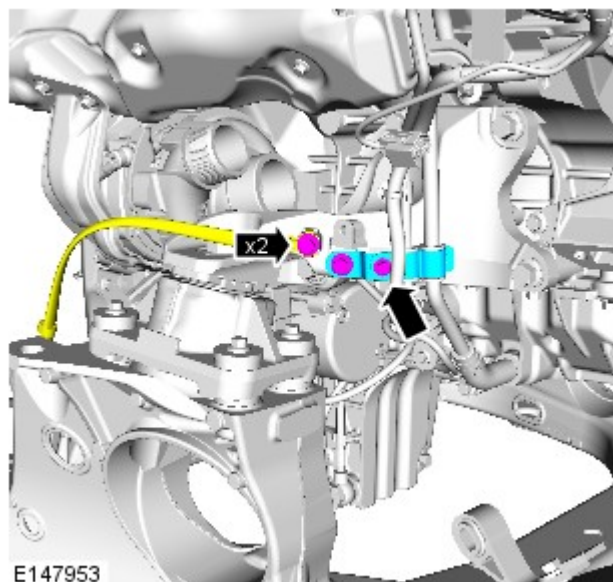

5.

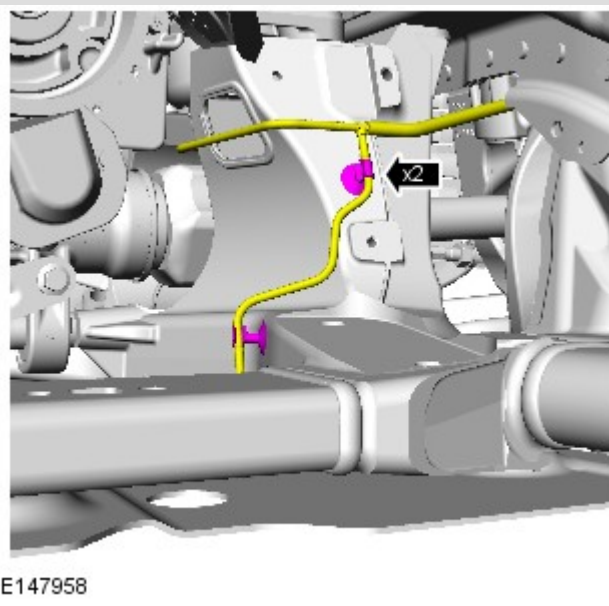


6.

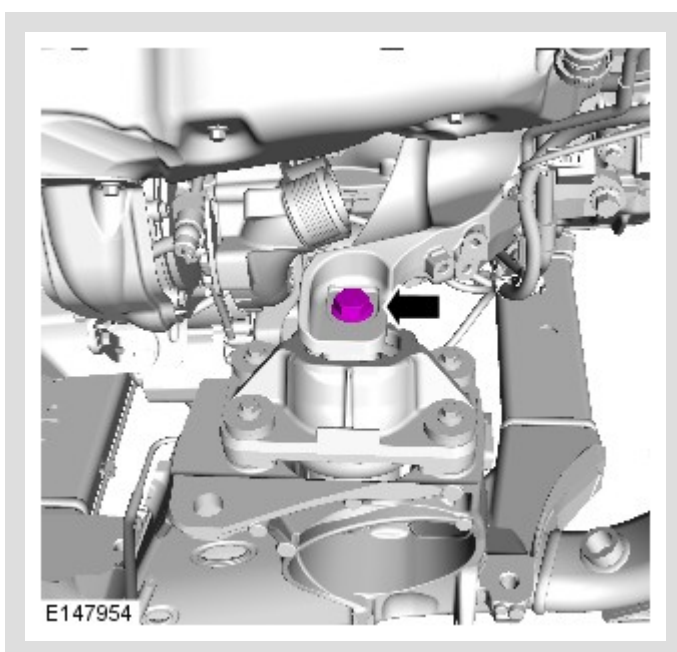

7.

⚠ CAUTION:


Use a wooden block to protect the oil pan when supporting the engine.

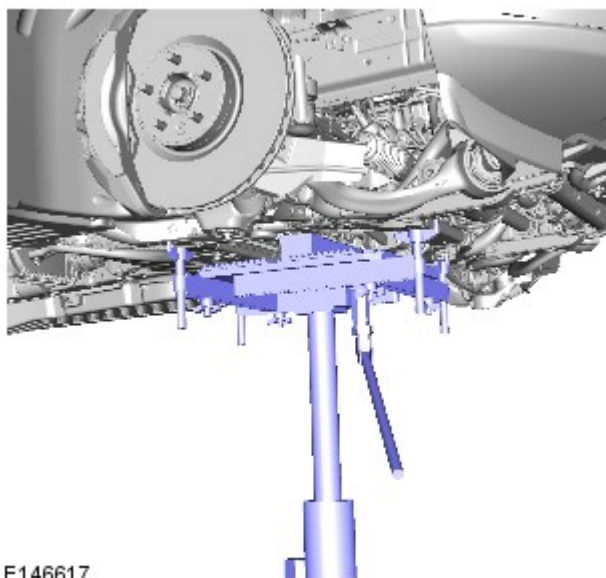

E146617


Using a suitable hydraulic jack, raise and support the engine.

8.

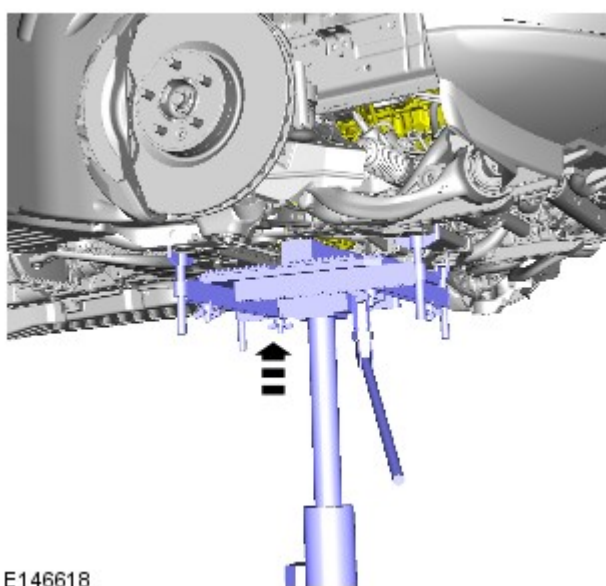

E146618

9.

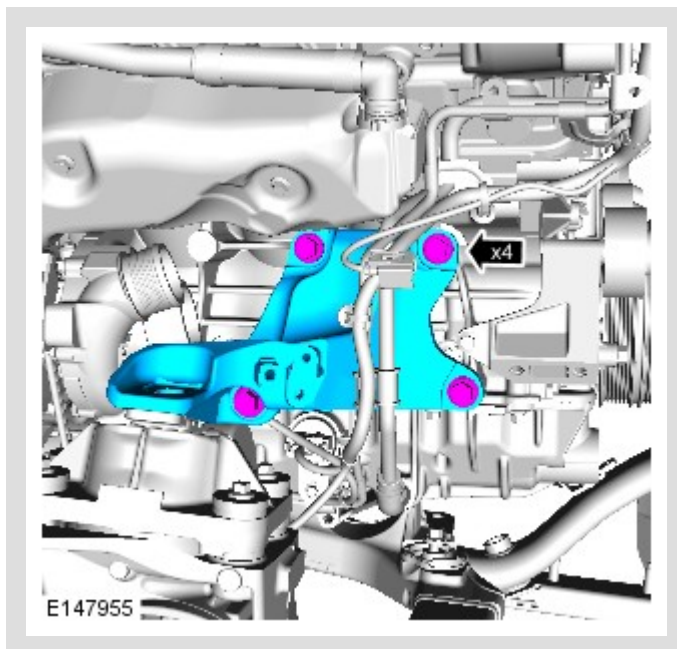


10.



CAUTION:


Remove and discard the bolts.

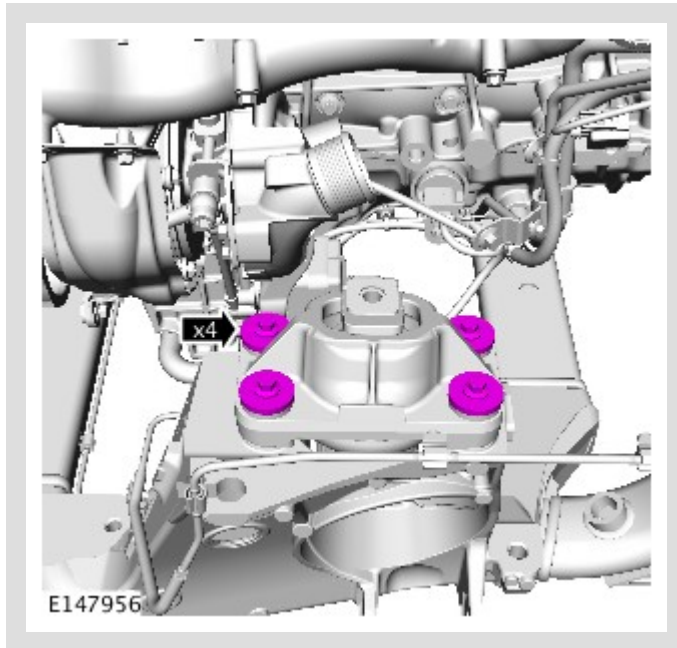


11.

ⓘ CAUTION:

LH illustration shown, RH is similar.

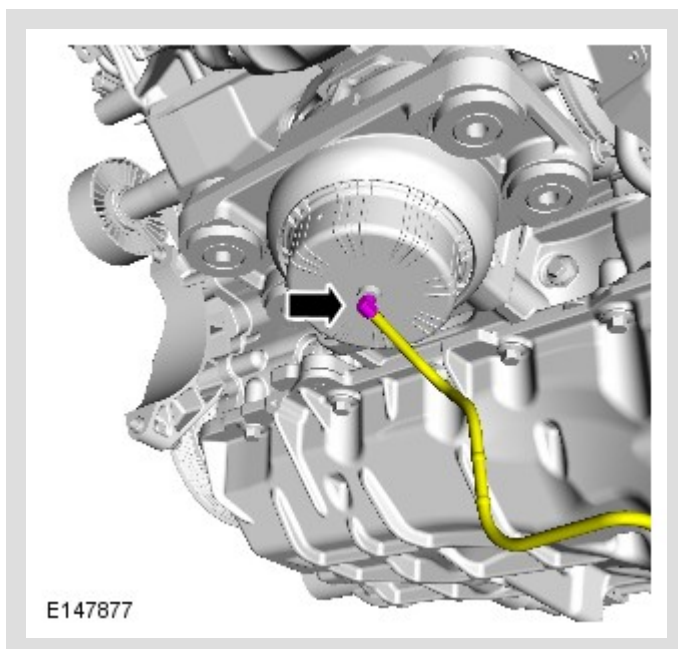


12.

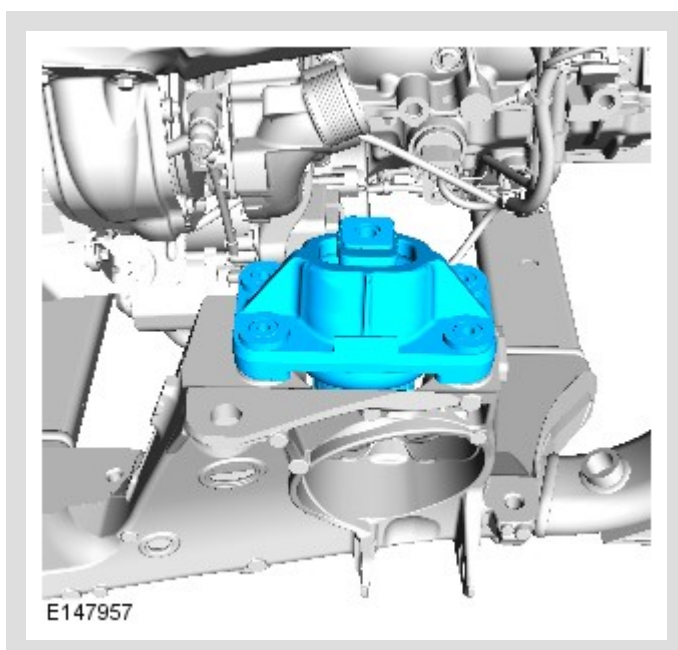

INSTALLATION

1.

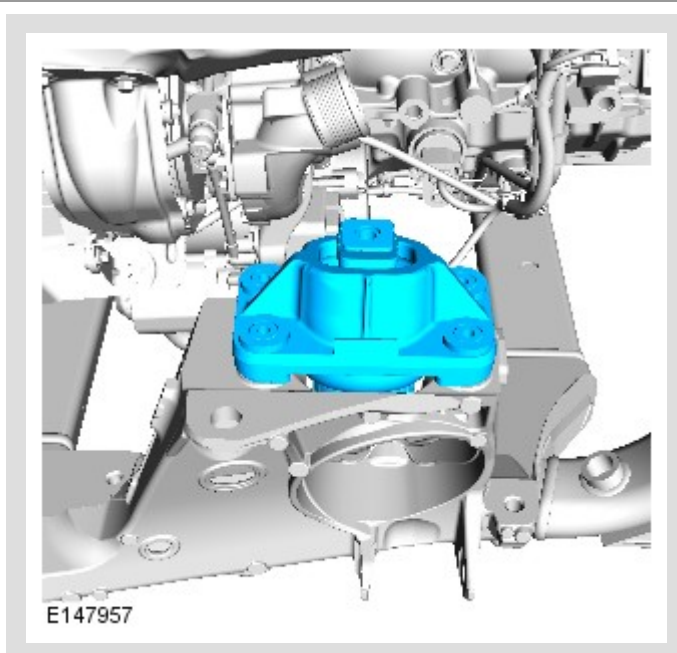


2.



CAUTION:


LH illustration shown, RH is similar.

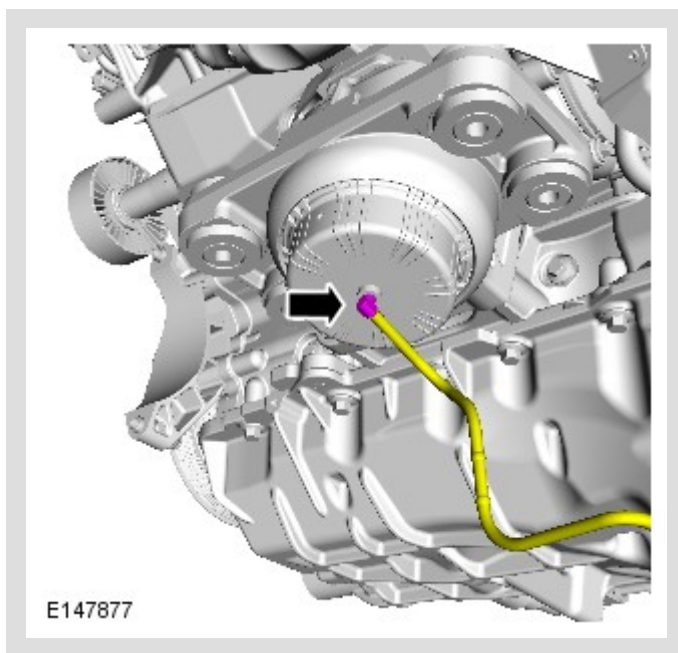

3.


⚠ CAUTIONS:

- Make sure that new bolts are installed.
- Only tighten the bolts finger-tight at this stage.

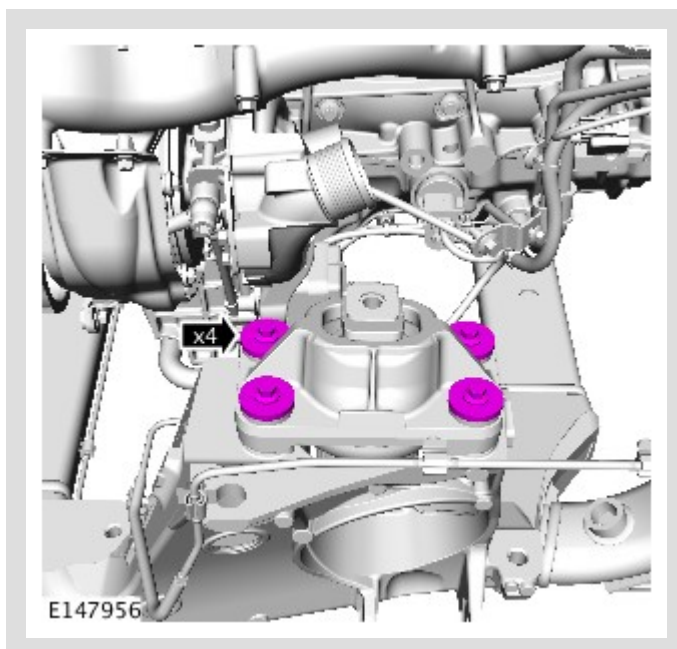

Renew Part: *Engine mounting bracket to subframe bolts* : 1 .

4.

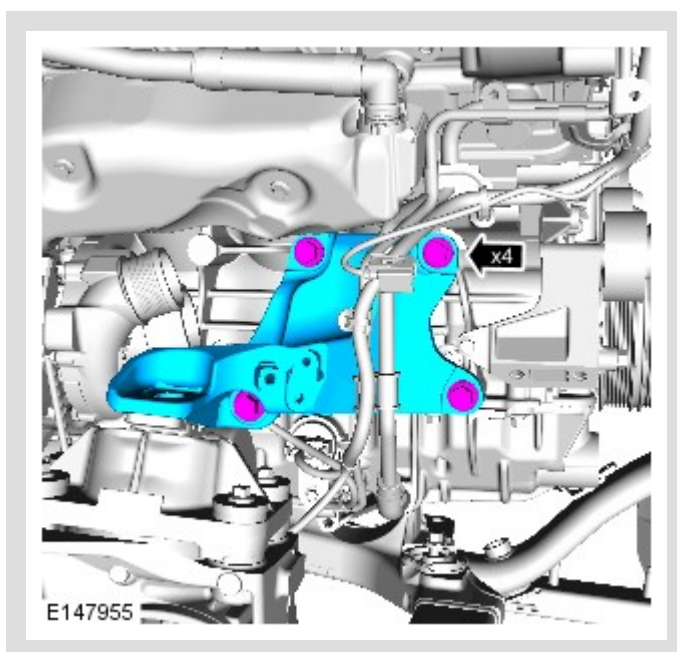


Torque: 115 Nm

5. Lower the engine onto the mount.

6.

⚠ CAUTION:


Only tighten the nut finger-tight at this stage.

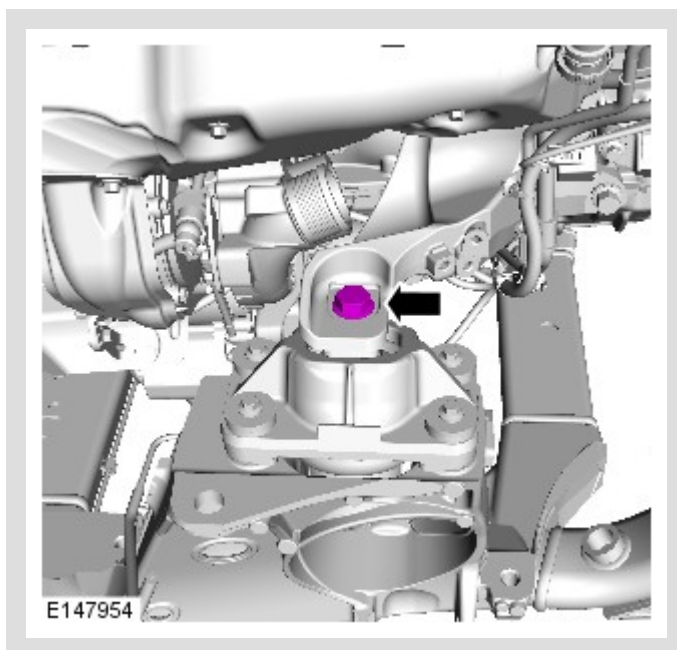

7.


⚠ CAUTION:

Tighten the bolts in the sequence shown.

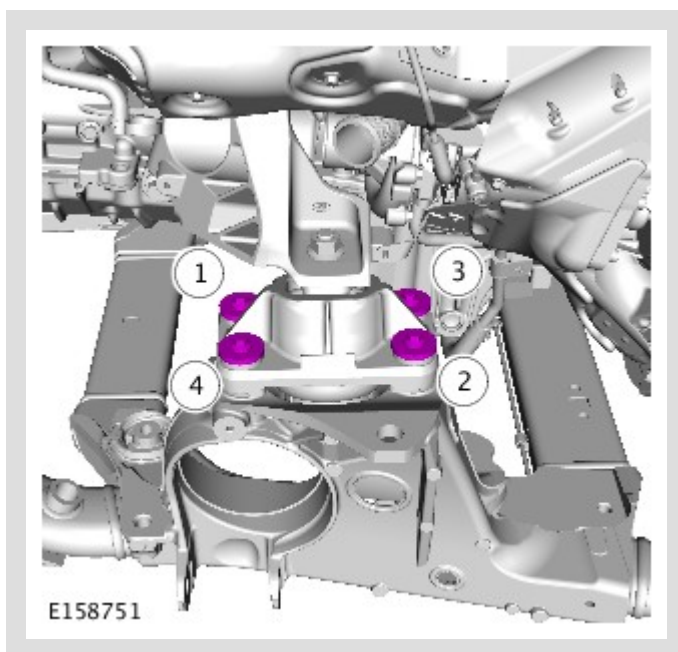


Torque: 40 Nm

8.

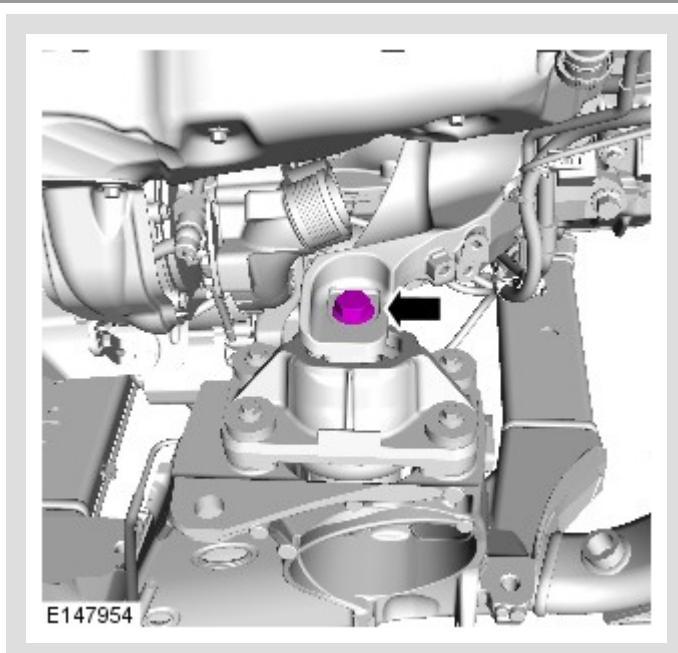


Torque: 130 Nm

9.

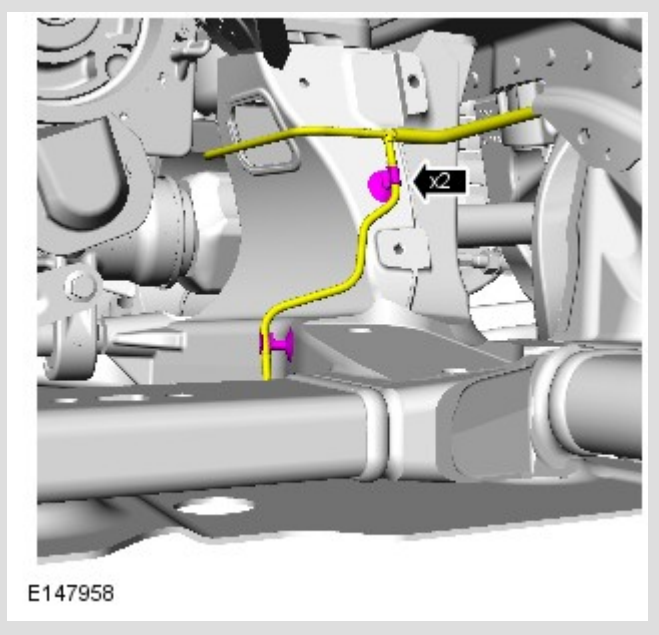

10.

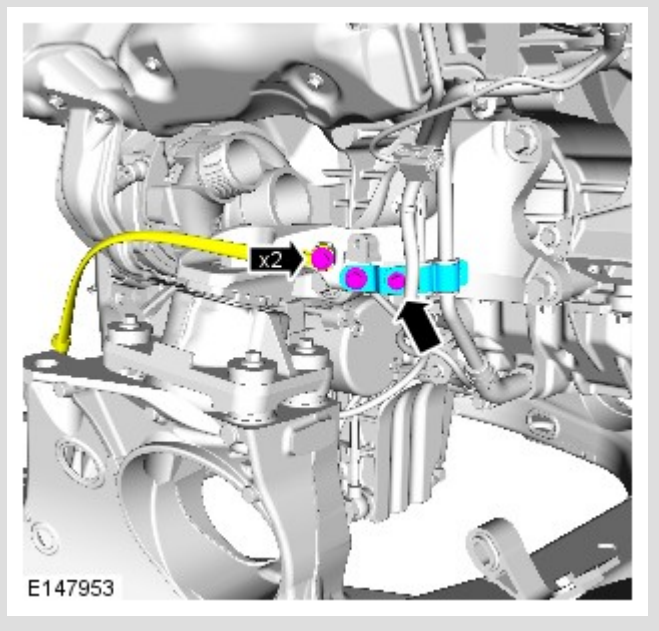

Torque:

M8 25 Nm

M6 10 Nm

11.

Refer to: [Generator](#) (414-02B Generator and Regulator - TDV8 4.4L Diesel, Removal and Installation).

12.

Connect the battery ground cable.

Refer to: [Specifications](#) (414-00 Battery and Charging System - General Information, Specifications).