

PUBLISHED: 29-OCT-2013
2015.0 RANGE ROVER (LG), 303-01


ENGINE - TDV8 4.4L DIESEL

RIGHT VALVE COVER (G1509182)

REMOVAL AND INSTALLATION

12.29.44	COVER - CAMSHAFT /ROCKER OR CYLINDER HEAD - RH /REAR - RENEW	4400 CC, TDV8, WITHOUT FUEL FIRED BOOSTER HEATER	2.9	USED WITHINS	
----------	---	--	-----	-----------------	--

SPECIAL TOOL(S)

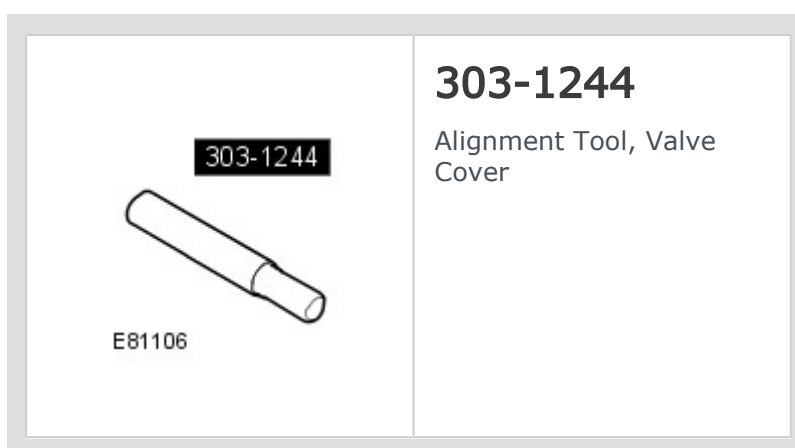

REMOVAL




NOTES:

- Some variation in the illustrations may occur, but the essential information is always correct.
- Removal steps in this procedure may contain installation details.
- Engine shown removed for clarity.


1. Refer to: [Diesel Fuel System Health and Safety Precautions](#) (100-00 General Information, Description and Operation).

2. Disconnect the battery ground cable.
Refer to: [Specifications](#) (414-00 Battery and Charging System - General Information, Specifications).

3. Refer to: [Right Fuel Injectors](#) (303-04F Fuel Charging and Controls - TDV8 4.4 L Diesel, Removal and Installation).

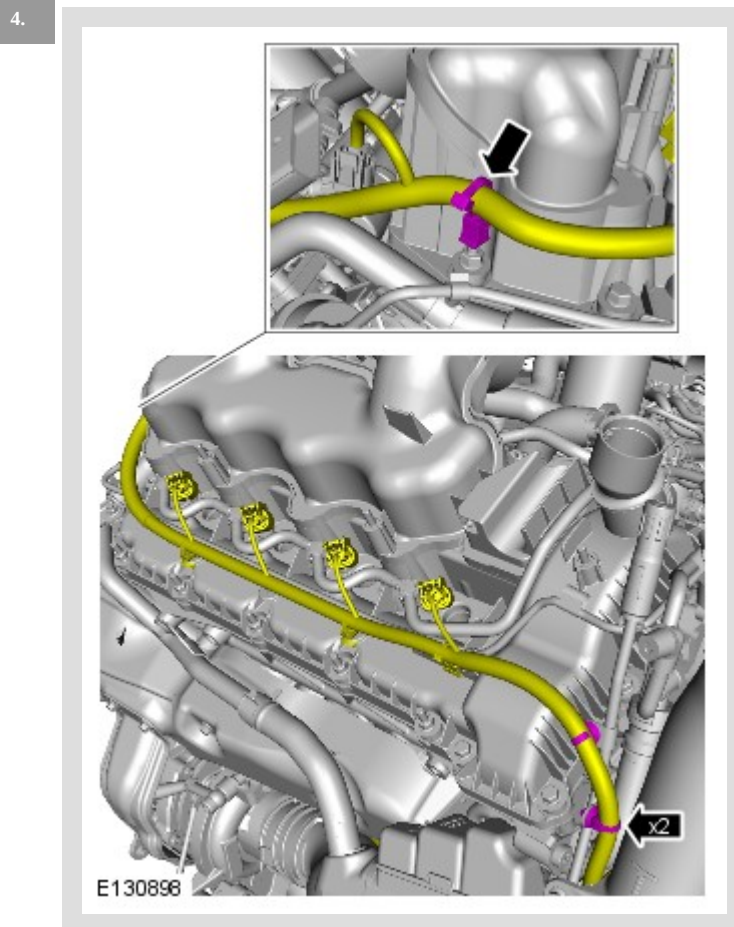


5.

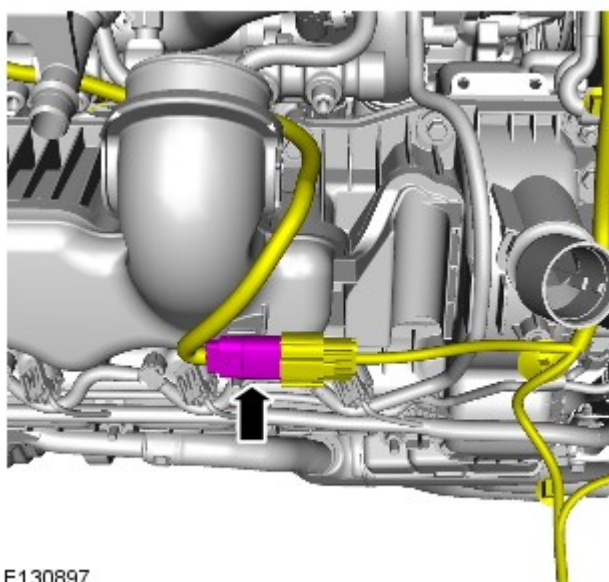


E130897

6.

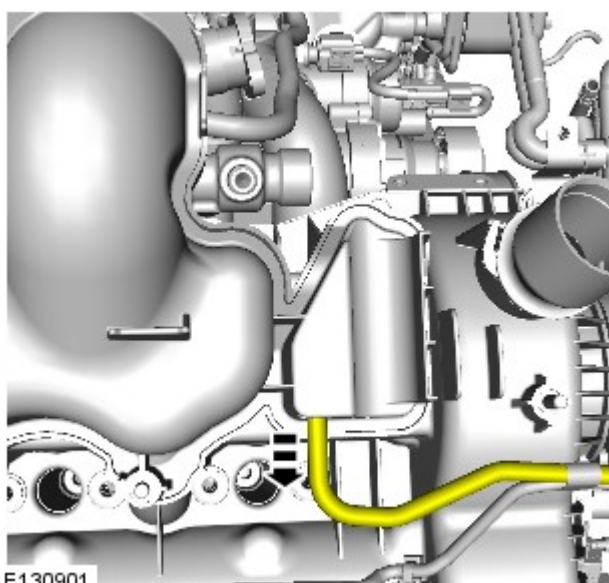


E130901


7.


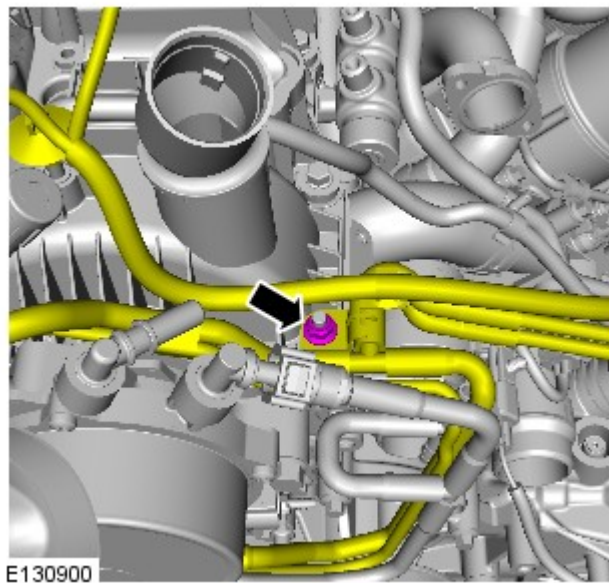


8.

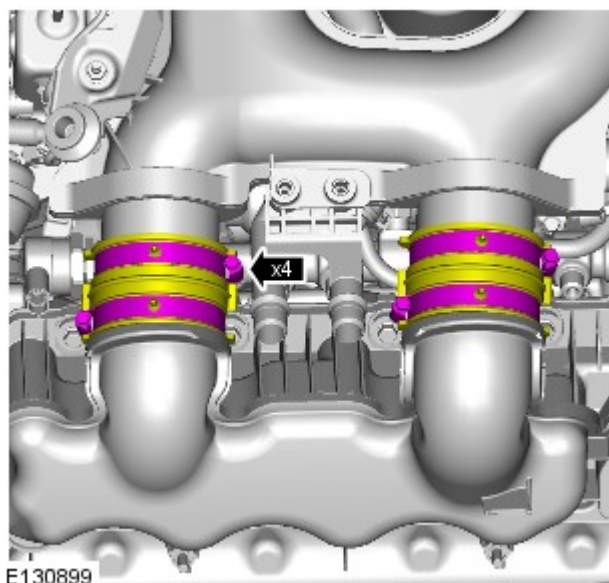

9.

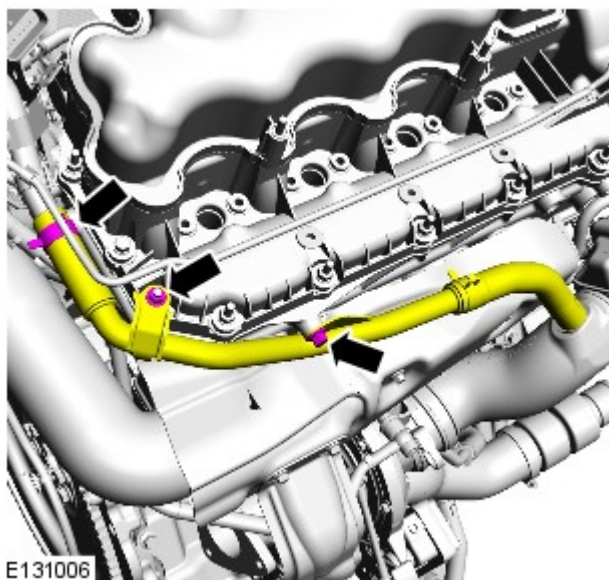

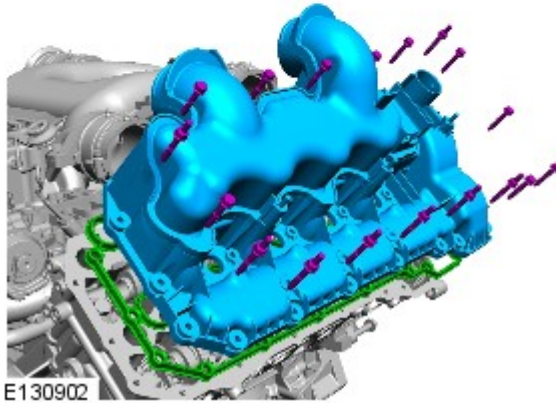
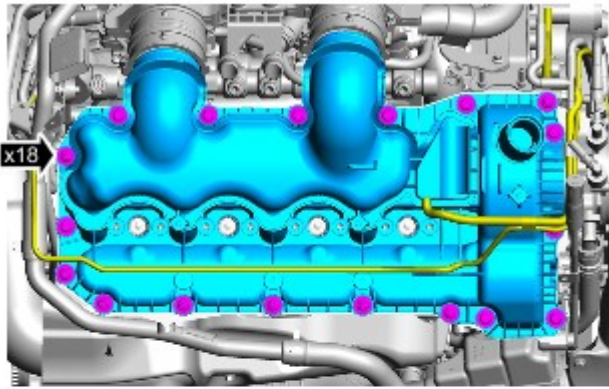


INSTALLATION

1.


⚠ CAUTION:

Only tighten the bolts finger-tight at this stage.

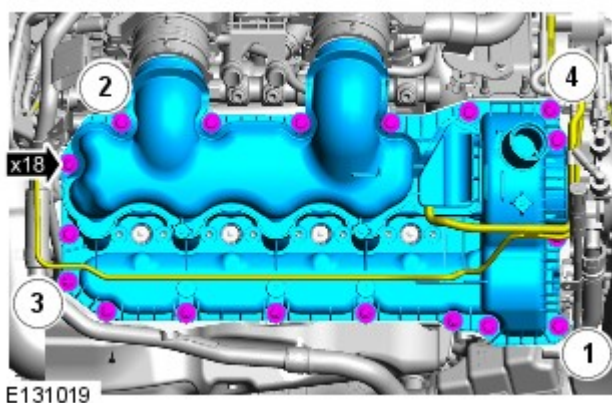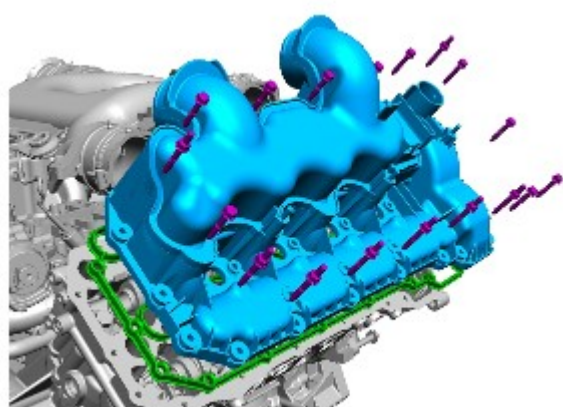

E131019

2.

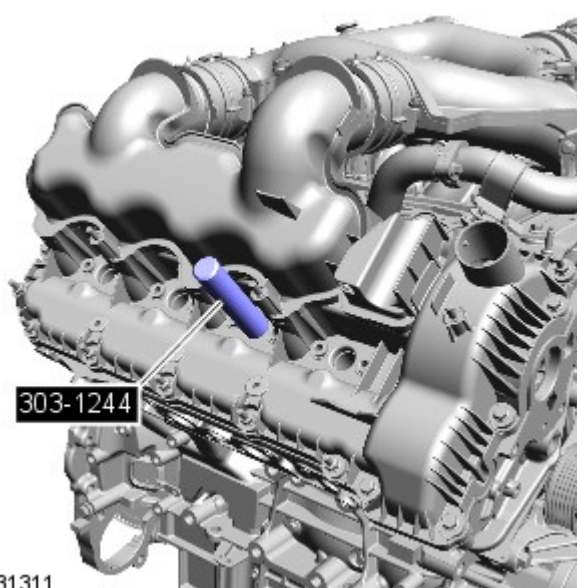

E131311


Special Tool(s): [303-1244](#)

3.



CAUTION:

Tighten the bolts in the sequence shown.

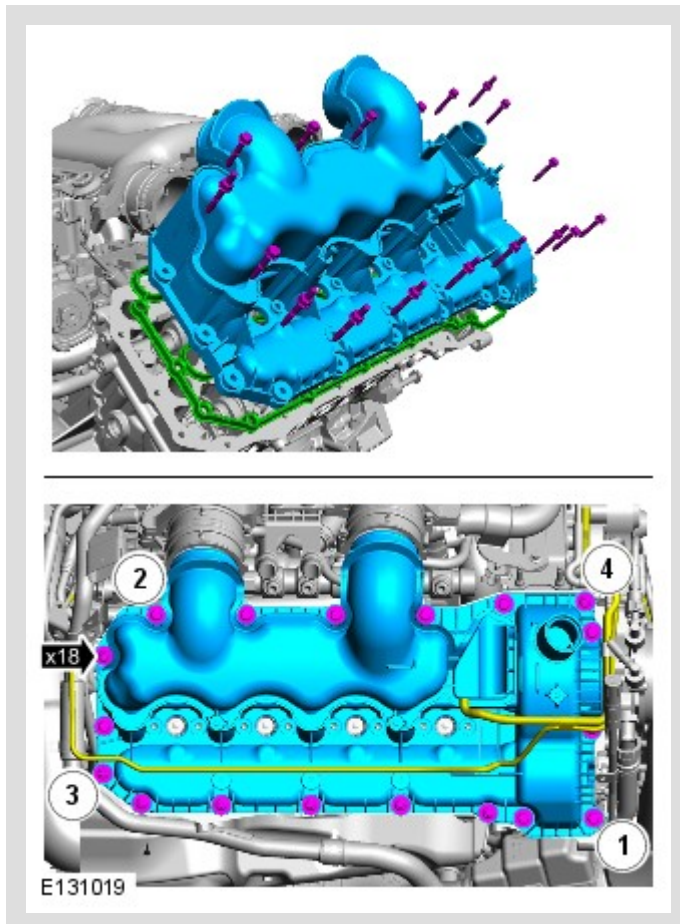

Torque:

Stage 1:

Bolts 1-4 **10 Nm**


Stage 2:

Remaining Bolts **10 Nm**

4.


Remove the special tool.

5.

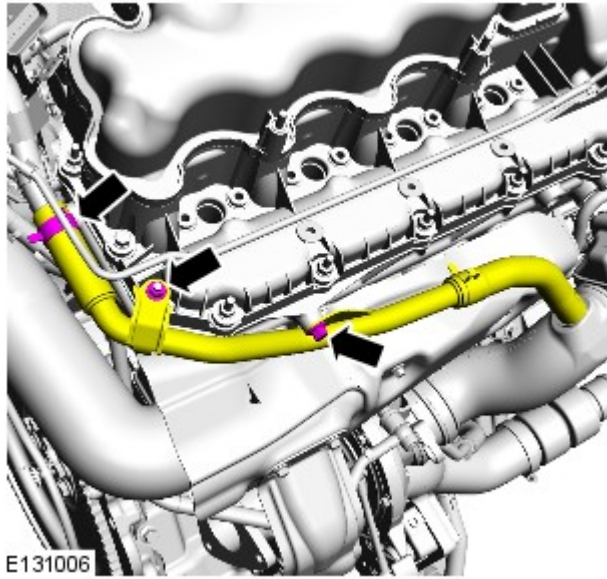


Torque: 10 Nm

6.

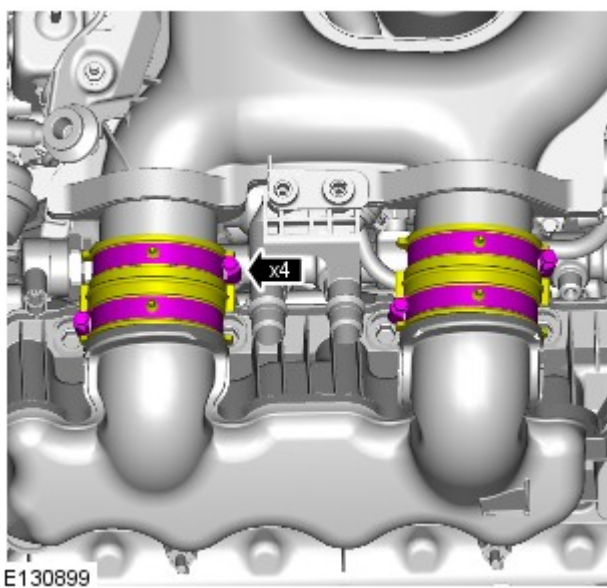


Torque: 7 Nm

7.

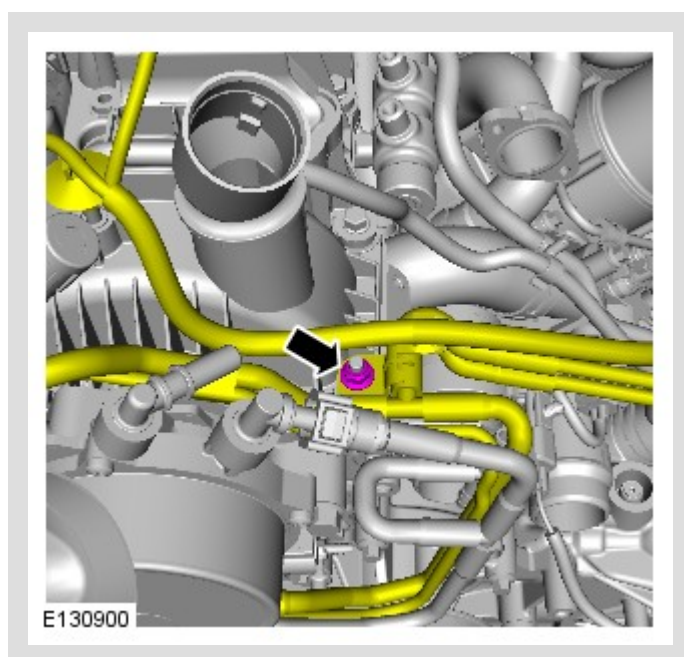



Torque: 10 Nm

8.

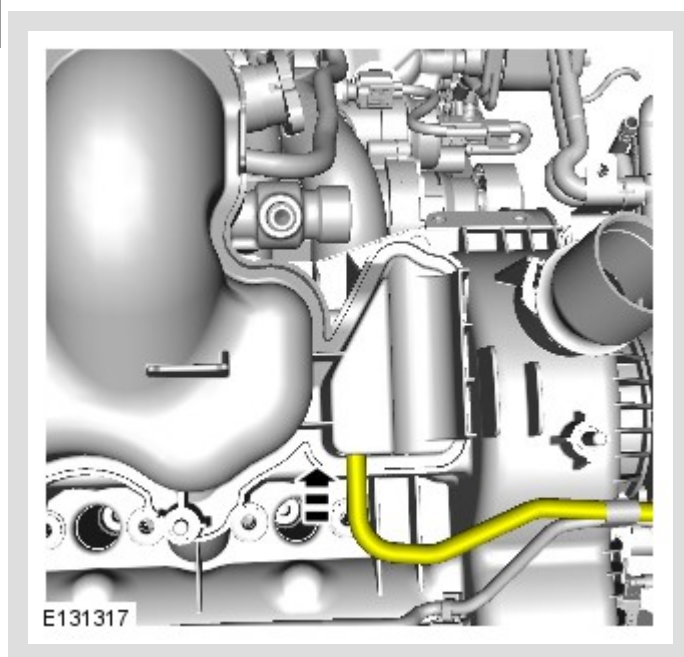

9.

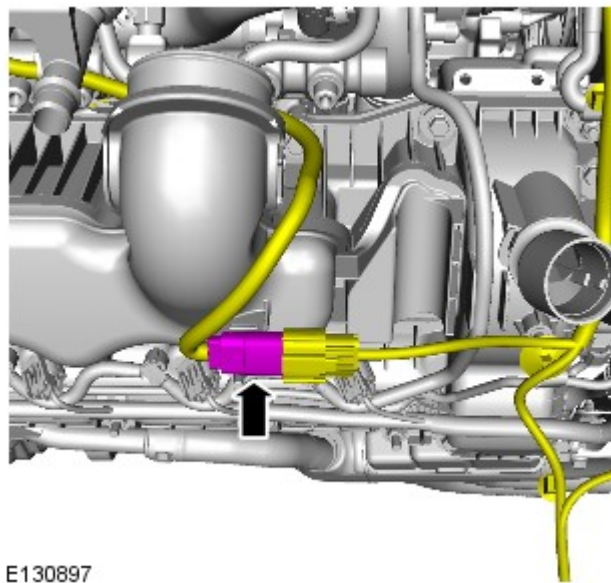

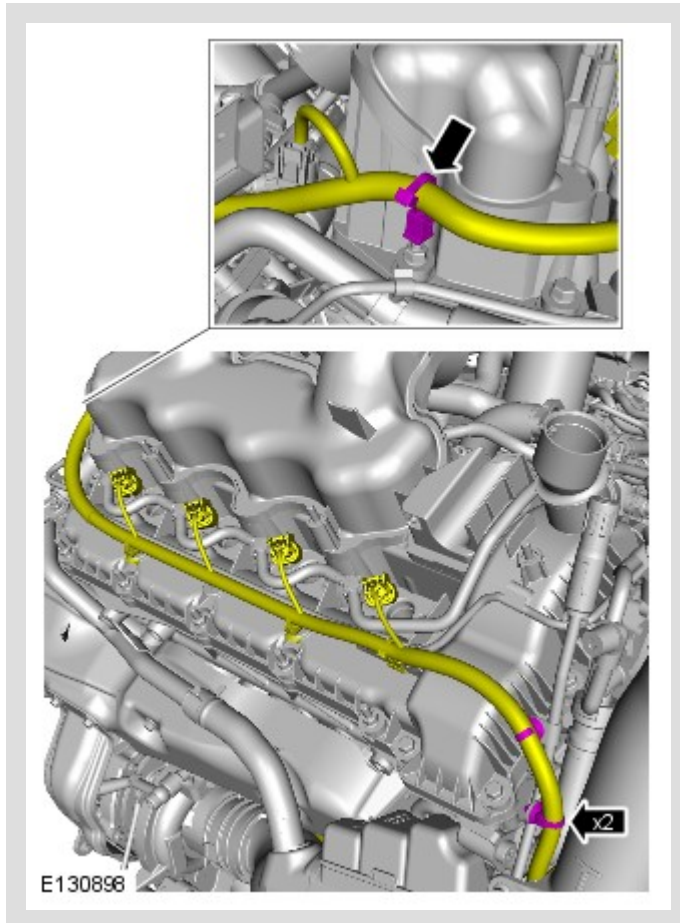

11. Refer to: [Right Fuel Injectors](#) (303-04F Fuel Charging and Controls - TDV8 4.4 L Diesel, Removal and Installation).
12. Connect the battery ground cable.
Refer to: [Specifications](#) (414-00 Battery and Charging System - General Information, Specifications).