

PUBLISHED: 02-AUG-2016
2014.0 RANGE ROVER (LG), 303-01

ENGINE - V8 S/C 5.0L PETROL

CRANKSHAFT REAR SEAL (G1509343)

REMOVAL AND INSTALLATION


12.21.20	OIL SEAL - CRANKSHAFT - REAR - RENEW	5000 CC, AJ V8, SUPERCHARGED	5.8	USED WITHINS	
----------	---	------------------------------------	-----	-----------------	--

SPECIAL TOOL(S)



303-1442

Rear Crankshaft Seal
Installer

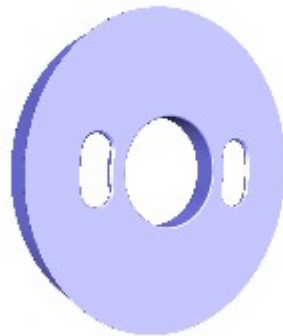

E154431

JLR- 303 -16 22

Alignm
ent
Tool,
Engine
Rear
Oil
Seal


REMOVAL

NOTE:

Some illustrations may show the engine removed for clarity.

1. Refer to: Flexplate (303-01 Engine - V8 S/C 5.0L Petrol, Removal and Installation).

- 2.

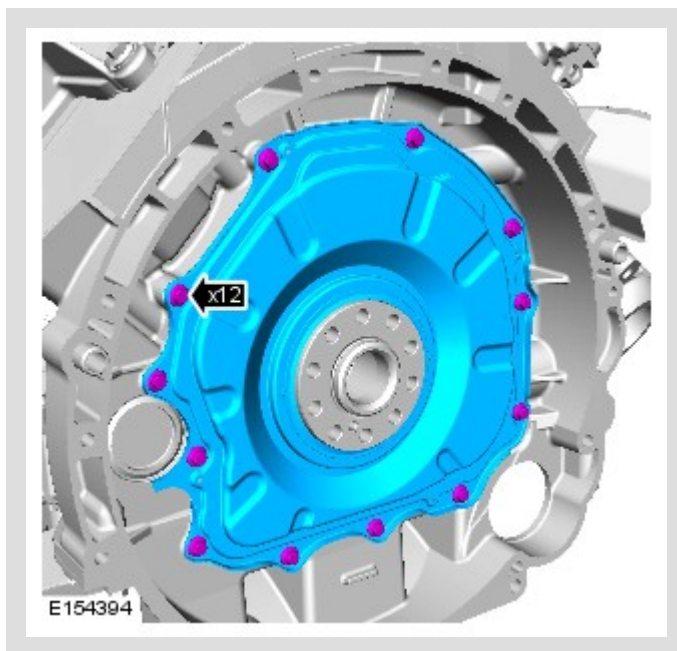


INSTALLATION

1.



CAUTIONS:


- Use only a plastic scraper when removing the sealing material.
- Make sure that the mating faces are clean and free of foreign material.
- Make sure that the Land Rover approved cleaning fluid (Loctite 7063) is used to clean the mating faces.

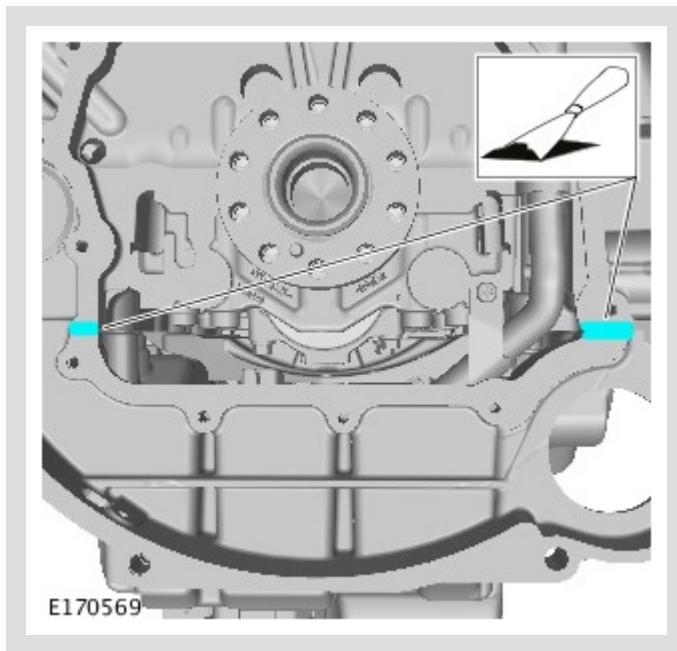

2.

⚠ CAUTION:

Make sure that the Land Rover approved sealant, covers the mating faces of the cylinder block and the oil pan.

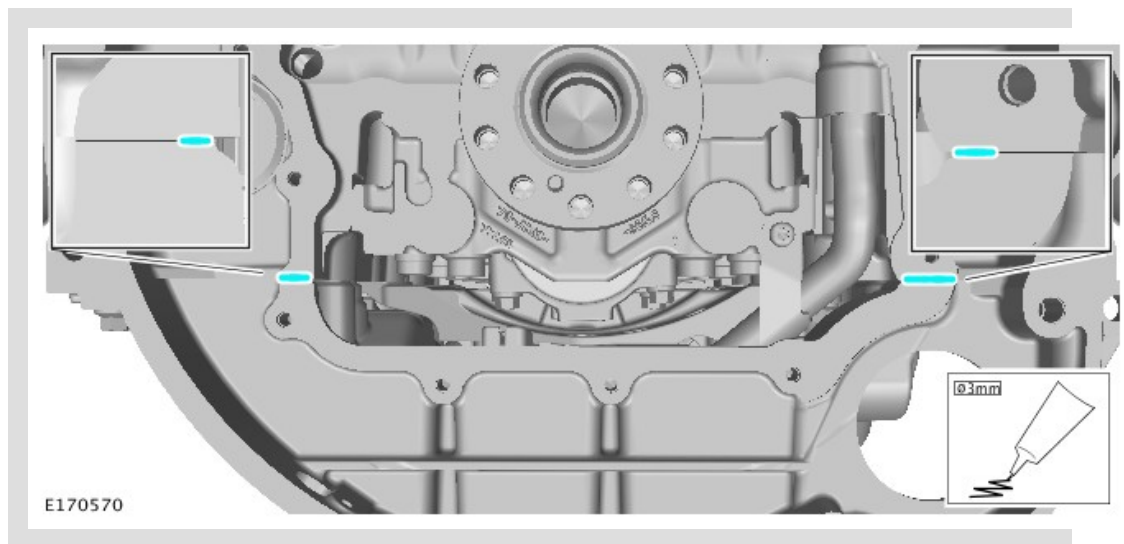


Apply RTV sealant (Loctite 5901G or Loctite 5900) in a 2-3mm diameter to the areas shown, and install the engine rear oil seal plate within 7 minutes.

3.



CAUTION:

Make sure that the special tool is correctly located.

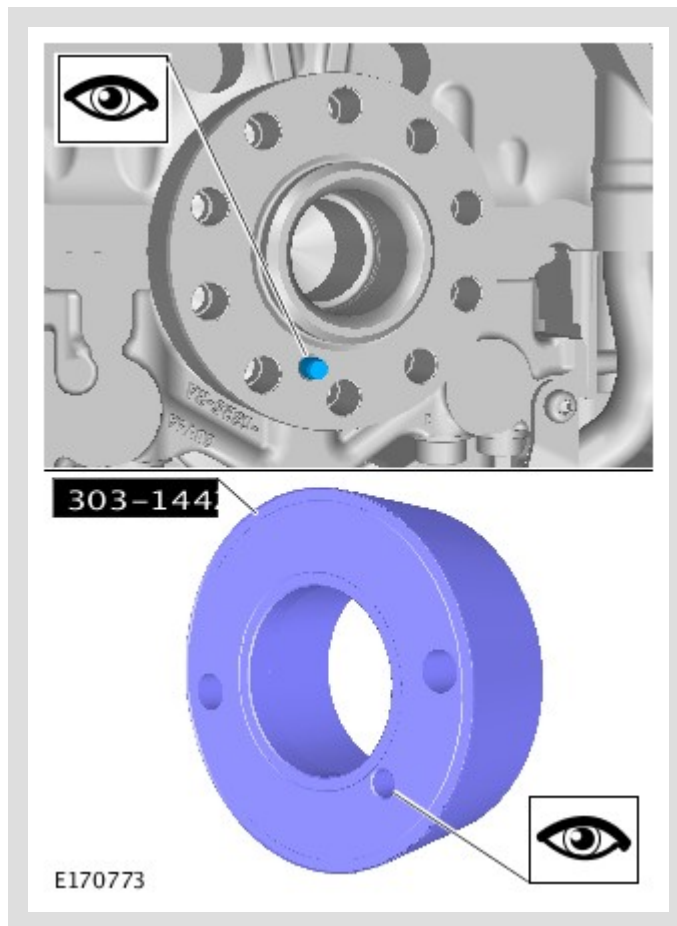


Special Tool(s): [303-1442](#)

4.

 NOTE:

Install the bolts finger tight.

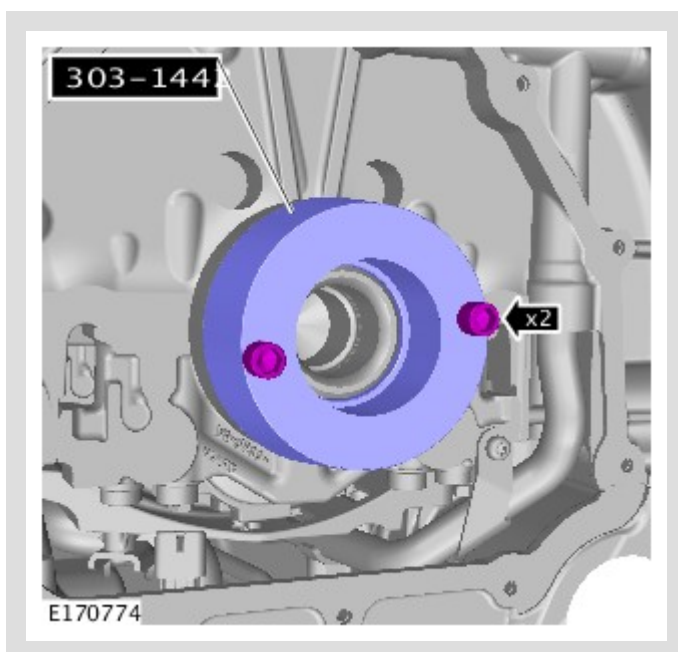

Install the special tool.


Special Tool(s): [303-1442](#)

5.




CAUTION:

Do not fully install the component. Maintain a clearance of 8mm, between the rear oil seal plate and the cylinder block, as smearing of the sealant may occur.

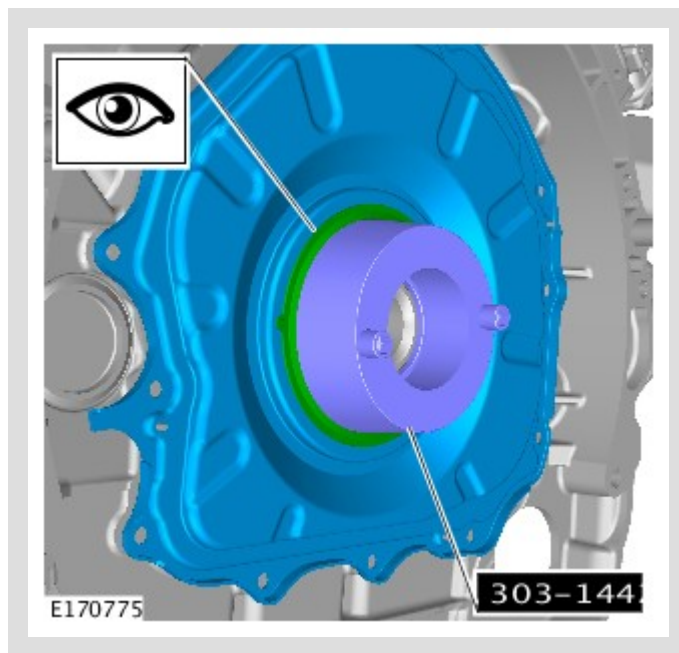


Special Tool(s): 303-1442

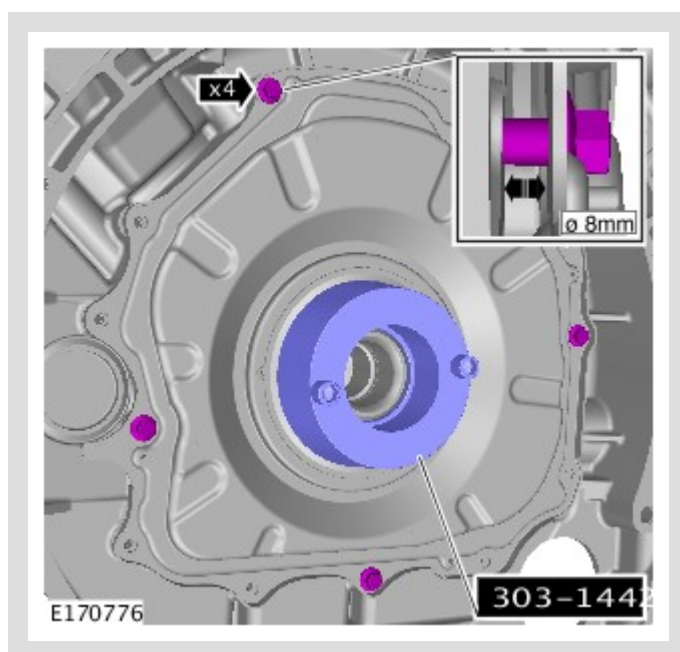

Install the bolts and maintain the clearance of 8mm.

Special Tool(s): [303-1442](#)

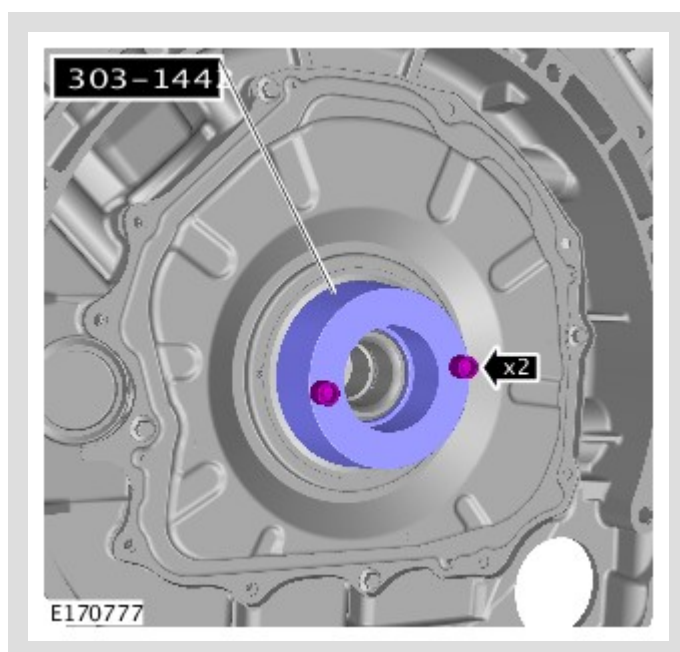

Remove the special tool.


Special Tool(s): [303-1442](#)

8.



CAUTION:

Apply pressure to the rear oil seal plate in the sequence shown, when installing the special tool.

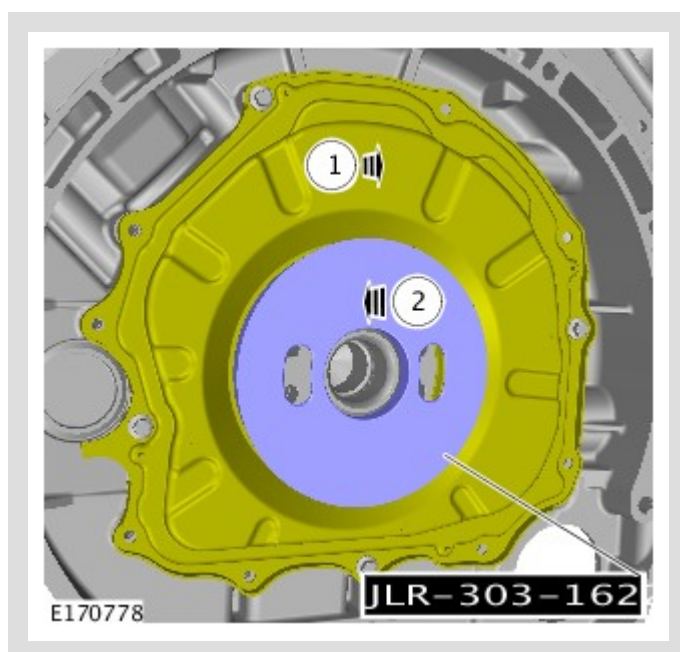


Special Tool(s): [JLR-303-1622](#)

9.

NOTE:

Tighten the bolts in the indicated sequence.

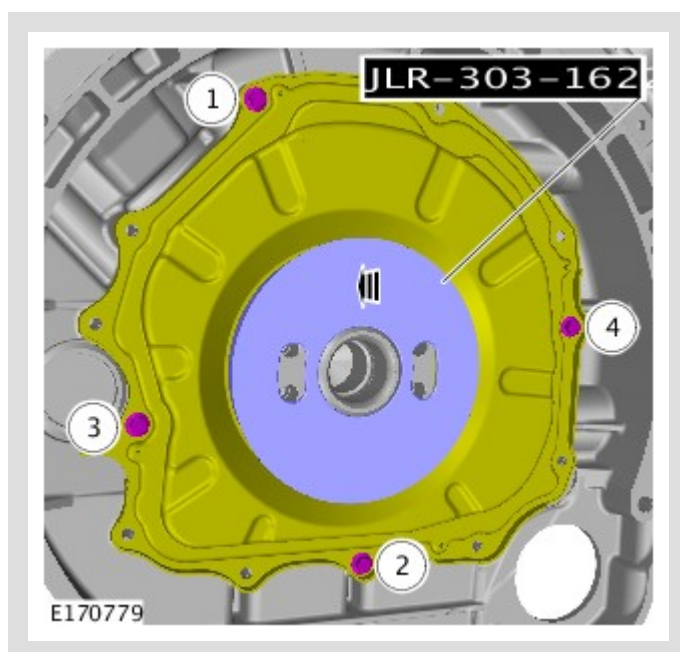

Using the special tool, install the component.

Special Tool(s): [JLR-303-1622](#)


Torque: **11 Nm**



Remove the special tool.

Special Tool(s): [JLR-303-1622](#)

11.

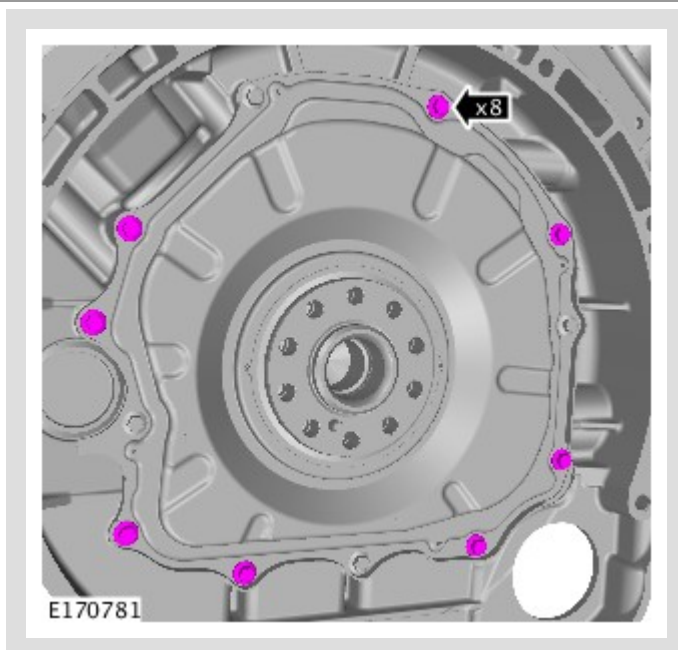

Torque: 11 Nm

12. Refer to: Flexplate (303-01 Engine - V8 S/C 5.0L Petrol, Removal and Installation).