

PUBLISHED: 15-AUG-2017
2014.0 RANGE ROVER (LG), 303-01

ENGINE - V8 S/C 5.0L PETROL

ENGINE OIL DRAINING AND FILLING

(G1509302)

GENERAL PROCEDURES

12.60.05	ENGINE OIL - DRAIN AND REFILL - INCLUDES OIL FILTER RENEW	5000 CC, AJ V8	1	USED WITHINS	
----------	---	-------------------	---	-----------------	--

PART(S)

STEP	PART NAME	QUANTITY
Filling Step 1	Oil pan drain plug	1
Filling Step 3	Oil filter O-ring seal(s)	1
Filling Step 3	Oil filter	1

DRAINING



WARNING:

The spilling of hot engine oil is unavoidable during this procedure, care must be taken to prevent scalding.



CAUTIONS:

- Correct installation of the oil filler cap can be obtained by tightening the cap until hard stop.
- Make sure the engine is warm.




NOTE:

Clean the components general area prior to dismantling.

1.

- Start the engine and allow to run for 10 minutes, stop the engine.


2.

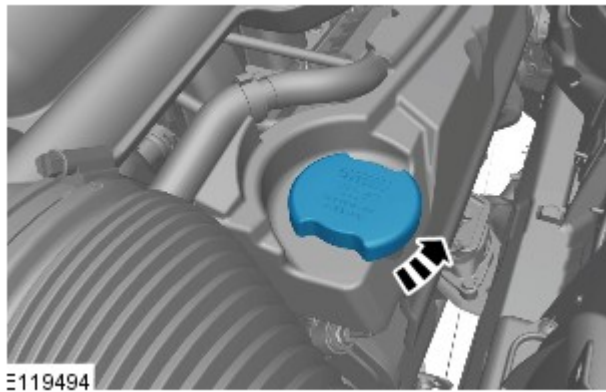

3.

Refer to: Engine Cover - V6 S/C 3.0L Petrol /V8 N/A 5.0L Petrol/V8 S/C 5.0L Petrol (501-05 Interior Trim and Ornamentation, Removal and Installation).

4.

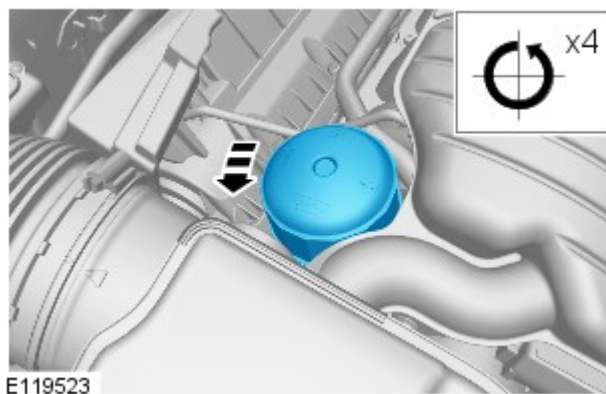


- Loosen the element cover 4 complete turns to allow engine oil to drain from the filter cover.
- Make sure that the O-ring seal is exposed.


5.

NOTES:

- Allow 10 minutes for the engine oil to drain from the oil filter housing.
- Remove and discard the O-ring seal.

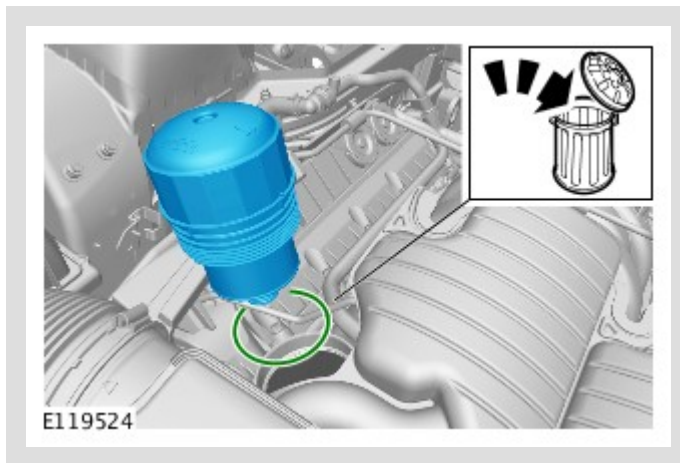

6.

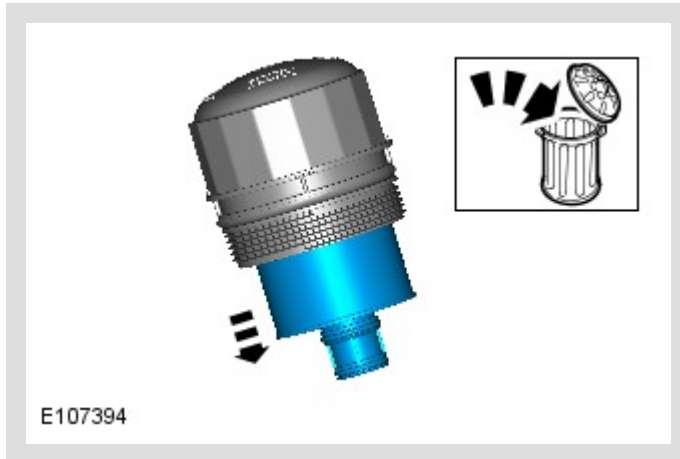

Remove and discard the oil filter element.

7.



WARNING:

Make sure to support the vehicle with axle stands.

Raise and support the vehicle.

8.

Refer to: Engine Undershield (501-02 Front End Body Panels, Removal and Installation).

9.




CAUTIONS:

- Be prepared to collect escaping oil.
- Allow at least 10 minutes for the engine oil to drain.

 NOTE:

Discard the sealing washer.

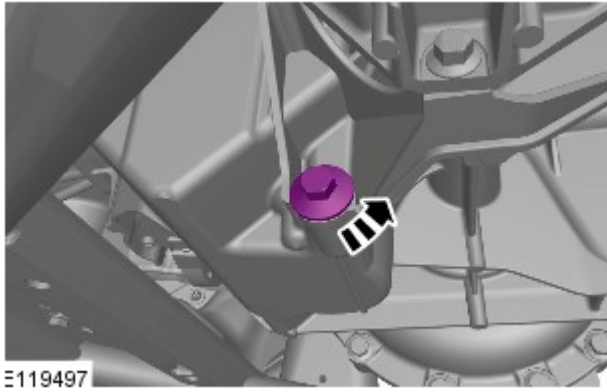

FILLING


1.

 CAUTION:

Make sure that the area around the component is clean and free of foreign material.

 NOTE:

Install a new sealing washer.

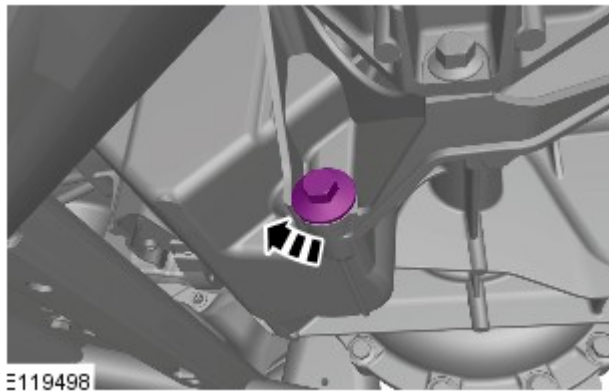

Renew Part: *Oil pan drain plug* Quantity: *1* .


Torque: 24 Nm

2. Refer to: Engine Undershield (501-02 Front End Body Panels, Removal and Installation).

3.

 NOTE:

Install new O-ring seals.

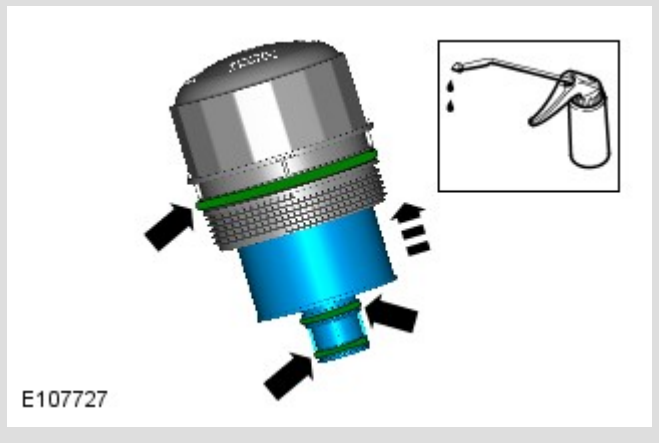

Lubricate the oil filter element O-ring seal with clean engine oil.


Renew Part: *Oil filter O-ring seal(s)* Quantity: *1* .

Renew Part: *Oil filter* Quantity: *1* .

4.

 CAUTION:

Tighten the component finger tight first.

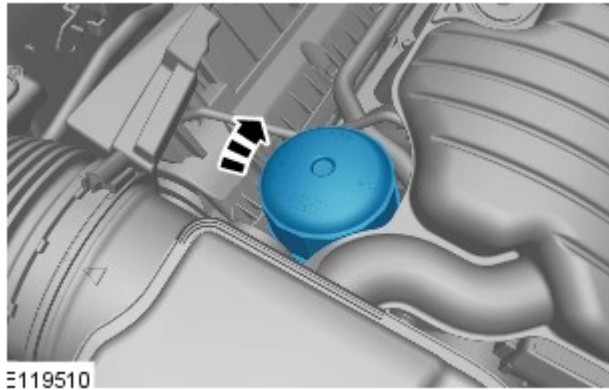

- *Torque: 25 Nm*


5.

⚠ **CAUTION:**

Make sure that the vehicle is left for 5 minutes from filling with oil and that the engine oil level is reading at least minimum (by following Steps 9-16), before starting the engine.

- Fill the engine with oil - for filling values on vehicles without supercharger:
Refer to: Specifications (303-01 Engine - V8 N/A 5.0L Petrol, Specifications).
- Fill the engine with oil - for filling values on vehicles with supercharger:
Refer to: Specifications (303-01 Engine - V8 N/A 5.0L Petrol, Specifications).
- Clean any residual engine oil from the oil filler cap area.

6.

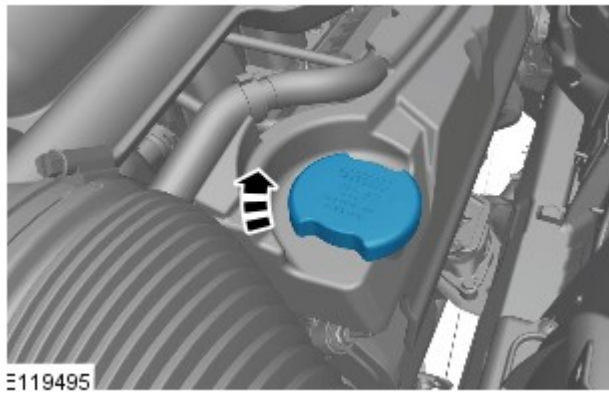

7.

⚠ CAUTION:

Make sure that the vehicle has been left for 5 minutes from filling with oil.

- Start the engine and allow to run for 10 minutes, stop the engine.
- Check for leaks.


8.

⚠ CAUTIONS:


- Make sure that the selector lever is in the park (P) position.
- Make sure that the hood is open.

- Set the ignition to the ON position.


9.

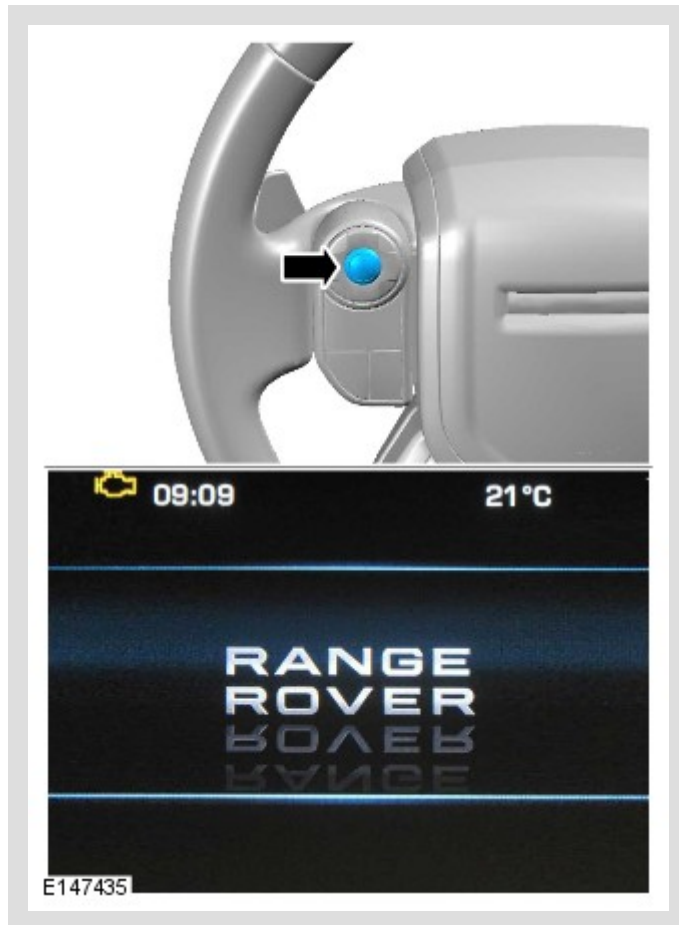


- Press the left-hand OK button to access the Instrument Cluster (IC) Main Menu.

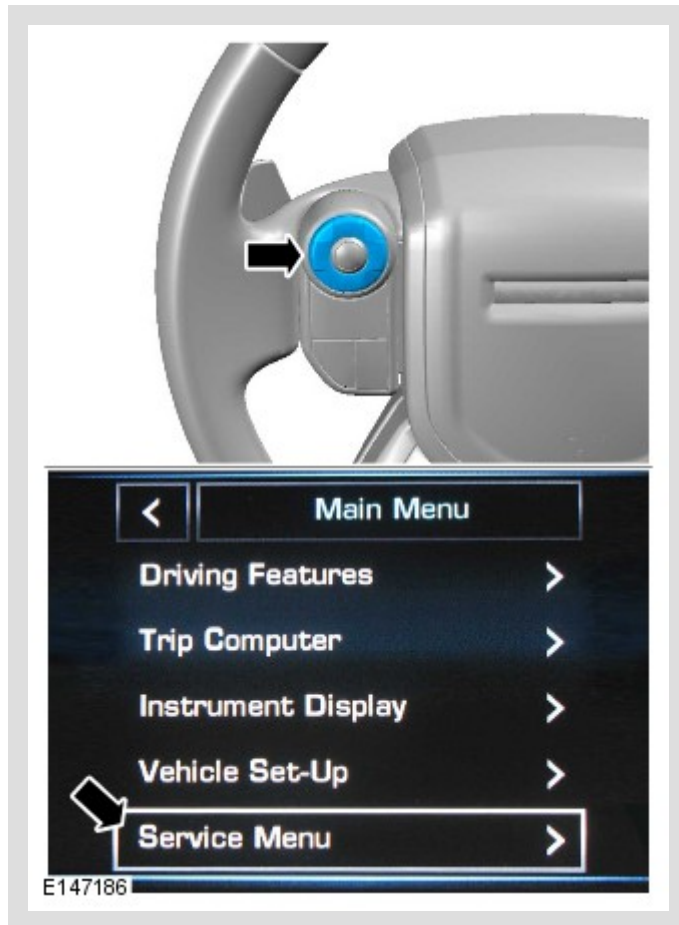

- Press the left-hand directional button and select Service Menu.

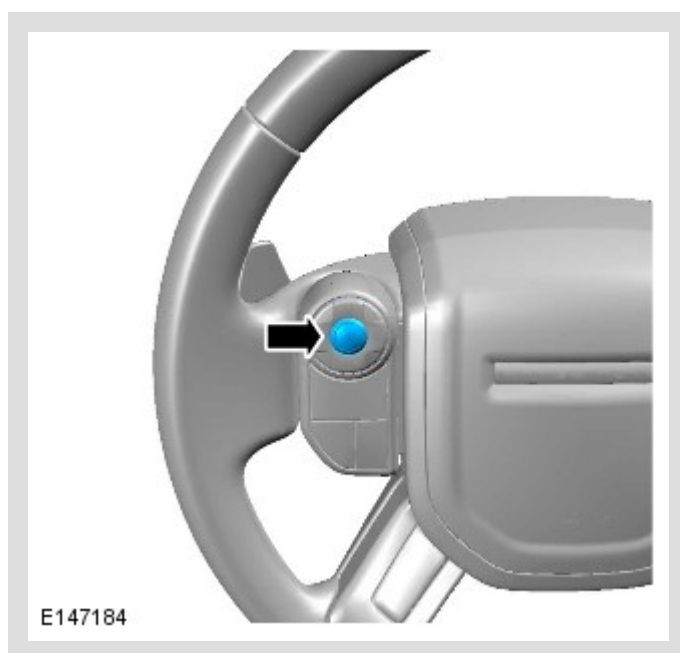

- Press the left-hand OK button.

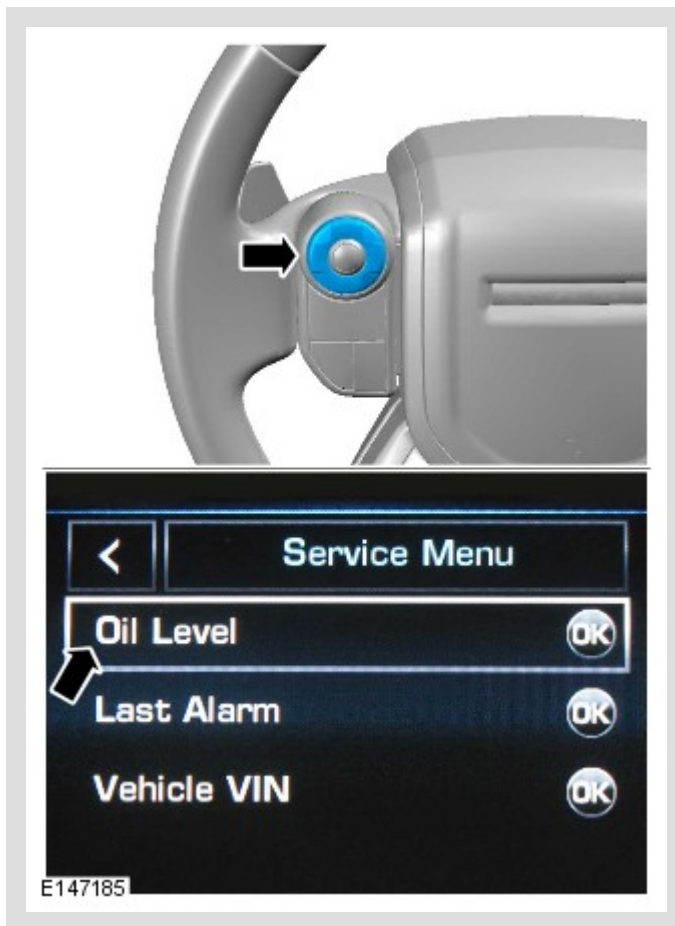

- Press the left-hand directional button and select the Oil Level display.




- Press the left-hand OK button to access the Oil Level display.

14.



CAUTION:

Make sure that the hood is open.

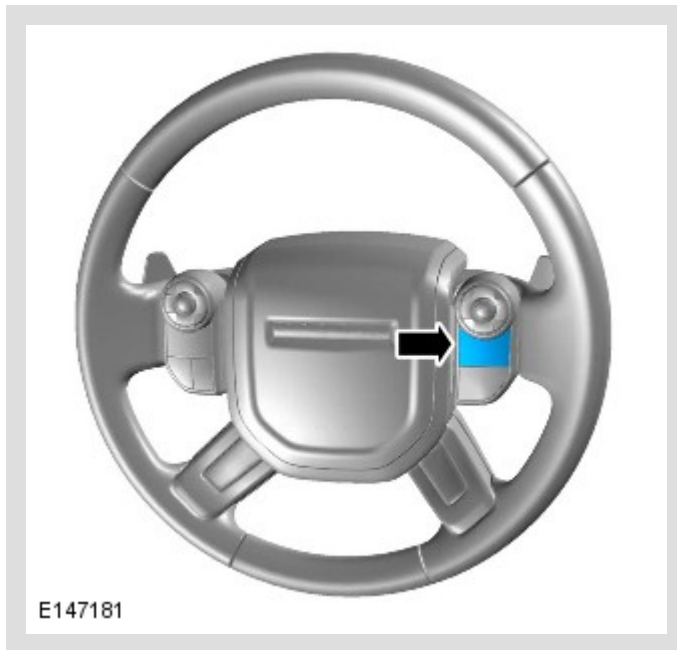

- Press the speed control cancel button twice within 2 seconds while being on the oil level display.

15.



- The message center displays the actual oil level in service mode.

- Only after having started and run the engine for 10 minutes (as indicated in Step 7), switch off the engine, then stabilizing for 10 minutes, take a reading from the oil level display and, if necessary top up with engine oil.

16. Set the ignition to the OFF position.

17. Allow 10 minutes for the engine oil level to stabilize if there has been additional oil top up.

 NOTE:

The following steps are to update the average oil level value.

18. Repeat step 8 to 14 to access the oil level display in service mode.

19. **NOTE:**

The actual volume displayed on the bar graph will be written into the electronic control unit as a new value.



- Press and hold the speed control cancel button for more than 5 seconds.
- The message center display the current oil level.

 NOTE:

Close the hood.


20. Set the ignition to the OFF position.

21. Set the ignition to the ON position.


22.

 NOTE:


The following steps are to check the current oil level in a customer mode.

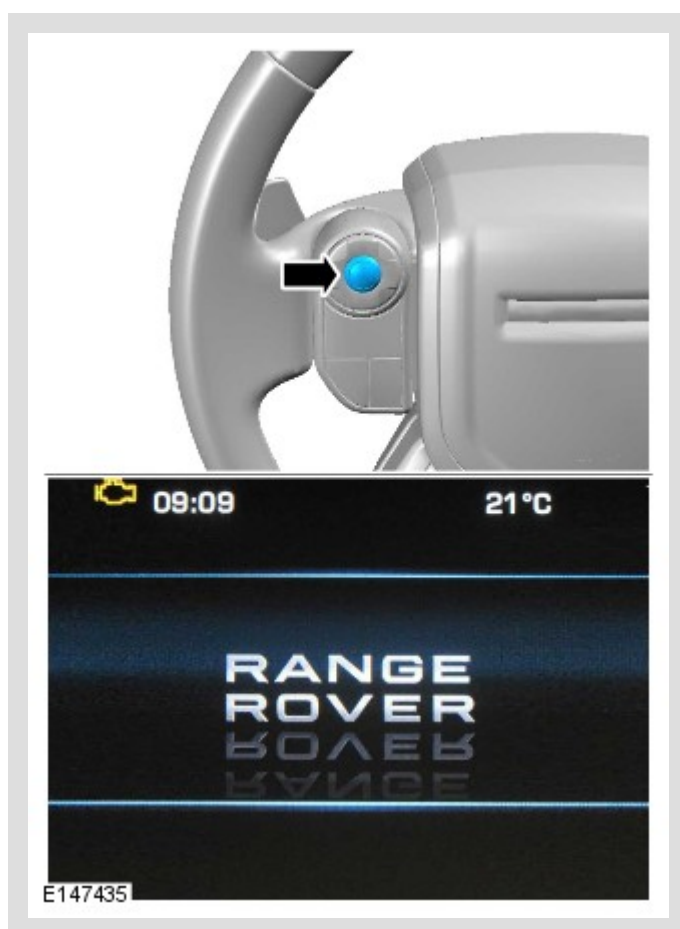


- Press the left-hand OK button to access the Instrument Cluster (IC) Main Menu.

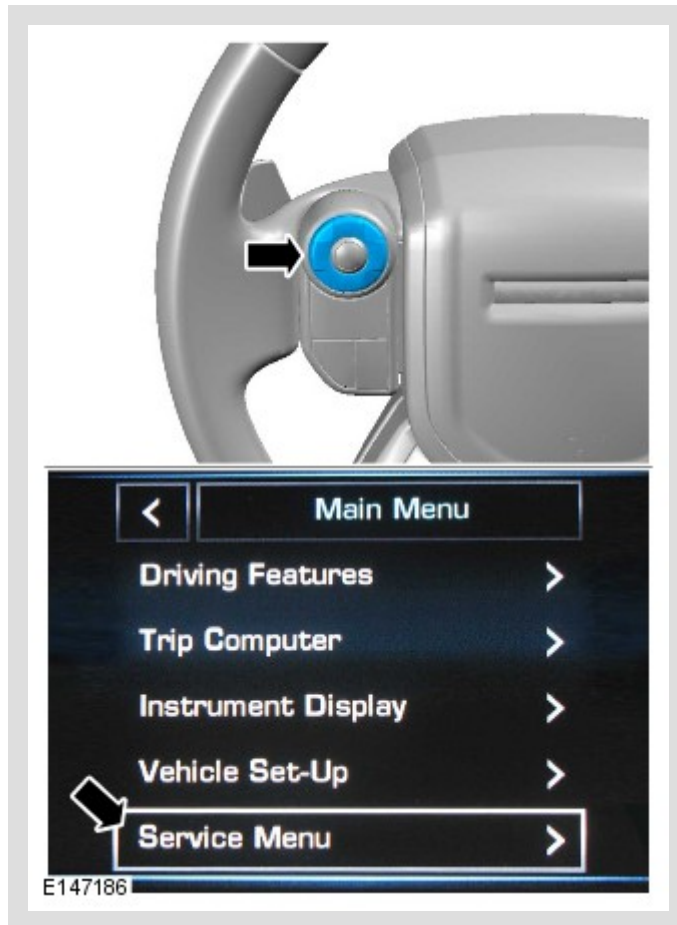

- Press the left-hand directional button and select Service Menu.

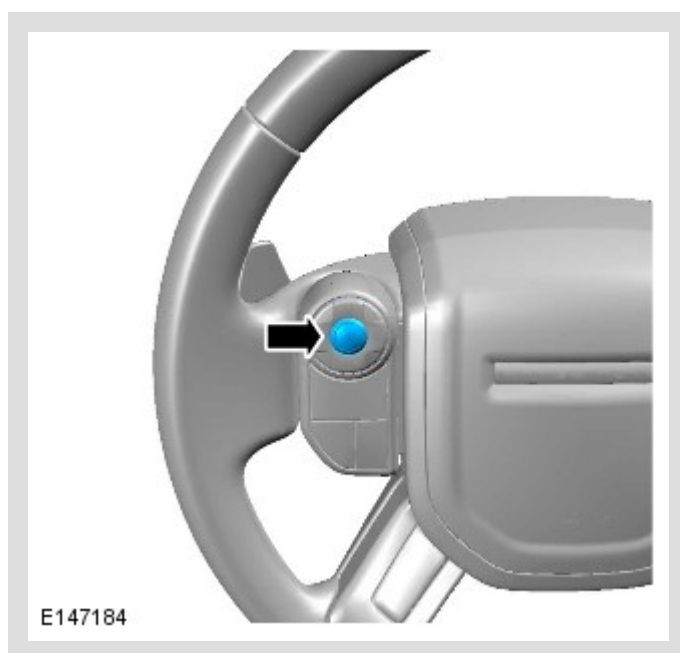

- Press the left-hand OK button.

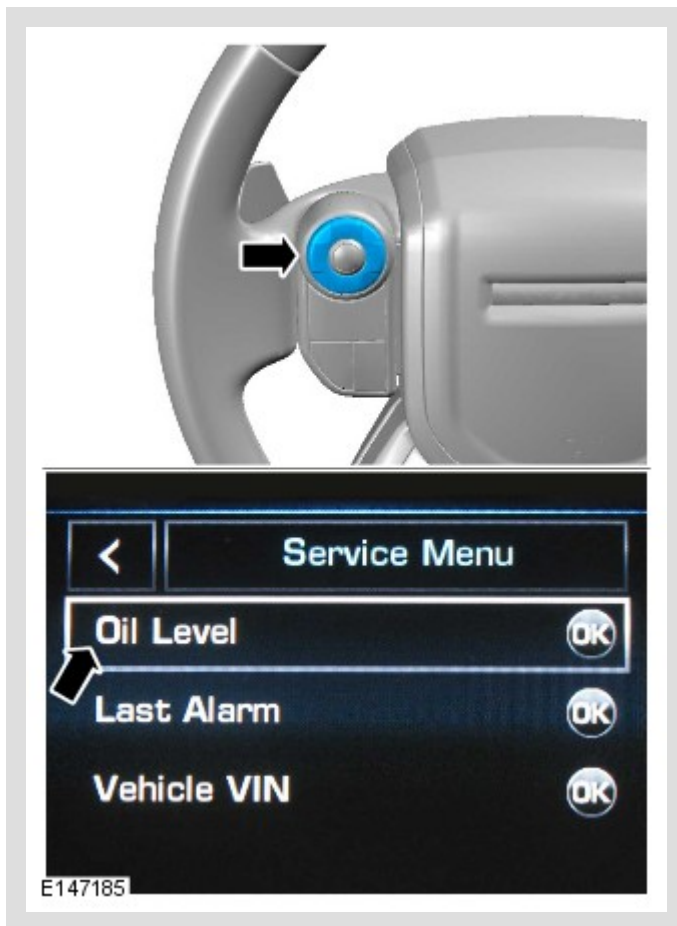

- Press the left-hand directional button and select the Oil Level display.



- Press the left-hand OK button and follow the instructions.

NOTE:

If the message shows "Not available" wait for further 10 mins to allow the oil level to stabilize.

Make sure that the average oil level value has now been updated.

