

PUBLISHED: 28-APR-2017
2014.0 RANGE ROVER (LG), 303-01

ENGINE - V8 S/C 5.0L PETROL

ENGINE (G1509361)

REMOVAL

REMOVAL

SPECIAL TOOL(S)



E115255

303-1435

Engine Lifting Brackets
Rear



E115254

303-1436

Engine Lifting Bracket
Front

PART(S)

STEP	PART NAME	QUANTITY
Step 10	Steering column lower shaft lower bolt	1

NOTES:

- Some variation in the illustrations may occur, but the essential information is always correct.
- Some components shown removed for clarity.

1. Disconnect the battery ground cable.

Refer to: Specifications (414-00 Battery and Charging System - General Information, Specifications).

2.



WARNING:

Make sure to support the vehicle with axle stands.

Raise and support the vehicle.

3. Refer to: Secondary Bulkhead Center Panel - V8 S/C 5.0L Petrol (501-02 Front End Body Panels, Removal and Installation).

4. Refer to: Hood (501-02 Front End Body Panels, Removal and Installation).


5. Refer to: Radiator - V8 S/C 5.0L Petrol (303-03 Engine Cooling - V8 N/A 5.0L Petrol/V8 S/C 5.0L Petrol, Removal and Installation).

6. Refer to: Accessory Drive Belt - V8 S/C 5.0L Petrol (303-05 Accessory Drive - V8 N/A 5.0L Petrol/V8 S/C 5.0L Petrol, Removal and Installation).

7. Refer to: Engine Oil Draining and Filling (303-01 Engine - V8 N/A 5.0L Petrol, General Procedures).

8. Refer to: Transmission - V8 N/A 5.0L Petrol/V8 S/C 5.0L Petrol (307-01 Automatic Transmission/Transaxle - Vehicles With: 8HP70 8-Speed Automatic Transmission AWD, Removal).


9.

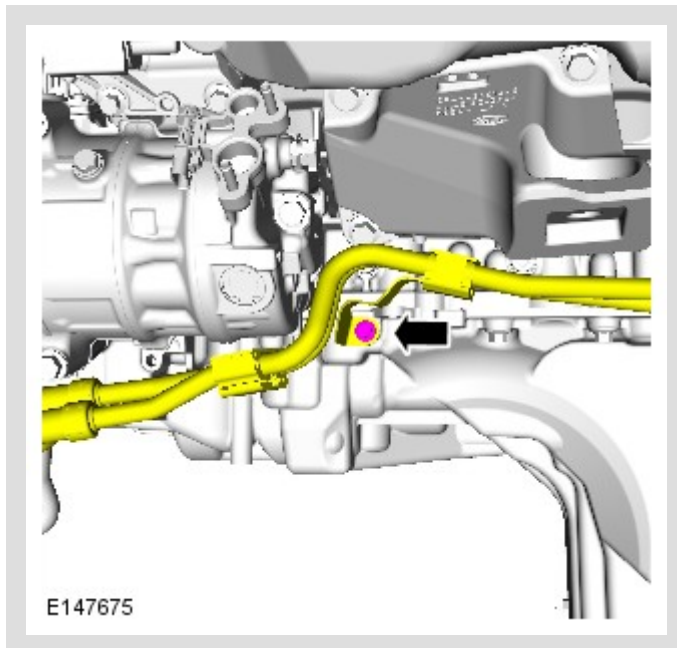

10.

 NOTE:


Left hand drive only.

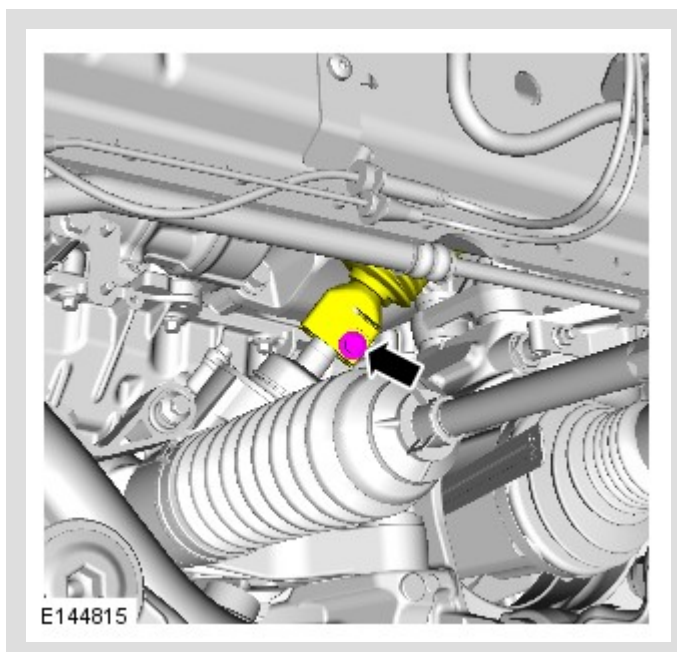


Discard the bolt.

Renew Part: *Steering column lower shaft lower bolt* Quantity: 1 .

11.

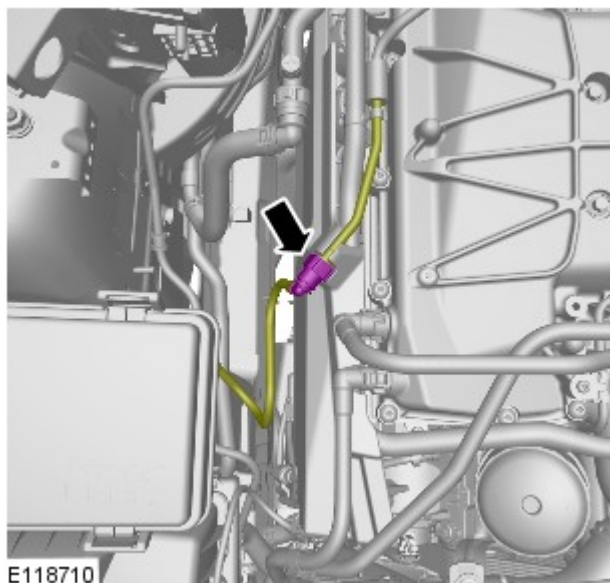

12.

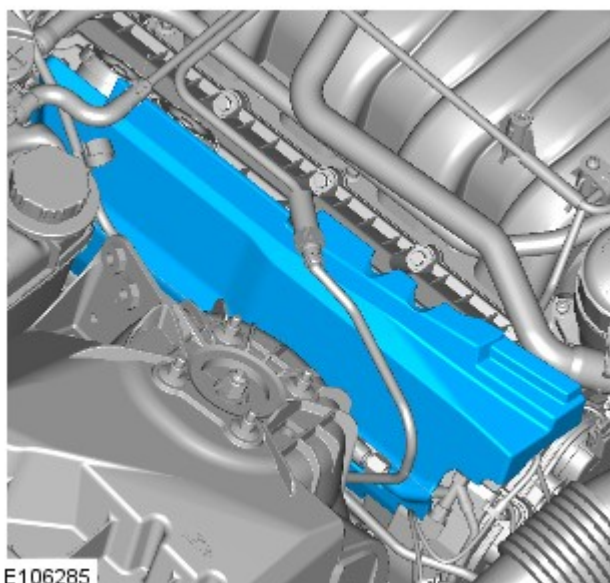

13.




WARNING:

Do not smoke or carry lighted tobacco or open flame of any type when working on or near any fuel related components. Highly flammable vapors are always present and may ignite. Failure to follow these instructions may result in personal injury.



CAUTION:

Be prepared to collect escaping fuel.

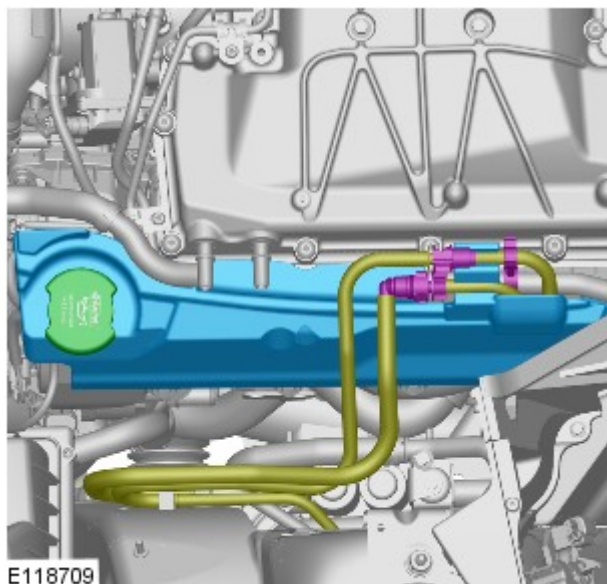


14.



WARNING:

Be prepared to collect escaping fluids.

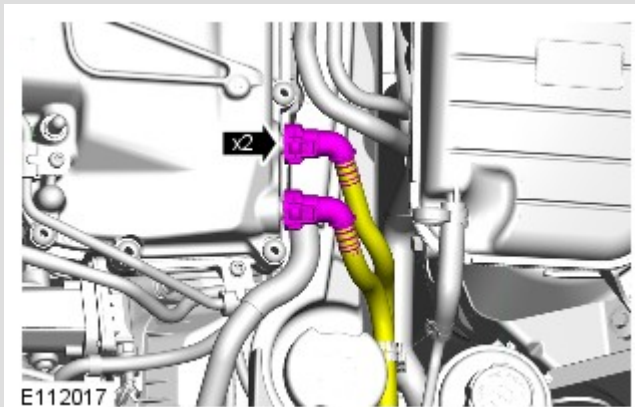


15.




WARNING:

Be prepared to collect escaping fluids.

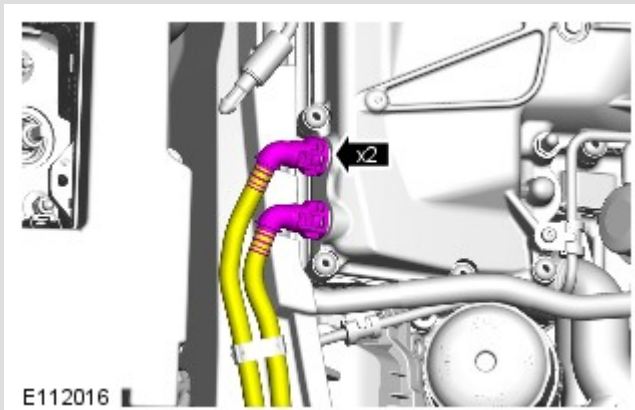


16.

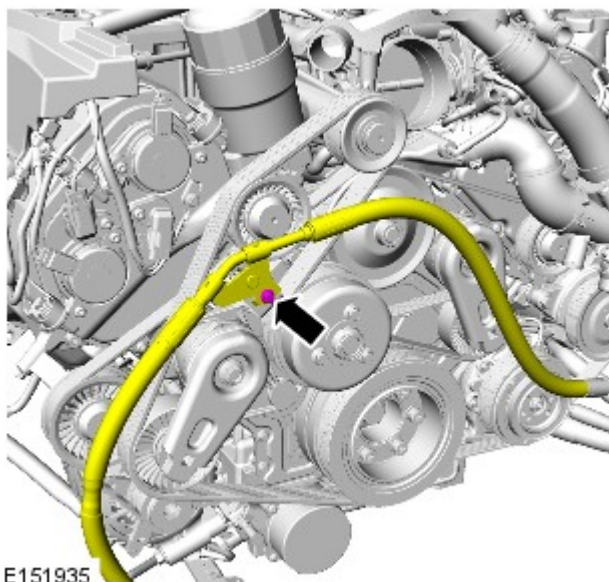


17.

⚠ CAUTION:


Be prepared to collect escaping coolant.

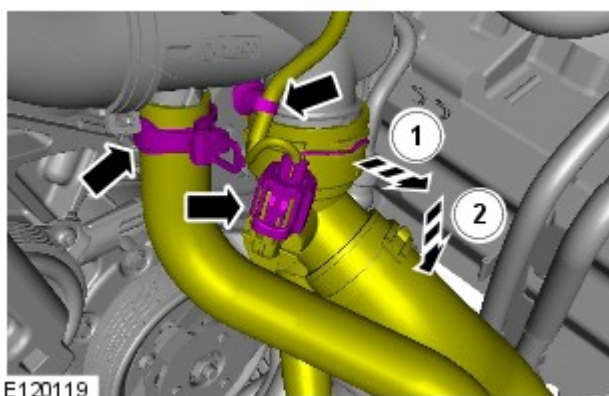


18.

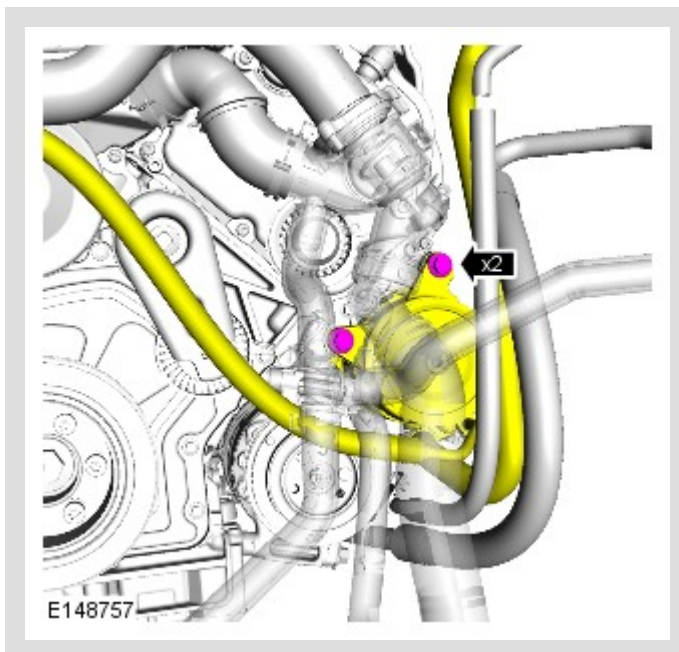


19.

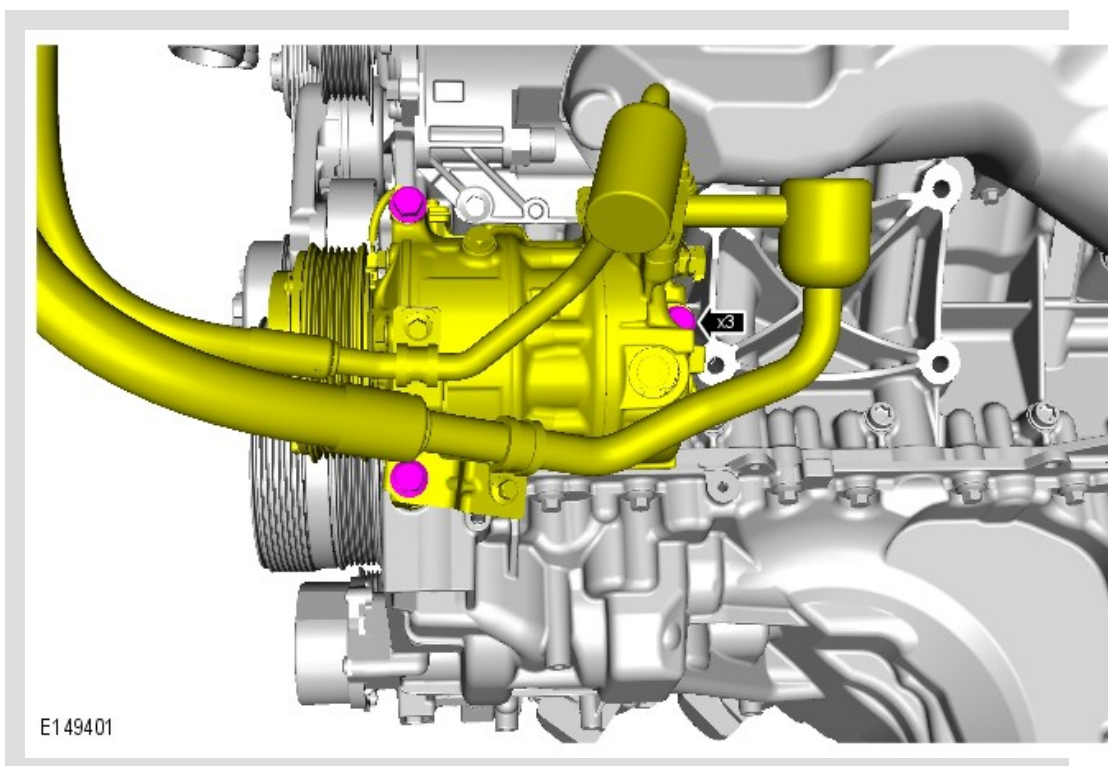

20.

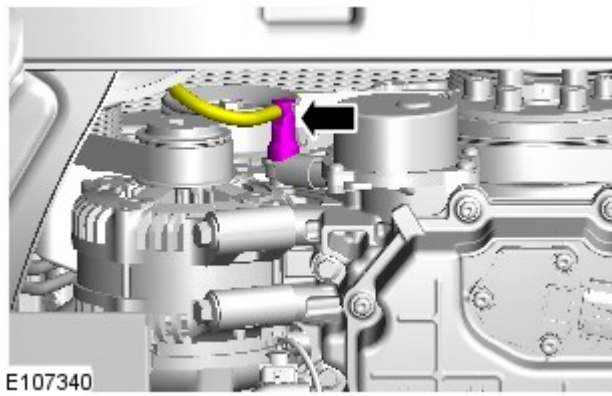


21.

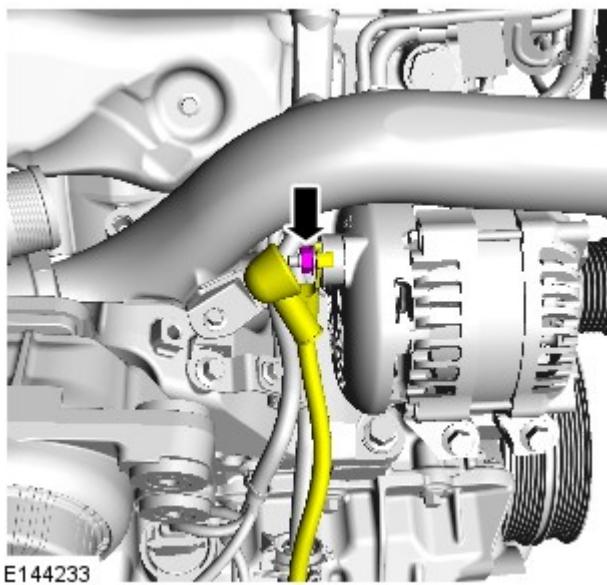


22.

⚠ CAUTION:


Be prepared to collect escaping coolant.

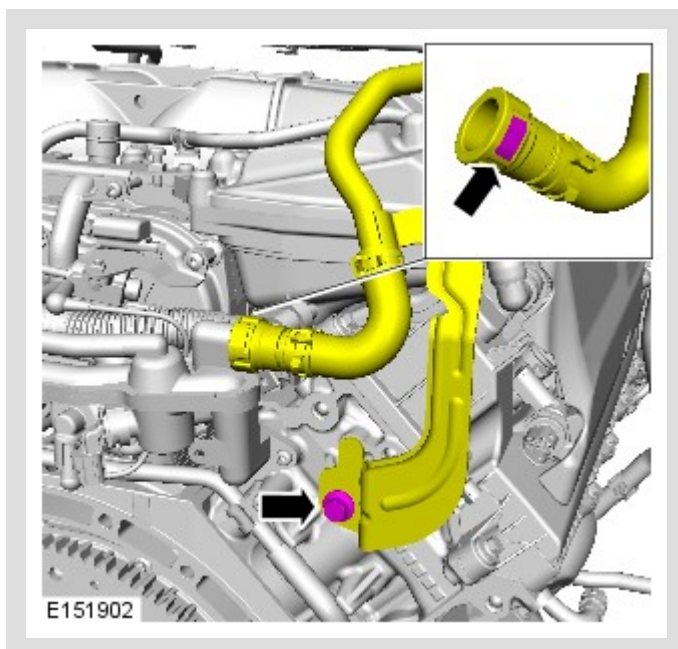


23.

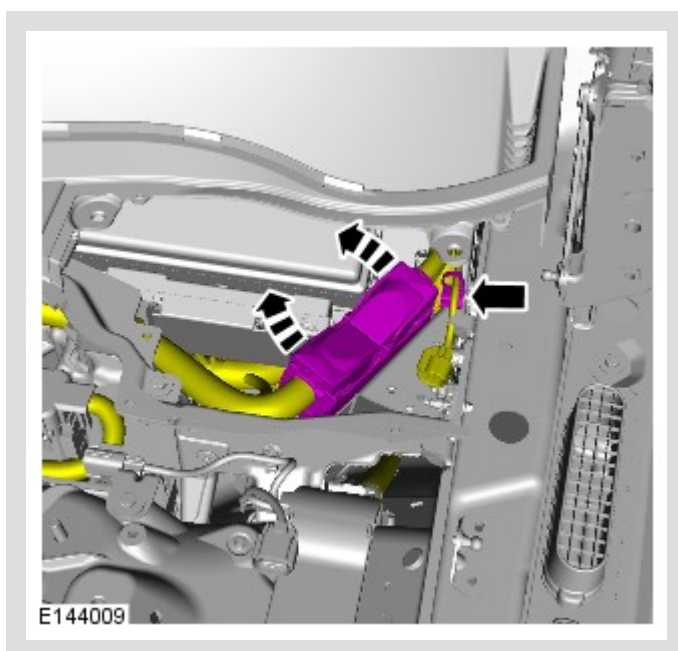


24.

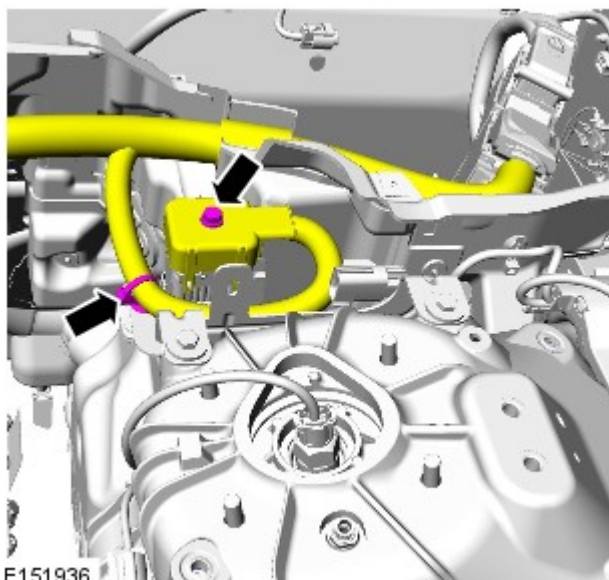

25.

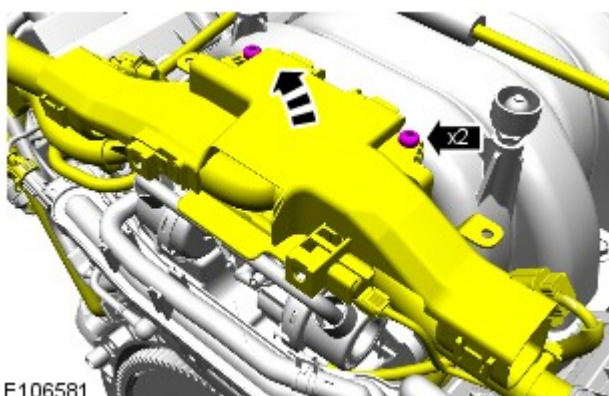


26.

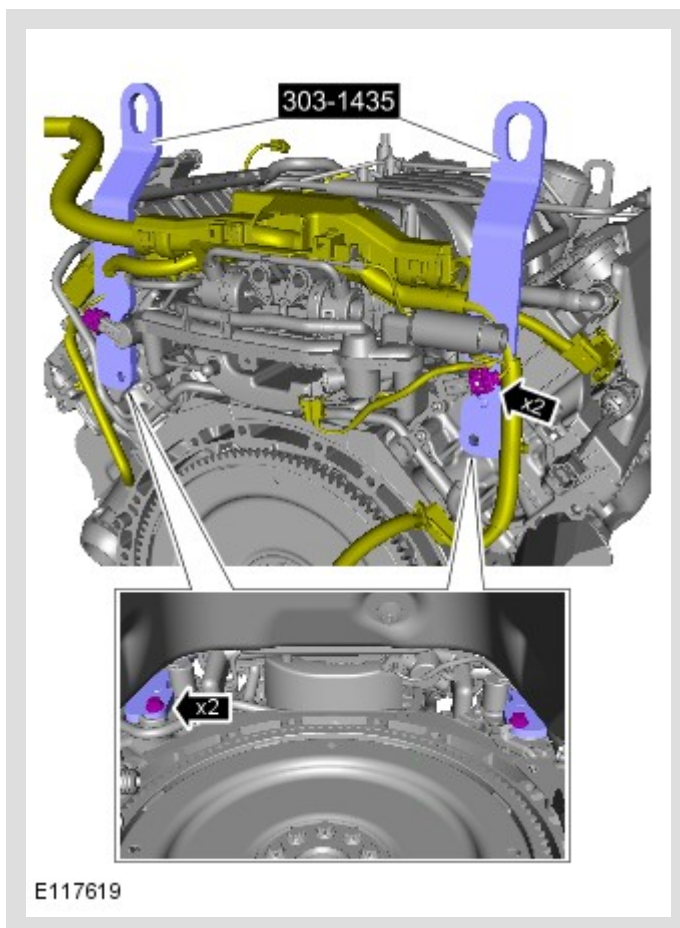


Special Tool(s): [303-1435](#)

Torque: 25 Nm


27.


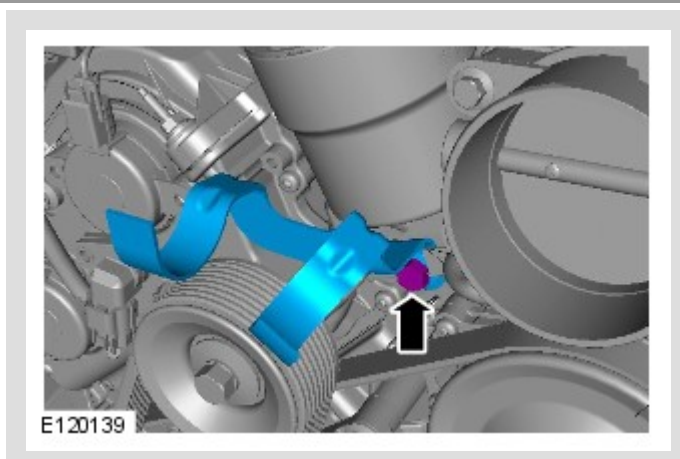


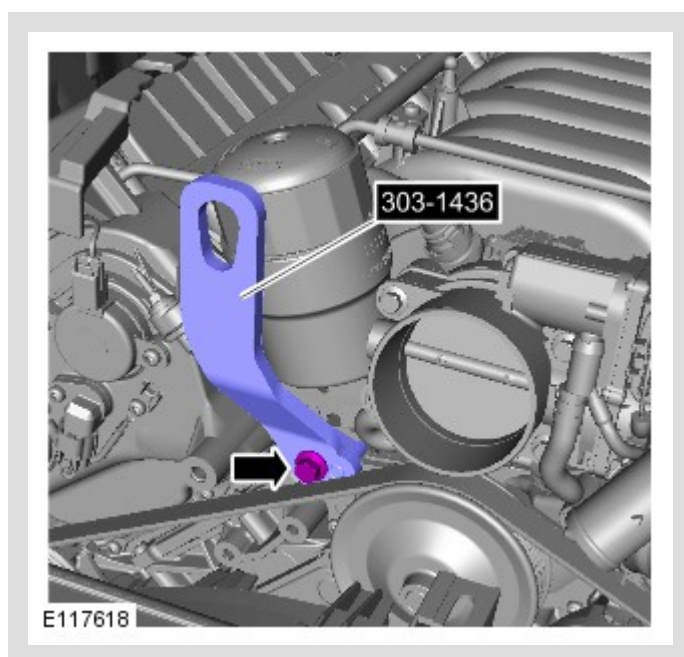

Special Tool(s): 303-1436

Torque: 25 Nm

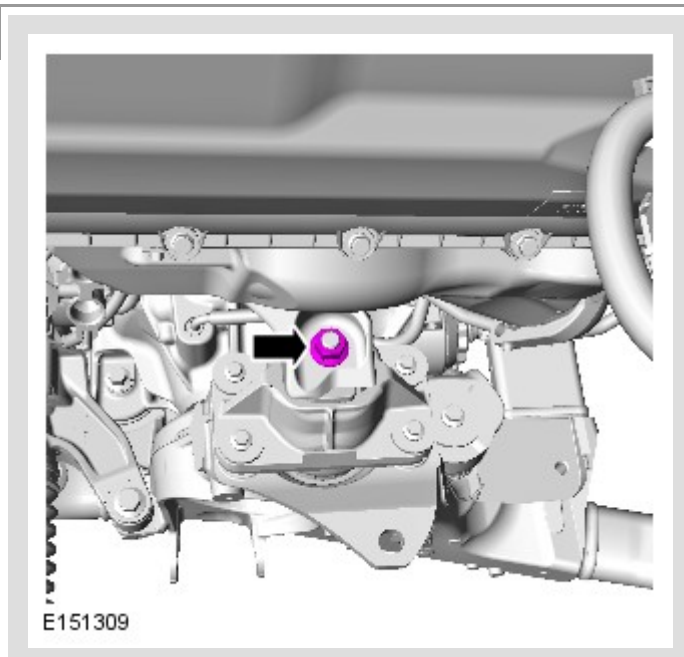


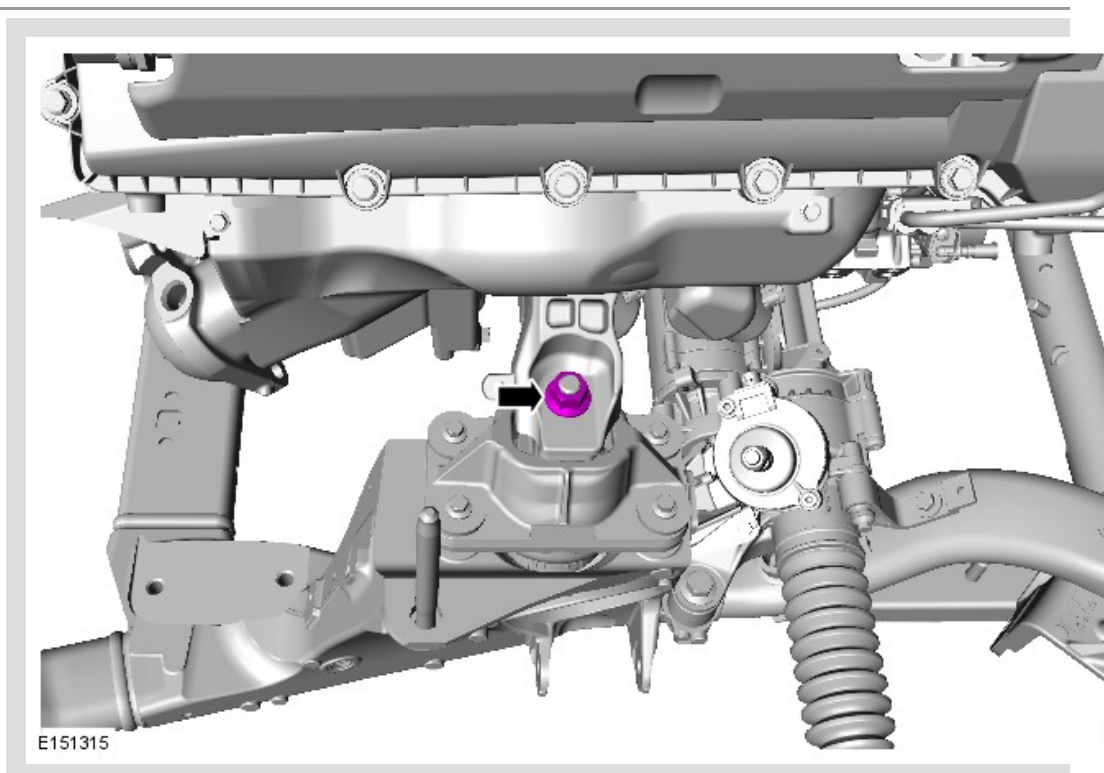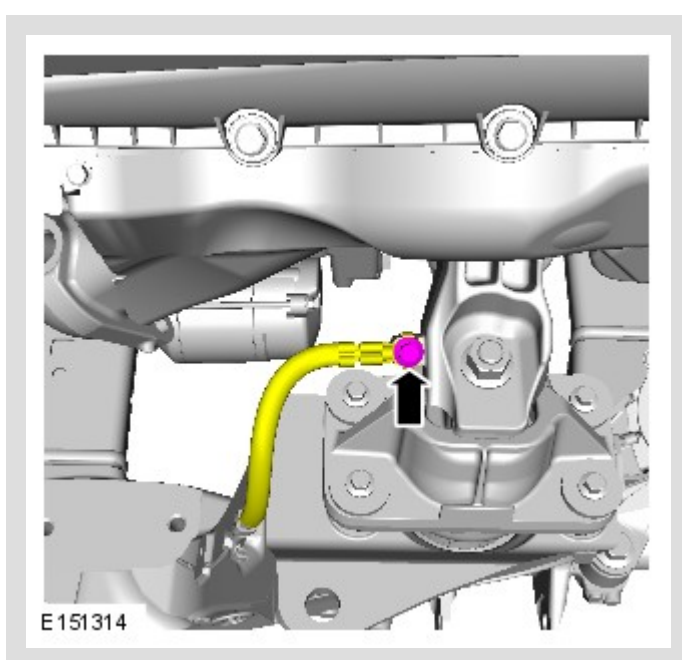

32.

 NOTE:

This step requires the aid of another technician.

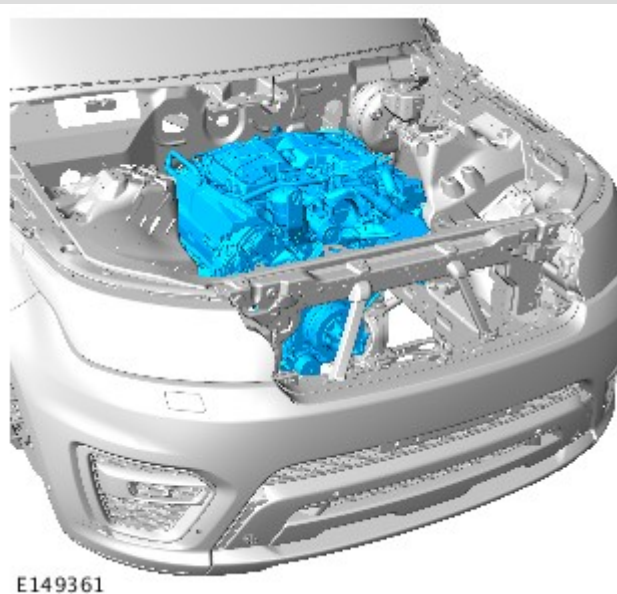

E149361