

PUBLISHED: 24-OCT-2017
2014.0 RANGE ROVER (LG), 303-01

ENGINE - V8 S/C 5.0L PETROL

LEFT ENGINE MOUNT (G1509311)

REMOVAL AND INSTALLATION

12.45.11	MOUNTING - LH - RENEW	5000 CC, AJ V8, SUPERCHARGED	3.1	USED WITHINS
----------	-----------------------------	------------------------------------	-----	-----------------

PART(S)

STEP	PART NAME	QUANTITY
Installation Step 6	Steering column lower shaft lower bolt	1

REMOVAL

NOTE:

- Removal steps in this procedure may contain installation details.
- Some variation in the illustrations may occur, but the essential information is always correct.

1. Disconnect the battery ground cable.
Refer to: Specifications (414-00, Specifications).

2.  **WARNING:**

Make sure to support the vehicle with axle stands.

Raise and support the vehicle.


3. Remove the exhaust system.
Refer to: Exhaust System (309-00B, Removal and Installation).

4. Remove the front driveshaft.
Refer to: Front Driveshaft - V6 S/C 3.0L Petrol /V8 S/C 5.0L Petrol (205-01, Removal and Installation).


5.

 NOTE:

Right-hand shown, left-hand similar.

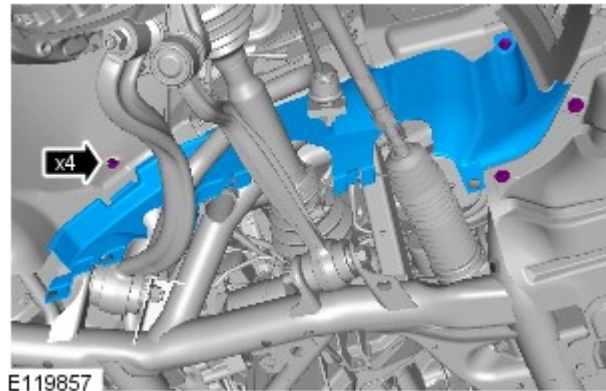


6.

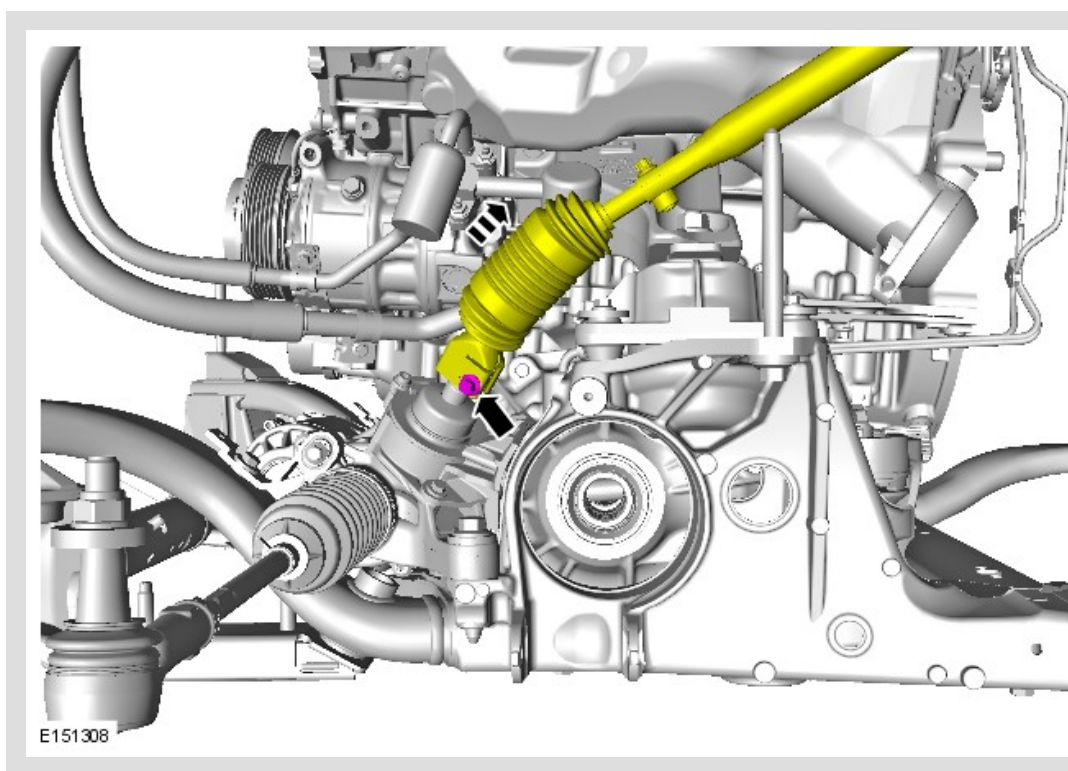

Remove and discard the bolt.


7.

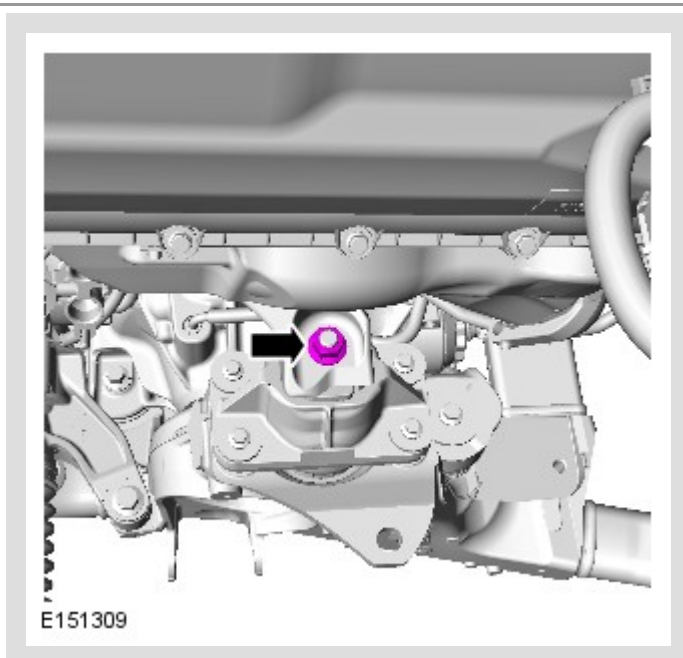

8.


⚠ CAUTION:

Use a wooden block to protect the oil pan when supporting the engine.

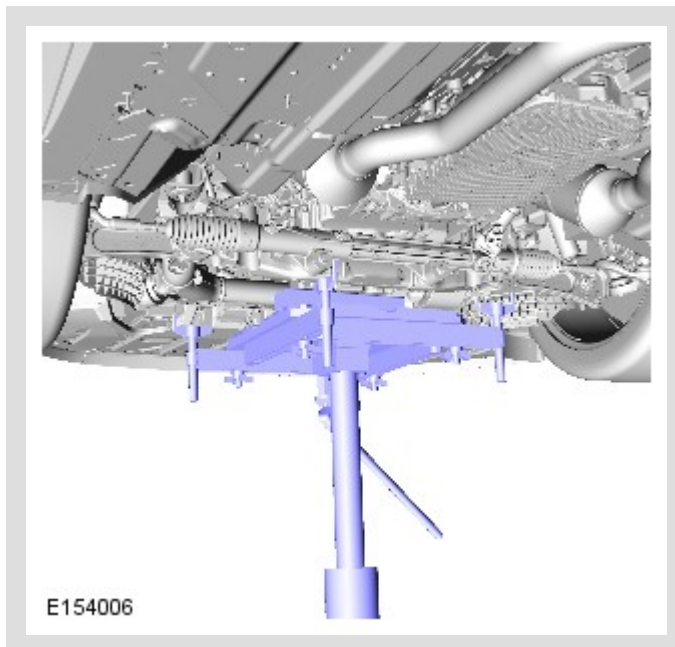


Using a suitable hydraulic jack, raise and support the engine.


9.

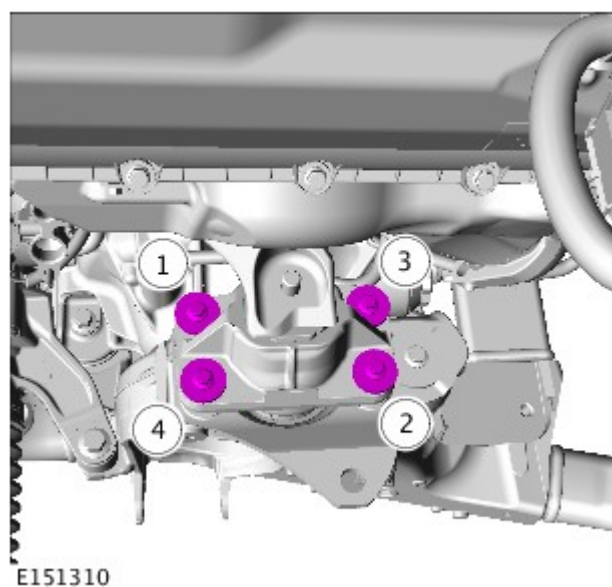

10.

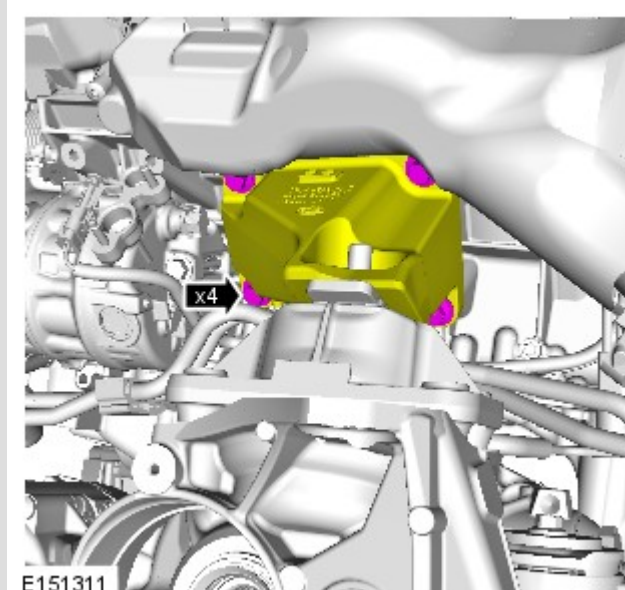


11.

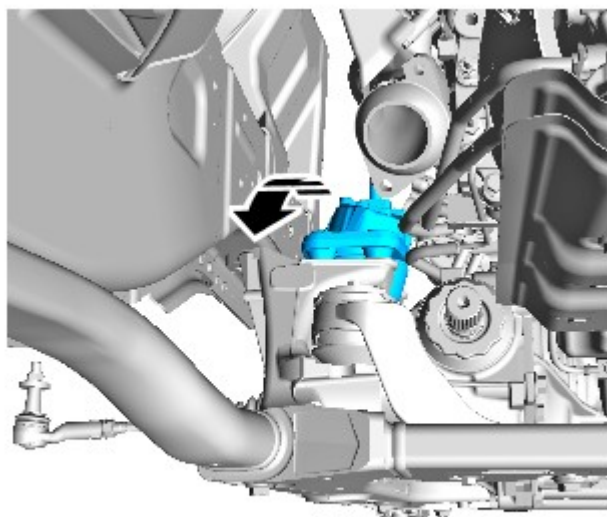

E151312

INSTALLATION


1.

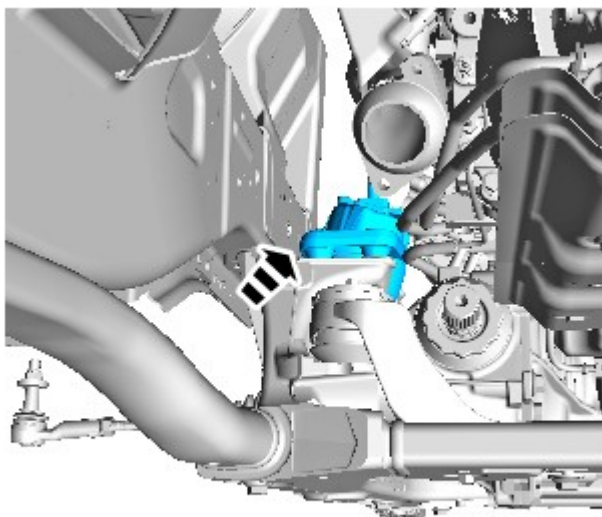

E195295

Install the engine mount.

2.

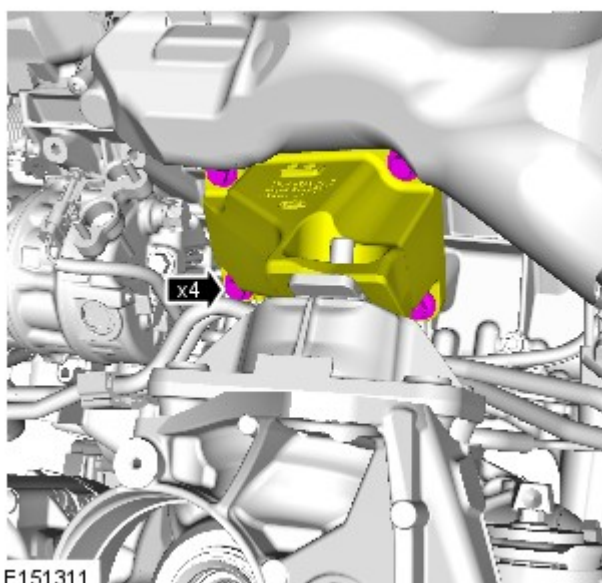


E151311

Torque:

Stage 1: **45 Nm**


Stage 2: **60°**

3.

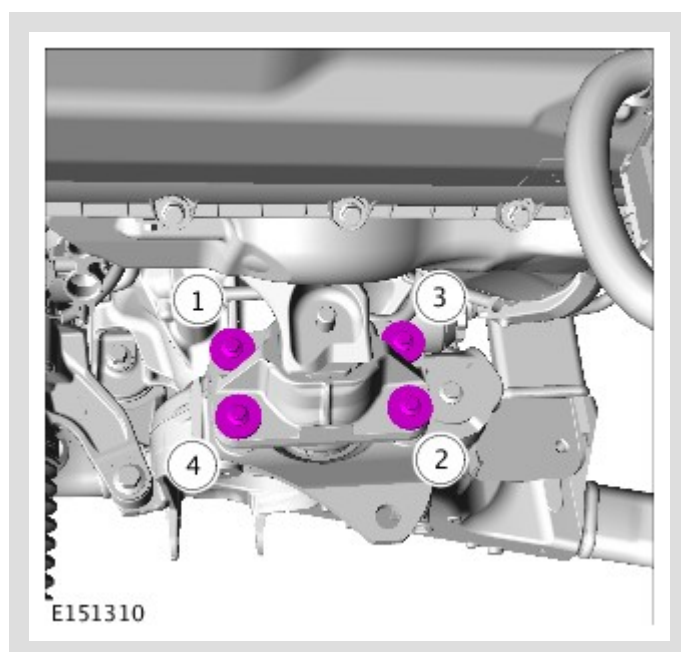


Torque: 32 Nm

4.

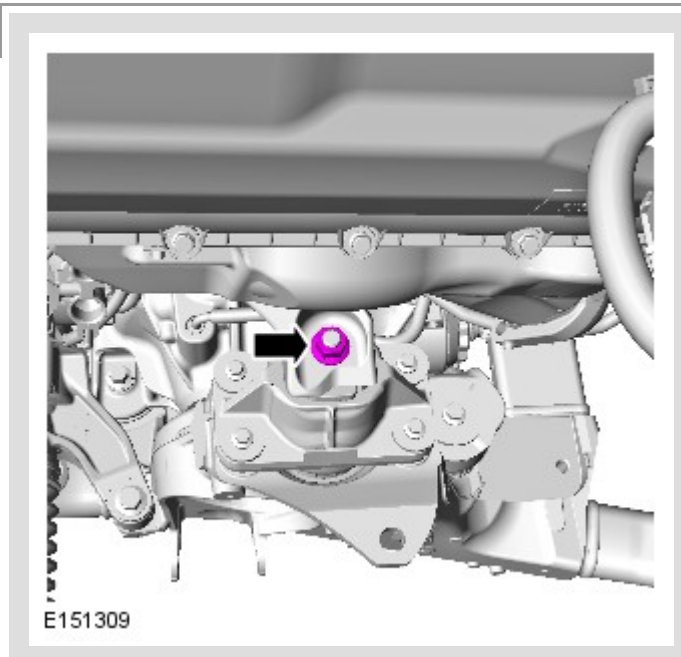


Torque: 110 Nm

5.

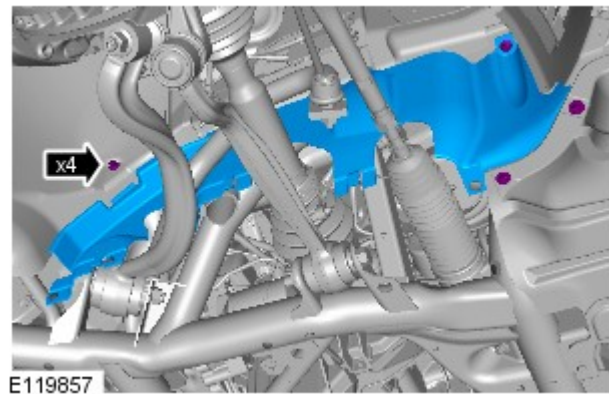

Torque: 30 Nm

6.

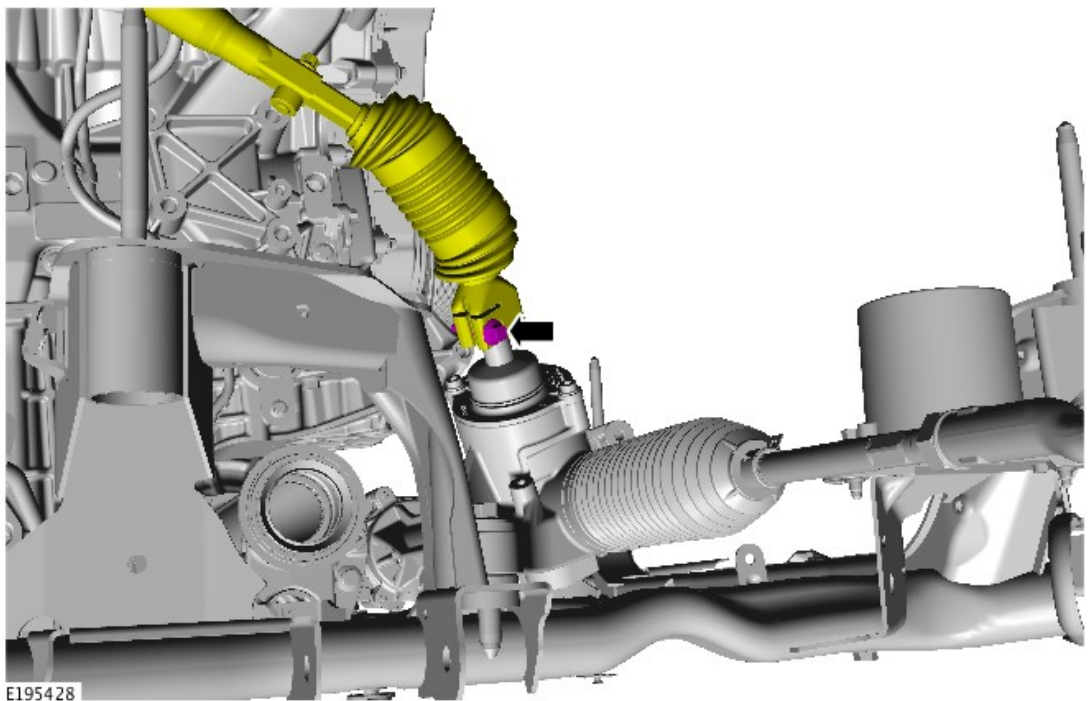

- Renew Part: *Steering column lower shaft lower bolt* Quantity: *1* .
- Torque: 30 Nm

7.

Install the front driveshaft.

Refer to: Front Driveshaft - V6 S/C 3.0L Petrol /V8 S/C 5.0L Petrol (205-01, Removal and Installation).

8. Install the exhaust system.

Refer to: Exhaust System (309-00B, Removal and Installation).

9. Connect the battery ground cable.

Refer to: Specifications (414-00, Specifications).