

PUBLISHED: 02-AUG-2016
2014.0 RANGE ROVER (LG), 303-01

ENGINE - V8 S/C 5.0L PETROL

LEFT VALVE COVER (G1509357)

REMOVAL AND INSTALLATION

12.29.43	COVER - CAMSHAFT /ROCKER OR CYLINDER HEAD - EACH - RENEW	5000 CC, AJ V8, SUPERCHARGED	5.3	USED WITHINS	
----------	---	------------------------------------	-----	-----------------	--

SPECIAL TOOL(S)



REMOVAL

NOTES:


- Some variation in the illustrations may occur, but the essential information is always correct.
- Removal steps in this procedure may contain installation details.

1. Disconnect the battery ground cable.
Refer to: Specifications (414-00 Battery and Charging System - General Information, Specifications).

2. Refer to: Supercharger (303-12 Intake Air Distribution and Filtering - V8 S/C 5.0L Petrol, Removal and Installation).


3. Refer to: Air Cleaner Outlet Pipe LH (303-12 Intake Air Distribution and Filtering - V8 S/C 5.0L Petrol, Removal and Installation).

4. Refer to: Fuel Rail LH (303-04 Fuel Charging and Controls - V8 S/C 5.0L Petrol, Removal and Installation).

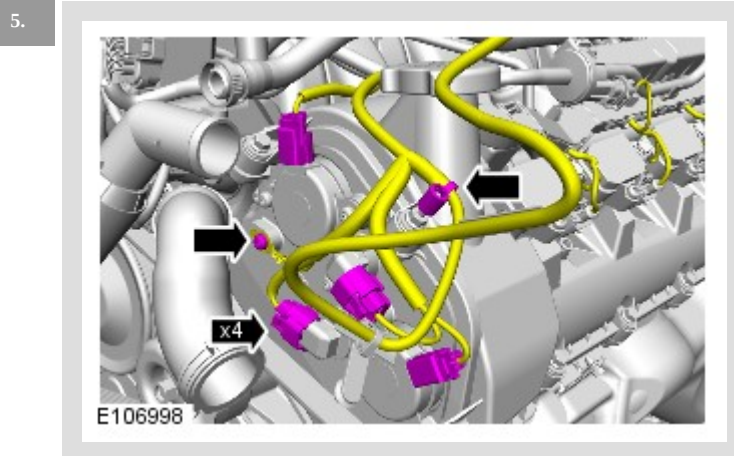


Torque: 10 Nm

- 6.

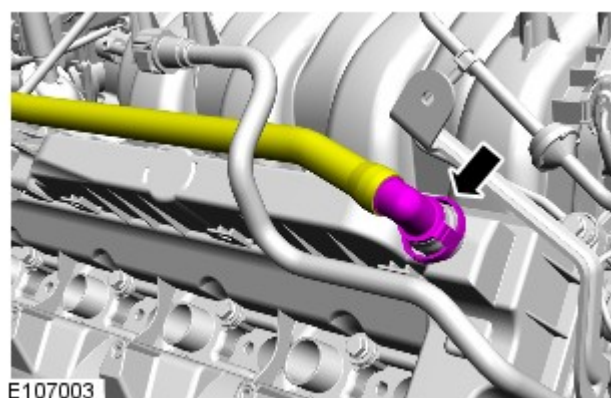


7.

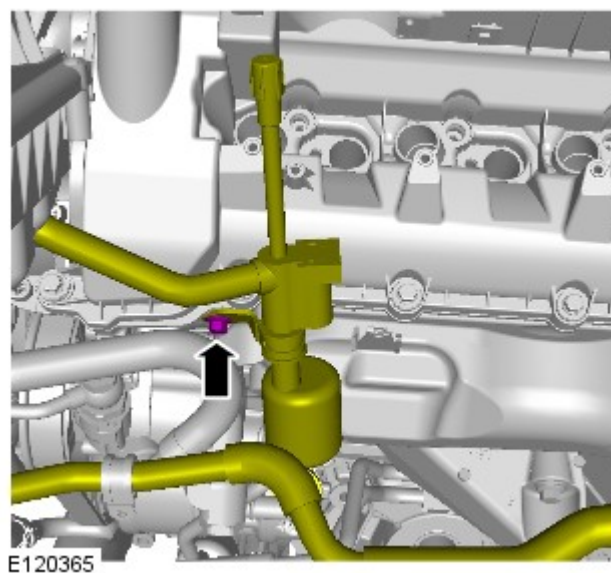

Torque: 25 Nm

8.

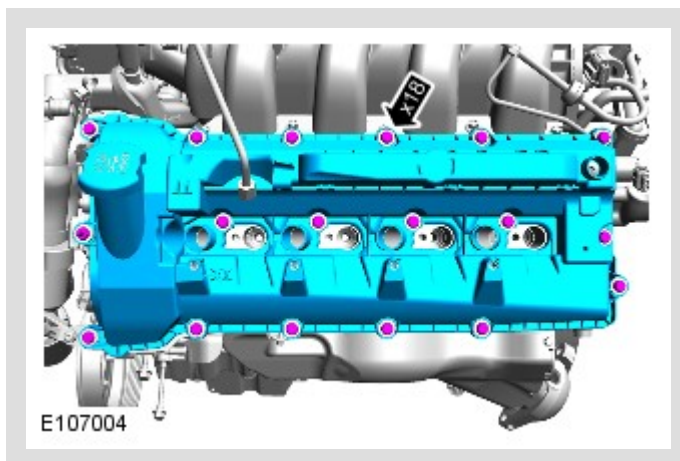

INSTALLATION


1.

⚠ CAUTIONS:

- Use only a plastic scraper when removing the sealing material.
- Use lint free cloth.
- Make sure that the mating faces are clean and free of corrosion and foreign material.
- Installation of the valve cover and tightening must be carried out within 7 minutes of applying the sealant.


⚠ NOTE:

Apply two beads of silicone gasket sealant (Loctite 5901G or Loctite 5900) as shown on the illustration. The application of the sealant must be 1.5mm diameter 12mm long. Install the valve cover immediately after applying the sealant. The cover should be fitted directly to the head without smearing the sealant or the seals.

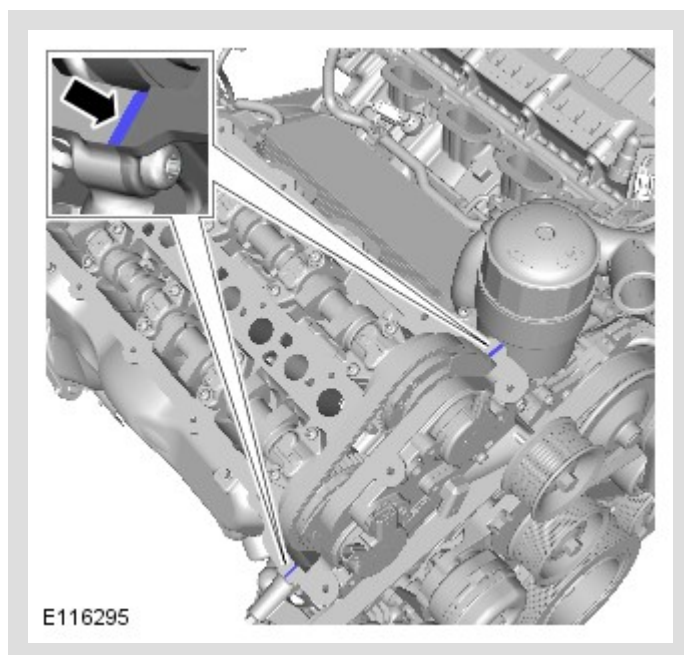

To install, reverse the removal procedure.

2.

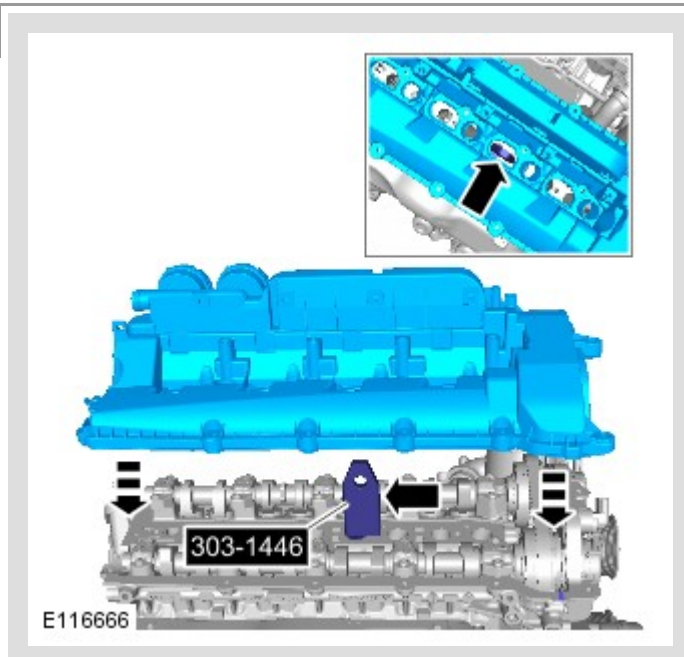


Special Tool(s): 303-1446

3.

 NOTE:

Tighten the bolts in the indicated sequence.

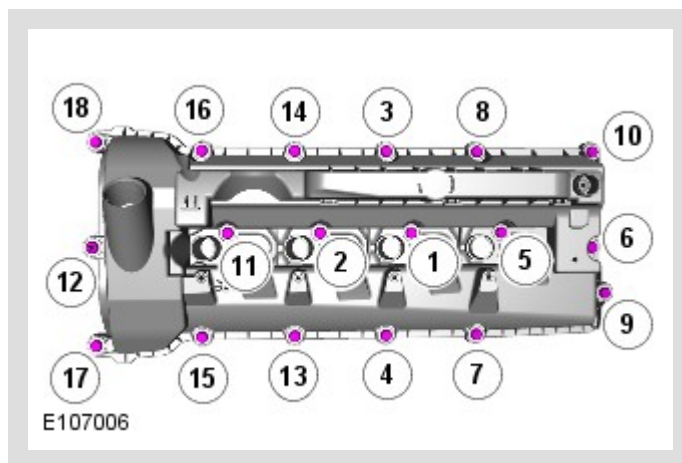

Torque: 13 Nm