

PUBLISHED: 02-AUG-2016
2014.0 RANGE ROVER (LG), 303-01


ENGINE - V8 S/C 5.0L PETROL

LOWER TIMING COVER (G1473766)

REMOVAL AND INSTALLATION

12.65.43	COVER - TIMING GEAR - LOWER - RENEW	5000 CC, AJ V8, SUPERCHARGED	4	USED WITHINS	
----------	---	------------------------------------	---	-----------------	--

SPECIAL TOOL(S)

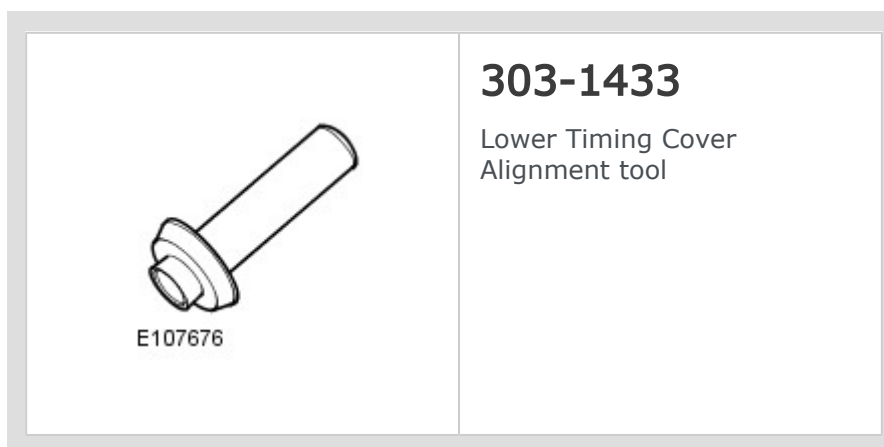

REMOVAL

NOTES:

- Some variation in the illustrations may occur, but the essential information is always correct.
- Engine shown removed for clarity.

1. Disconnect the battery ground cable.

Refer to: Specifications (414-00 Battery and Charging System - General Information, Specifications).

2.



WARNING:

Make sure to support the vehicle with axle stands.

Raise and support the vehicle.


3.

Refer to: Crankshaft Pulley (303-01, Removal and Installation).

4.

Refer to: Brake Vacuum Pump - GTDi 2.0L Petrol (206-07 Power Brake Actuation, Removal and Installation).


5.

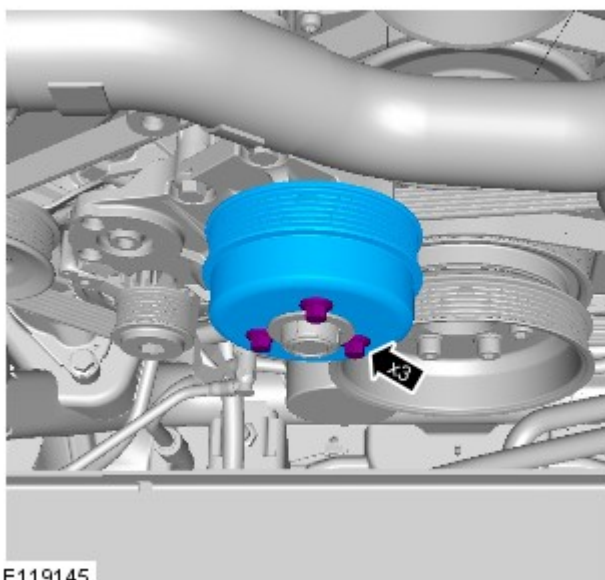


6.



7.

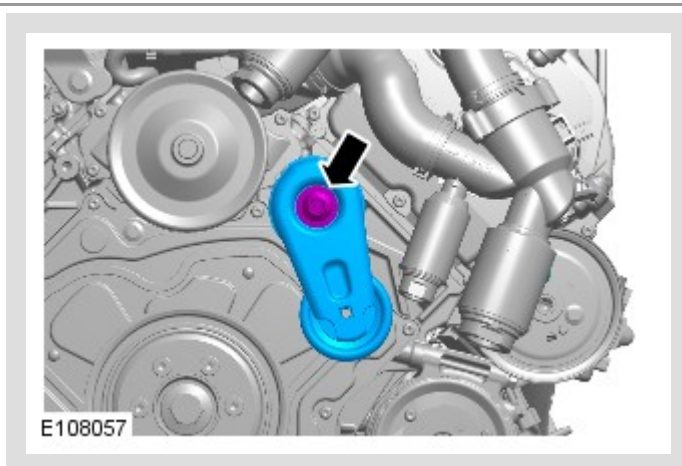


8.

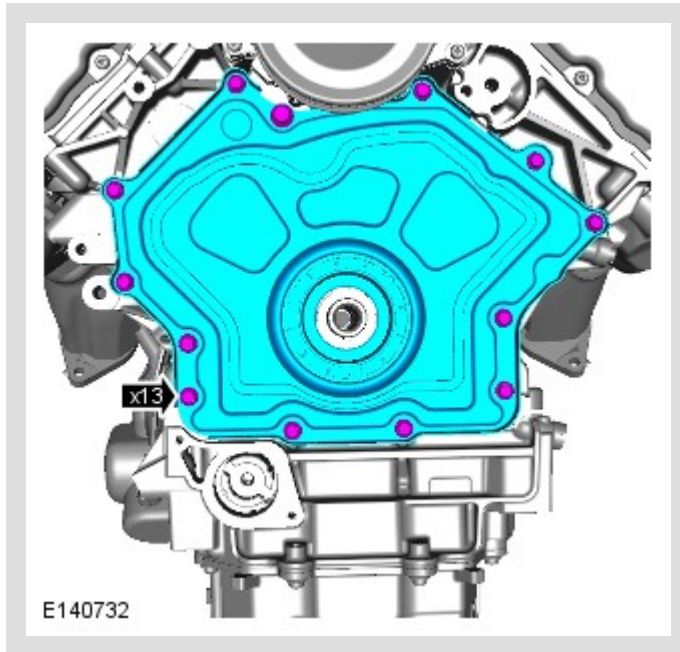

INSTALLATION

1.

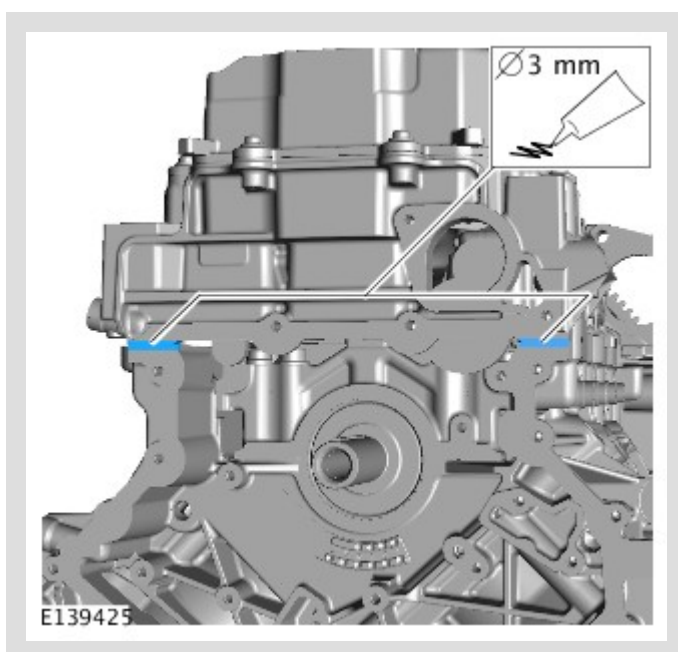


Apply RTV sealant WSE-M4G323-A6 (Loctite 5901G or Loctite 5900) to the areas shown, and tighten the bolts within 7 minutes.

2.



CAUTION:


Make sure that the mating faces are clean and free of foreign material.

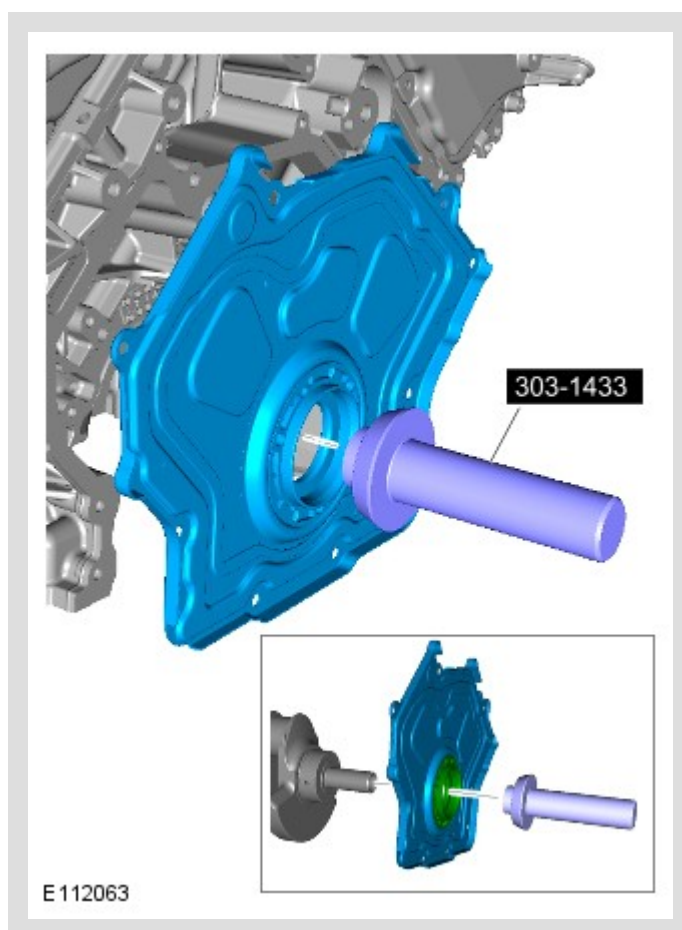

Install the bolts, but do not tighten fully at this stage.

Special Tool(s): [303-1433](#)

3.

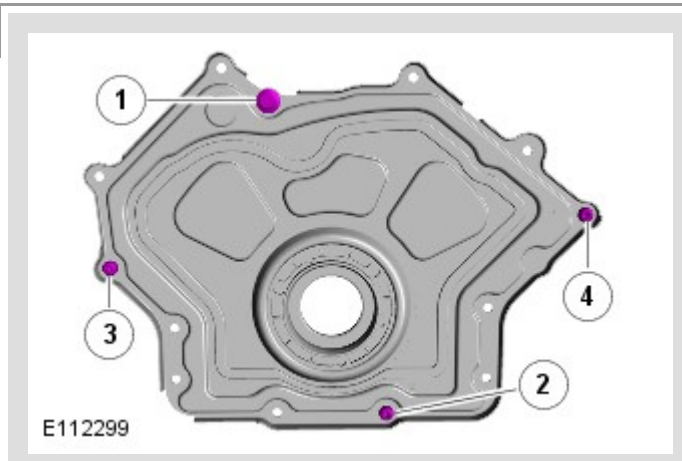


Torque:

M6 12 Nm


M8 20 Nm

4.

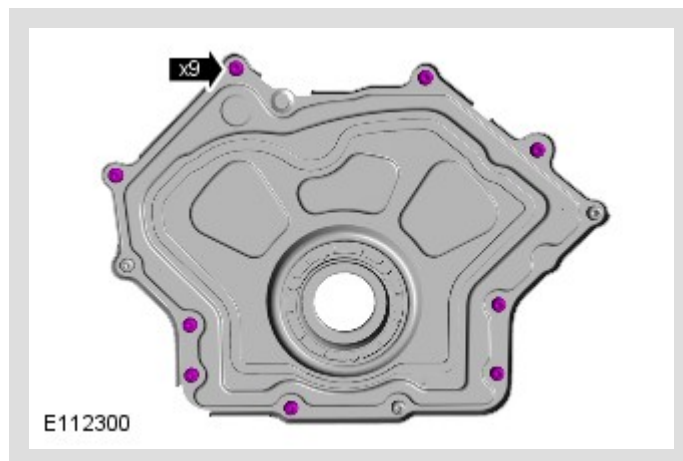

Torque: 12 Nm

5.

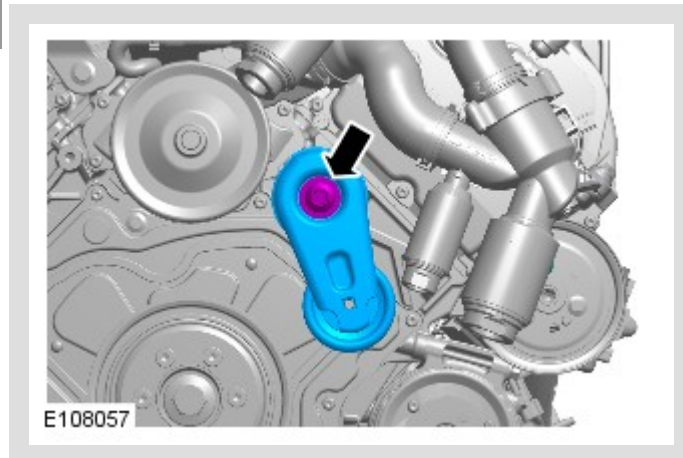


Torque: 40 Nm

6.



Torque: 25 Nm

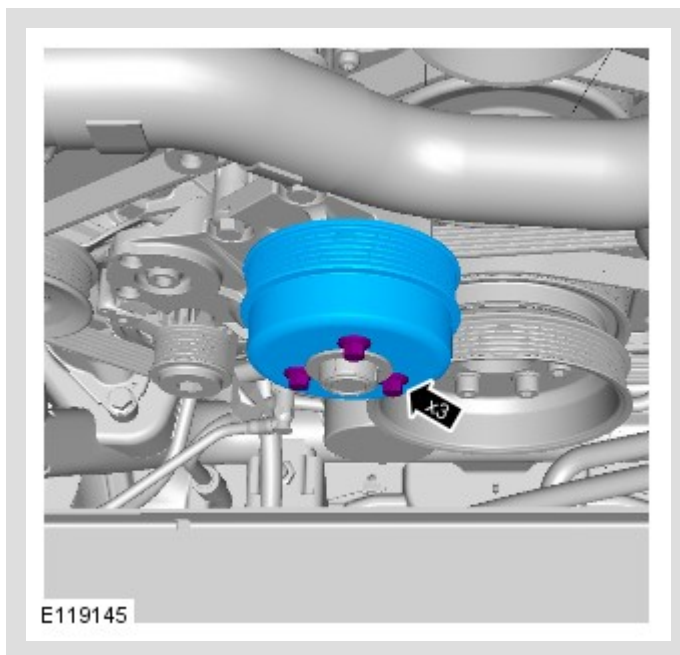

Torque: 25 Nm

8. Refer to: Brake Vacuum Pump - GTDi 2.0L Petrol (206-07 Power Brake Actuation, Removal and Installation).

9. Refer to: Crankshaft Pulley (303-01, Removal and Installation).

10. Connect the battery ground cable.
Refer to: Specifications (414-00 Battery and Charging System - General Information, Specifications).

11. **⚠ CAUTION:**

Make sure that the vehicle is left for 5 minutes from filling with oil and that the engine oil level is reading at least minimum (by following steps 12 to 20), before starting the engine.

- Fill the engine with oil - for filling values on vehicles without supercharger:
- Refer to: Specifications (303-01 Engine - V8 5.0L Petrol, Specifications).

12.



CAUTION:

Make sure that the vehicle has been left for 5 minutes from filling with oil.

- Start the engine and allow to run for 10 minutes, stop the engine.
- Check for leaks.

13.




CAUTIONS:


- Make sure that the selector lever and the gearshift mechanism are in the park (P) position.
- Make sure that the hood is open.

- Set the ignition to the ON position.


14.

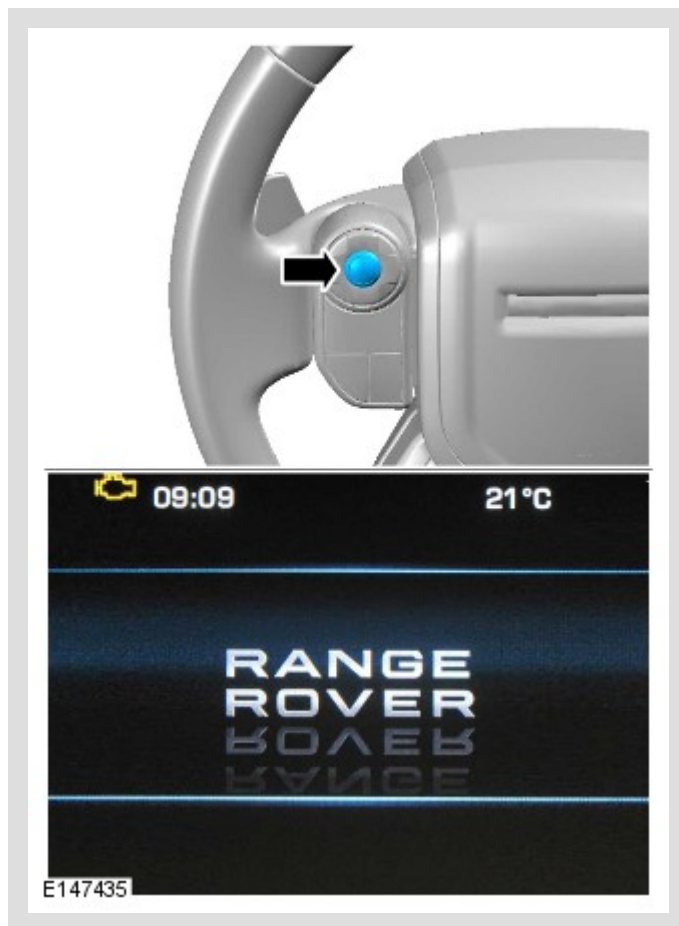


- Press the left-hand OK button to access the Instrument Cluster (IC) Main Menu.

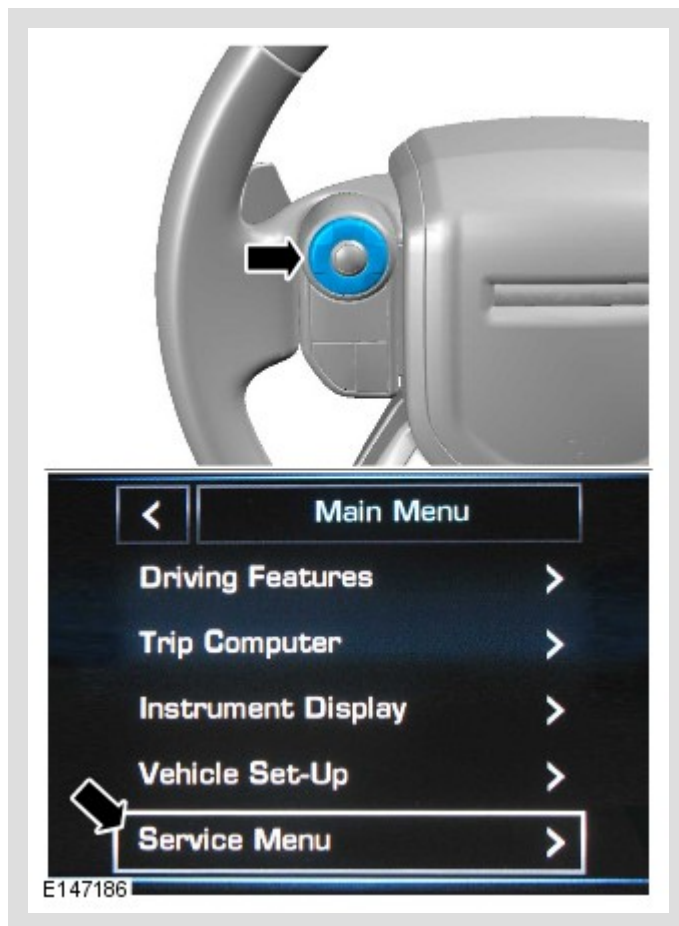


- Press the left hand directional button and select Service Menu.

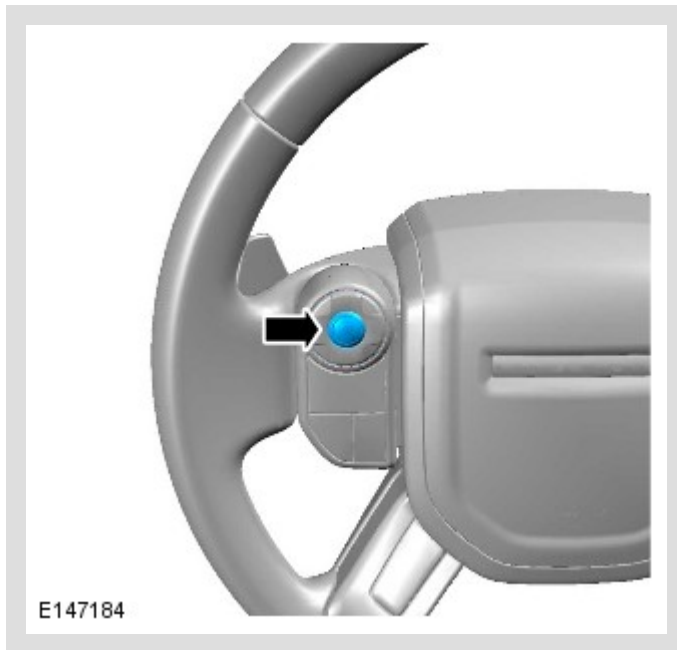

- Press the left hand OK button.

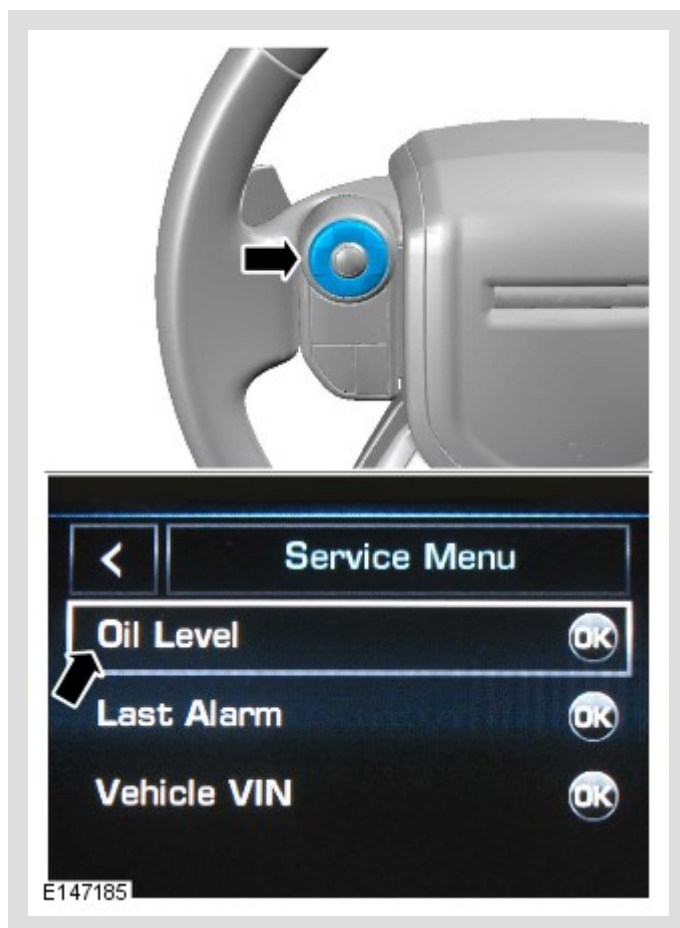

- Press the left-hand directional button to access the Oil Level Display.

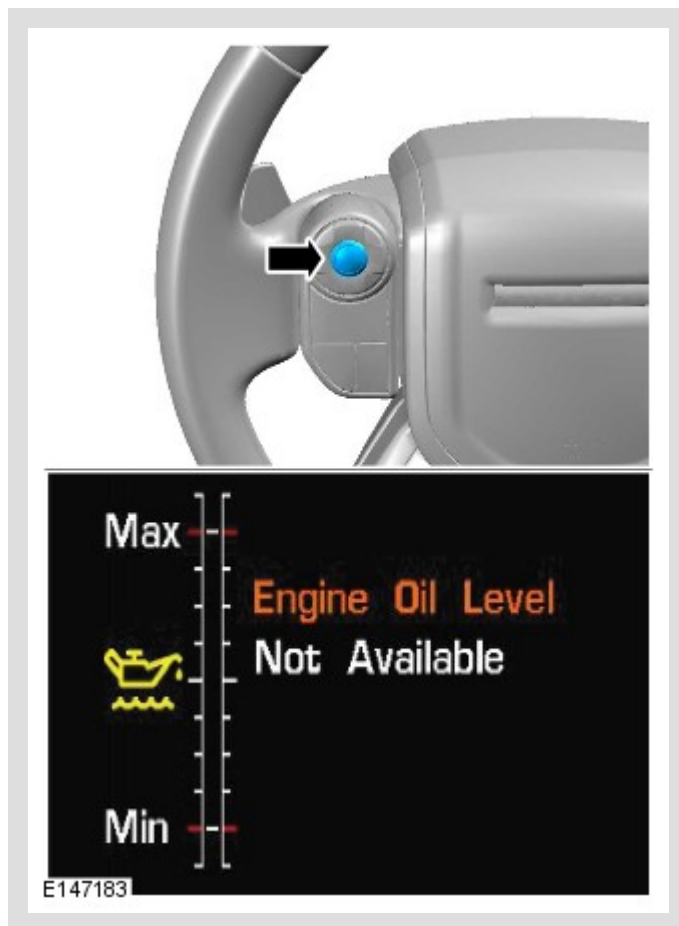


- Press the left hand OK button to access the Oil Level display.

19.


⚠ CAUTION:

Make sure that the hood is open.

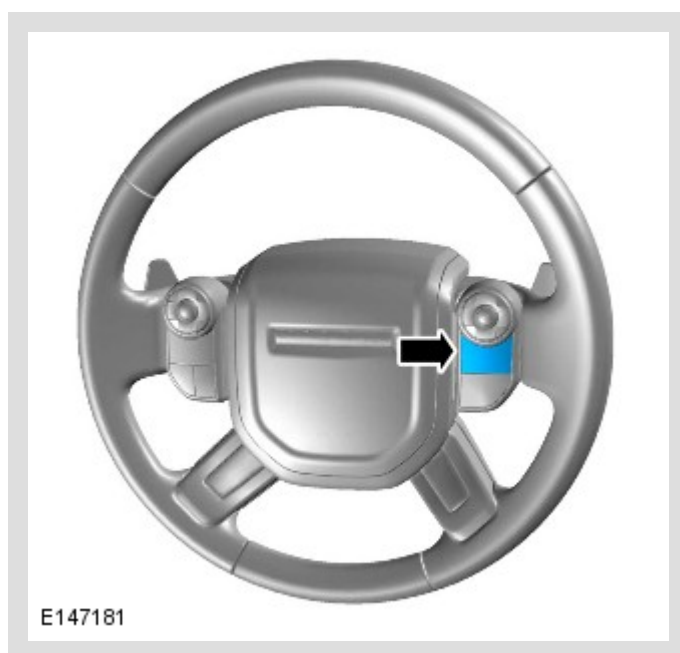

- Press the speed control cancel button twice within 2 seconds while being on the oil level display.

20.

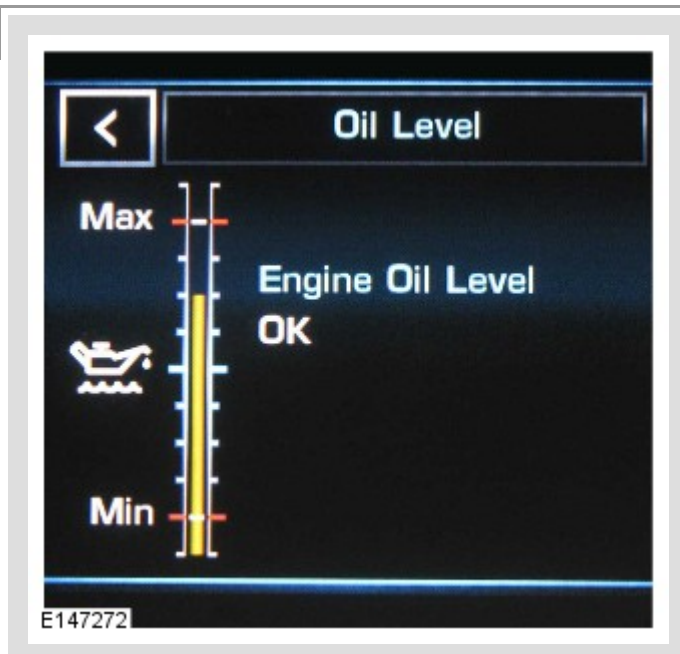

- The message center displays the actual oil level in service mode.
- Only after having started and run the engine for 10 minutes (as indicated in Step 12), switch off the engine, then stabilizing for 10 minutes, take a reading from the oil level display and, if necessary top up with engine oil.

21. Set the ignition to the OFF position.

22. Allow 10 minutes for the engine oil level to stabilize if there has been additional oil top up.

23.

 **NOTE:**

The following steps are to update the average oil level value.

24.

Repeat steps 13 to 19 to access the oil level display in service mode.

25.

 **NOTE:**

The actual volume displayed on the bar graph will be written into the electronic control unit as a new value.




- Press and hold the speed control cancel button for more than 5 seconds.

- The message center displays the current oil level.

26. Set the ignition to the OFF position.


27. Set the ignition to the ON position.

28.

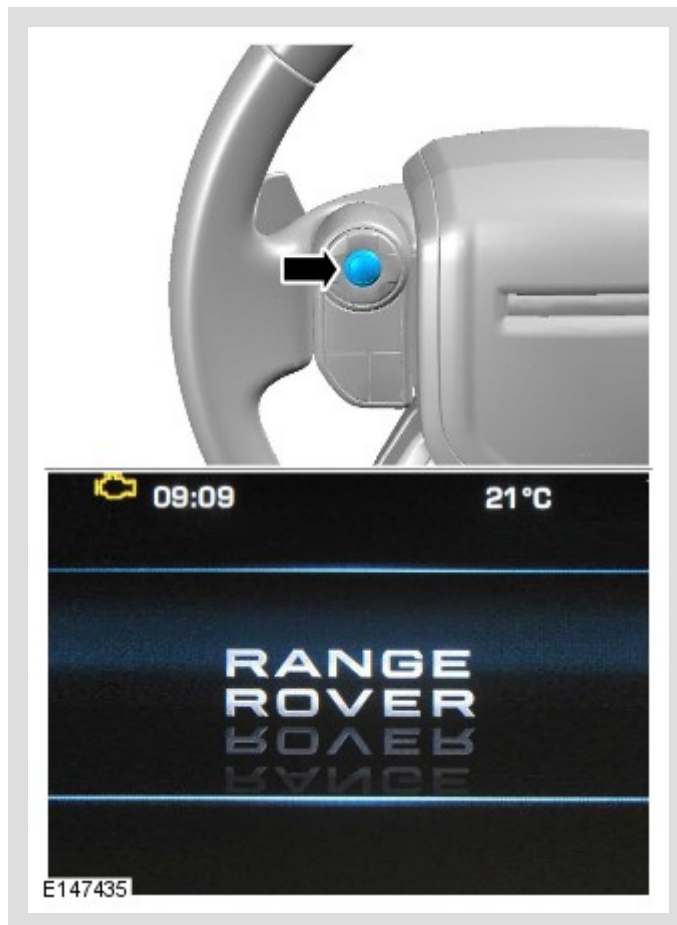


- Press the left hand OK button to access the Instrument Cluster (IC) Main Menu.


29.

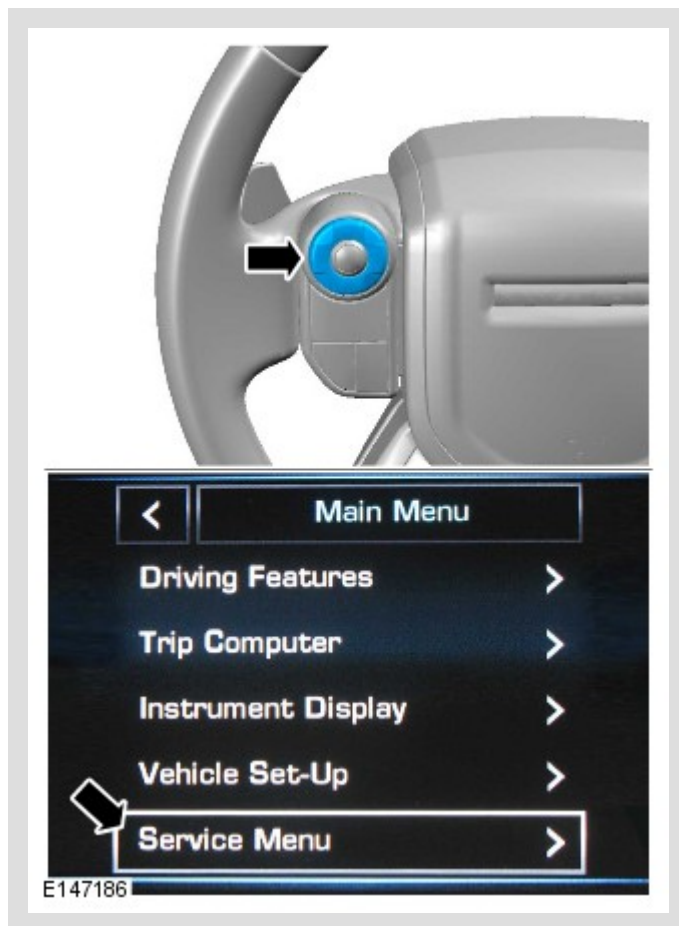

- Press the left-hand directional button and select Service Menu.

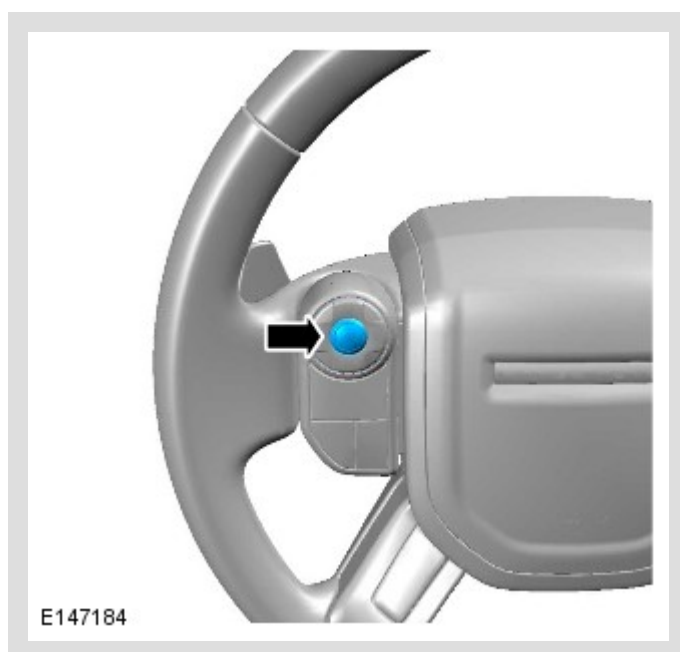

- Press the left hand OK button.

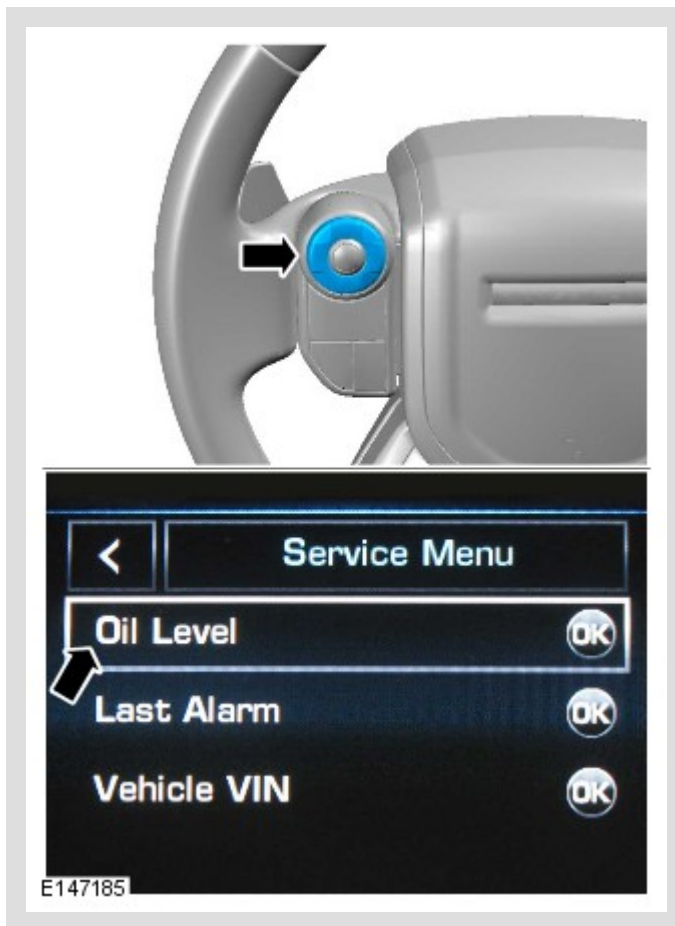

- Press the left-hand directional button and select the Oil Level display.



- Press the left-hand OK button and follow the instructions.

 NOTE:

If the message shows "Not available" wait for further 10 minutes to allow the oil level to stabilize.

- Make sure that the average oil level value has now been updated.