

PUBLISHED: 28-APR-2017  
2014.0 RANGE ROVER (LG), 303-01

ENGINE - V8 S/C 5.0L PETROL

# **OIL FILTER ELEMENT** (G1509352)

## REMOVAL AND INSTALLATION

|          |                                       |                   |     |                 |  |
|----------|---------------------------------------|-------------------|-----|-----------------|--|
| 12.60.02 | ELEMENT<br>- OIL<br>FILTER -<br>RENEW | 5000 CC,<br>AJ V8 | 0.2 | USED<br>WITHINS |  |
|----------|---------------------------------------|-------------------|-----|-----------------|--|

|          |                                       |                   |     |                 |  |
|----------|---------------------------------------|-------------------|-----|-----------------|--|
| 12.60.02 | ELEMENT<br>- OIL<br>FILTER -<br>RENEW | 5000 CC,<br>AJ V8 | 0.2 | USED<br>WITHINS |  |
|----------|---------------------------------------|-------------------|-----|-----------------|--|

### PART(S)

| STEP                | PART NAME                 | QUANTITY |
|---------------------|---------------------------|----------|
| Installation Step 1 | Oil filter O-ring seal(s) | 1        |
| Installation Step 1 | Oil filter                | 1        |

## REMOVAL


### NOTES:

- Some variation in the illustrations may occur, but the essential information is always correct.
- Removal steps in this procedure may contain installation details.

1. Refer to: Engine Cover - V8 N/A 5.0L Petrol/V8 S/C 5.0L Petrol (501-05 Interior Trim and Ornamentation, Removal and Installation).

### 2. NOTE:


Allow 10 minutes for the engine oil to drain from the oil filter housing.

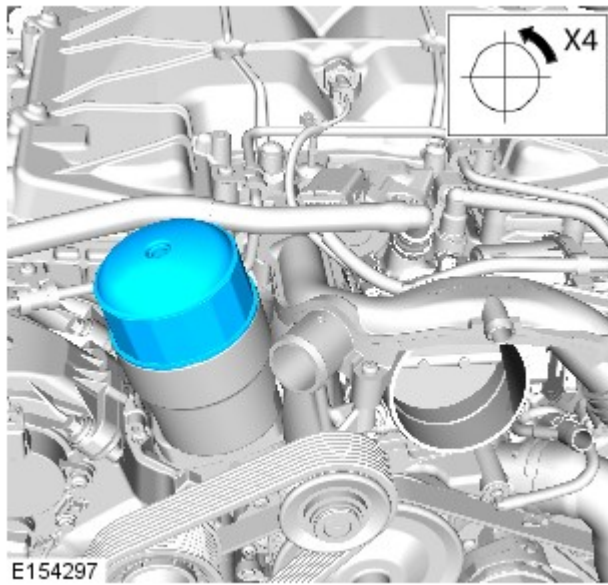

3.

**⚠ CAUTION:**


Remove and discard the O-ring seal.

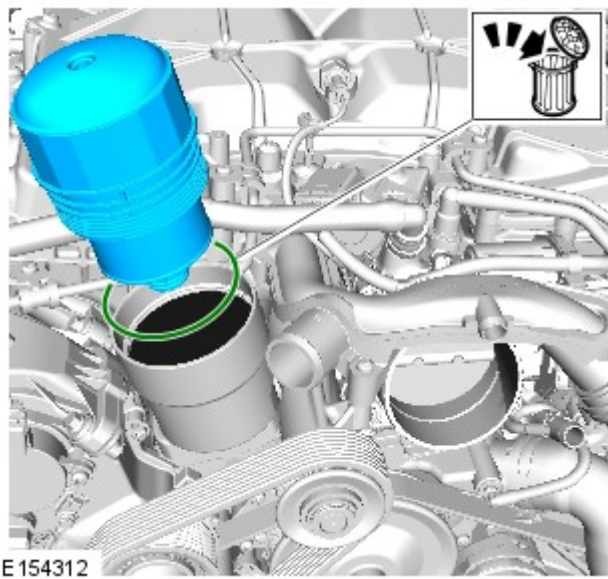

4.

**⚠ CAUTION:**

Remove and discard the element.

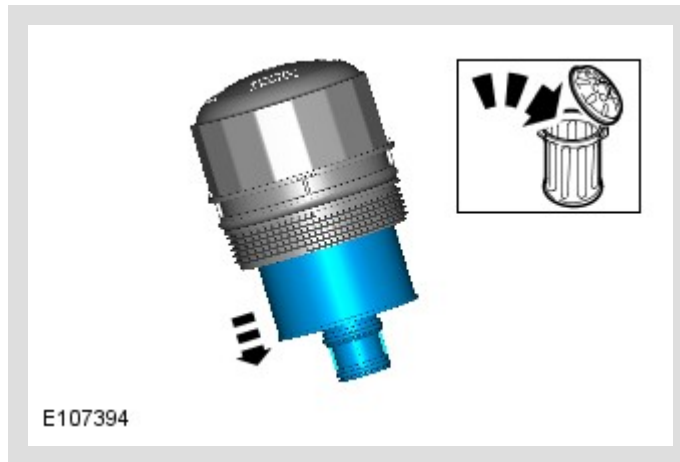


## INSTALLATION

1.

### ⚠ CAUTION:

Install new O-ring seals.

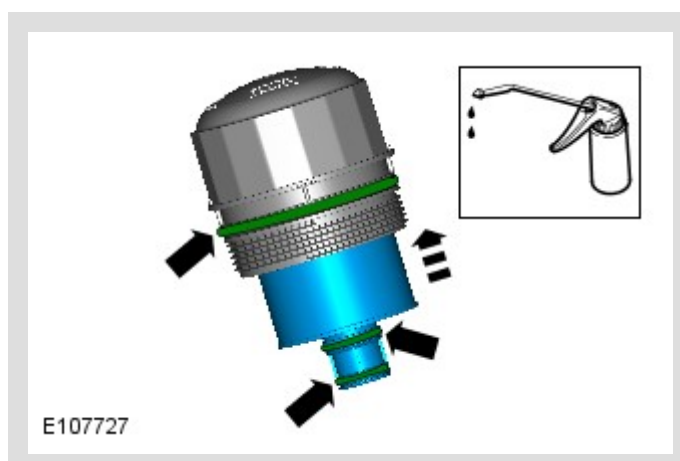


Renew Part: *Oil filter O-ring seal(s)* Quantity: 1 .

Renew Part: *Oil filter* Quantity: 1 .

2.

### ⚠ CAUTION:

Tighten the component finger tight first.

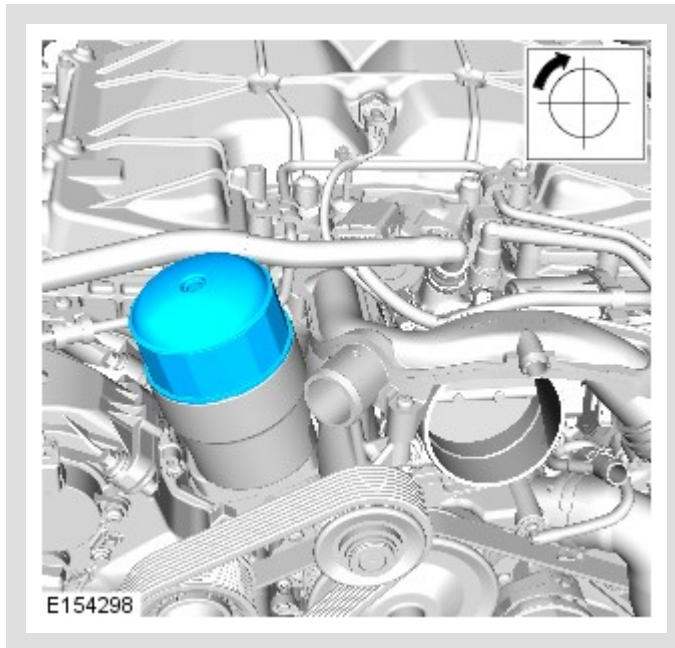

*Torque: 25 Nm*

- 
3. Start and run the engine.

- 
4.  **NOTE:**

Allow 10 minutes from the engine switch off for the engine oil level to stabilize.

- 
5. Check and top-up the engine oil.

- 
6. Refer to: Engine Cover - V8 N/A 5.0L Petrol/V8 S/C 5.0L Petrol (501-05 Interior Trim and Ornamentation, Removal and Installation).

