

PUBLISHED: 31-AUG-2017
2014.0 RANGE ROVER (LG), 303-01

ENGINE - V8 S/C 5.0L PETROL

OIL PUMP (G1509354)

REMOVAL AND INSTALLATION

12.60.26	PUMP - OIL - RENEW	5000 CC, AJ V8, SUPERCHARGED	20.1	USED WITHINS	
----------	--------------------------	------------------------------------	------	-----------------	--

PART(S)

STEP	PART NAME	QUANTITY
Installation Step 3	Oil pick up pipe O-ring seal	1

REMOVAL

NOTES:

- Some variation in the illustrations may occur, but the essential information is always correct.
- Removal steps in this procedure may contain installation details.

1. Disconnect the battery ground cable.
Refer to: Specifications (414-00 Battery and Charging System - General Information, Specifications).


2.  **WARNING:**

Make sure to support the vehicle with axle stands.


Raise and support the vehicle.

3. Refer to: Oil Pan Extension (303-01 Engine - V8 S/C 5.0L Petrol, Removal and Installation).

- 4.

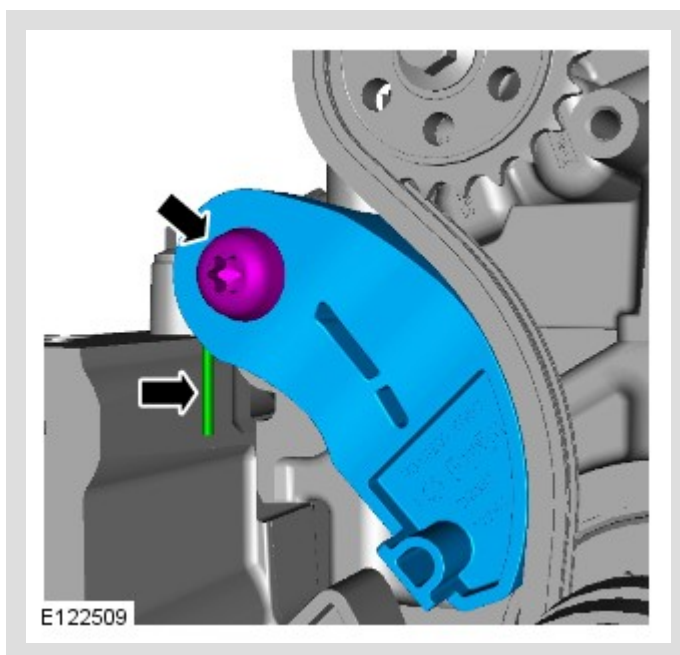


5.

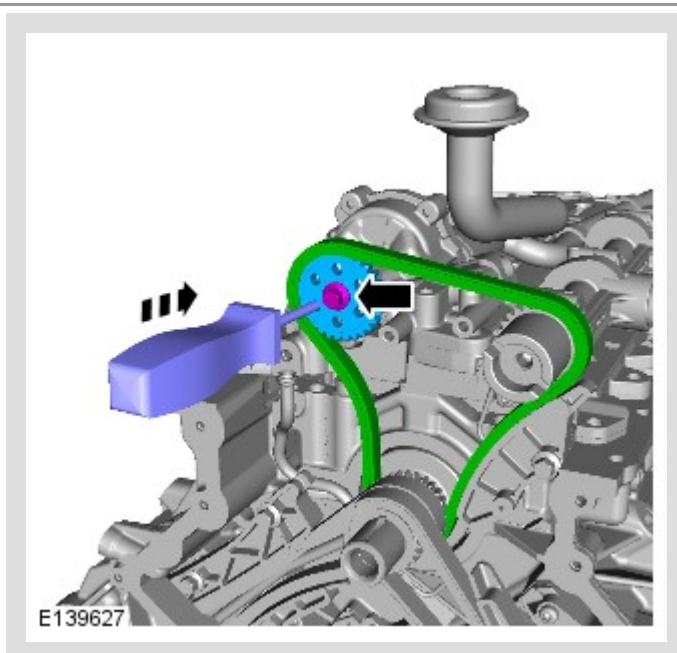

6.

△ NOTE:


Remove and discard the O-ring seal.

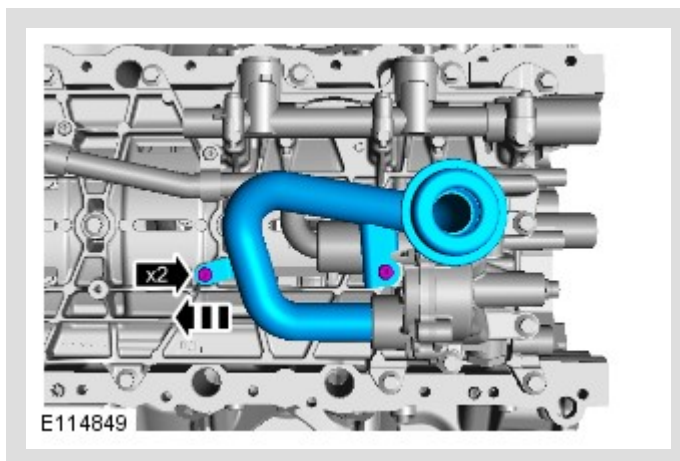

7.

⚠ CAUTION:

Remove and discard the O-ring seals.

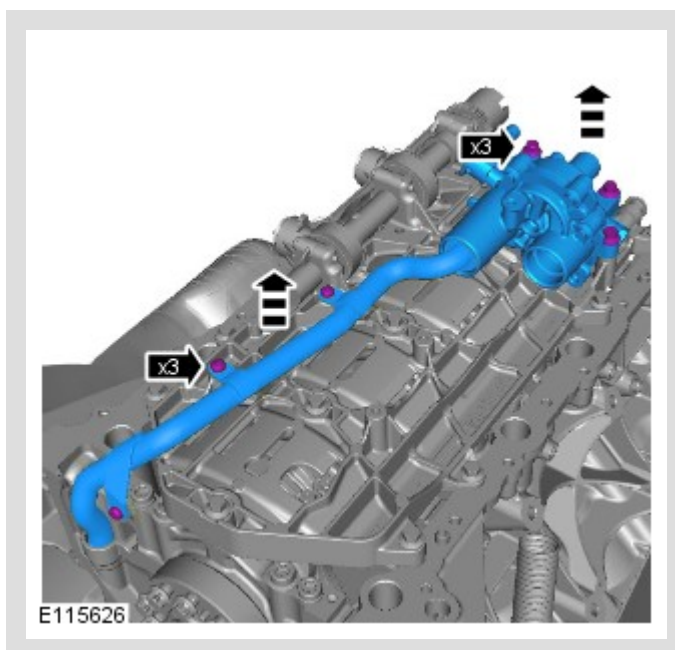


8.




NOTE:

Remove and discard the O-ring seal.

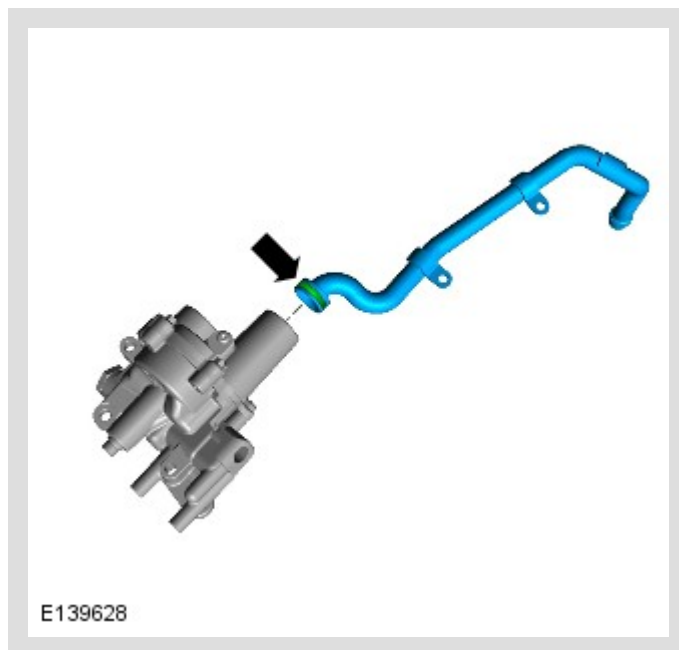


INSTALLATION

1.

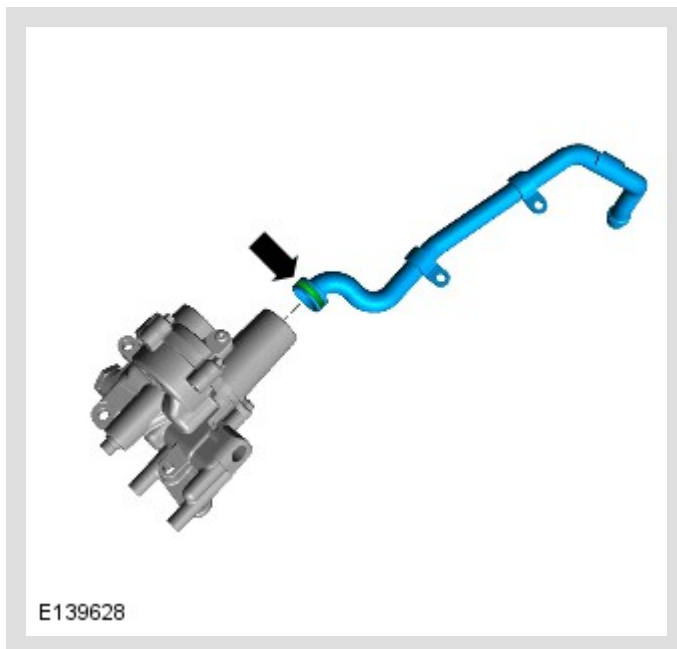

Lubricate and install the new O-ring seals.

2.

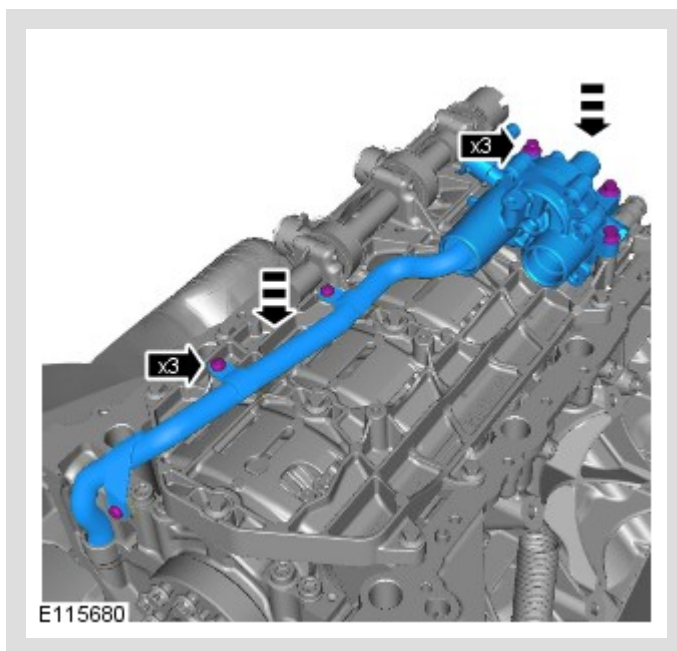


Torque:

M8 25 Nm

M6 12 Nm


3.

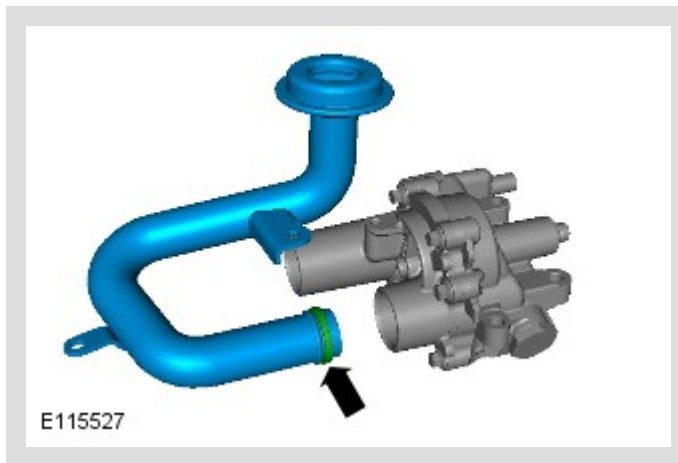

Lubricate and install a new O-ring seal.


Renew Part: *Oil pick up pipe O-ring seal* Quantity: 1 .

4.

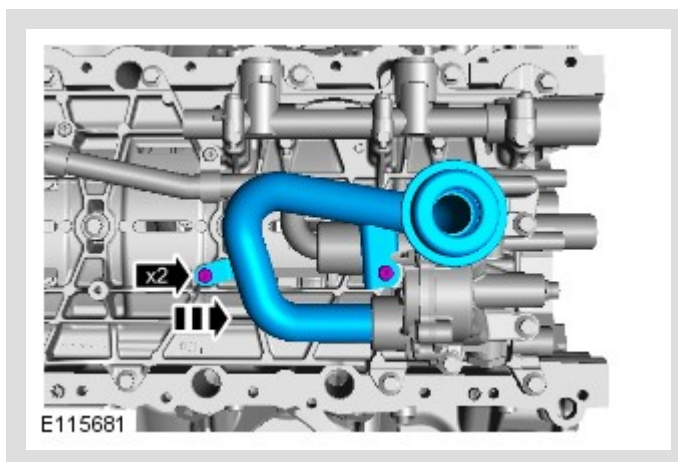


Torque: 12 Nm

5.

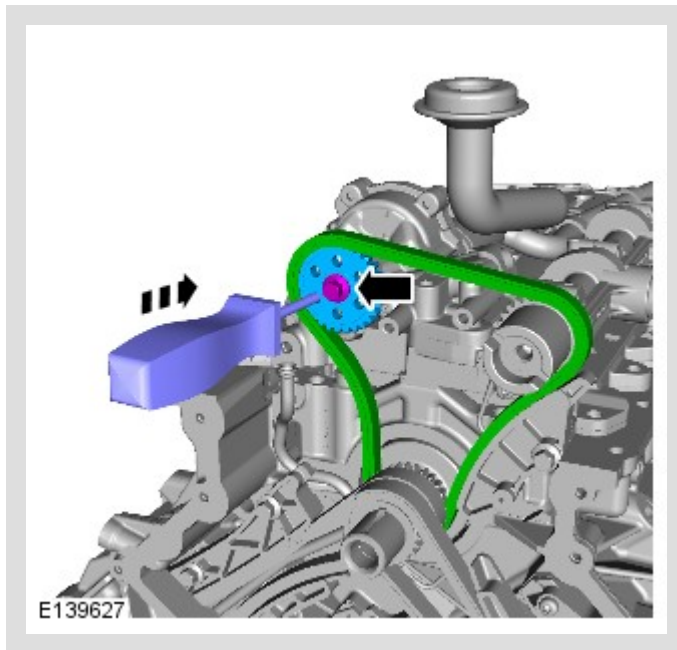

Torque: 21 Nm

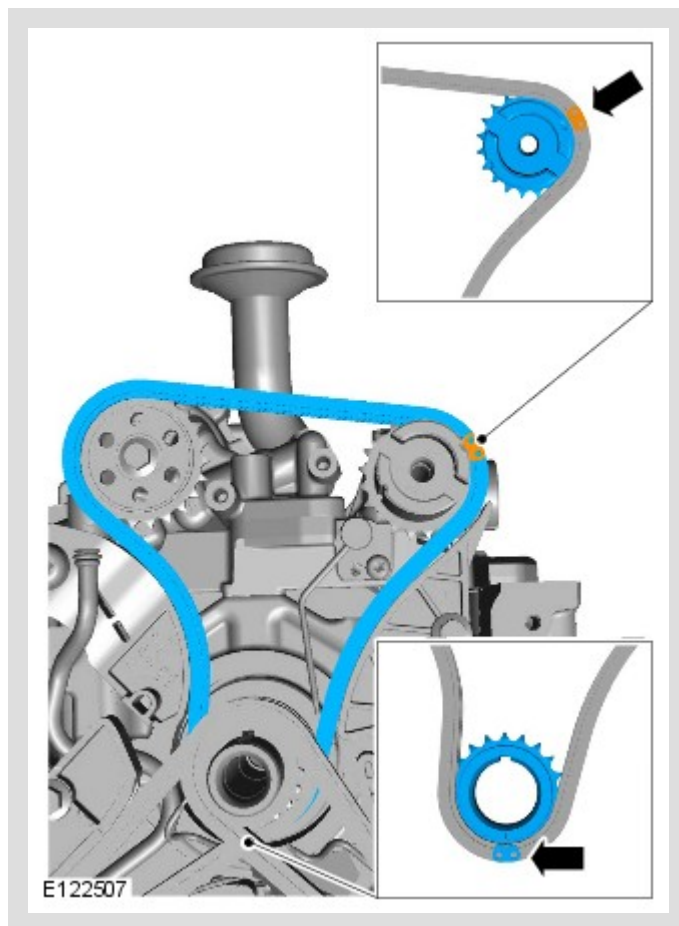


Install the lower timing chain making sure the coloured chain links align correctly with the fuel rail high-pressure fuel pumps camshaft and crankshaft sprocket markings.

7.



CAUTION:

Make sure that the tensioner spring is correctly located.

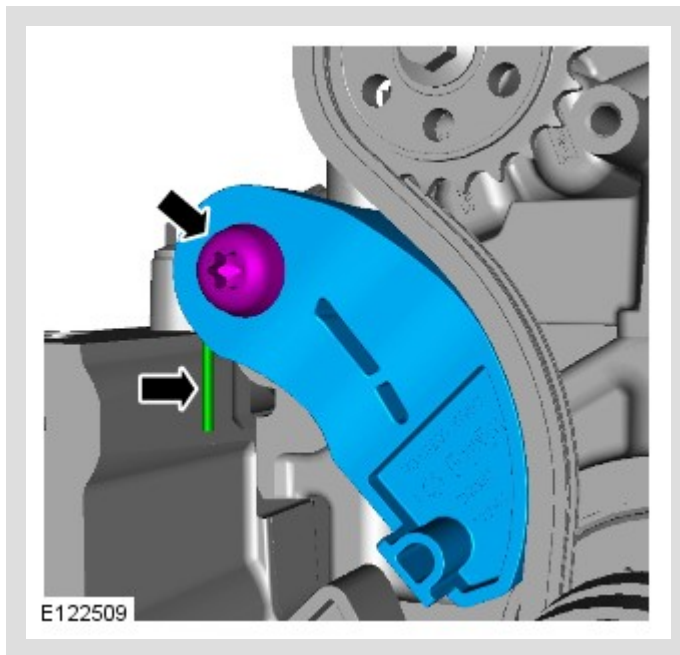

Torque: 21 Nm

8. Refer to: Oil Pan Extension (303-01 Engine - V8 S/C 5.0L Petrol, Removal and Installation).
9. Connect the battery ground cable.
Refer to: Specifications (414-00 Battery and Charging System - General Information, Specifications).