

PUBLISHED: 28-APR-2017
2014.0 RANGE ROVER (LG), 303-01


ENGINE - V8 S/C 5.0L PETROL

RIGHT EXHAUST MANIFOLD (G1509349)

REMOVAL AND INSTALLATION


30.15.11	MANIFOLD - EXHAUST - RH /REAR - RENEW	5000 CC, AJ V8, SUPERCHARGED	3.1	USED WITHINS	
----------	--	------------------------------------	-----	-----------------	--

SPECIAL TOOL(S)

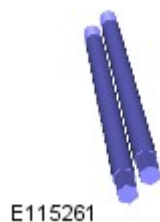

303-1444-01

Exhaust Manifold
Installation Guide Pins -
Threaded

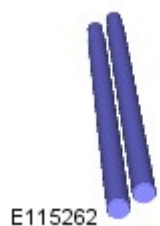

303-1444-02

Exhaust Manifold
Installation Guide Pins -
Unthreaded

PART(S)

STEP	PART NAME	QUANTITY
Installation Step 2	Exhaust manifold gasket	1
Installation Step 4	Exhaust manifold bolts	1

REMOVAL



WARNING:

Do not work on or under a vehicle supported only by a jack. Always support the vehicle on safety stands.



NOTES:

- Removal steps in this procedure may contain installation details.
- Some variation in the illustrations may occur, but the essential information is always correct.

1. Disconnect the battery ground cable.

Refer to: Specifications (414-00 Battery and Charging System - General Information, Specifications).

- 2.



WARNING:


Make sure to support the vehicle with axle stands.

Raise and support the vehicle.


3. Refer to: Exhaust System (309-00 Exhaust System - V8 N/A 5.0L Petrol/V8 S/C 5.0L Petrol, Removal and Installation).

4. Refer to: Accessory Drive Belt - V8 S/C 5.0L Petrol (303-05 Accessory Drive - V8 N/A 5.0L Petrol/V8 S/C 5.0L Petrol, Removal and Installation).


- 5.

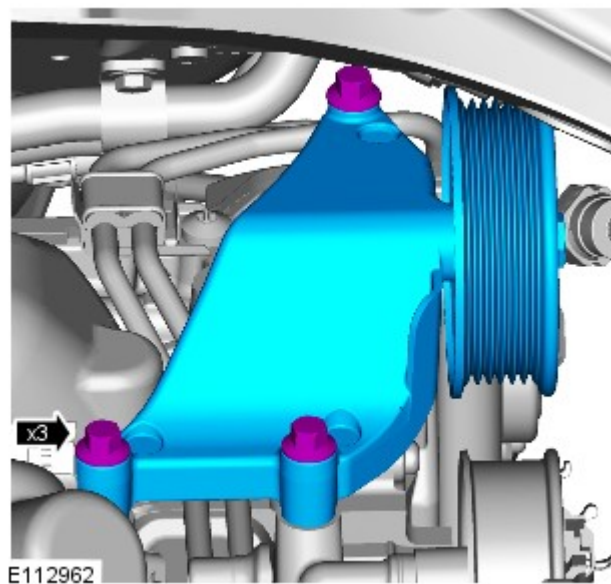

- 6.

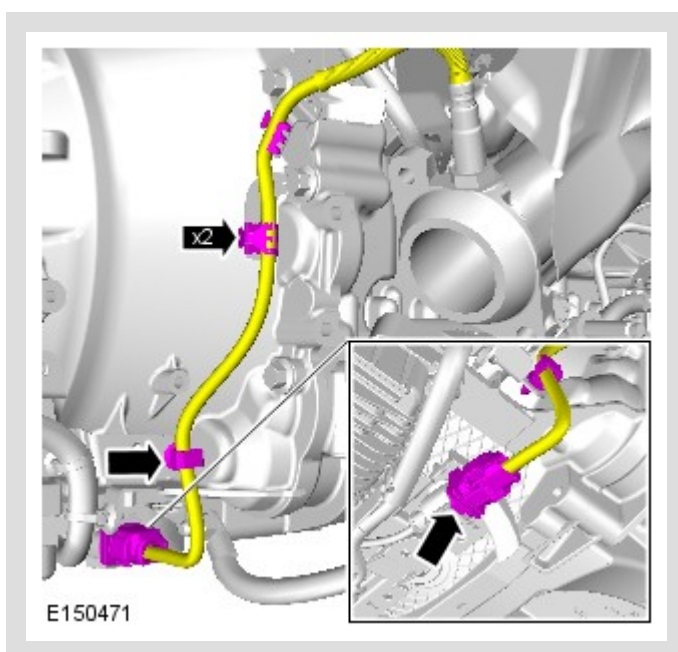

7.

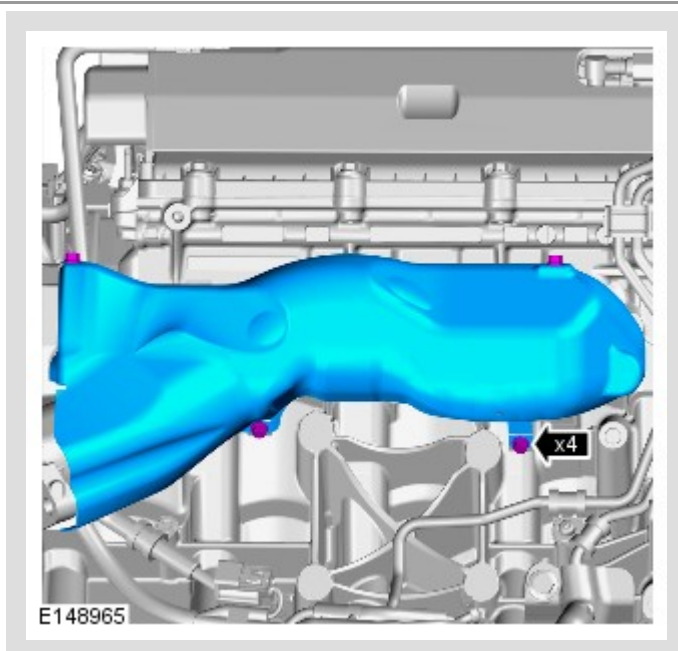

8.




CAUTIONS:

- Discard the bolts.
- LH illustration shown, RH is similar.

 NOTES:


- Discard the gasket.
- Make sure that the position of the spacers is noted before removal of the manifold.

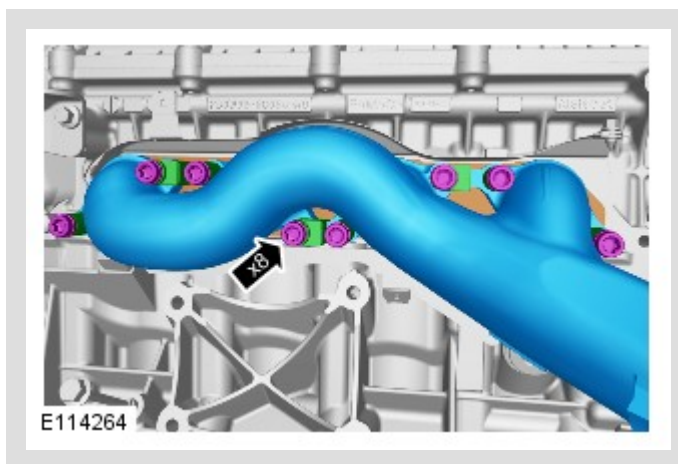

9.

 NOTE:

Do not disassemble further if the component is removed for access only.

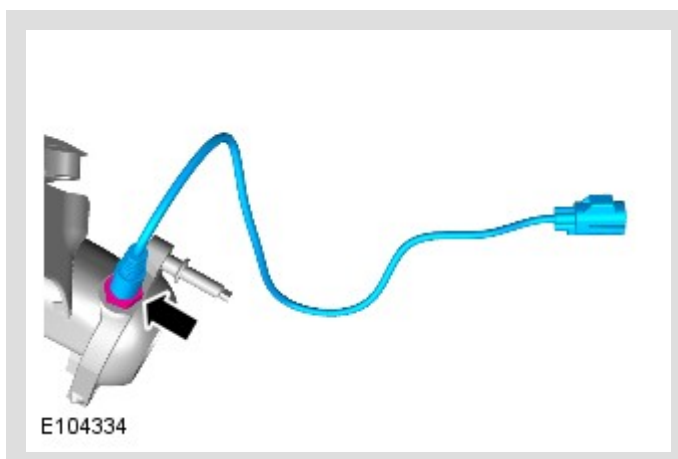

INSTALLATION

1.




CAUTIONS:

- Make sure that the mating faces are clean and free of foreign material.
- Make sure the anti-seize compound does not contact the HO2S tip.



NOTE:

If the original sensor is to be installed, apply lubricant meeting specification ESE-M12A4-A to the thread of the sensor.

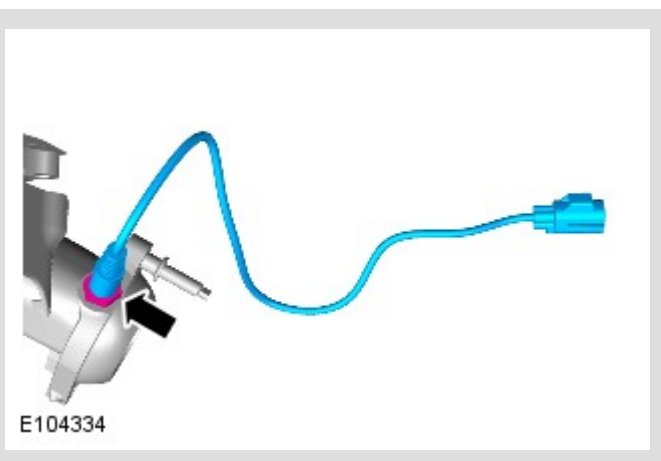

Torque: 45 Nm

2.




CAUTION:

LH illustration shown, RH is similar.



NOTE:

Install a new gasket.

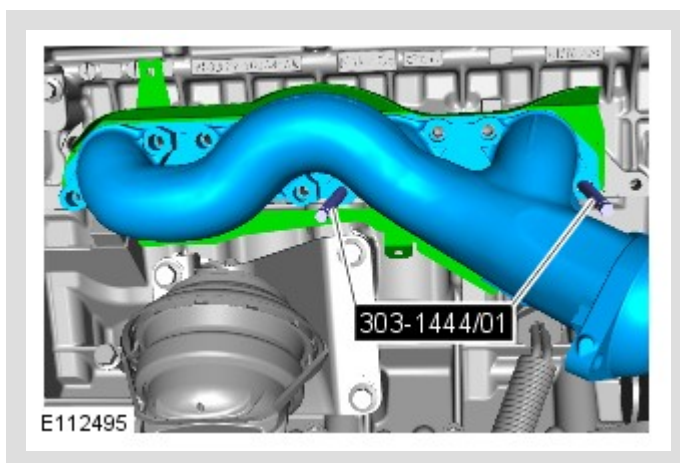

Special Tool(s): [303-1444-01](#)

Renew Part: [Exhaust manifold gasket](#) Quantity: **1** .

3.




CAUTION:

LH illustration shown, RH is similar.



NOTE:

If a new cylinder head is installed use the special tools in the illustration.

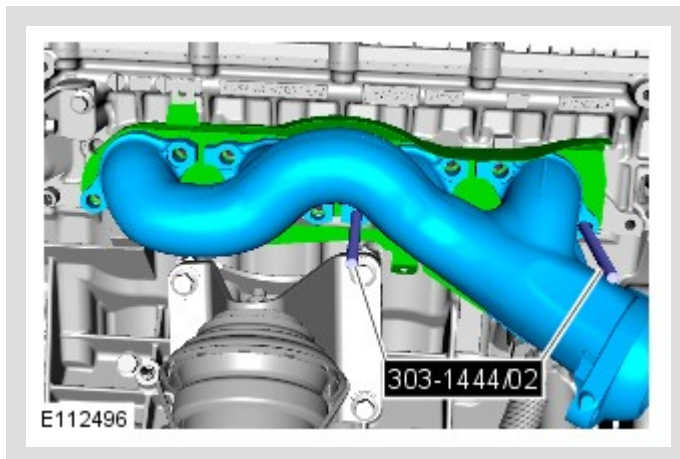

Special Tool(s): [303-1444-02](#)


4.

ⓘ CAUTIONS:

- Make sure that new bolts are installed.
- LH illustration shown, RH is similar.

⚠ NOTE:

Install the spacers in the noted position.

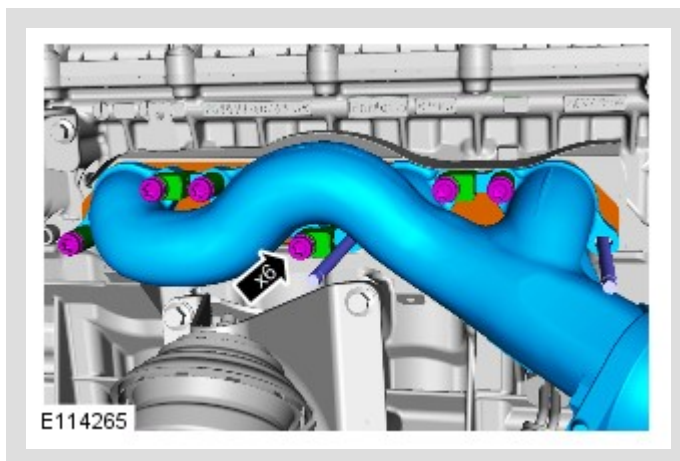


Renew Part: *Exhaust manifold bolts* Quantity: *1* .
Torque: 10 Nm

5.

⚠ CAUTION:

LH illustration shown, RH is similar.

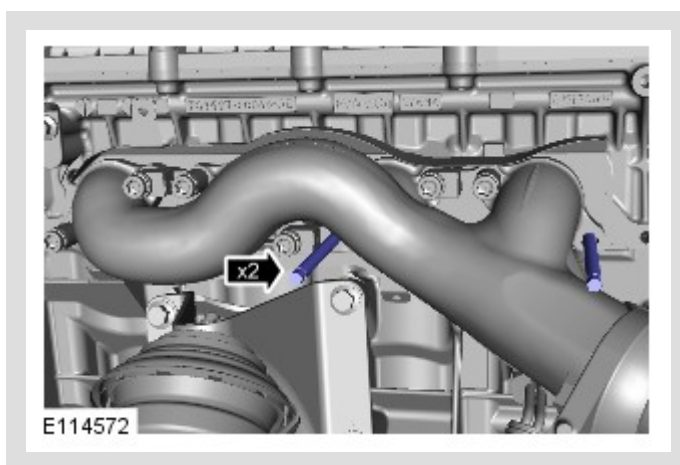

Remove the special tool.


6.

⚠ CAUTION:

LH illustration shown, RH is similar.

 NOTES:

- Make sure that new bolts are installed.
- Install the spacers in the noted position.

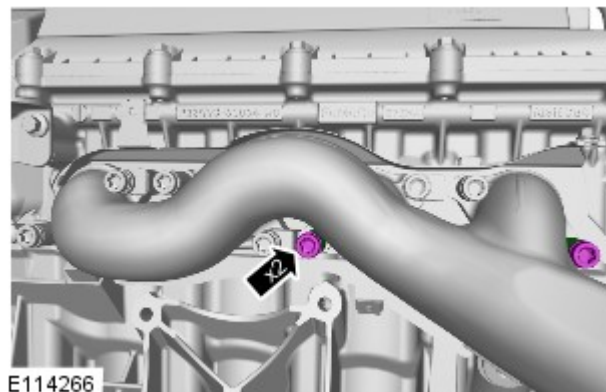


Torque: 10 Nm

7.

 CAUTION:

LH illustration shown, RH is similar.

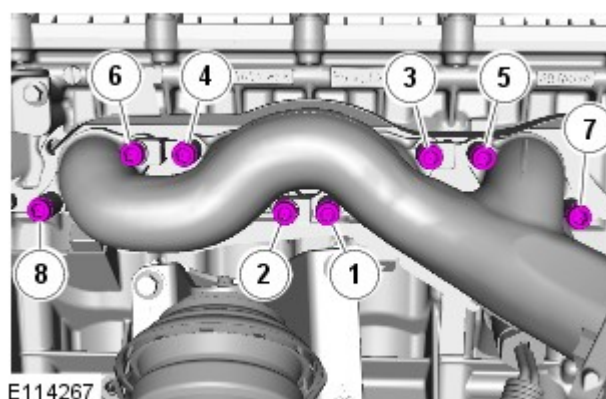


Torque: 18 Nm

8.


 CAUTION:

LH illustration shown, RH is similar.

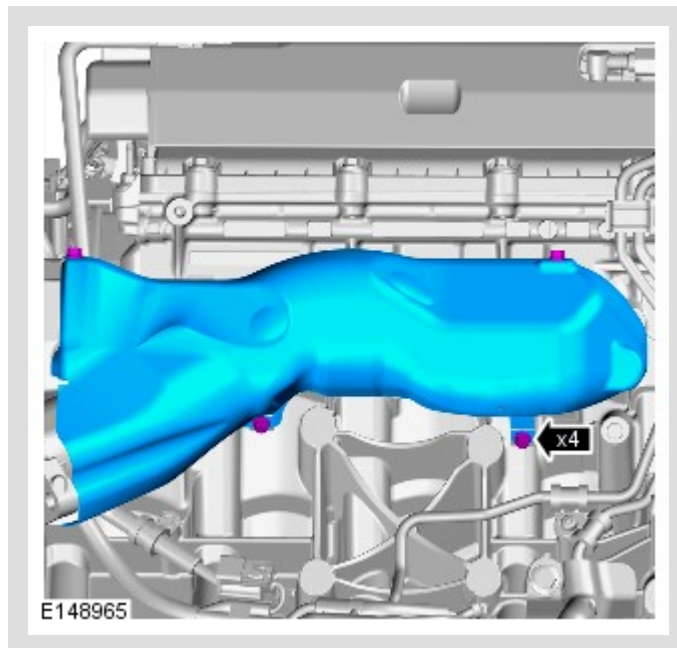


Torque: 3 Nm

9.

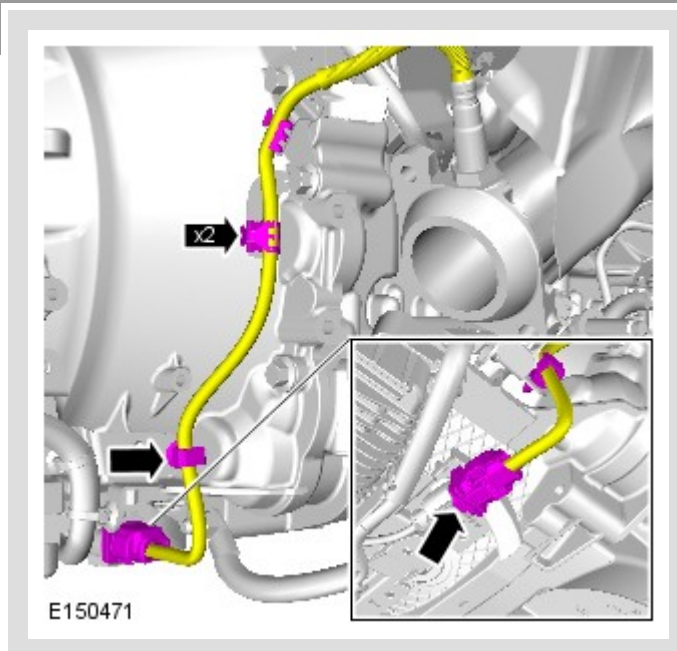

10.

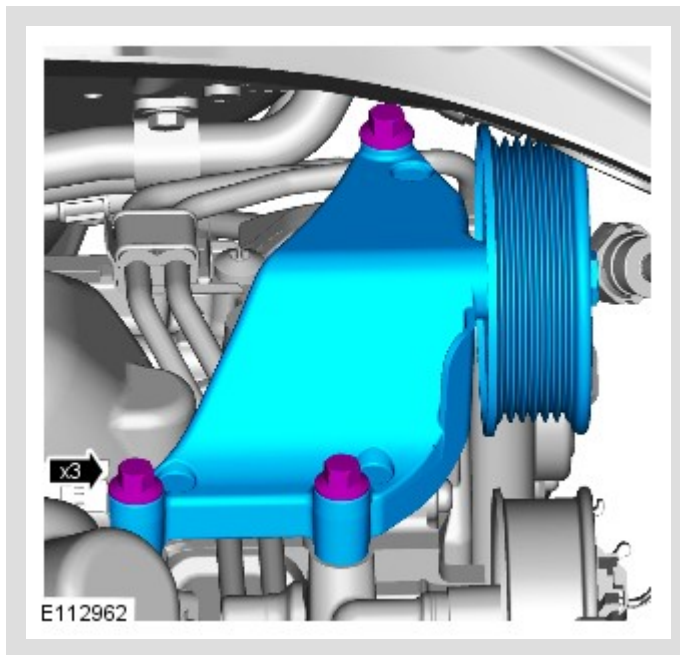

Torque: 25 Nm

-
- | | |
|-----|---|
| 11. | Refer to: Accessory Drive Belt - V8 S/C 5.0L Petrol (303-05 Accessory Drive - V8 N/A 5.0L Petrol/V8 S/C 5.0L Petrol, Removal and Installation). |
|-----|---|
-
- | | |
|-----|---|
| 12. | Refer to: Exhaust System (309-00 Exhaust System - V8 N/A 5.0L Petrol/V8 S/C 5.0L Petrol, Removal and Installation). |
|-----|---|
-
- | | |
|-----|--|
| 13. | Refer to: Specifications (414-00 Battery and Charging System - General Information, Specifications). |
|-----|--|