

PUBLISHED: 19-JUN-2014
2014.0 RANGE ROVER (LG), 303-01

ENGINE - V8 S/C 5.0L PETROL

VALVES (G1669394)

SPECIAL TOOL(S)

**303-252**

Compressor, Valve Spring

**303-884**

Remover/Installer, Valve Stem Seal

REMOVAL

1. Refer to: Specifications (414-00, Specifications).

- 2.


**WARNING:**

Do not work on or under a vehicle supported only by a jack. Always support the vehicle on safety stands.

Raise and support the vehicle.


-
3. Refer to: Cylinder Head LH (303-01 Engine - V8 5.0L Petrol, Removal and Installation).

-
4. Refer to: Cylinder Head RH (303-01 Engine - V8 5.0L Petrol, Removal and Installation).

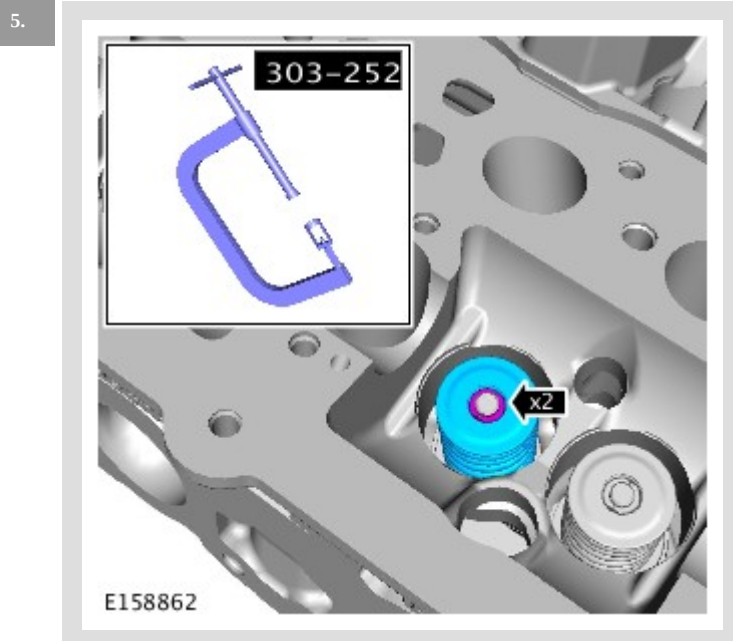

Special Tool(s): [303-252](#)

-
- 6.

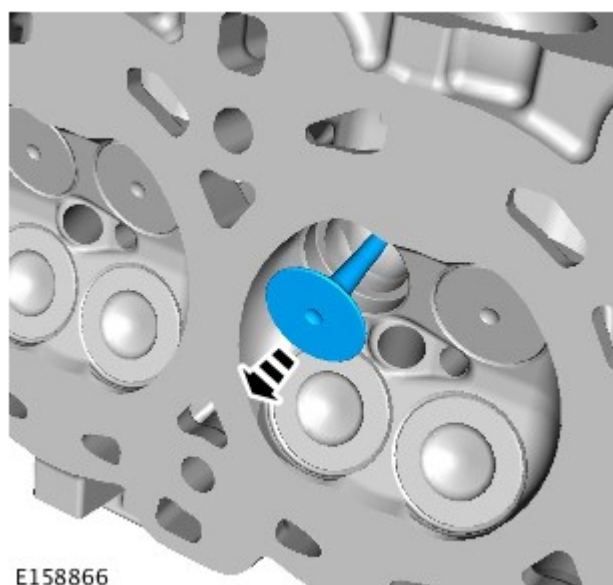

7.




Special Tool(s): 303-884

8.

ⓘ CAUTIONS:

- Make sure that the area around the component is clean and free of foreign material.
- Make sure the working surfaces are thoroughly clean to avoid contamination of the sensitive components.
- Make sure that the valve grinding paste is kept away from the valve stem.

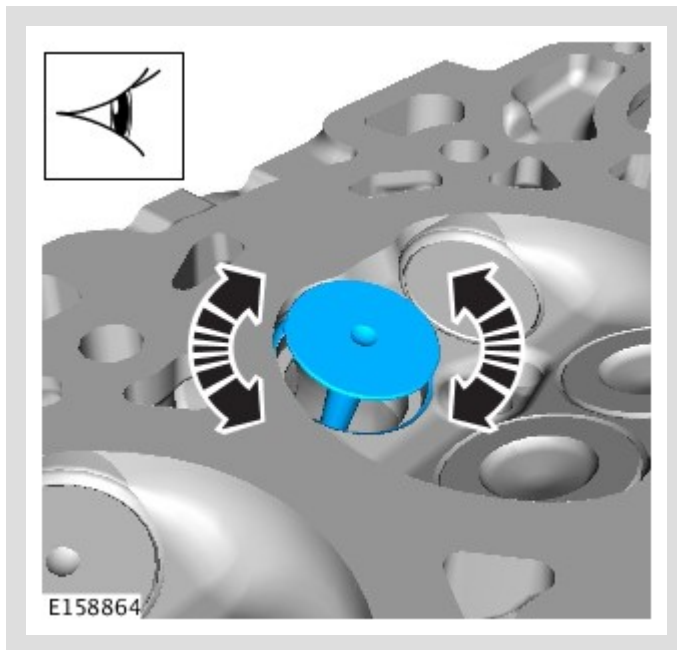

- Place a small amount of fine valve grinding paste evenly around the contact face of the valve.
- Place the valve in position and, using a suitable valve grinding tool, rotate the valve back and forth a few degrees on its seat, using light pressure.
- Raise the valve frequently during lapping and turn it into a new position after a few laps or rotations.
- Lap only until a continuous but narrow lapping mark is visible on both the valve seat and valve face.
- Thoroughly clean all surfaces to remove traces of valve grinding paste from the cylinder head, valve seat and valve face.

INSTALLATION

1.



CAUTION:

Make sure the working surfaces are thoroughly clean to avoid contamination of the sensitive components.



NOTE:

Make sure that all the component mating faces are clean.

To install reverse the removal procedure.