

2016.0 RANGE ROVER (LG), 303-03

ENGINE COOLING - TDV6 3.0L DIESEL - GEN 2/TDV6 3.0L DIESEL

COOLANT EXPANSION TANK

[G1509367]

REMOVAL AND INSTALLATION


26.15.01	TANK - RENEW	ALL DERIVATIVES	0.3	USED WITHINS	+
----------	-----------------	--------------------	-----	-----------------	---

REMOVAL

WARNING:

Since injury such as scalding could be caused by escaping steam or coolant, make sure the vehicle cooling system is cool prior to carrying out this procedure.

1.

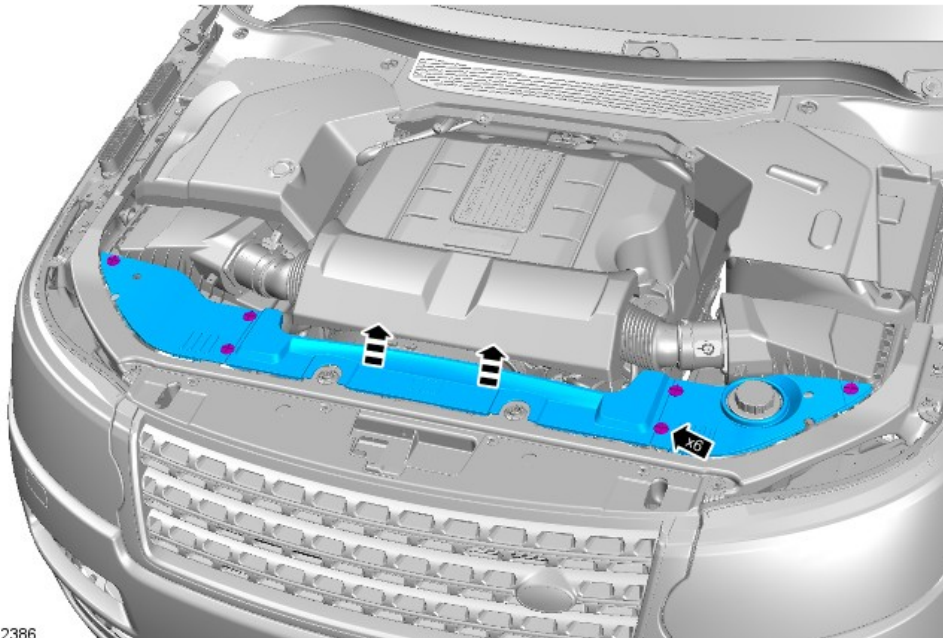


E142386

2.

WARNING:

When releasing the cooling system pressure, cover the coolant expansion tank cap with a thick cloth.

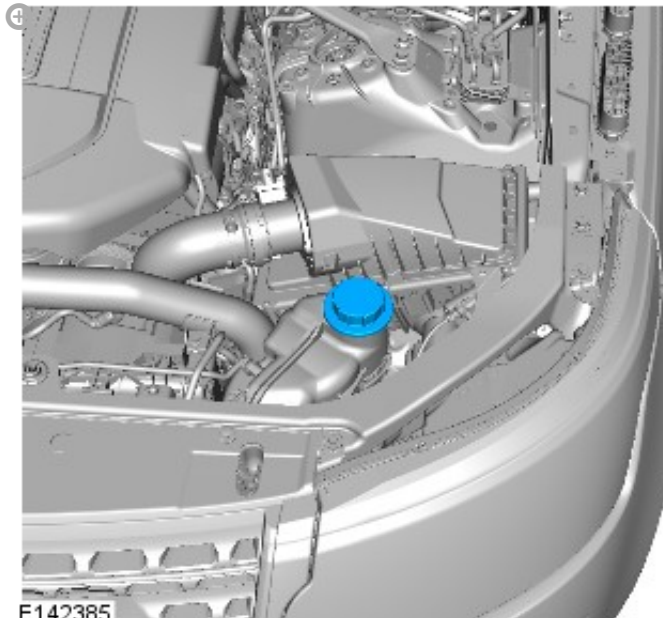


E142385

3. Using a syringe, remove the cooling fluid from the expansion tank.

4.

CAUTION:


Clamp the hoses to minimize coolant loss.

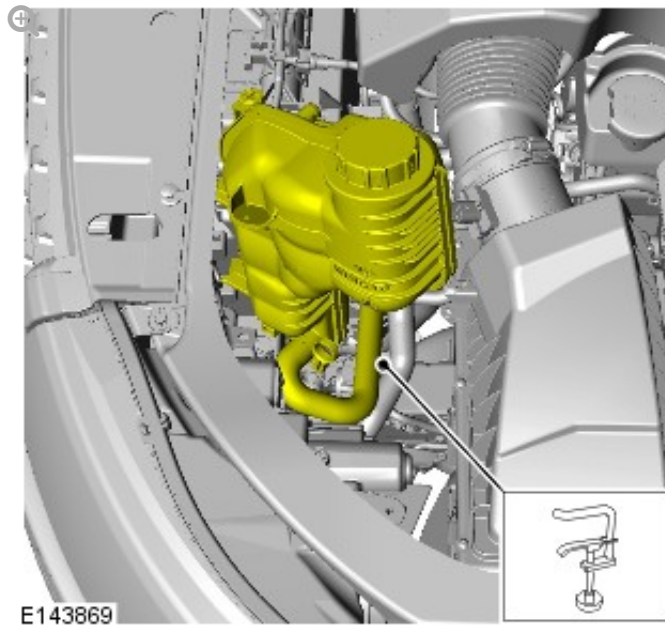

5.


CAUTION:

Be prepared to collect escaping coolant.

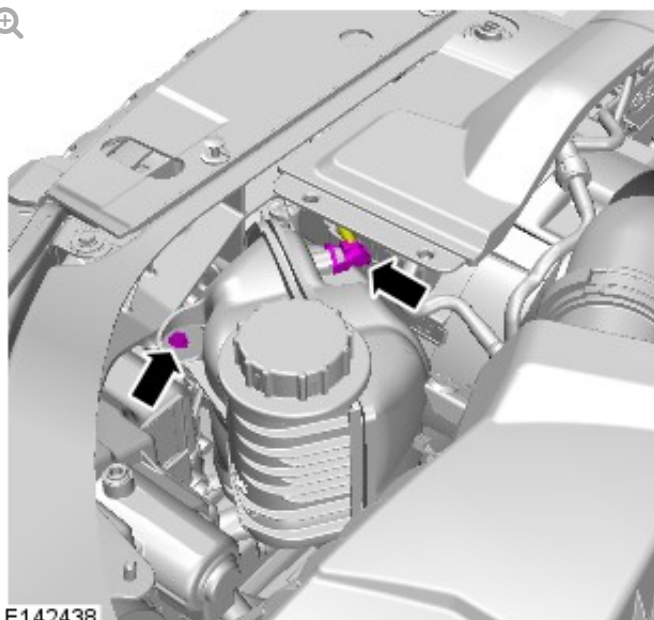

E142438

6.

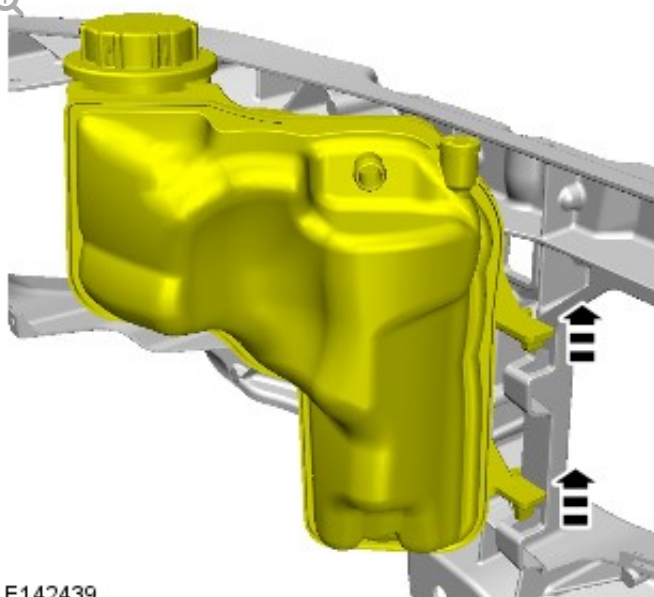


E142439

7.

CAUTION:


Be prepared to collect escaping coolant.

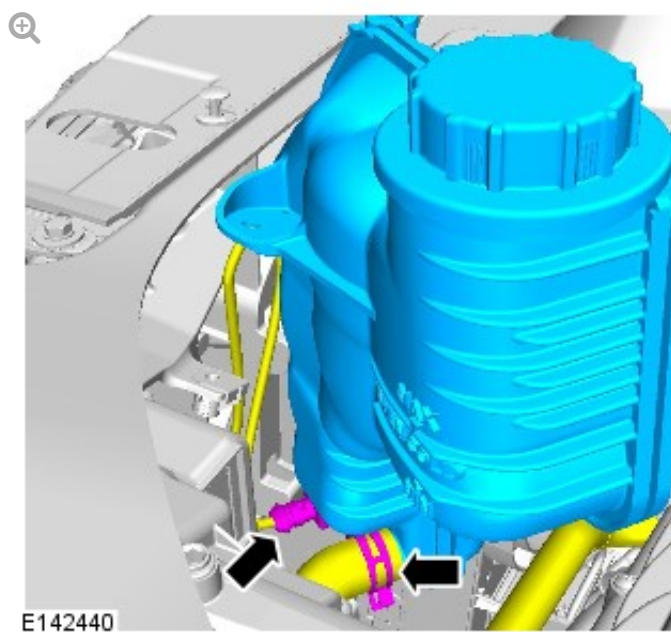

E142440


INSTALLATION

1.

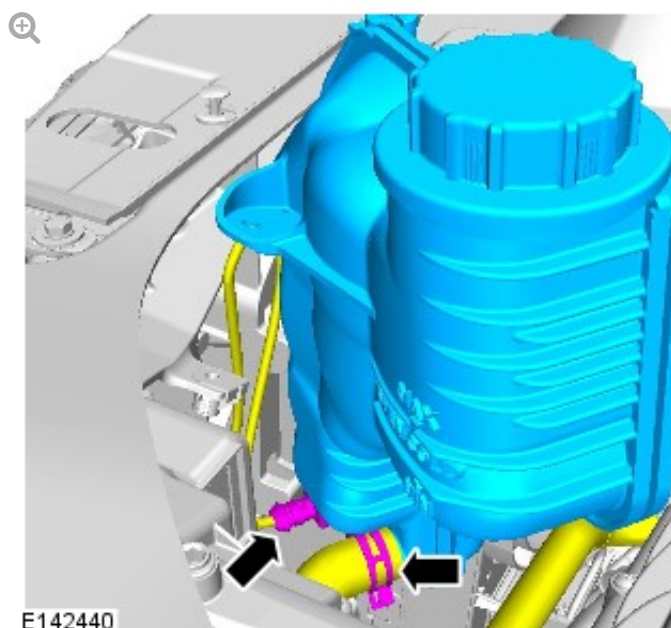

E142440


2.

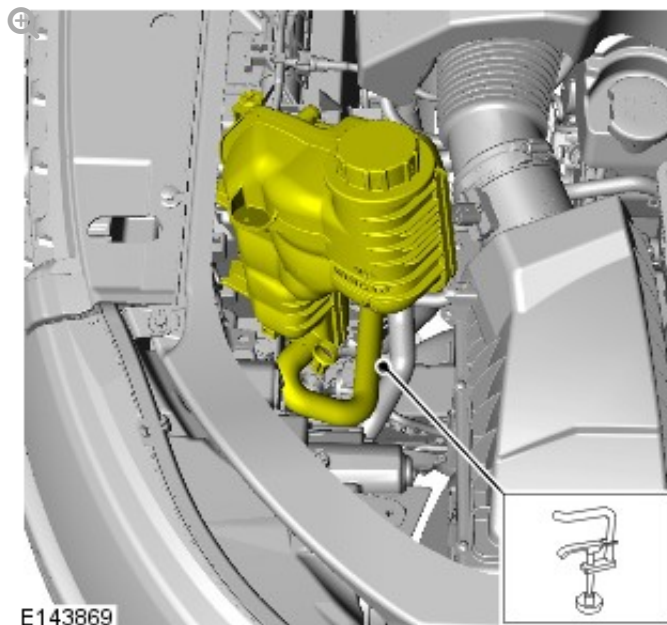

3.

NOTE:

Keep the coolant expansion tank vertically.

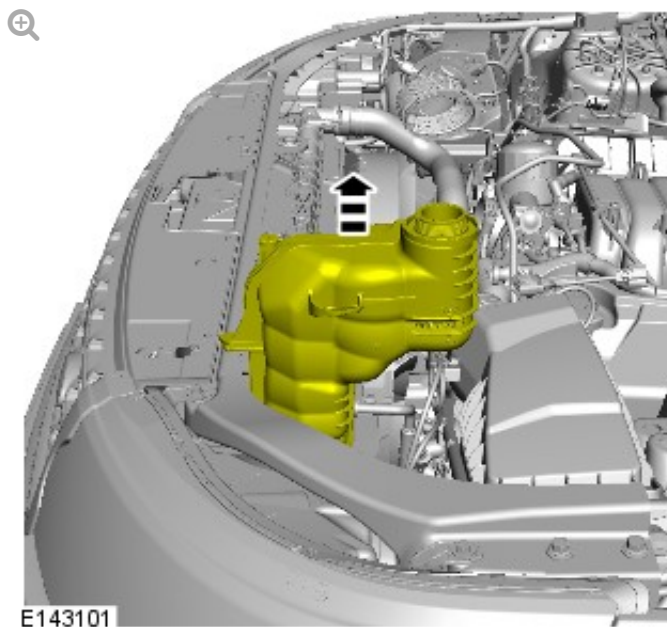


Raise the coolant expansion tank minimum 110mm from its original position.

4. Fill the cooling system, keeping coolant to the upper level mark of


the expansion tank, until a steady stream of coolant is seen returning to the tank.

5.

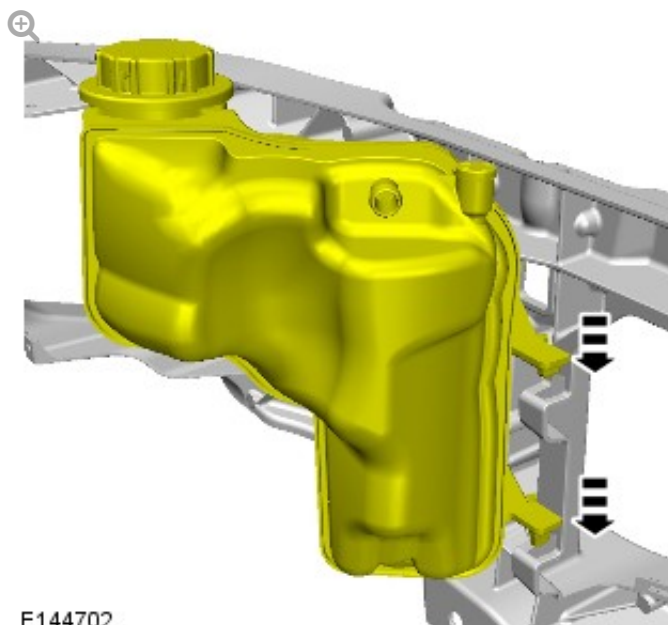

E144702

6.

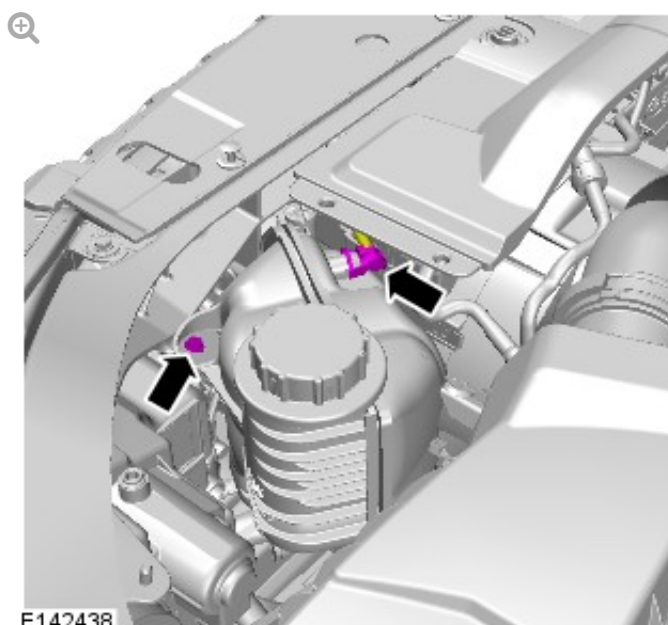

E142438

Torque: 2.8 Nm


7.

CAUTION:

Make sure the coolant level remains above the "COLD FILL RANGE" lower level mark.

Check and top up the cooling system as required.

8.

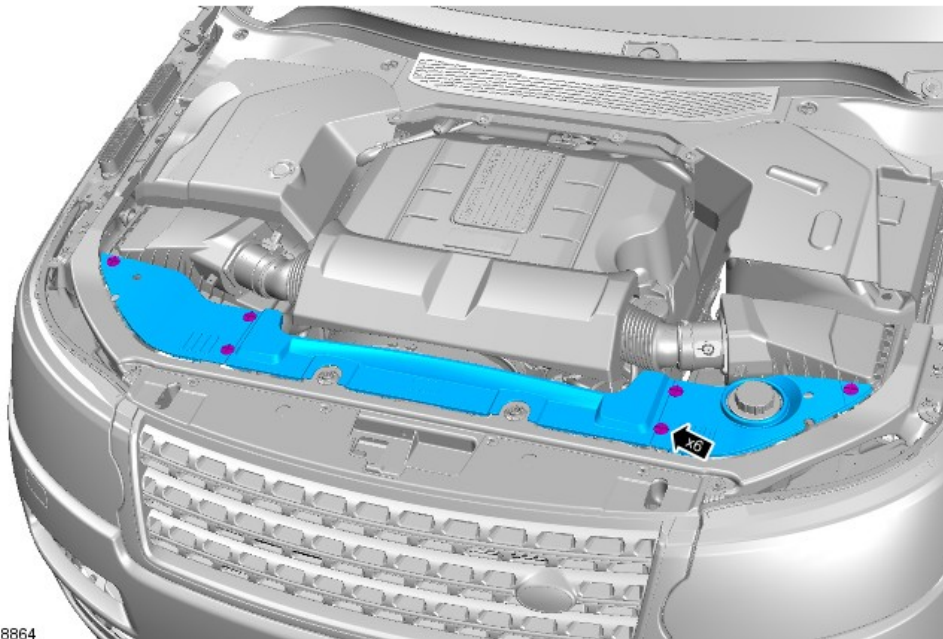

E148864