

PUBLISHED: 08-AUG-2012
2015.0 RANGE ROVER (LG), 303-03

ENGINE COOLING - TDV8 4.4L DIESEL

COOLANT EXPANSION TANK (G1509367)

REMOVAL AND INSTALLATION

26.15.01

TANK -
RENEW

ALL
DERIVATIVES

0.3

USED
WITHINS


REMOVAL



WARNING:

Since injury such as scalding could be caused by escaping steam or coolant, make sure the vehicle cooling system is cool prior to carrying out this procedure.

1.

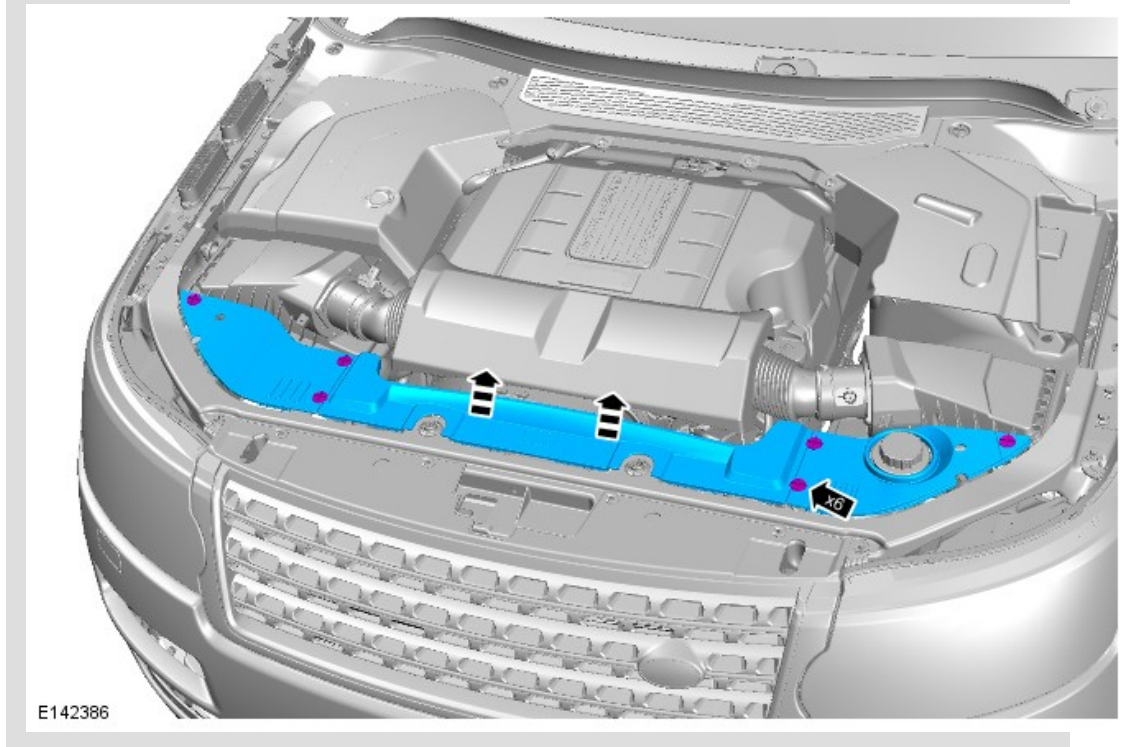


2.



WARNING:


When releasing the cooling system pressure, cover the coolant expansion tank cap with a thick cloth.

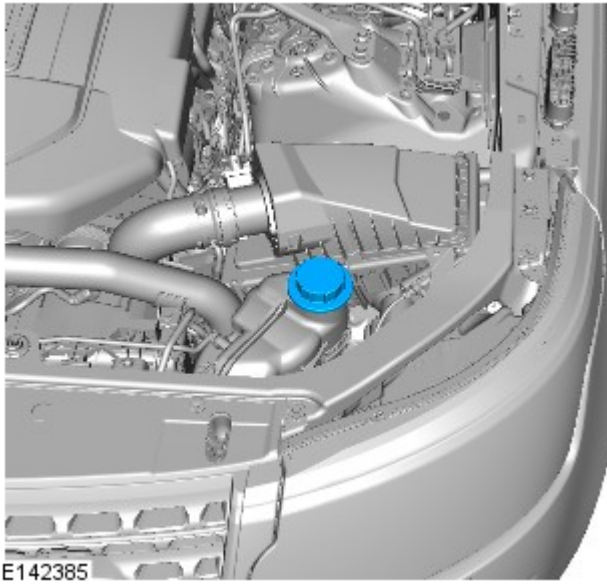

-
3. Using a syringe, remove the cooling fluid from the expansion tank.

-
4. **⚠ CAUTION:**


Clamp the hoses to minimize coolant loss.

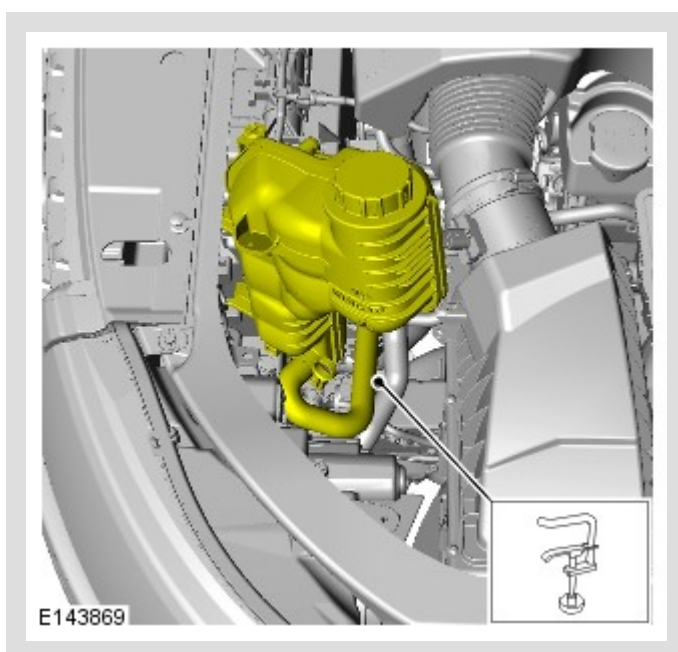


5.

⚠ CAUTION:

Be prepared to collect escaping coolant.

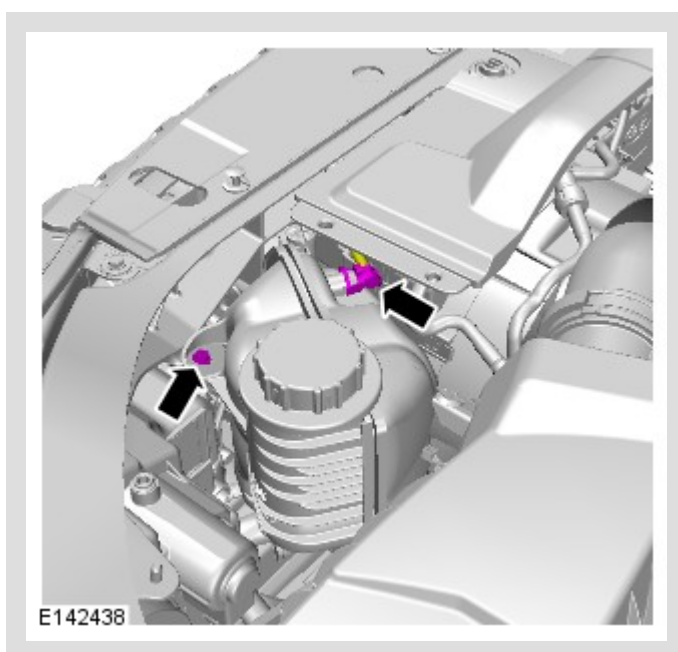

6.

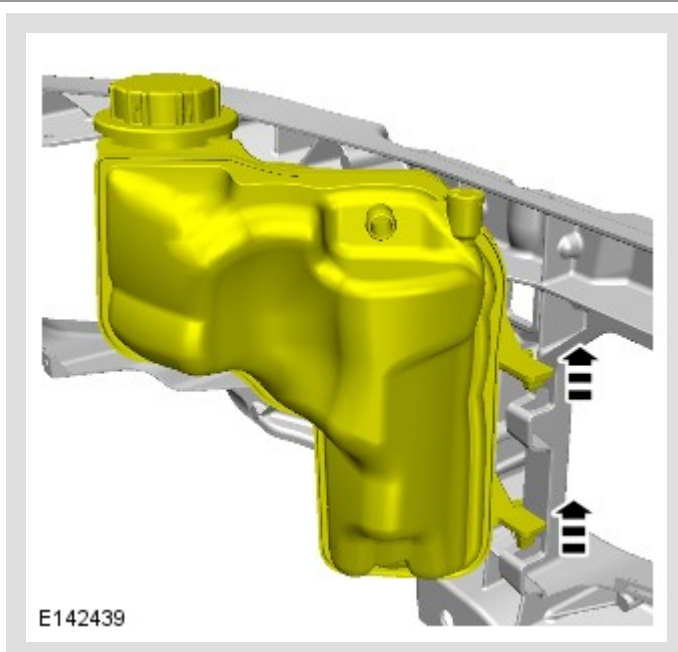


7.




CAUTION:

Be prepared to collect escaping coolant.

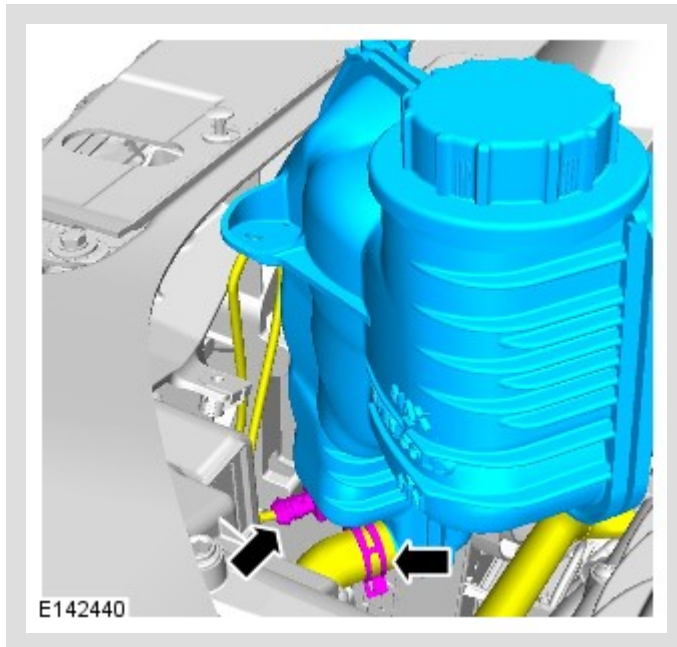


INSTALLATION

1.

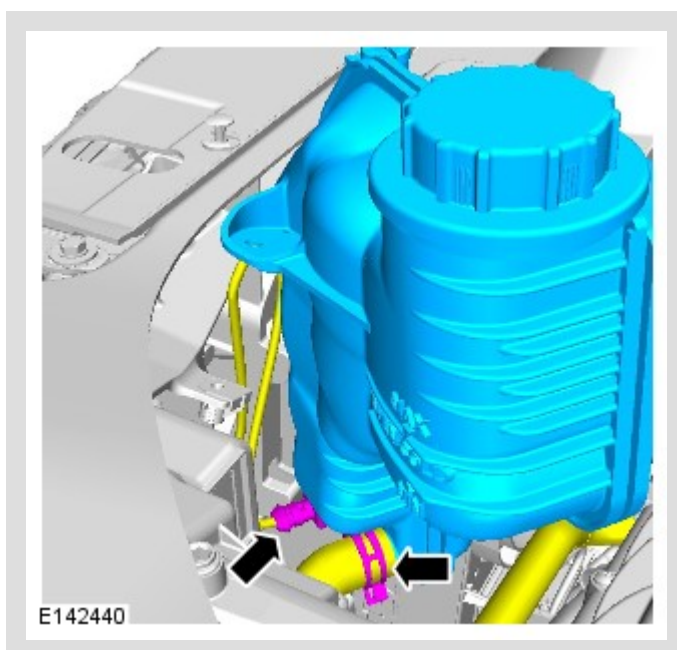

2.

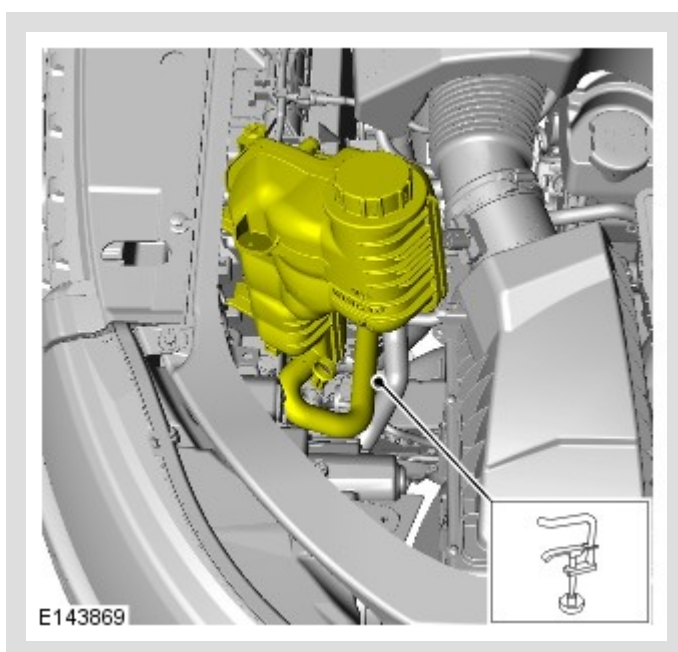


3.



NOTE:


Keep the coolant expansion tank vertically.

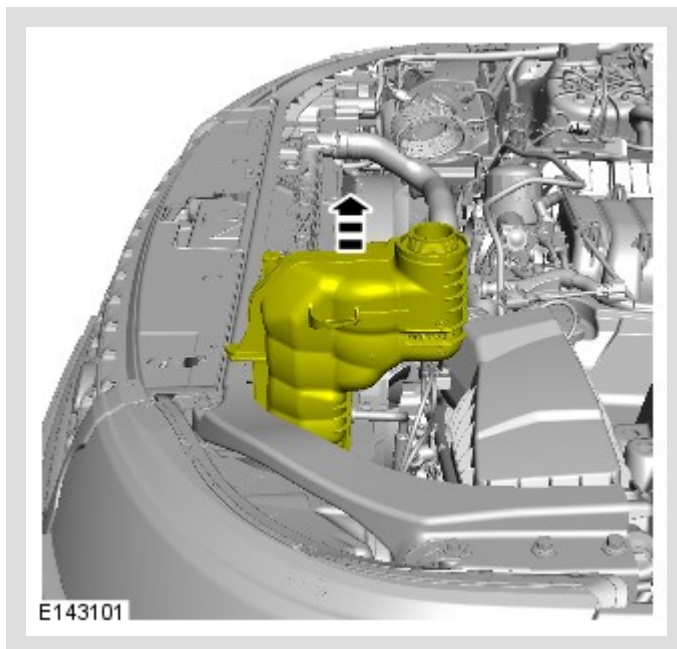


Raise the coolant expansion tank minimum 110mm from its original position.

-
4. Fill the cooling system, keeping coolant to the upper level mark of the expansion tank, until a steady stream of coolant is seen returning to the tank.

5.

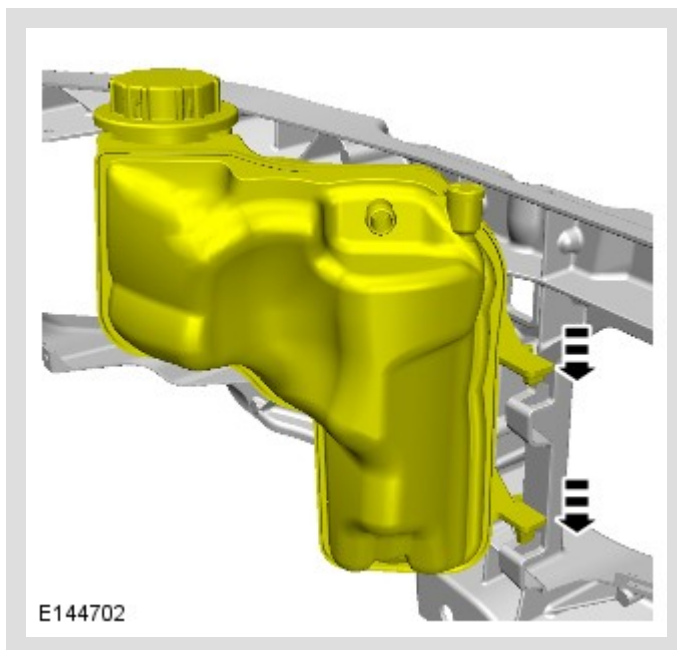

6.

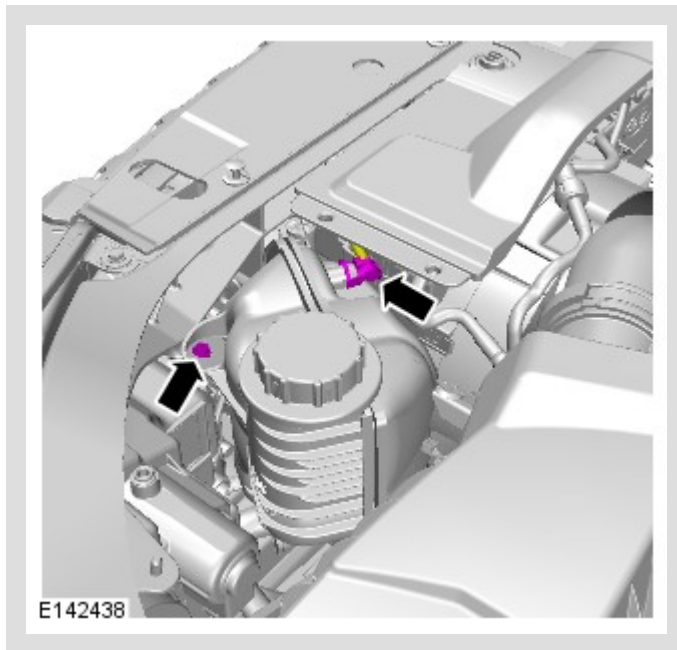

Torque: 2.8 Nm

7.

⚠ CAUTION:

Make sure the coolant level remains above the "COLD FILL RANGE" lower level mark.

Check and top up the cooling system as required.

8.

