

PUBLISHED: 28-APR-2017
2015.0 RANGE ROVER (LG), 303-03

ENGINE COOLING - TDV8 4.4L DIESEL

RADIATOR (G1509384)

REMOVAL AND INSTALLATION

26.40.01	RADIATOR ASSEMBLY - RENEW	4400 CC, TDV8	3.2	USED WITHINS	
----------	---------------------------	---------------	-----	--------------	--

PART(S)

STEP	REPLACE PART / RENEW PART	PART NAME	
Removal Step 7	Renew Part	Air conditioning pipes to condenser O-ring seals	1
Removal Step 9	Renew Part	Air conditioning pipes to condenser O-ring seals	1

REMOVAL



NOTES:


- Removal steps in this procedure may contain installation details.
- Some variation in the illustrations may occur, but the essential information is always correct.
- Some components shown removed for clarity.

1. Refer to: [Air Conditioning System Recovery, Evacuation and Charging](#) (412-00 Climate Control System - General Information, General Procedures).


2. Refer to: [Cooling Fan](#) (303-03F Engine Cooling - TDV8 4.4L Diesel, Removal and Installation).

3. Refer to: [Radiator Grille](#) (501-08 Exterior Trim and Ornamentation, Removal and Installation).


4.

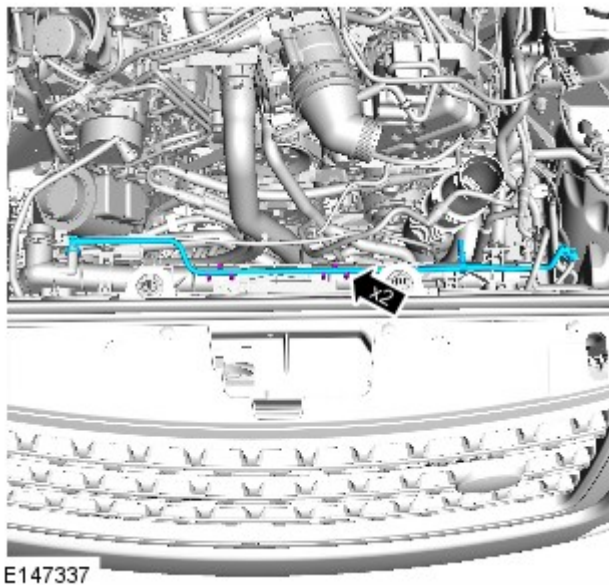

5.

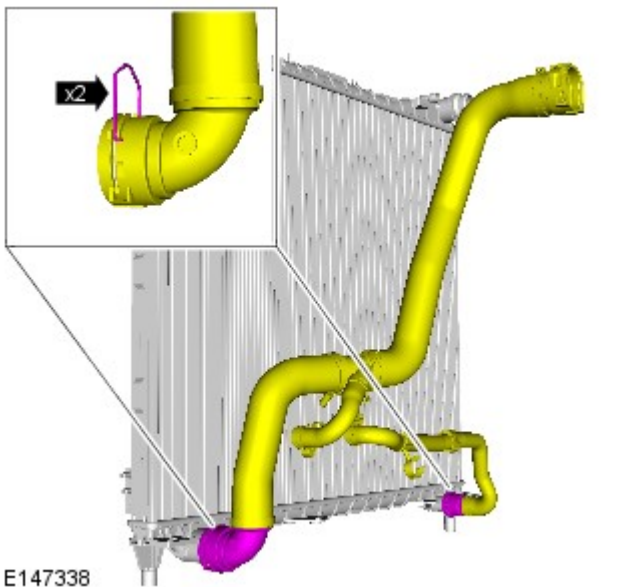


6.

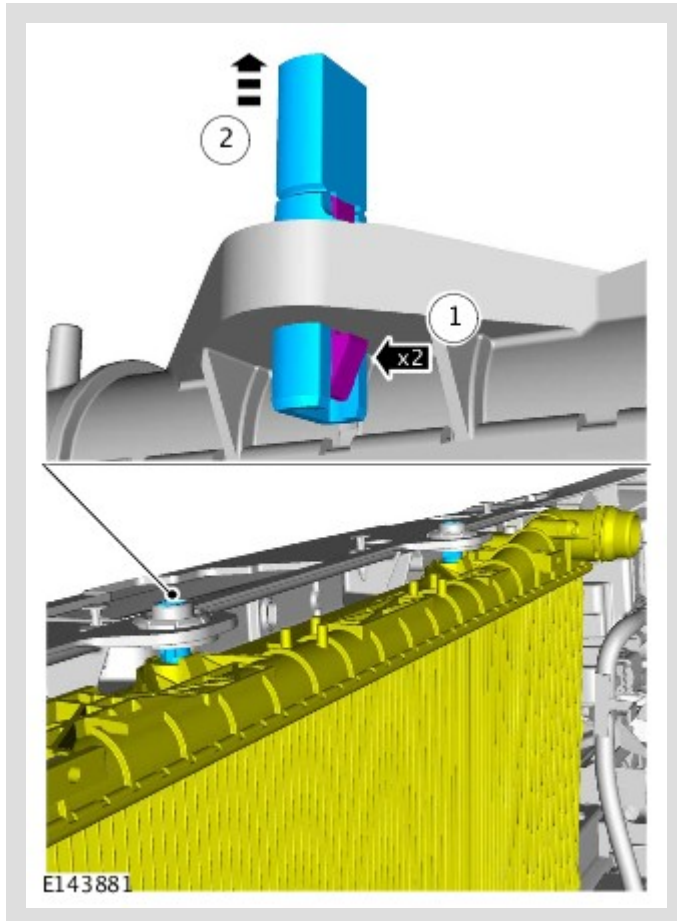

7.


⚠ CAUTIONS:

- Make sure that all openings are sealed.
- Remove and discard the O-ring seals.

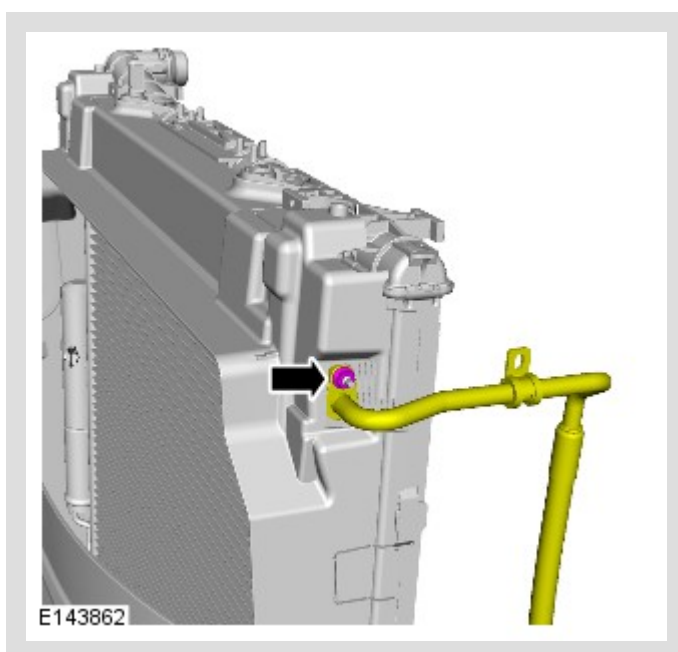

Renew Part: *Air conditioning pipes to condenser O-ring seals* : 1 .
Torque: 8 Nm

8.

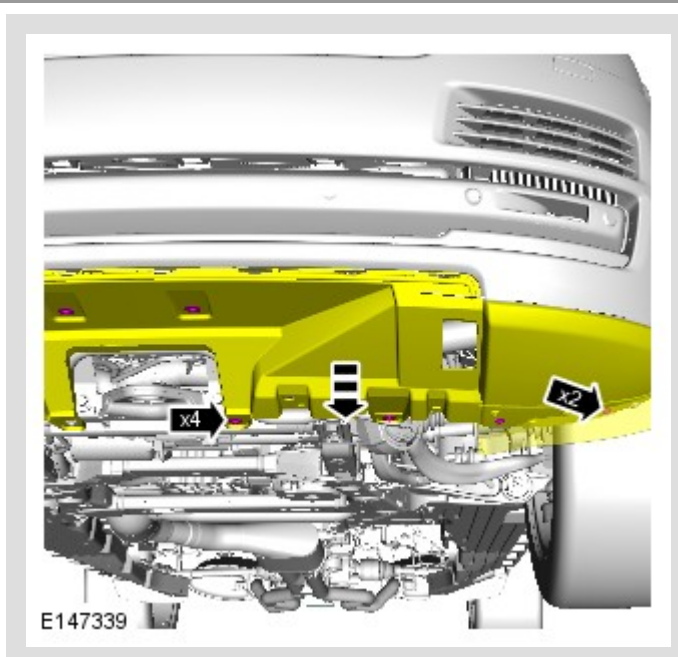


9.



CAUTION:


Remove and discard the O-ring seals.

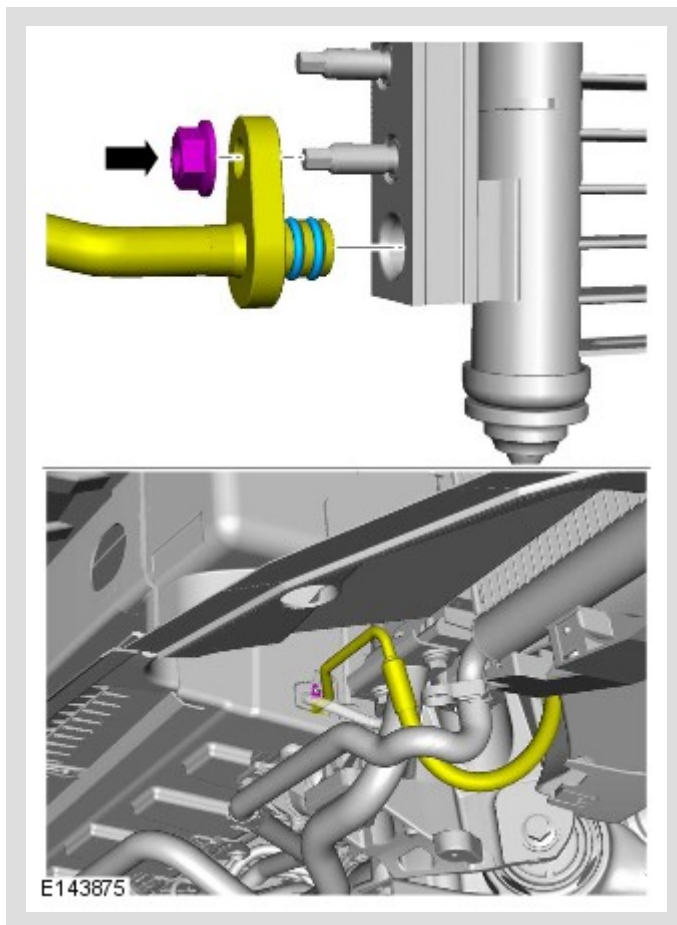


Renew Part: *Air conditioning pipes to condenser O-ring seals : 1 .*

Torque: **8 Nm**

10.

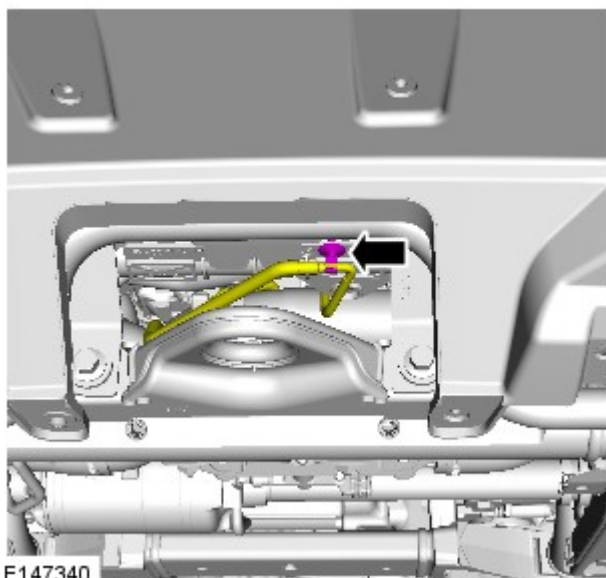


11.

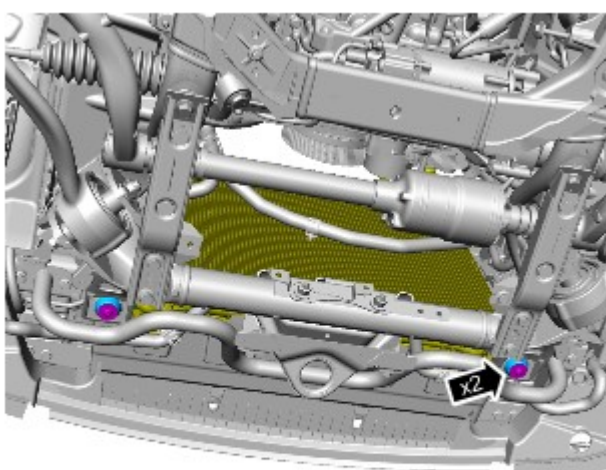

Torque: 15 Nm

12.

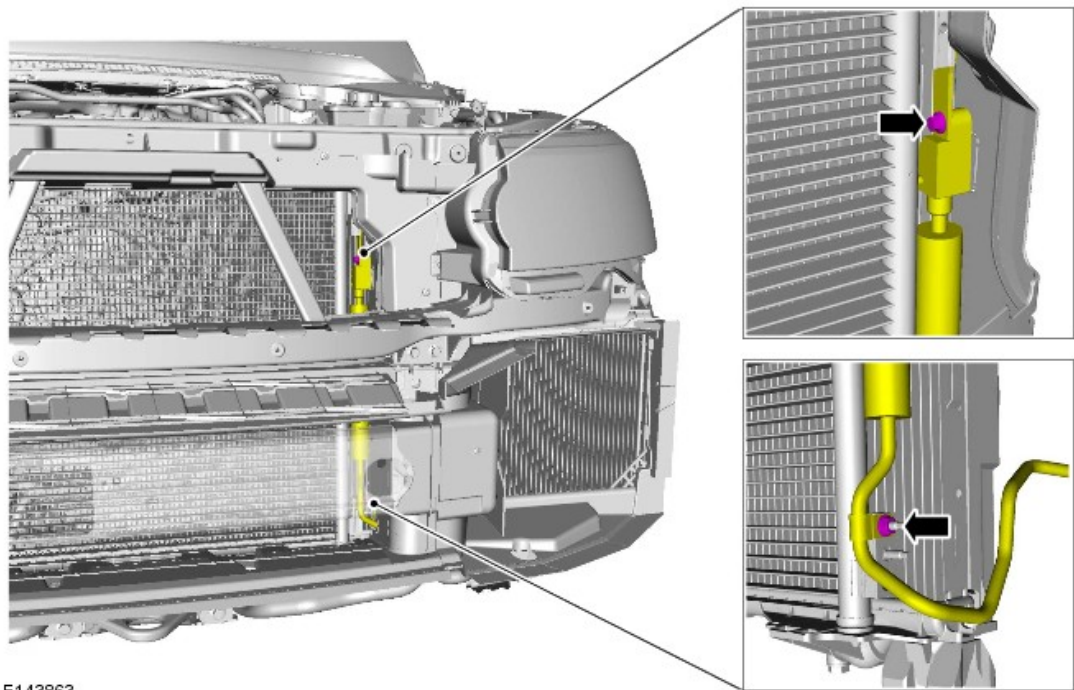


Torque: 7 Nm


13.



CAUTION:

Always protect the cooling pack elements to prevent accidental damage.

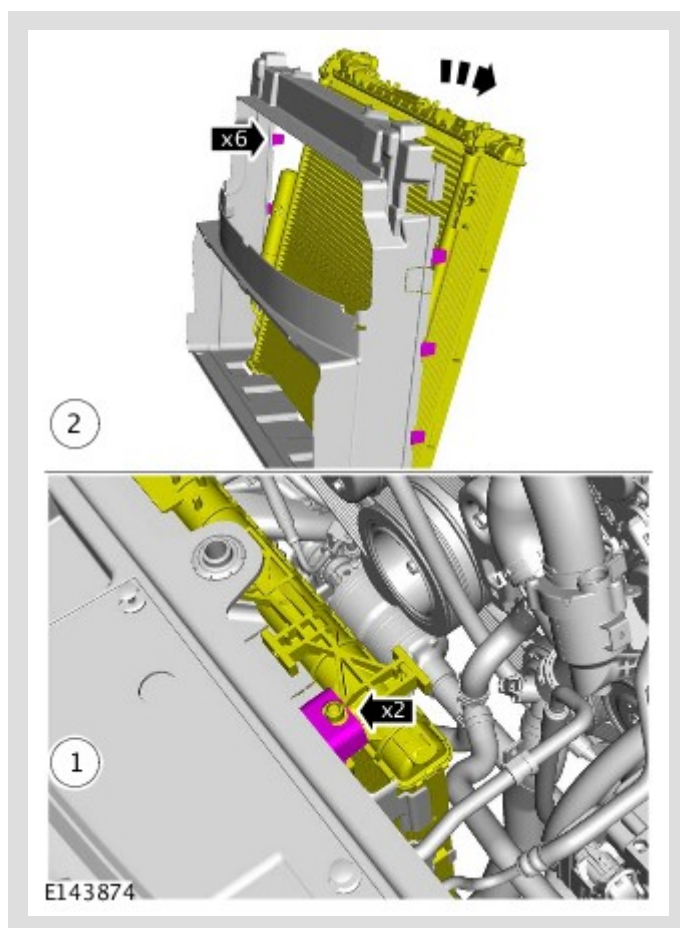

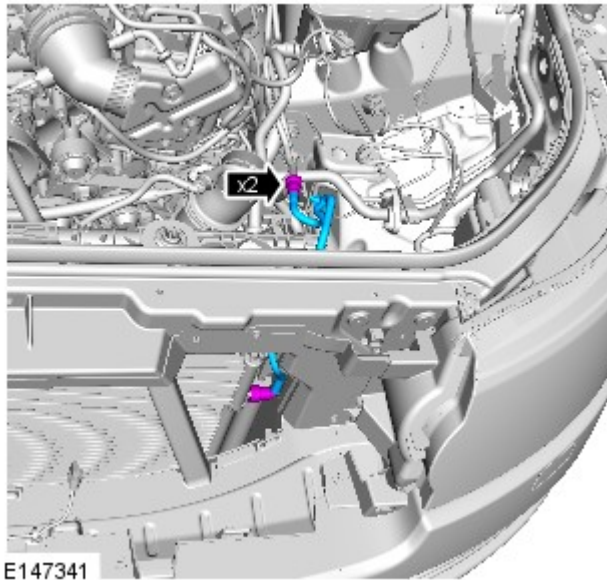




15.




CAUTION:

Always protect the cooling pack elements to prevent accidental damage.

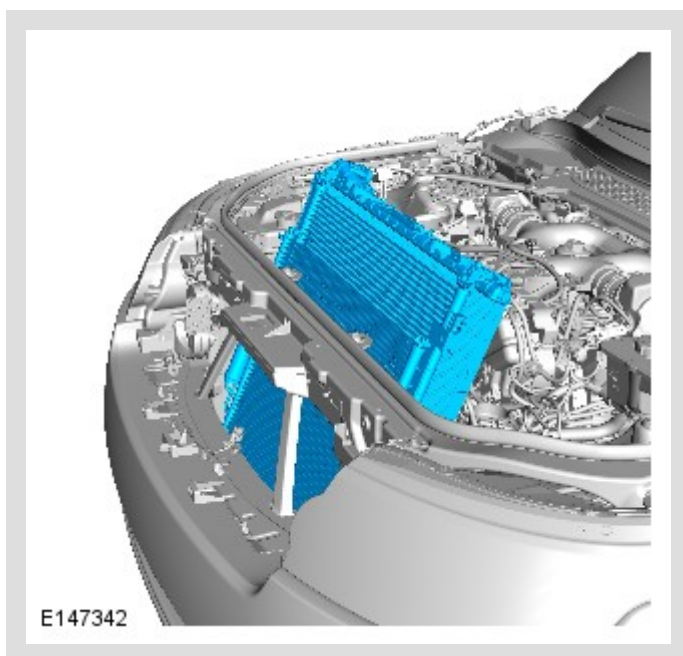

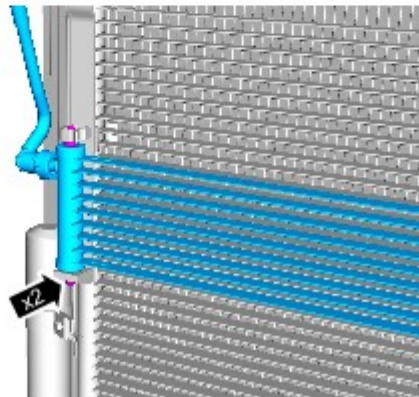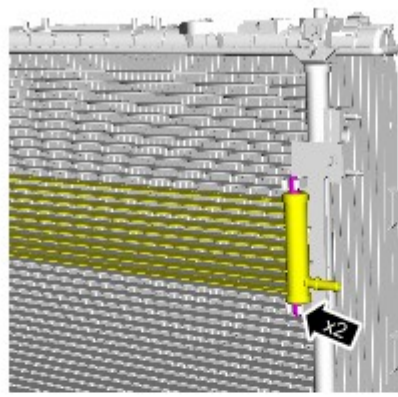


E147343

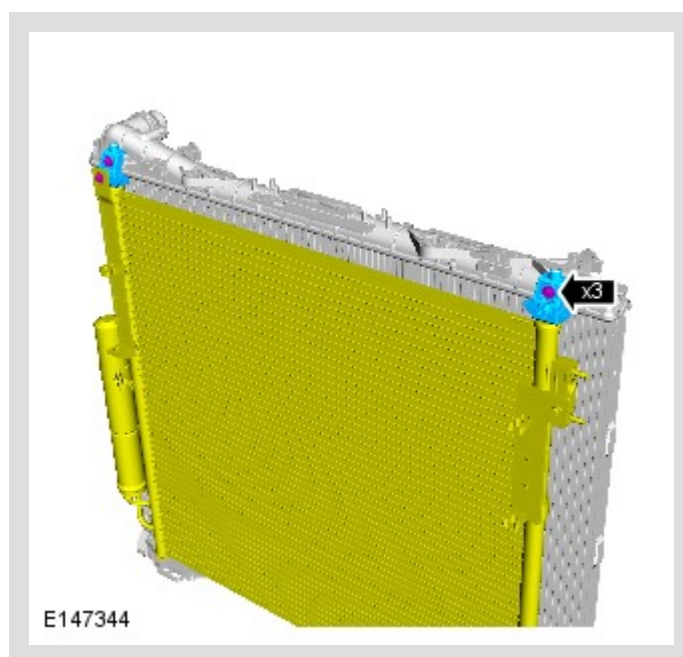

Torque: 4.5 Nm

18.

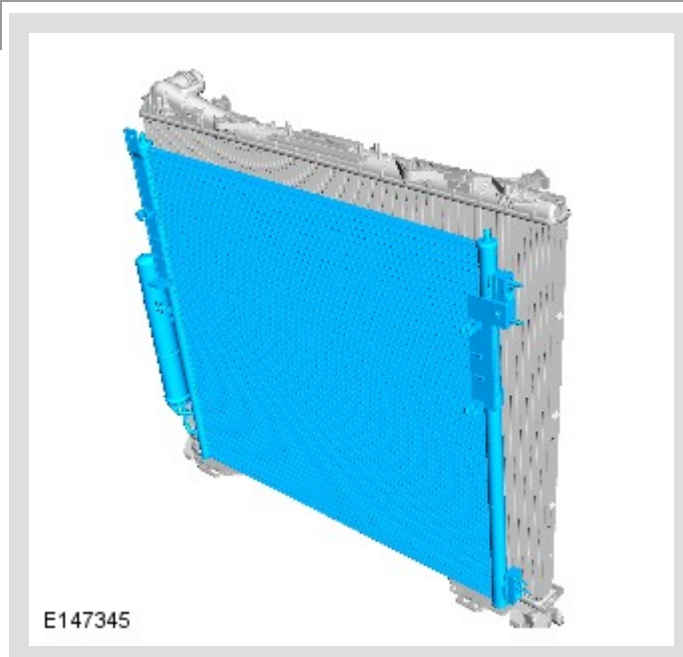

INSTALLATION

1. To install, reverse the removal procedure.