

2016.0 RANGE ROVER (LG), 303-08

ENGINE EMISSION CONTROL - TDV6 3.0L DIESEL - GEN 2/TDV6 3.0L DIESEL

DIESEL EXHAUST FLUID INJECTION PUMP (G1937878)

REMOVAL AND INSTALLATION

17.50.35	PUMP - DIESEL EXHAUST FLUID INJECTION - RENEW	ALL DERIVATIVES	0.7	USED WITHINS	+
----------	--	--------------------	-----	-----------------	---

PART(S)

STEP	REPLACE PART / RENEW PART	PART NAME
Installation Step 1	Renew Part	Diesel exhaust fluid injection pump seals
Installation Step 3	Renew Part	Sleeve and isolator assemblies
Installation Step 4	Renew Part	Diesel exhaust fluid injection pump bolts

REMOVAL

NOTES:

- Some variation in the illustrations may occur, but the essential information is always correct.
- Some components shown removed for clarity.

1.

WARNING:

Make sure to support the vehicle with axle stands.


Raise and support the vehicle.

2. Refer to: [Diesel Exhaust Fluid Tank Drain and Refill](#) (303-08A Engine Emission Control - TDV6 3.0L Diesel - Gen 2/TDV6 3.0L Diesel, General Procedures).

3.

WARNING:


Be prepared to collect escaping fluid.

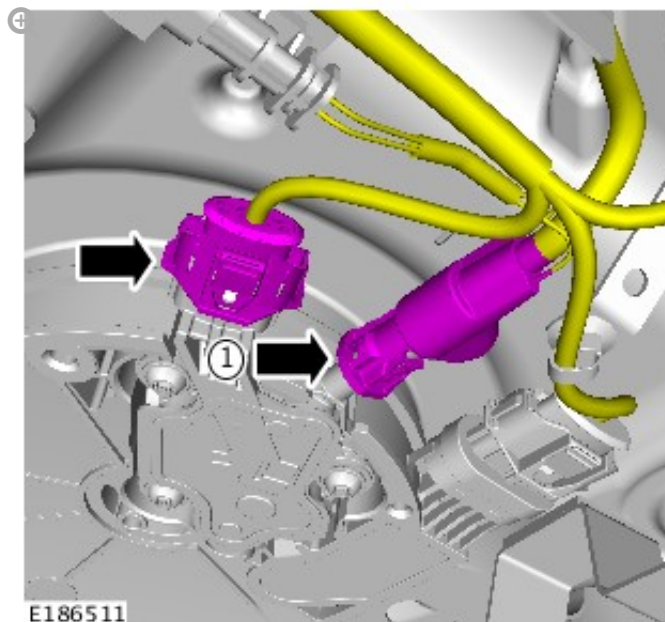

4.

CAUTION:


Make sure that all disconnected electrical connectors and sockets are sealed.

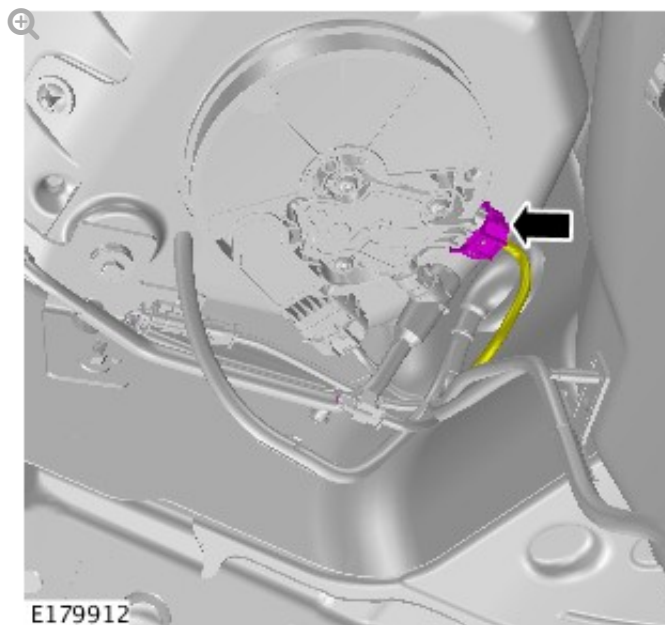

5.

CAUTION:

Discard the bolts.

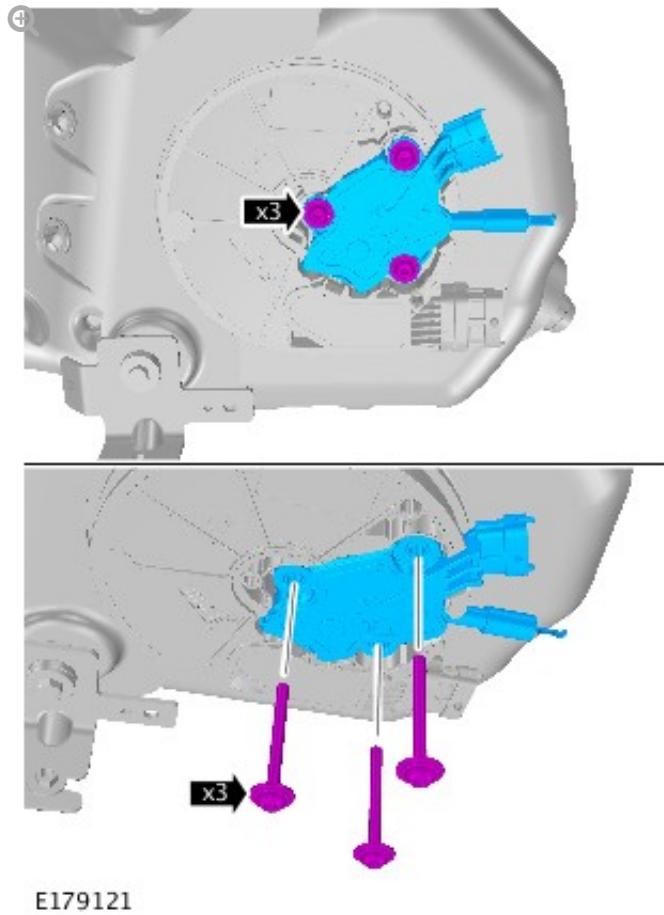


6.

WARNING:

Be prepared to collect escaping fluid.

CAUTION:

Do not use excessive force to remove the component.


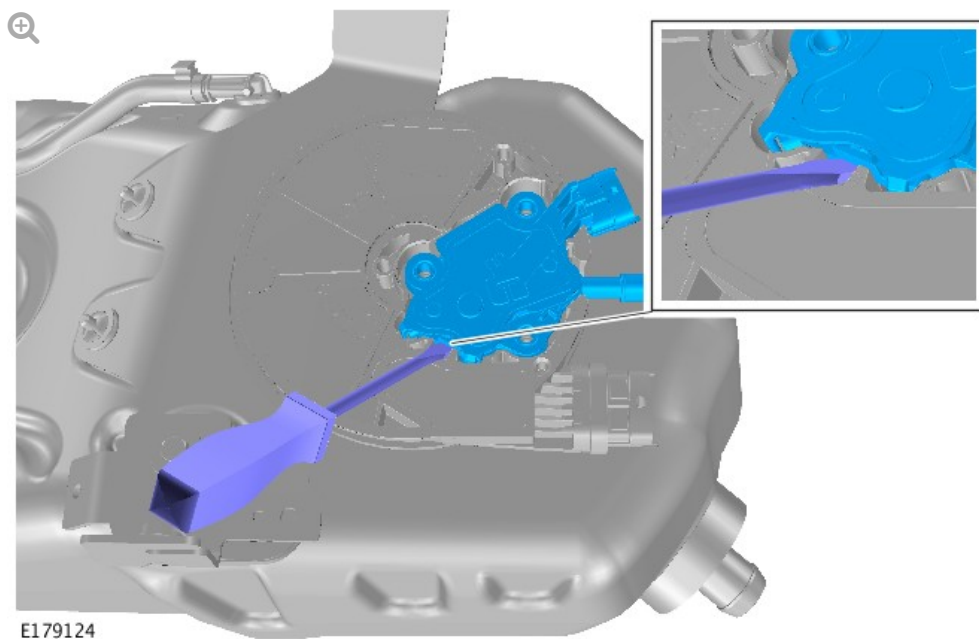


E179124

7.

CAUTION:

Using a suitable tool, remove the seals.

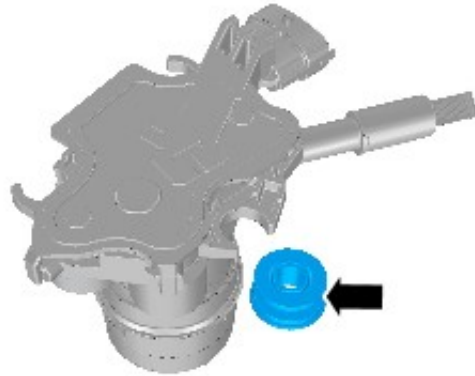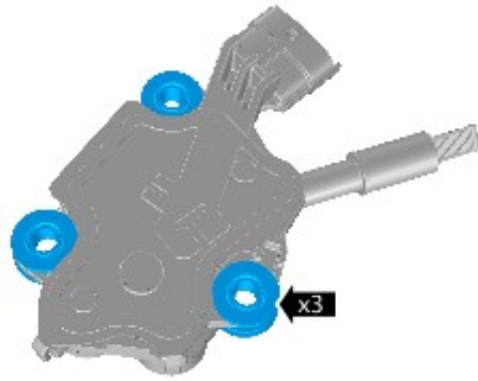


E179120

If a new pump is being installed this step is not required.

8.

CAUTION:

Discard the components.

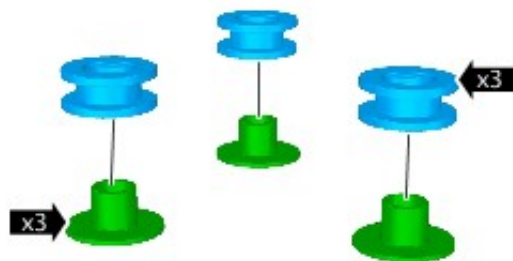


E179122

If a new pump is being installed this step is not required.

9.

CAUTIONS:

- Using a suitable tool, remove the seals.
- Discard the components.

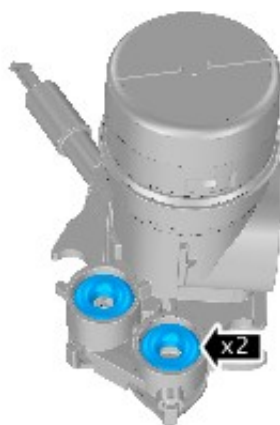

E179123

If a new pump is being installed this step is not required.

INSTALLATION


1.

CAUTIONS:

- Lubricate seals with deionized water.
- Make sure that the components are clean, dry and free from corrosion and foreign material.

NOTE:

Install new seals.

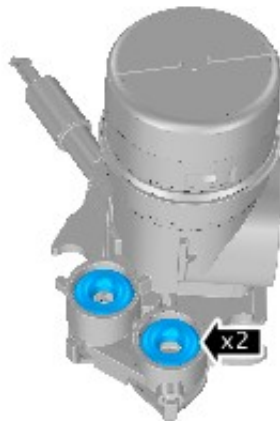

E179123


If a new pump is being installed this step is not required.

Renew Part: [Diesel exhaust fluid injection pump seals](#).

2.

CAUTION:

Make sure that new components are installed.

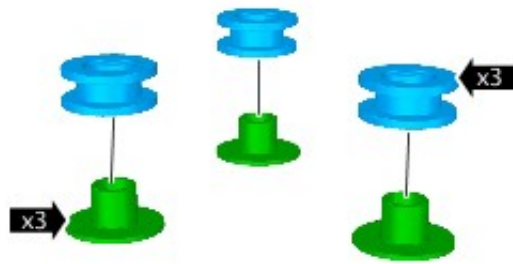



E179122

If a new pump is being installed this step is not required.

3.

CAUTION:

Install the new sleeves and isolators to the Diesel Exhaust Fluid pump.

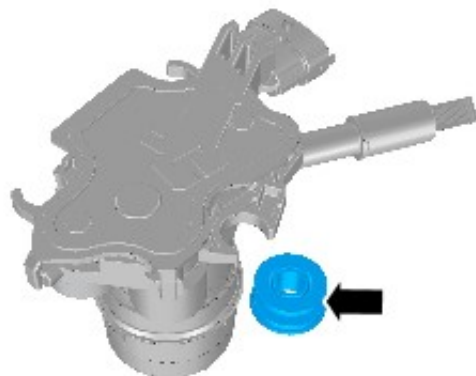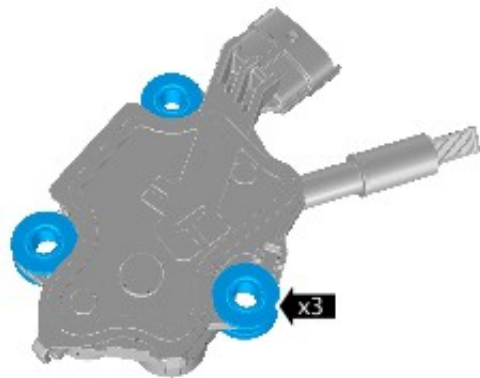

E179120


If a new pump is being installed this step is not required.

Renew Part: [Sleeve and isolator assemblies](#).

4.

CAUTIONS:


- Make sure that new bolts are installed.
- The bolts must be re-torqued after 2 minutes.

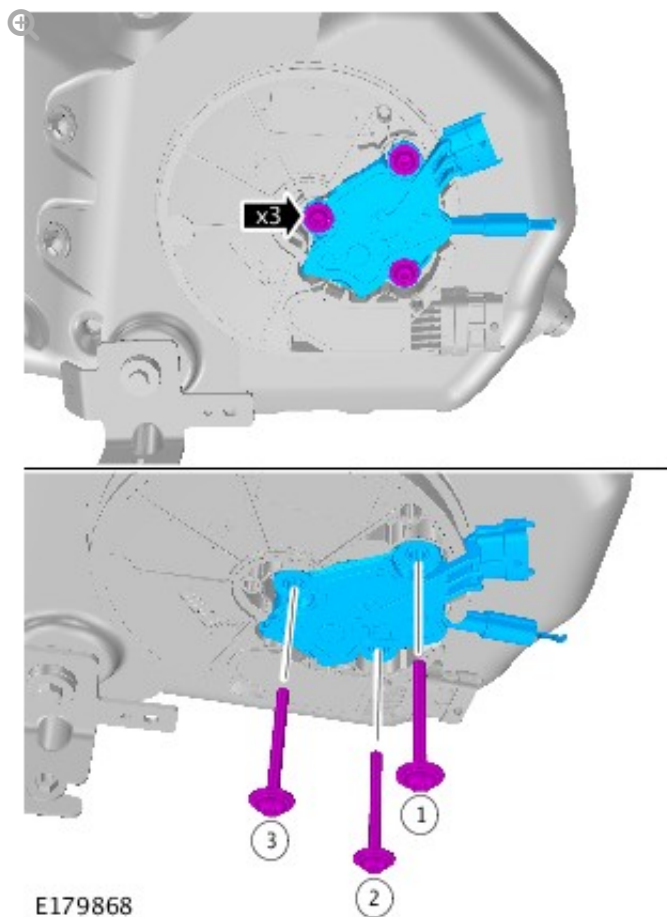

Renew Part: *Diesel exhaust fluid injection pump bolts.*

Torque: 6 Nm


5.

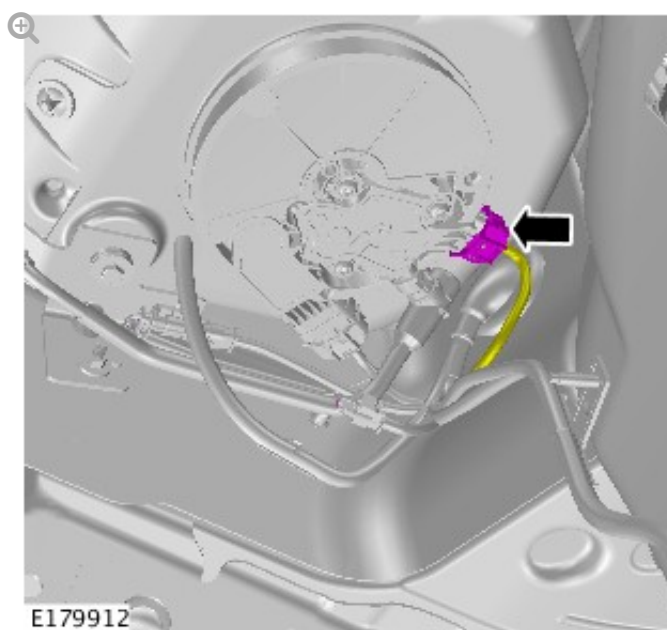


6.

CAUTION:

Lubricate with deionized water.

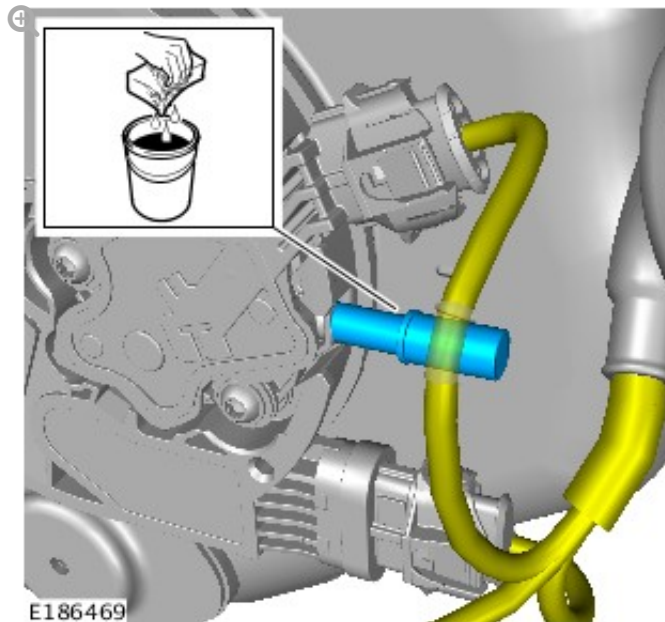

7.

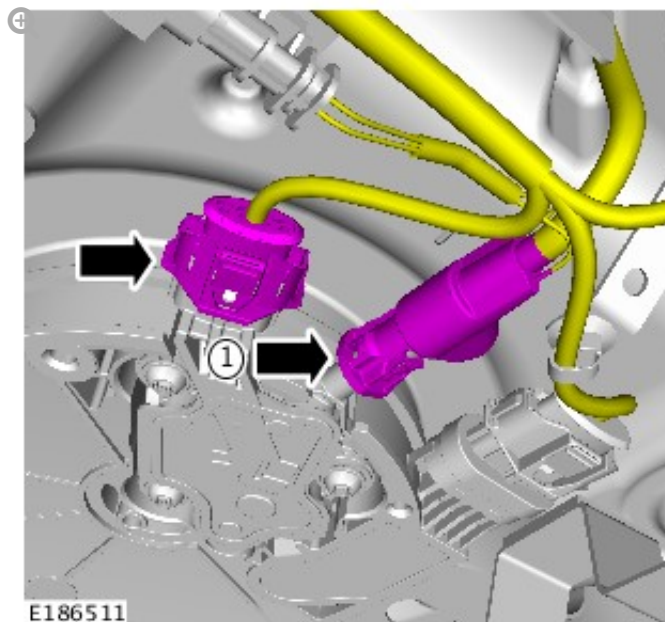

The quick connector is pushed in an axial direction onto the SAE spigot, until you hear a audible click.

8. Refer to: [Diesel Exhaust Fluid Tank Drain and Refill](#) (303-08A Engine

Emission Control - TDV6 3.0L Diesel - Gen 2/TDV6 3.0L Diesel,
General Procedures).