

2016.0 RANGE ROVER (LG), 303-08

ENGINE EMISSION CONTROL - TDV6 3.0L DIESEL - GEN 2/TDV6 3.0L DIESEL

RIGHT EXHAUST GAS RECIRCULATION VALVE (G1509511)

REMOVAL AND INSTALLATION

17.45.17	VALVE - EGR - RH - RENEW	3000 CC, TDV6	1.9	USED WITHINS	+
----------	--------------------------------	------------------	-----	-----------------	---

REMOVAL


NOTES:

- Removal steps in this procedure may contain installation details.
- Some illustrations may show the engine removed for clarity.
- Make sure that all openings are sealed.


1. Refer to: [Specifications](#) (414-00 Battery and Charging System - General Information, Specifications).
2. Refer to: [Cooling System Partial Draining and Vacuum Filling](#) (303-03F Engine Cooling - TDV8 4.4L Diesel, General Procedures).
3. Refer to: [Secondary Bulkhead Centre Panel - TDV6 3.0L Diesel](#) (501-02 Front End Body Panels, Removal and Installation).

4. Refer to: [Right Exhaust Gas Recirculation Valve Outlet Tube \(303-08A Engine Emission Control - TDV6 3.0L Diesel - Gen 2/TDV6 3.0L Diesel, Removal and Installation\)](#).


5.

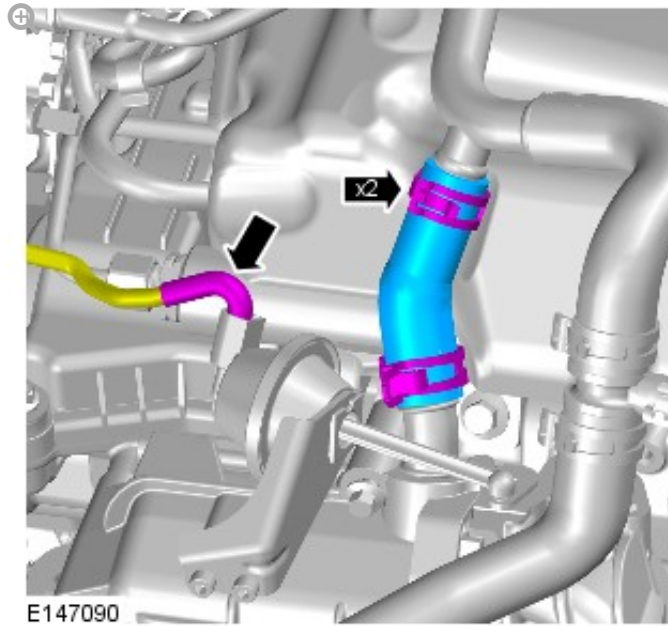

6.

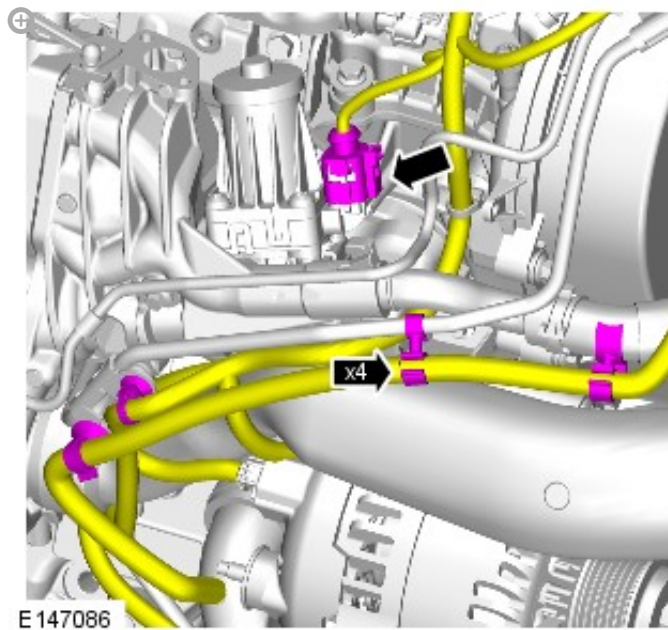

7.

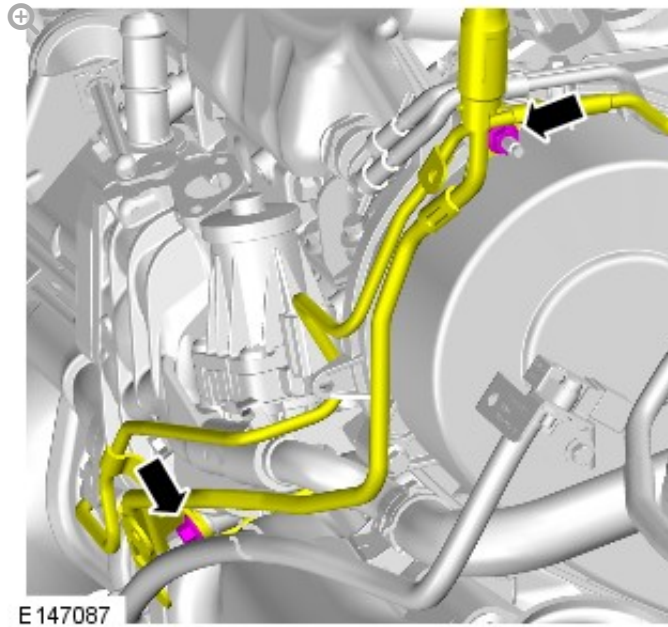


Torque: 8 Nm

8.

NOTE:

If equipped.

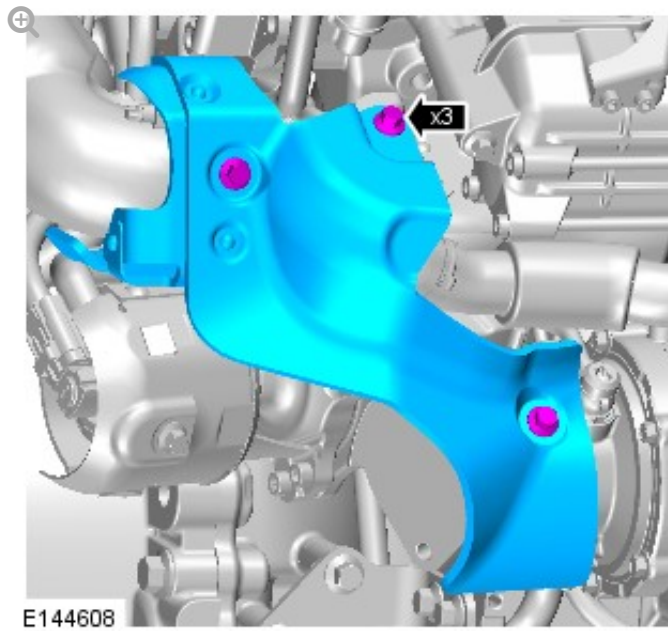


Torque: 10 Nm

9.


NOTE:

If equipped.

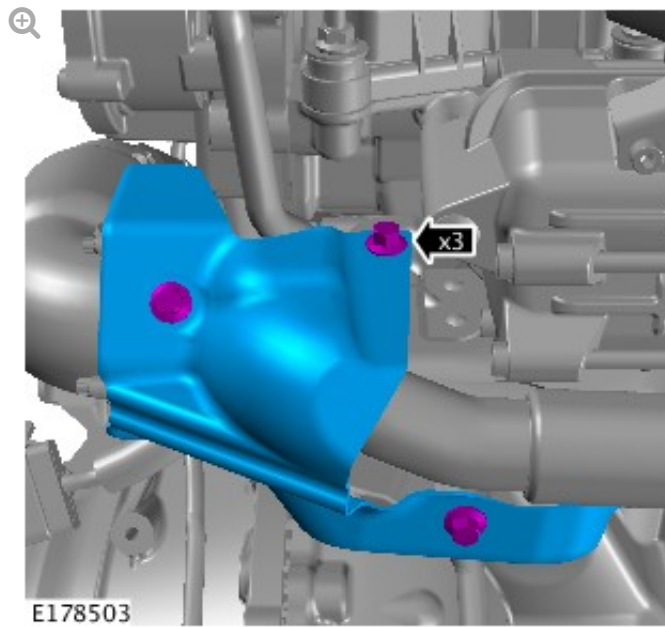


Torque: 10 Nm

10.

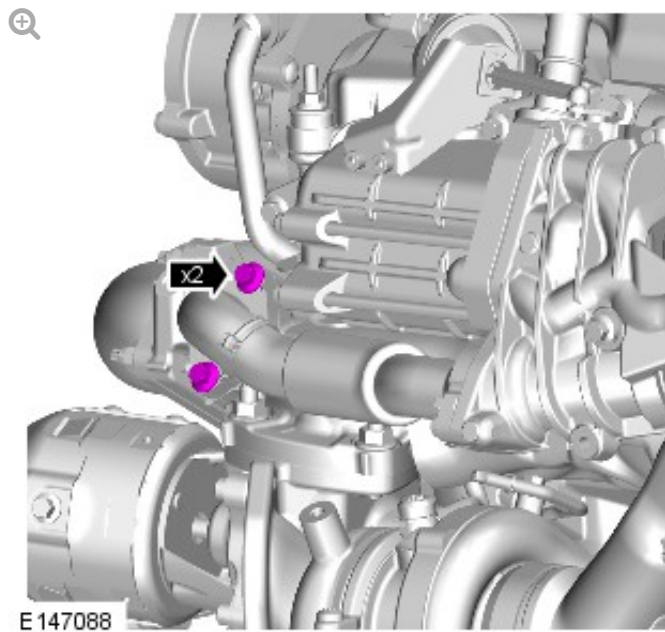

Torque: 10 Nm


11.

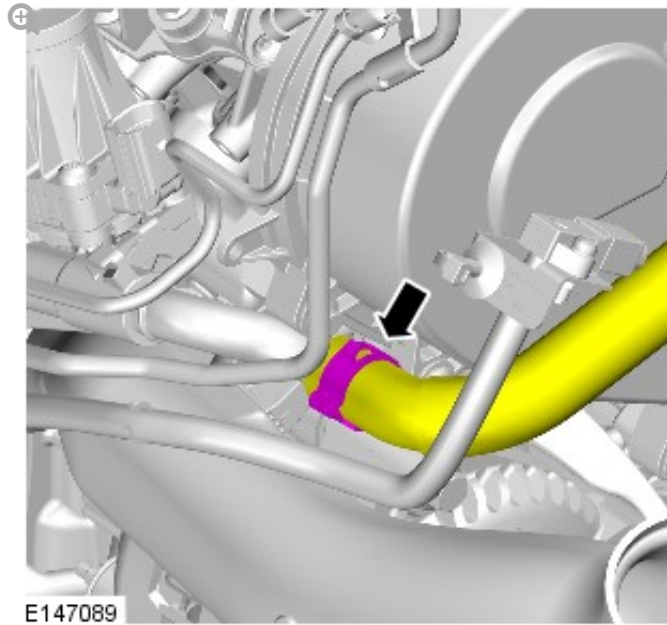

12.

NOTE:

Install a new gasket.

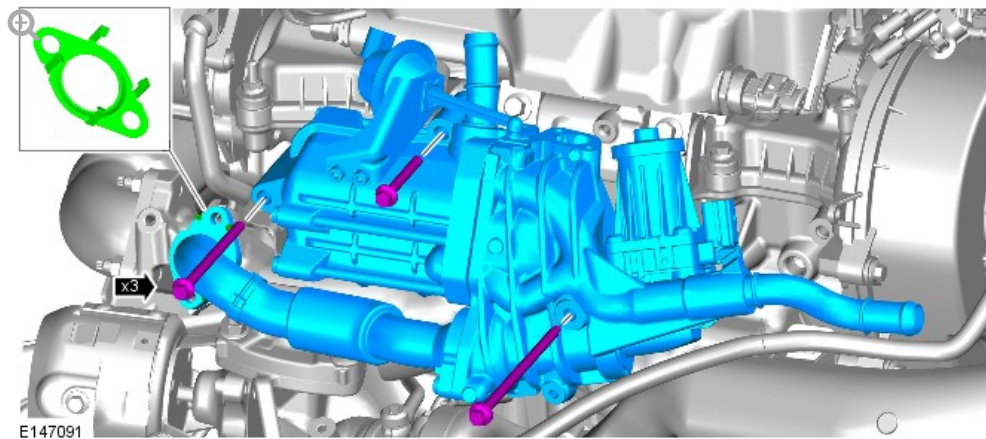

Torque: 10 Nm

INSTALLATION

1. To install reverse the removal procedure.
2. If a new unit is installed, configure using the approved diagnostic

tool.