

PUBLISHED: 15-AUG-2017
2015.0 RANGE ROVER (LG), 303-08

ENGINE EMISSION CONTROL - TDV8 4.4L DIESEL

CRANKCASE VENT OIL SEPARATOR

(G1509515)

REMOVAL AND INSTALLATION

17.10.04	SEPARATOR - OIL - RENEW	4400 CC, TDV8, WITHOUT FUEL FIRED BOOSTER HEATER	4.5	USED WITHINS
----------	-------------------------------	--	-----	-----------------

PART(S)

STEP	REPLACE PART / RENEW PART	PART NAME	
Installation Step 1	Renew Part	Exhaust gas recirculation gasket	1
Installation Step 8	Renew Part	EGR cooler to EGR valve gasket	1
Installation Step 9	Renew Part	EGR pipe to exhaust manifold gasket	1
Installation Step 12	Renew Part	Oil cooler seal	1
Installation Step 18	Renew Part	Thermostat housing seal(s)	1
Installation Step 19	Renew Part	Thermostat seal	1

REMOVAL



NOTES:


- Some variation in the illustrations may occur, but the essential information is always correct.
- Engine shown removed for clarity.

1.

Remove the right fuel rail.


Refer to: [Right Fuel Rail](#) (303-04F Fuel Charging and Controls - TDV8 4.4L Diesel, Removal and Installation).

2.

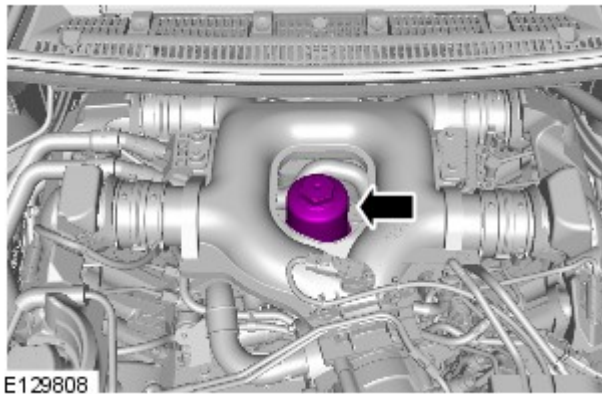

- Loosen the oil filter cover 3 turns and allow the engine oil to drain.

3.

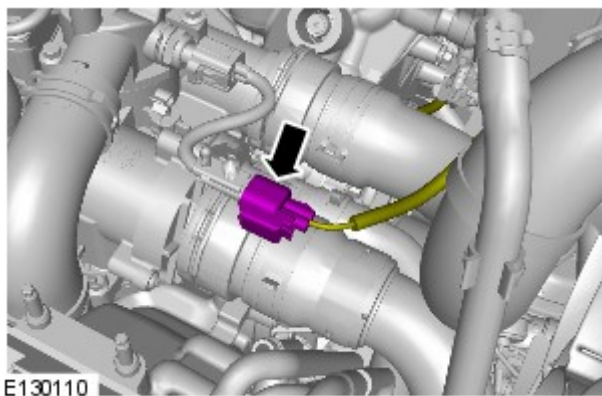


4.



CAUTIONS:

- Be prepared to collect escaping coolant.
- Make sure that all openings are sealed. Use new blanking caps.

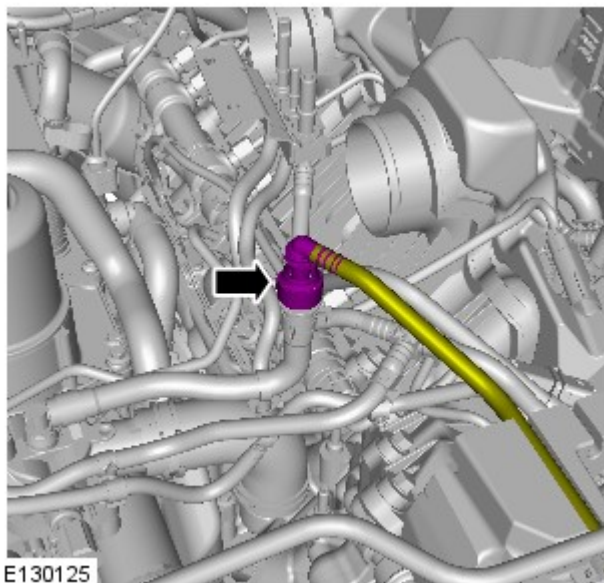

5.




CAUTIONS:

- Be prepared to collect escaping coolant.
- Make sure that all openings are sealed. Use new blanking caps.



NOTE:

Remove and discard the O-ring seal.

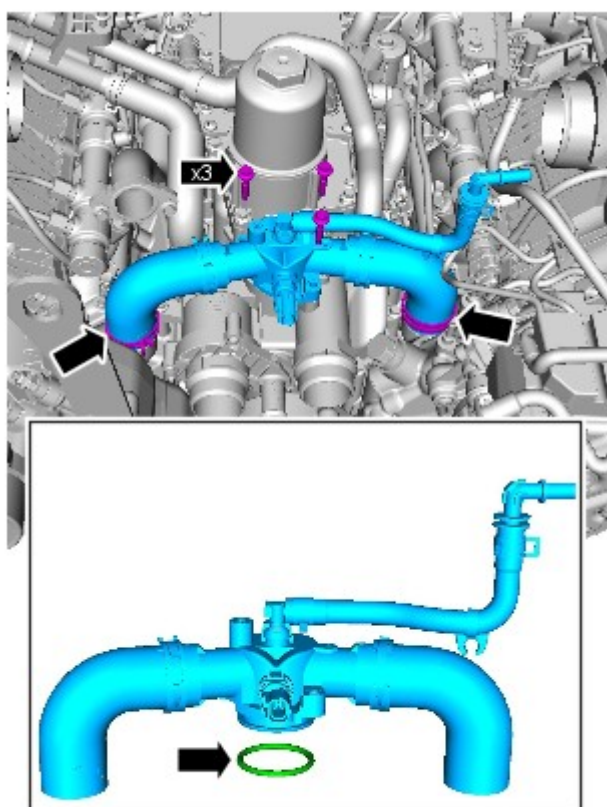

E145026


6.

⚠ CAUTIONS:

- Clamp the hoses to minimize coolant loss.
- Be prepared to collect escaping coolant.
- Make sure that all openings are sealed. Use new blanking caps.


⚠ NOTE:

Remove and discard the O-ring seal.

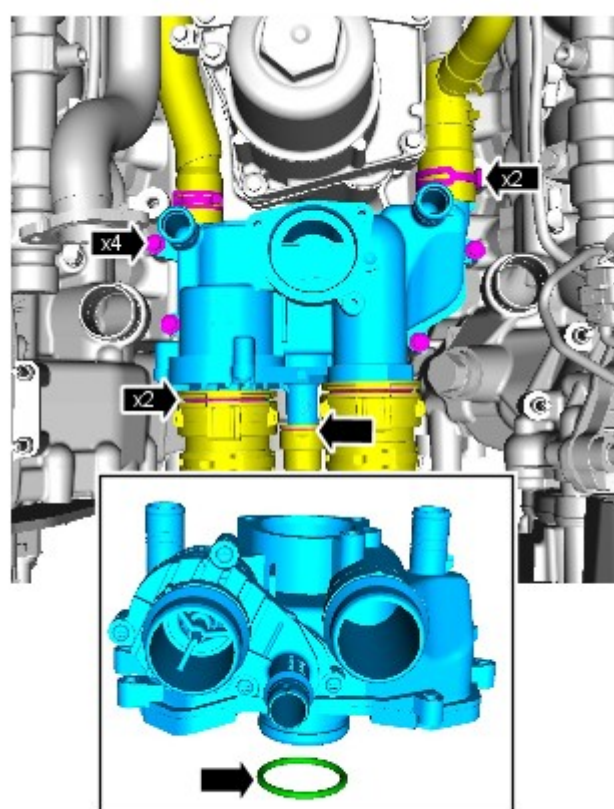


E145027

7.

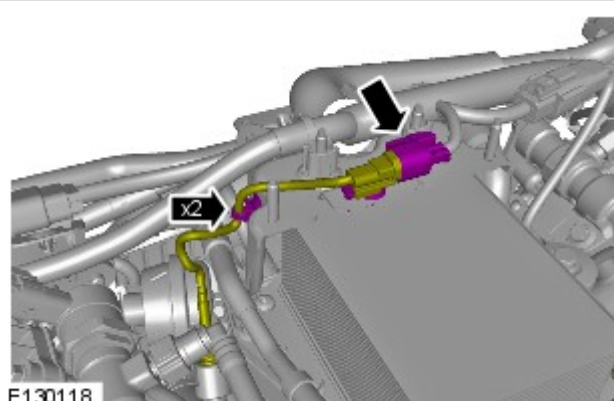

E130118

8.

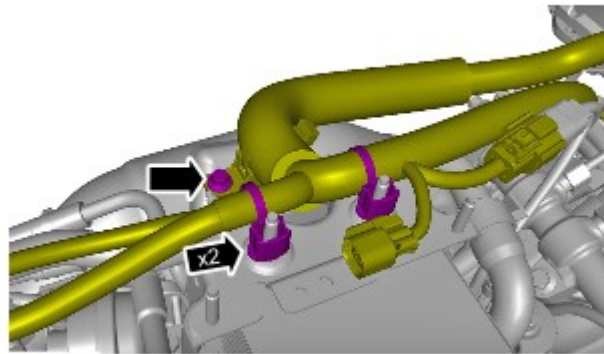


E130128

9.


⚠ CAUTION:

Make sure that all openings are sealed. Use new blanking caps.

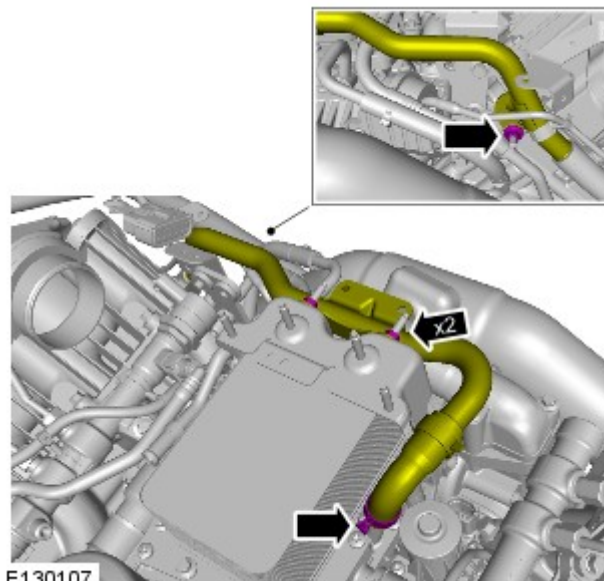

E130107


10.

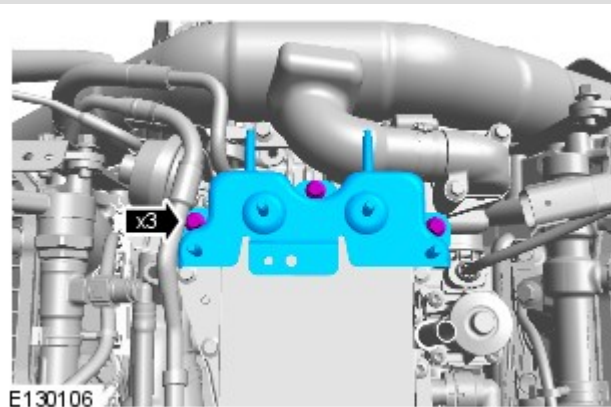

11.

⚠ CAUTIONS:

- Be prepared to collect escaping oil.
- Make sure that all openings are sealed. Use new blanking caps.
- Inspect the O-rings, replace if damaged.

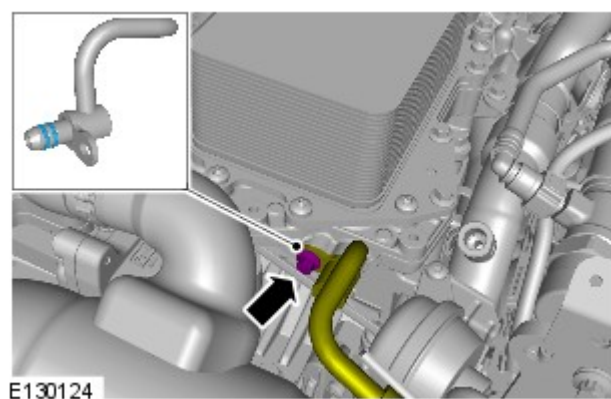



12.

⚠ CAUTIONS:

- Be prepared to collect escaping oil.
- Be prepared to collect escaping coolant.


⚠ NOTE:

Remove and discard the gasket.

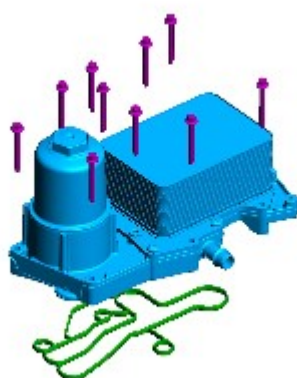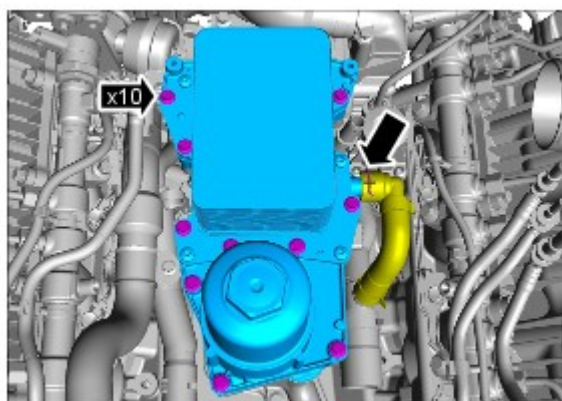


E130123

13.

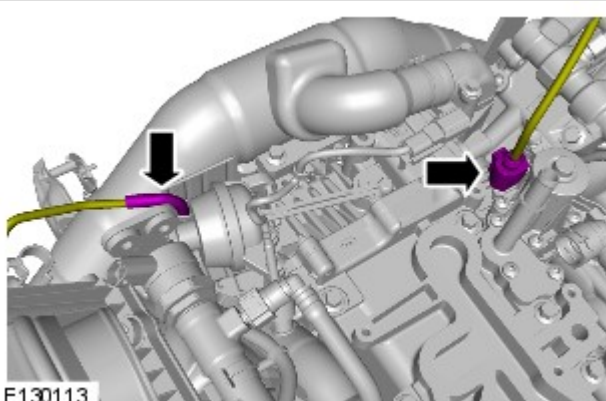

E130113

14.

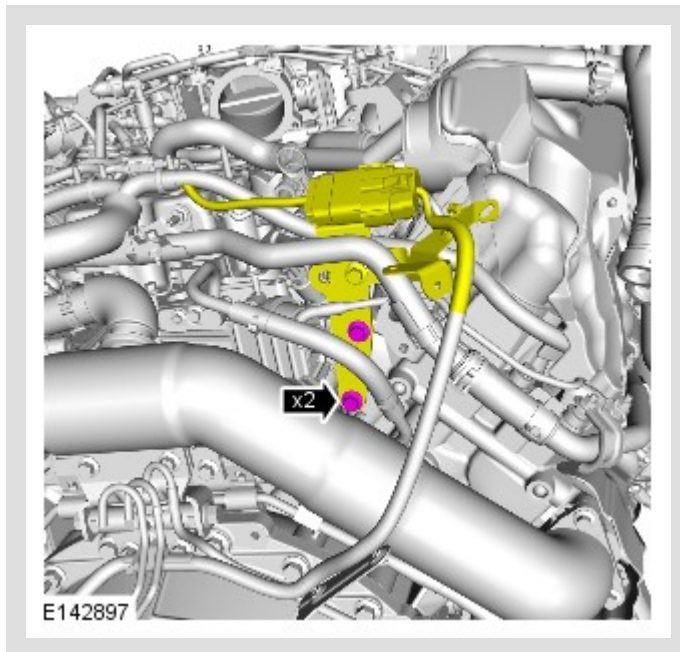



15.

⚠ CAUTION:

Make sure that all openings are sealed. Use new blanking caps.

⚠ NOTE:

Remove and discard the gasket.

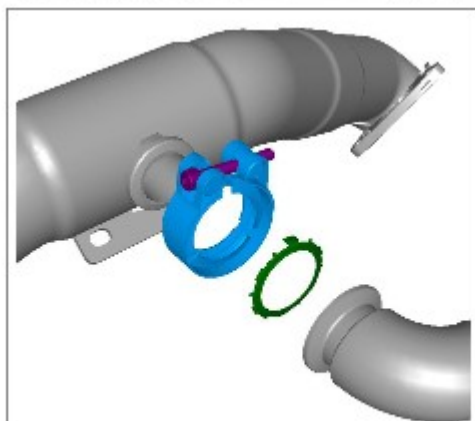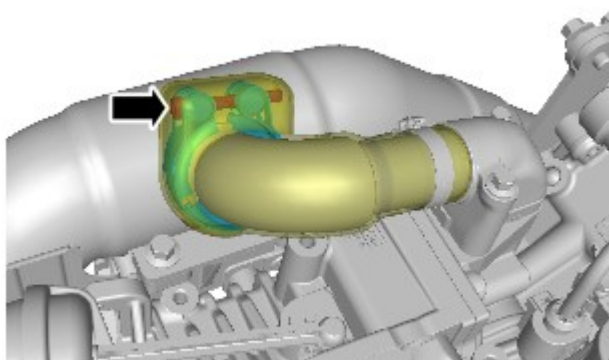


E130116

16.




NOTE:


Remove and discard the gasket.

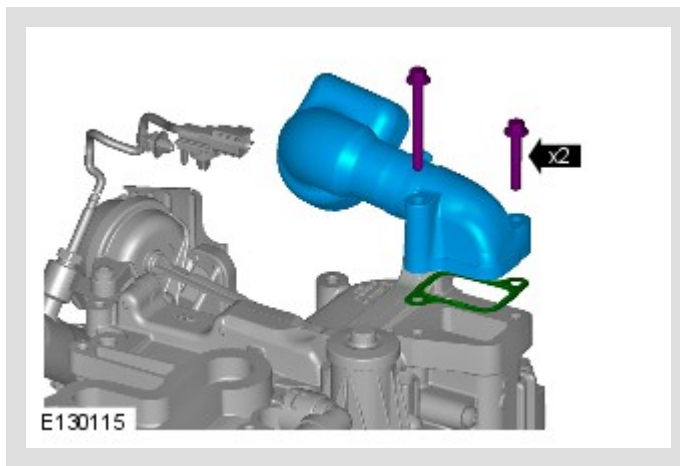

17.

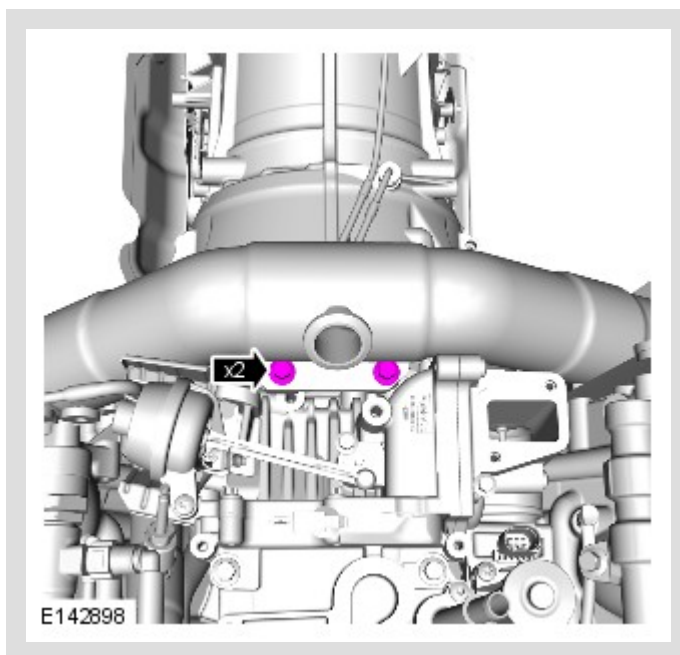


18.

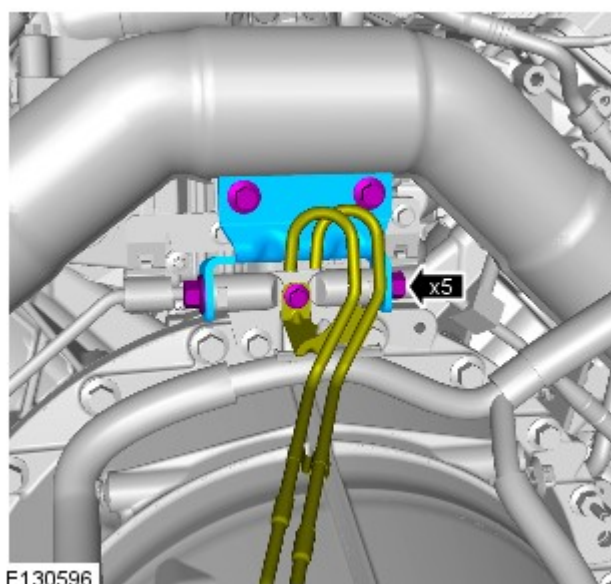


E130596

19.

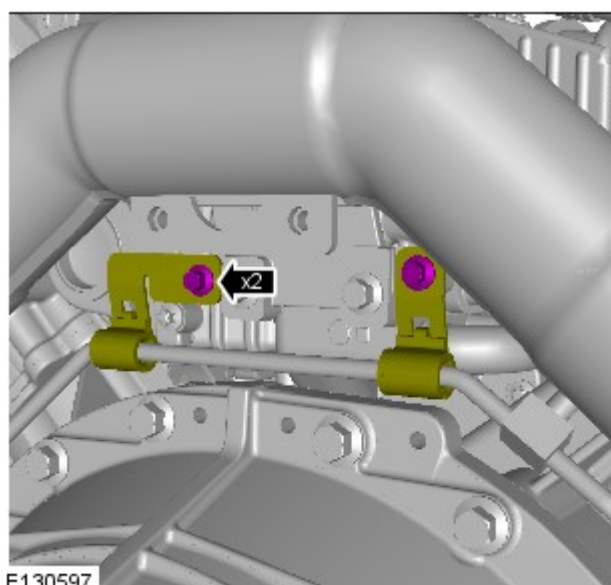


E130597

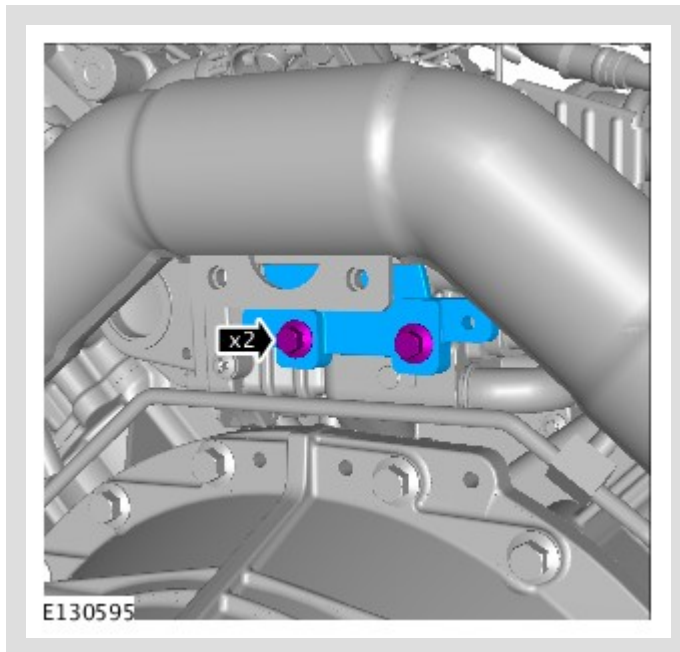

⚠ CAUTIONS:


- Be prepared to collect escaping oil.
- Be prepared to collect escaping coolant.

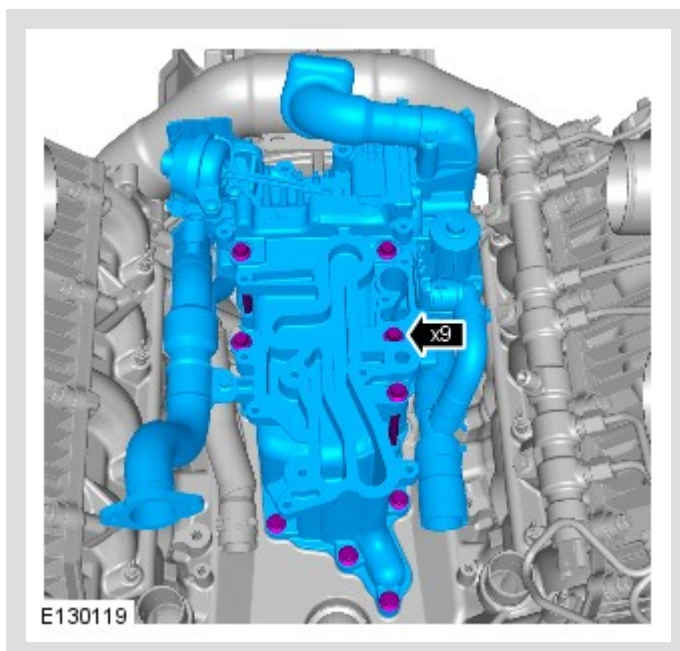

22.

⚠ CAUTION:

Inspect the seal, replace if damaged.

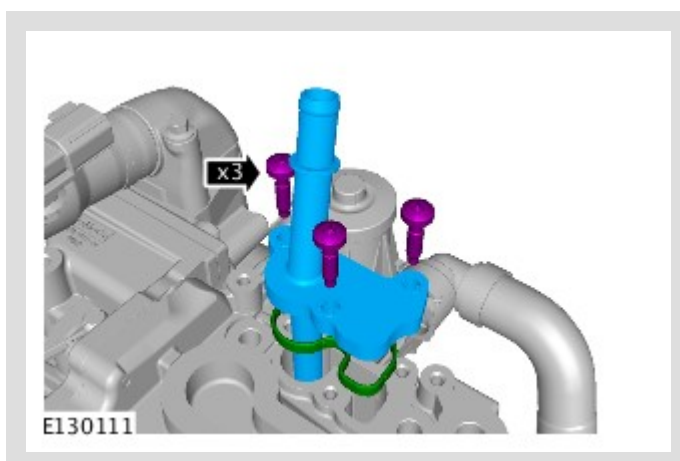

Do not disassemble further if removed for access only

23.




CAUTION:

Inspect the seal, replace if damaged



NOTE:

Remove and discard the gasket.

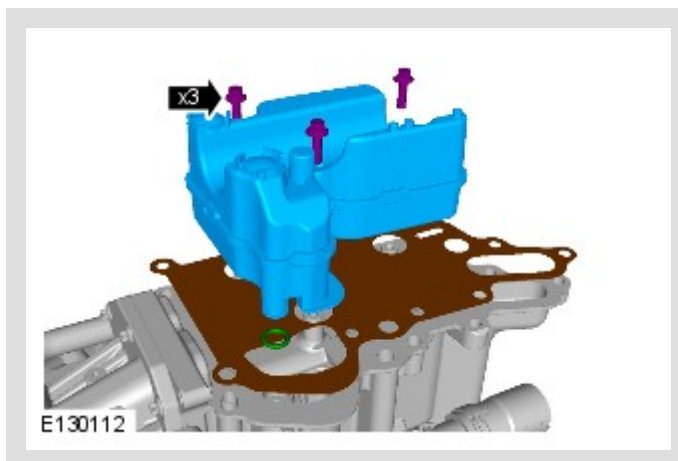

INSTALLATION

1.




CAUTION:

Make sure that the mating faces are clean and free of corrosion and foreign material.



NOTE:

Install a new gasket.

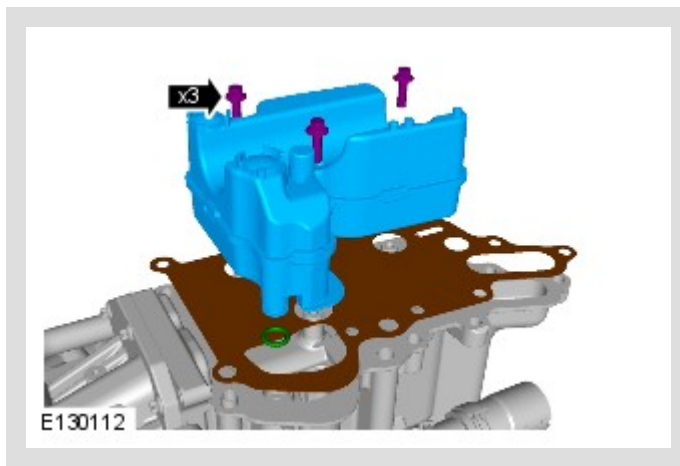


Renew Part: *Exhaust gas recirculation gasket* : 1 .

Torque: 5 Nm

2.

⚠ CAUTION:

Make sure that the mating faces are clean and free of corrosion and foreign material.

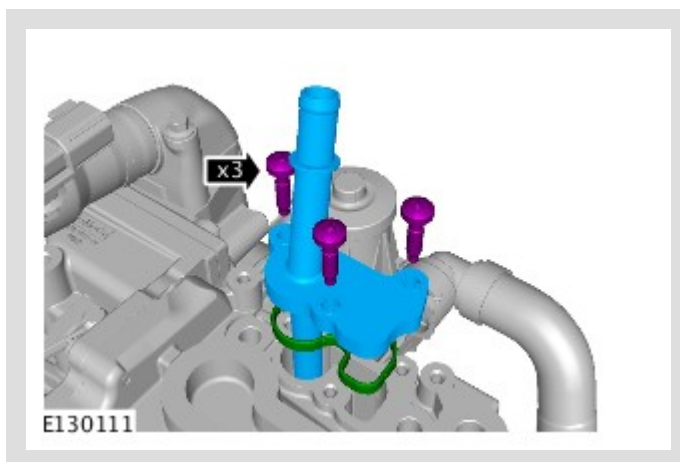


Torque: 10 Nm

3.


⚠ CAUTIONS:

- Make sure that the mating faces are clean and free of corrosion and foreign material.
- Install all the bolts finger tight before final tightening.

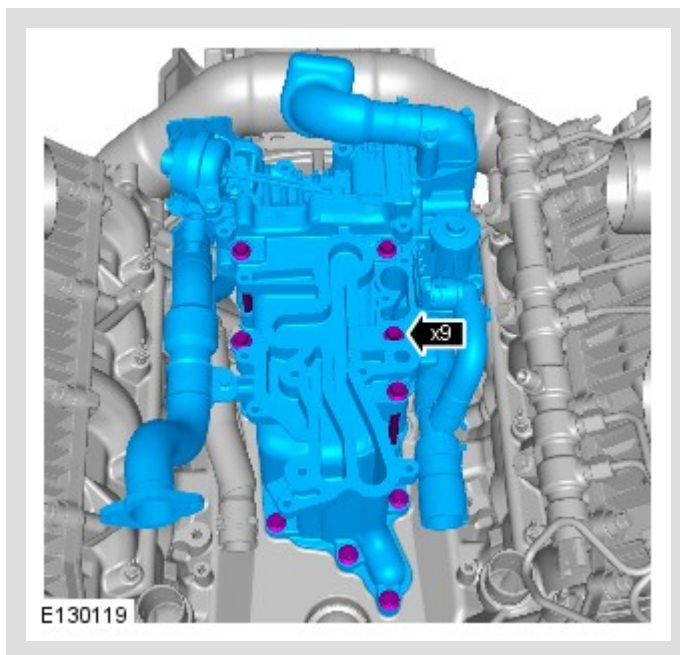


Torque: 23 Nm

4.

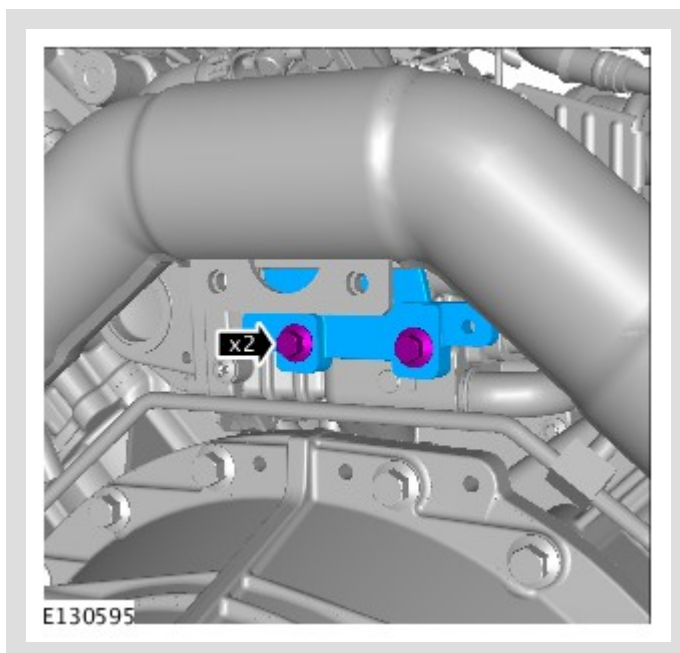

Torque: 23 Nm

5.

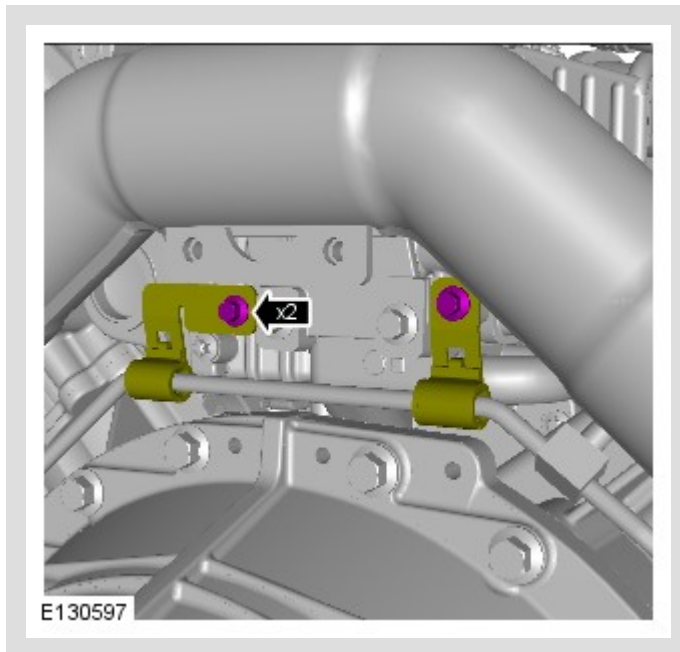


Torque: 10 Nm

6.

⚠ CAUTION:


Install all the bolts finger tight before final tightening.

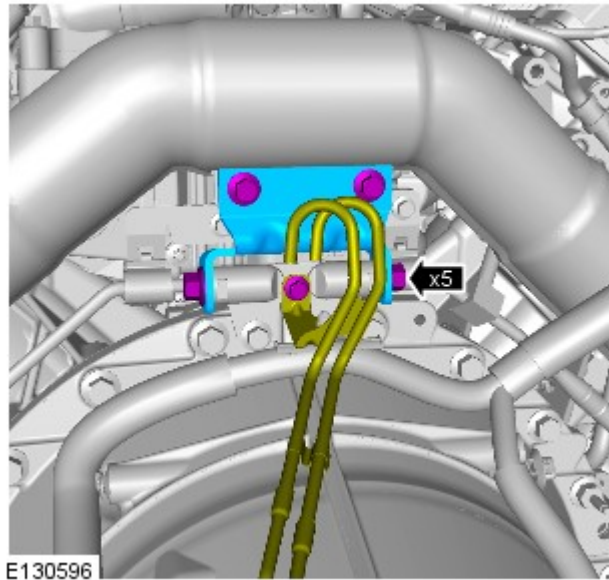

Torque:

M8 23 Nm

M6 10 Nm

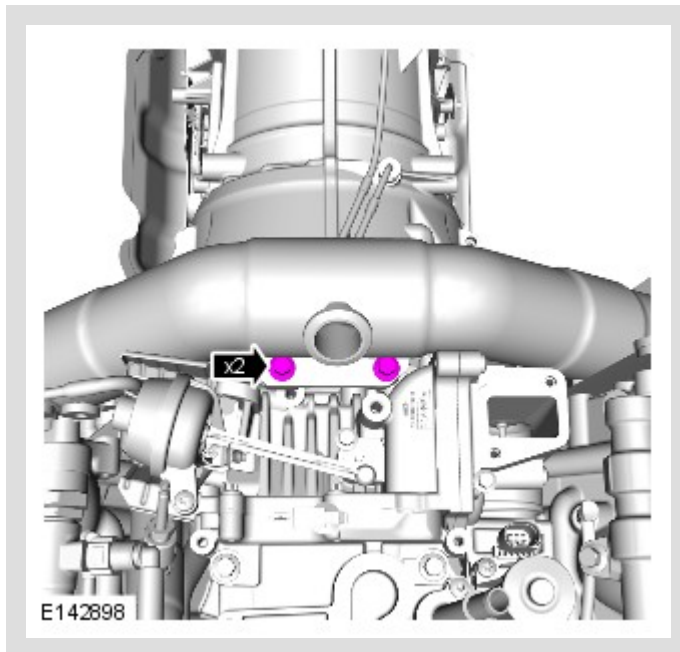


Torque: 23 Nm

8.



NOTE:

Install a new gasket.

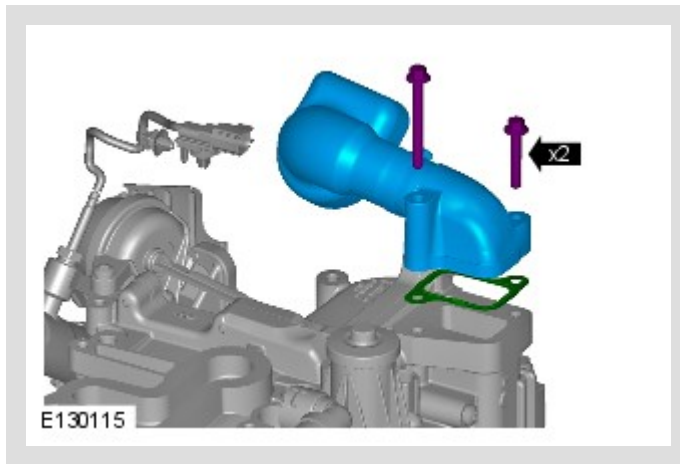

Renew Part: *EGR cooler to EGR valve gasket* : 1 .


Torque: 10 Nm

9.




NOTES:

- Remove and discard the blanking caps.
- Install a new gasket.

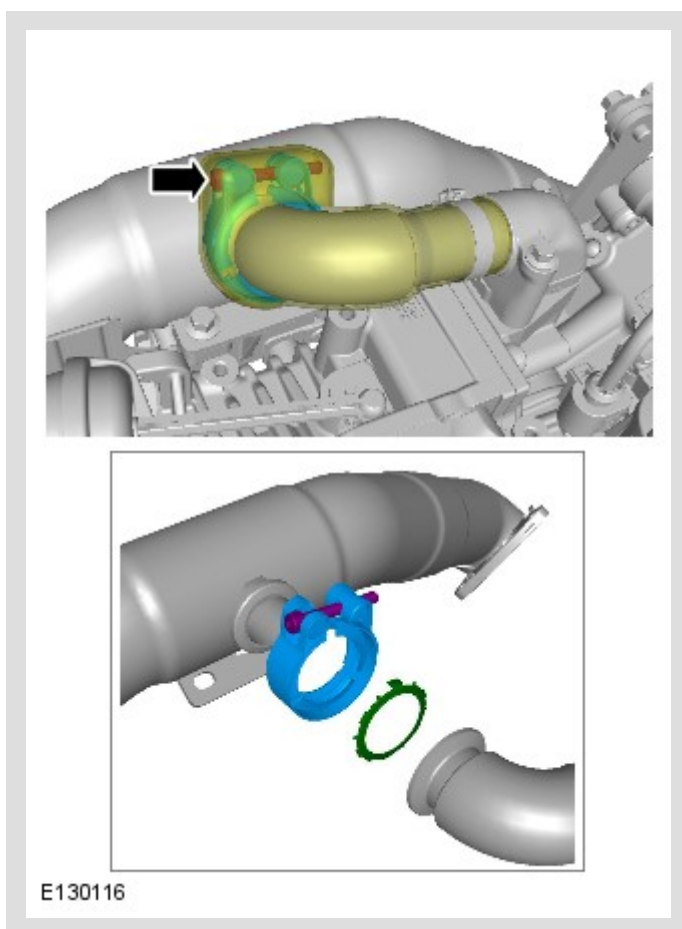


Renew Part: *EGR pipe to exhaust manifold gasket : 1 .*
Torque: 7 Nm

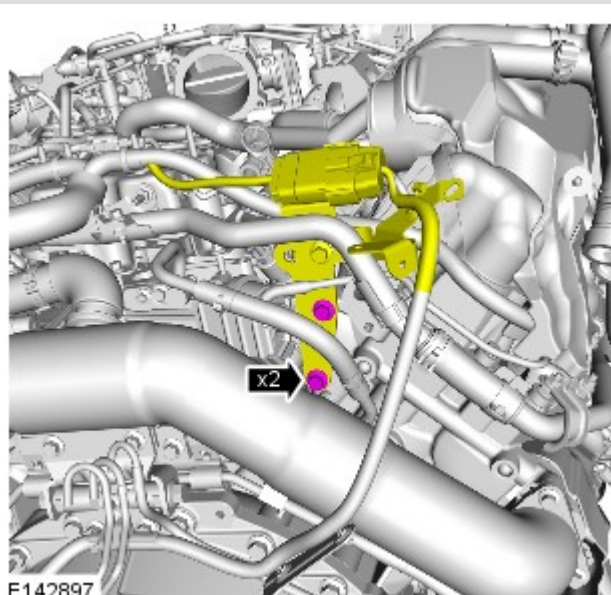

Torque: 25 Nm

11.

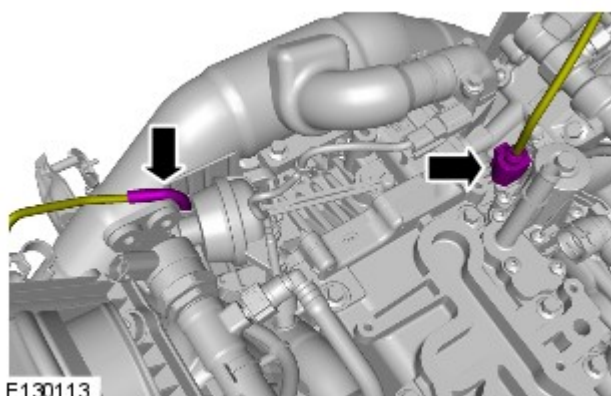



12.

⚠ **CAUTIONS:**

- Make sure that the surface is clean and free of foreign material.
- Install all the bolts finger tight before final tightening.

⚠ **NOTE:**

Install a new gasket.

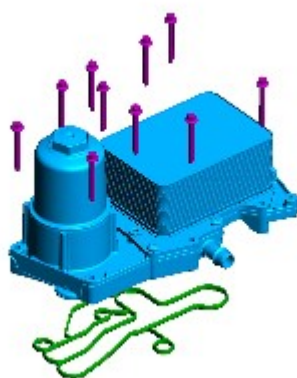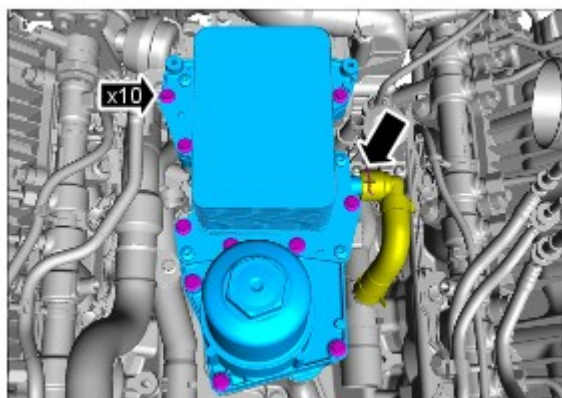

E130123

Renew Part: *Oil cooler seal* : 1 .

Torque: 13 Nm


13.

⚠ CAUTION:

Make sure that the mating faces are clean and free of corrosion and foreign material.

△ NOTE:

Remove and discard the blanking caps.

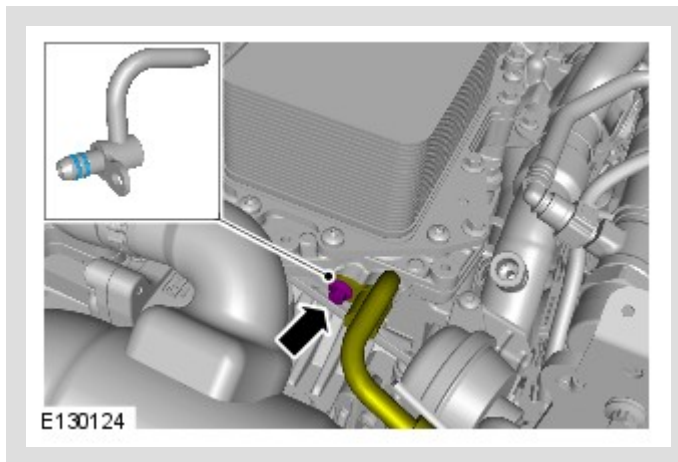


Torque: 10 Nm

14.



CAUTION:

Install all the bolts finger tight before final tightening.

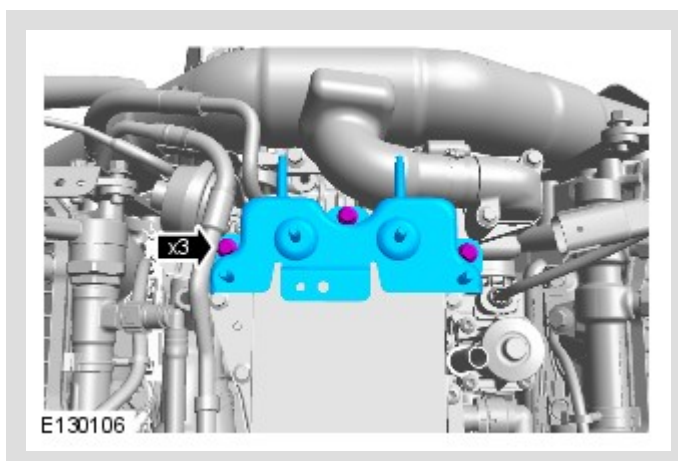


Torque: 10 Nm

15.




NOTE:

Remove and discard the blanking caps.

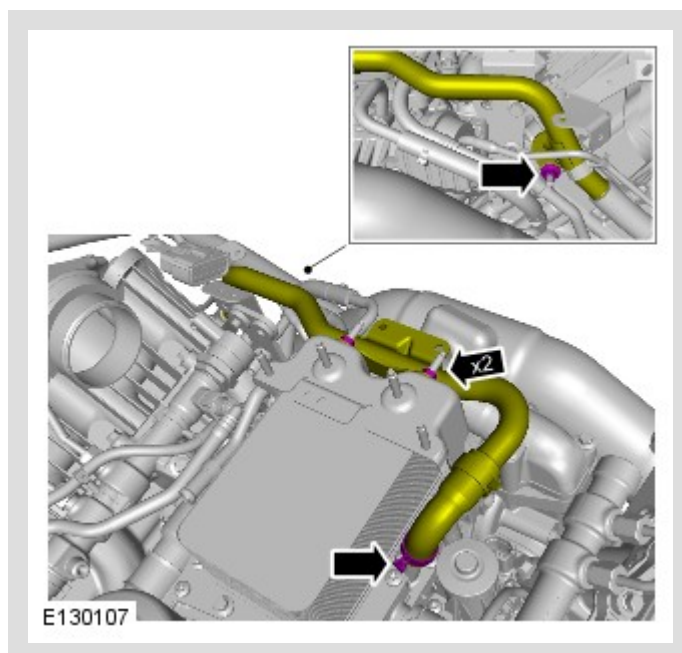


Torque: 10 Nm

16.

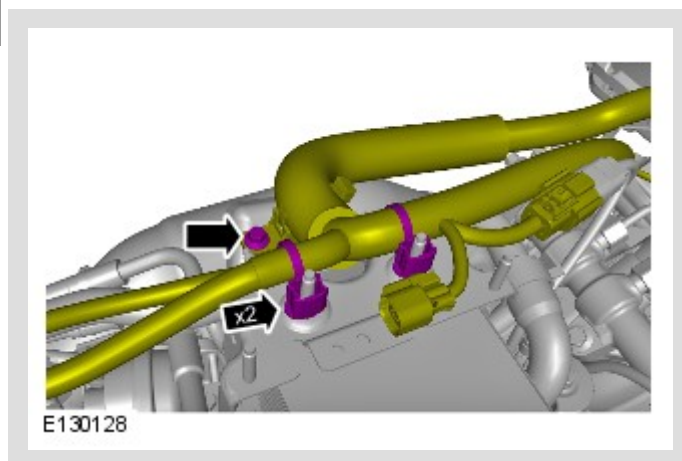

Torque: 10 Nm

17.

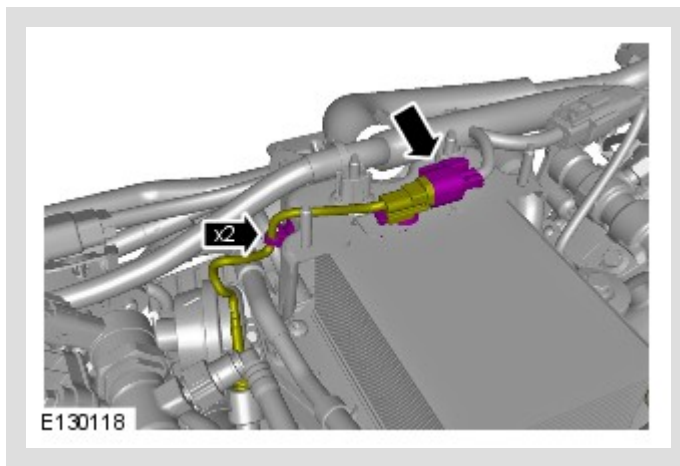

18.




CAUTION:

Install all the bolts finger tight before final tightening.



NOTES:

- Remove and discard the blanking caps.
- Install a new O-ring seal.

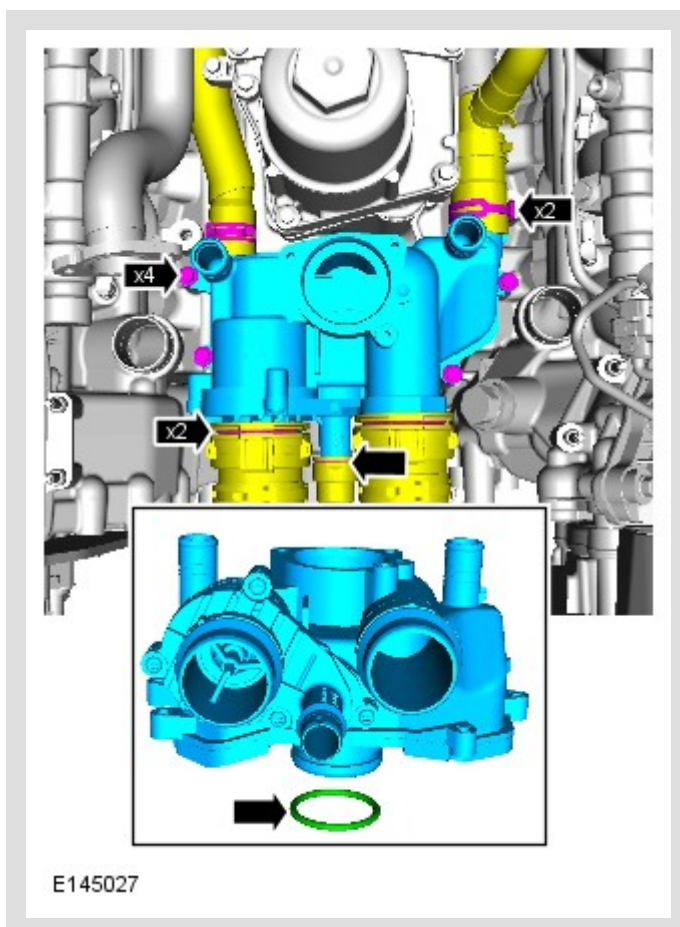

Renew Part: *Thermostat housing seal(s)* : 1 .

Torque: 10 Nm


19.

⚠ CAUTION:

Install all the bolts finger tight before final tightening.

△ NOTES:

- Remove and discard the blanking caps.
- Install a new O-ring seal.

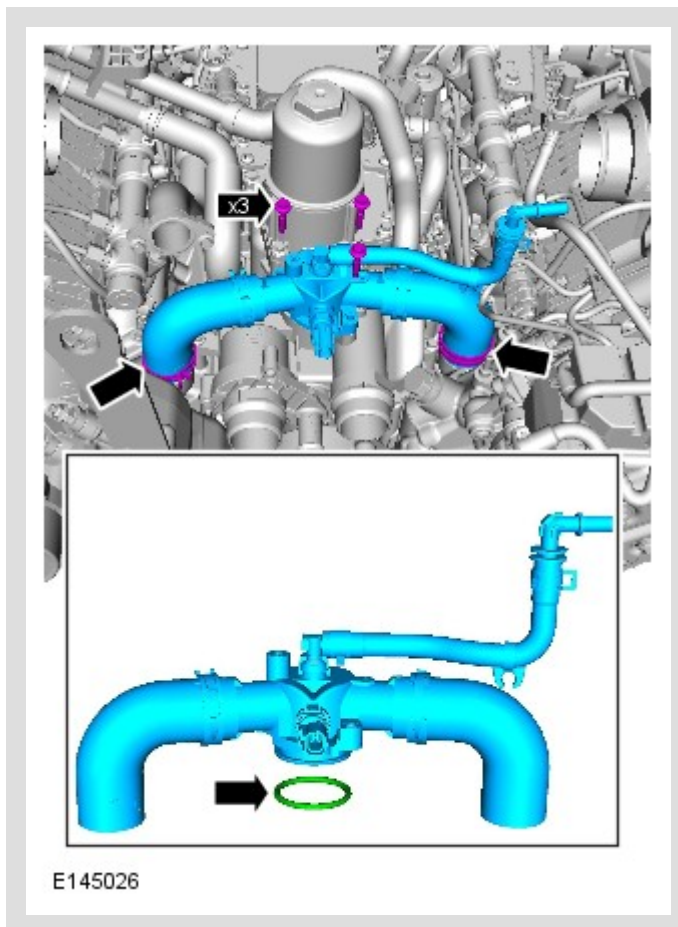

Renew Part: *Thermostat seal* : 1 .


Torque: 10 Nm

20.




NOTE:

Remove and discard the blanking caps.

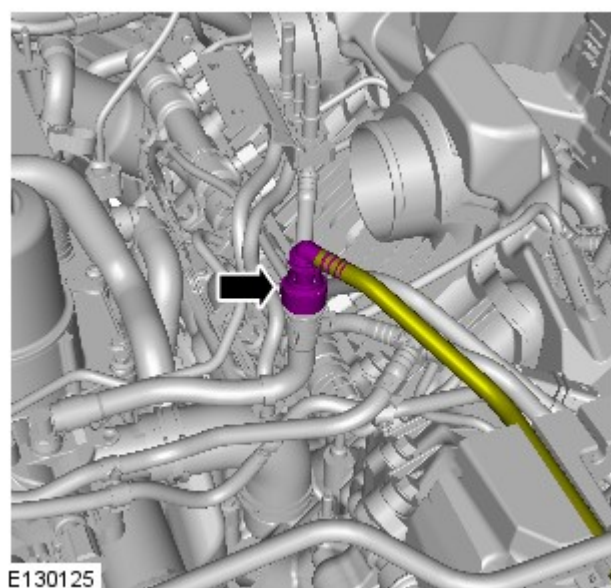


21.

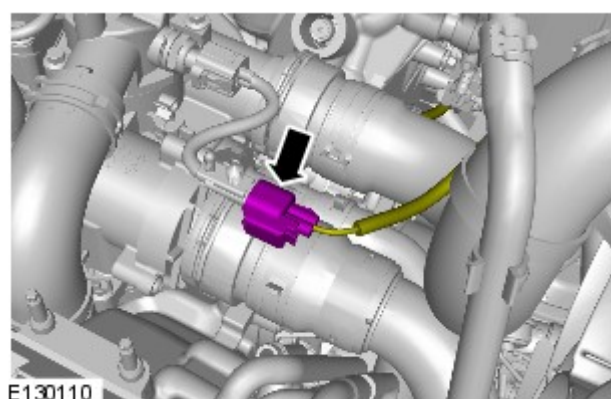

22.

⚠ CAUTION:

Tighten the component finger tight first.

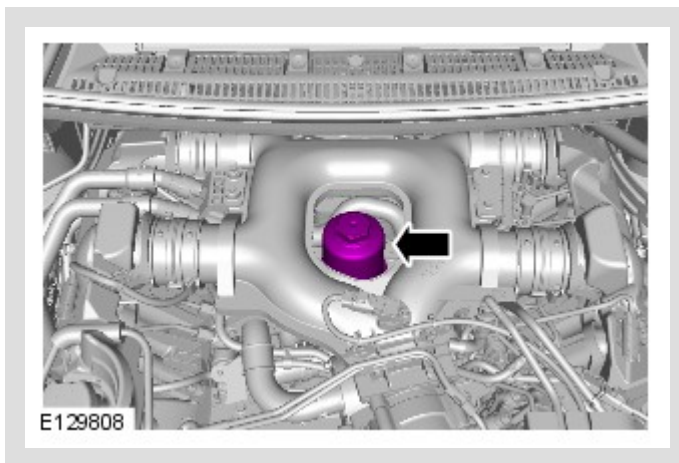

Torque: 35 Nm

-
23. Install the right fuel rail.
Refer to: [Right Fuel Rail](#) (303-04F Fuel Charging and Controls - TDV8 4.4L Diesel, Removal and Installation).

-
24. Check and top-up the engine oil.