

PUBLISHED: 18-JUN-2017
2015.0 RANGE ROVER (LG), 303-08

ENGINE EMISSION CONTROL - TDV8 4.4L DIESEL

EXHAUST GAS RECIRCULATION COOLER (G1509516)

REMOVAL AND INSTALLATION

17.45.40	COOLER - EGR - RENEW	4400 CC, TDV8, WITHOUT FUEL FIRED BOOSTER HEATER	4.7	USED WITHINS	
----------	----------------------------	--	-----	-----------------	--


PART(S)

STEP	REPLACE PART / RENEW PART	PART NAME	
Installation Step 13	Renew Part	Exhaust manifold to EGR valve gasket	1
Installation Step 14	Renew Part	Exhaust gas recirculation valve to crossover pipe gasket	1
Installation Step 17	Renew Part	Oil filter housing gasket	1
Installation Step 23	Renew Part	Water outlet connection O-ring seals	1
Installation Step 24	Renew Part	Water outlet connection O-ring seals	1

REMOVAL


1. Refer to: [Right Fuel Rail](#) (303-04F Fuel Charging and Controls - TDV8 4.4L Diesel, Removal and Installation).

- 2.

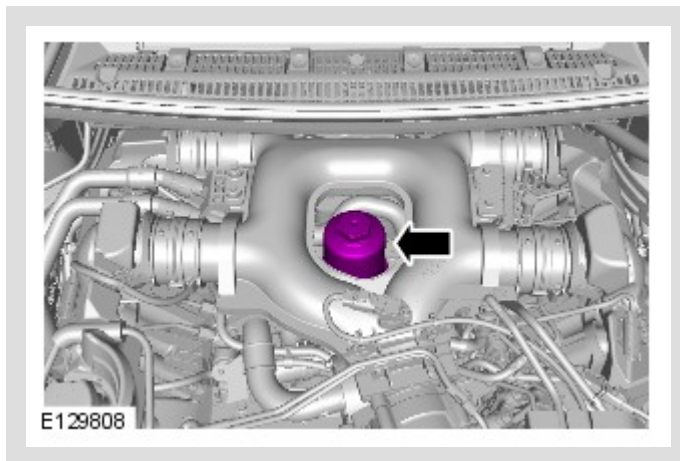

- Loosen the oil filter cover 3 turns and allow the engine oil to drain.


3.

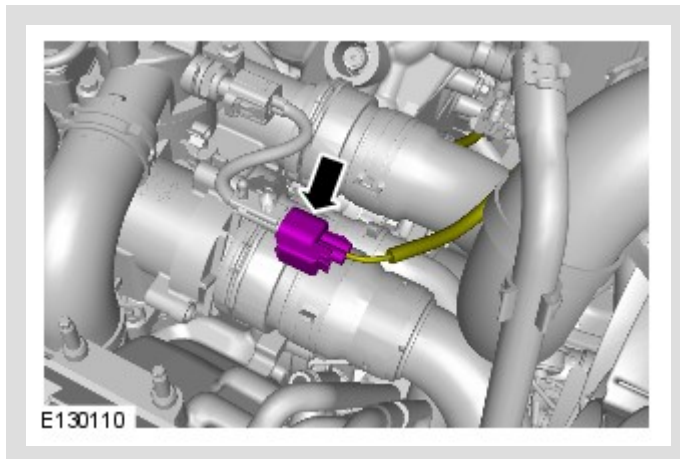

4.

⚠ CAUTIONS:

- Be prepared to collect escaping coolant.
- Before disconnecting any components, make sure the area is clean and free from foreign material. When disconnected all openings must be sealed.

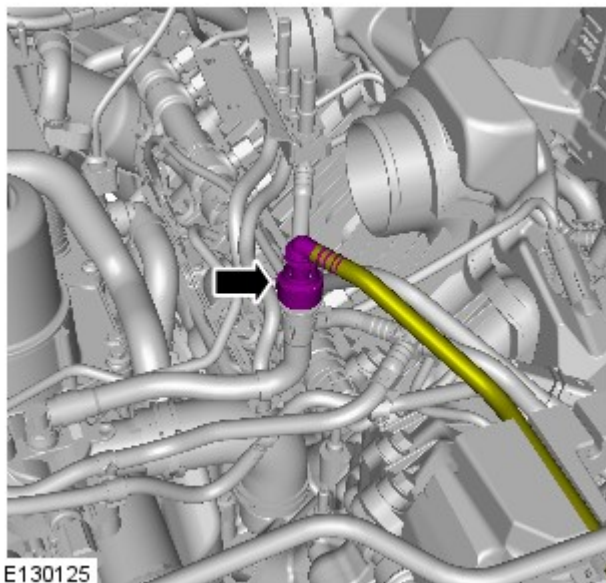


5.

⚠ CAUTIONS:

- Be prepared to collect escaping coolant.
- Before disconnecting any components, make sure the area is clean and free from foreign material. When disconnected all openings must be sealed.

⚠ NOTE:

Remove and discard the O-ring seal.

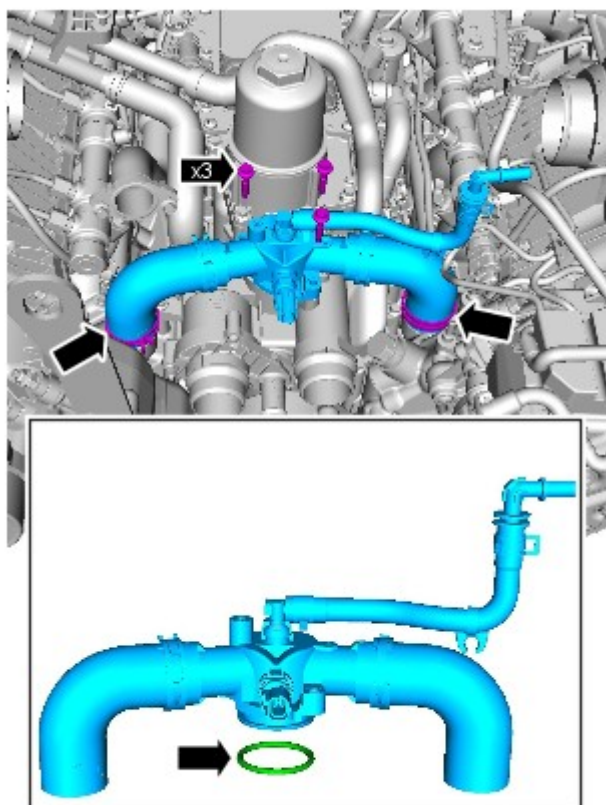

E145026

6.


⚠ CAUTIONS:

- Clamp the hoses to minimize coolant loss.
- Be prepared to collect escaping coolant.
- Before disconnecting any components, make sure the area is clean and free from foreign material. When disconnected all openings must be sealed.




NOTE:


Remove and discard the O-ring seal.

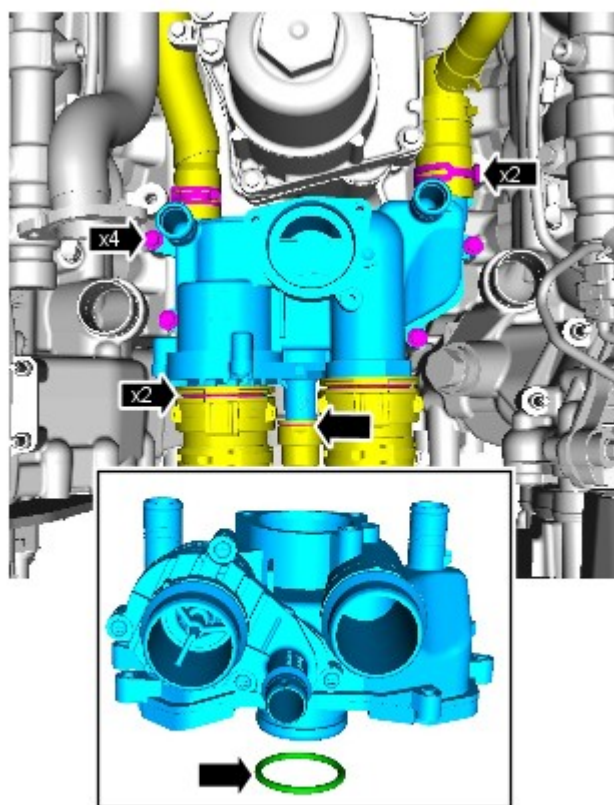

E145027

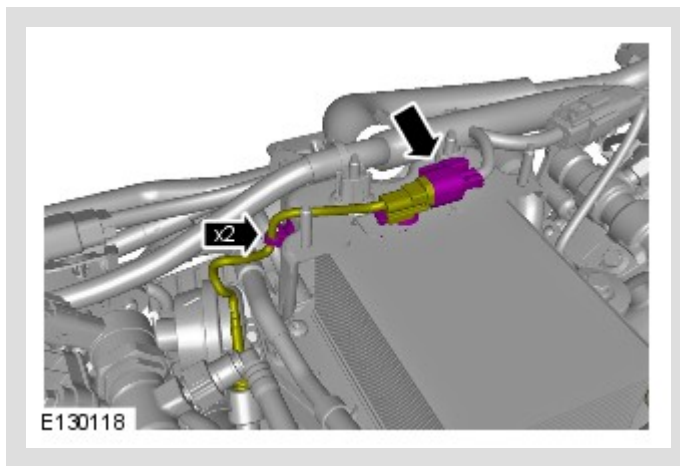


8.

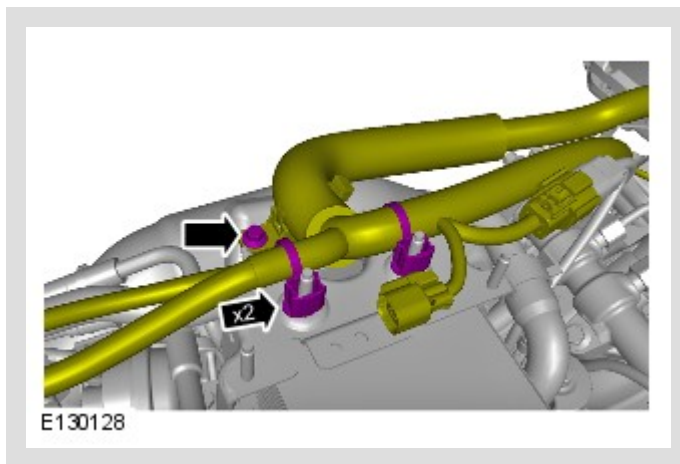


9.

⚠ CAUTION:

Before disconnecting any components, make sure the area is clean and free from foreign material. When disconnected all openings must be sealed.

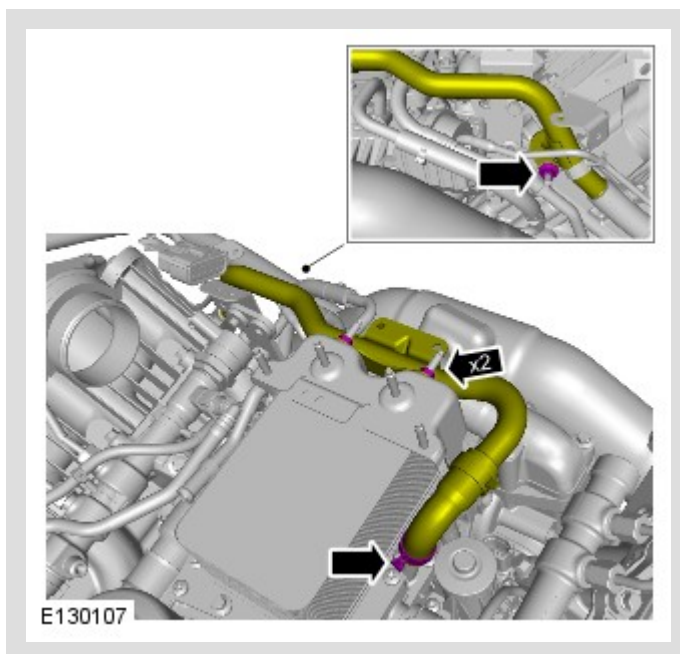

10.

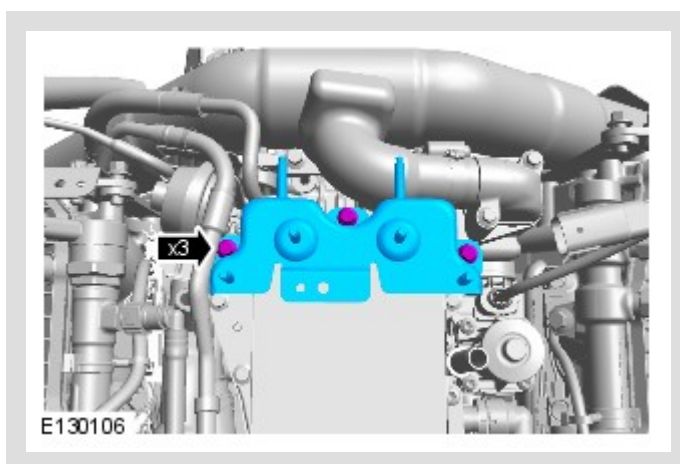


11.



CAUTIONS:

- Be prepared to collect escaping oil.

- Before disconnecting any components, make sure the area is clean and free from foreign material. When disconnected all openings must be sealed.
- Inspect the O-rings, replace if damaged.

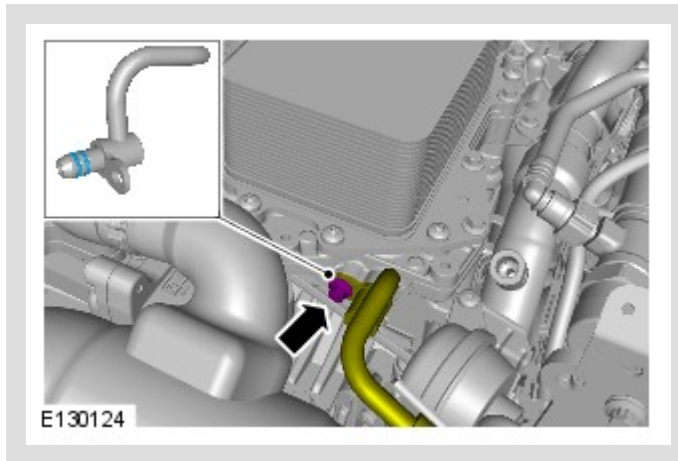

12.





CAUTIONS:

- Be prepared to collect escaping oil.
- Be prepared to collect escaping coolant.




NOTE:

Remove and discard the gasket.

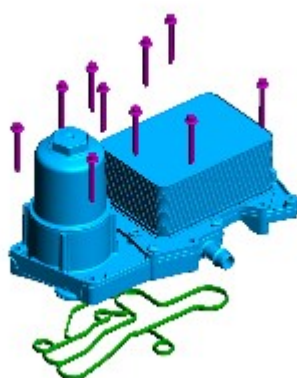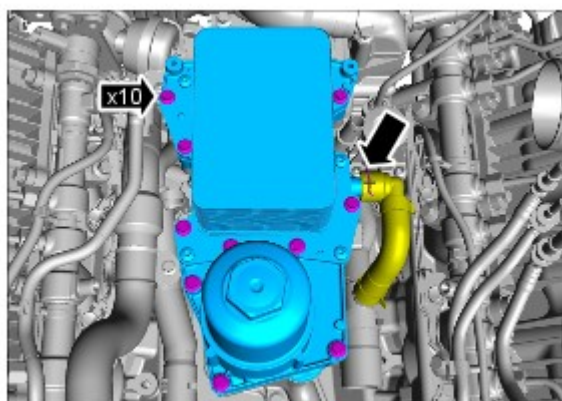


E130123

13.

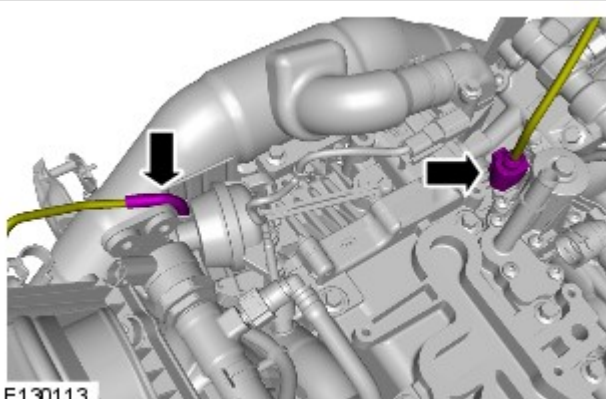

E130113

14.

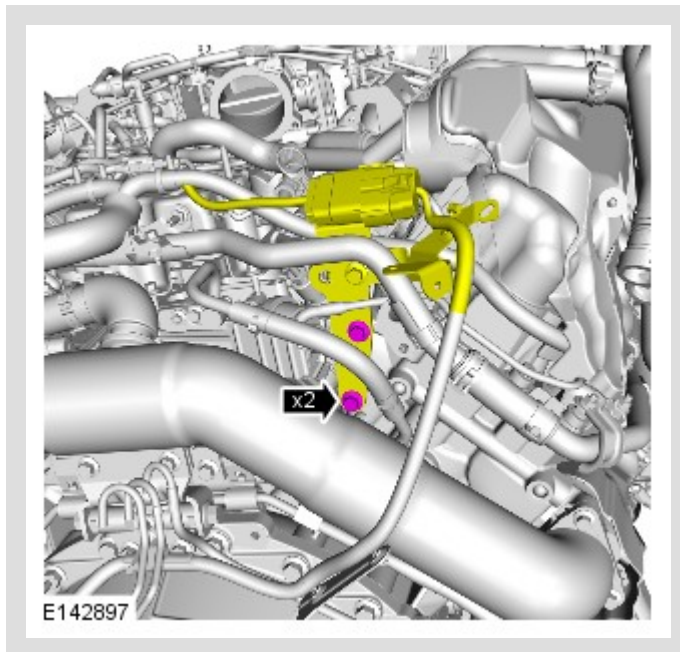



15.

⚠ CAUTION:

Before disconnecting any components, make sure the area is clean and free from foreign material. When disconnected all openings must be sealed.

△ NOTE:

Remove and discard the gasket.

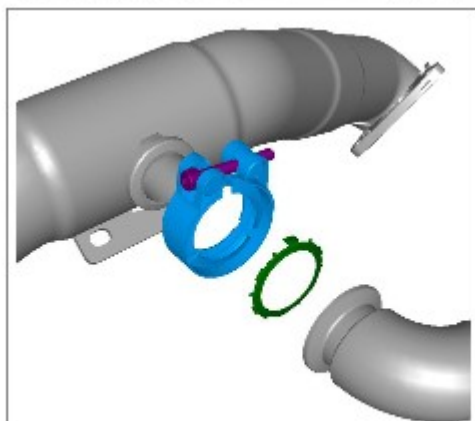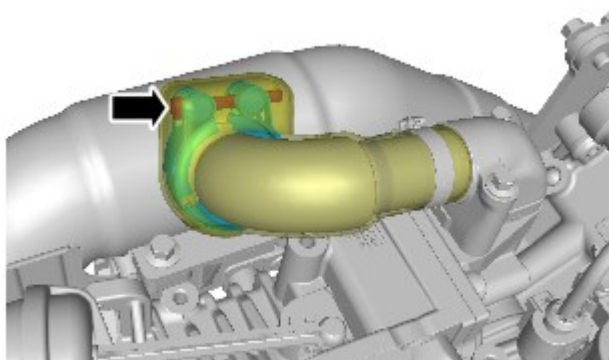


E130116

16.




NOTE:


Remove and discard the gasket.

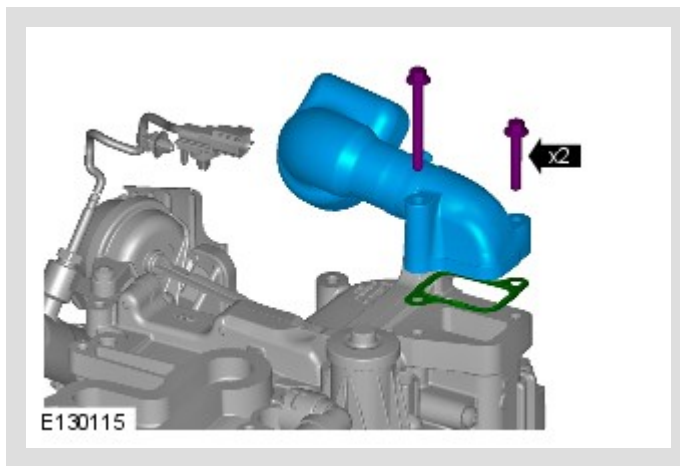

17.

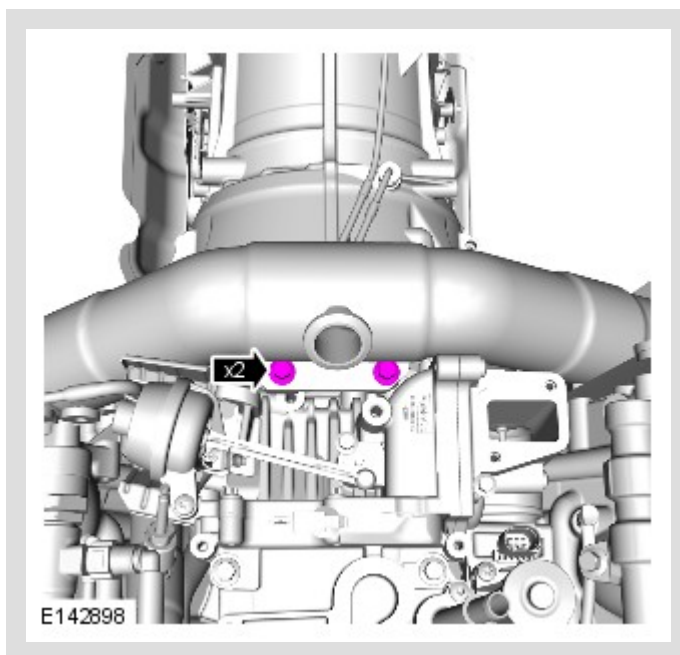


18.


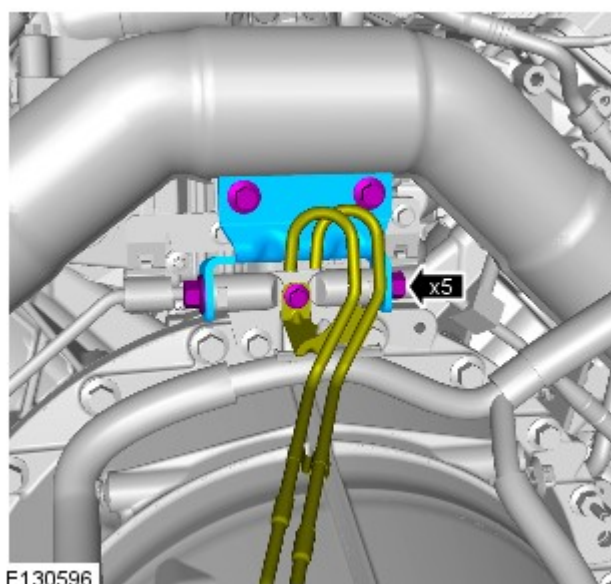


E130596


19.

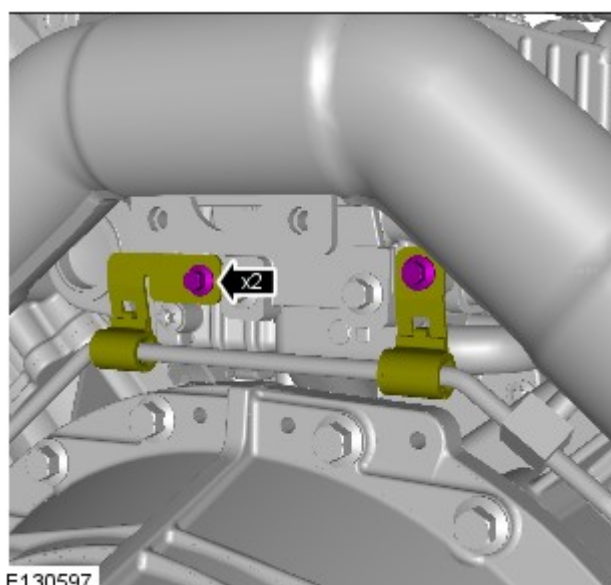

E130597

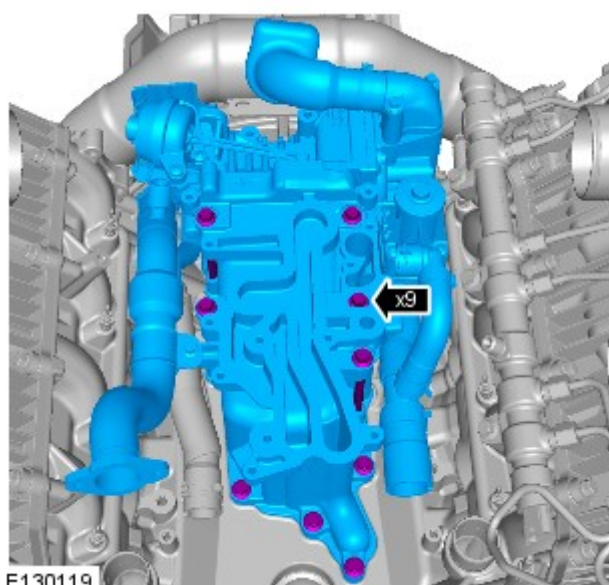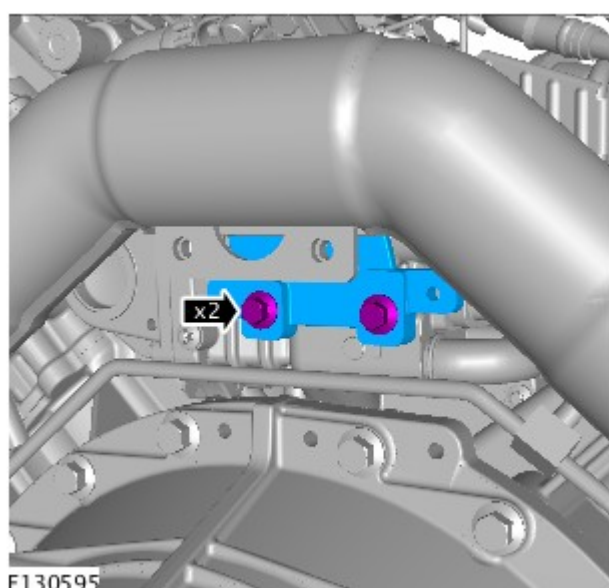


22.

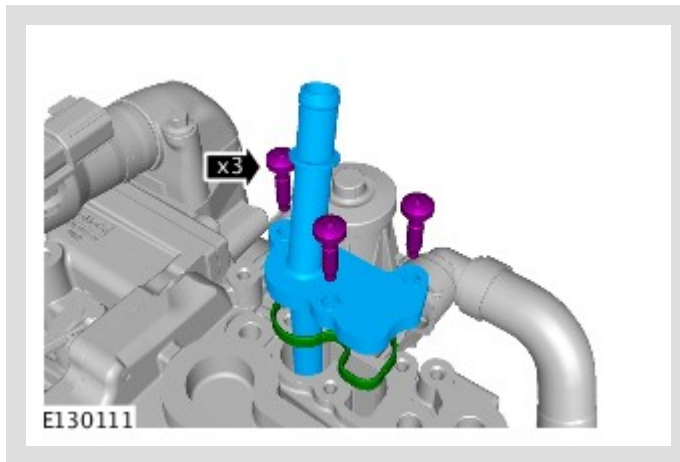


Do not disassemble further if removed for access only


23.

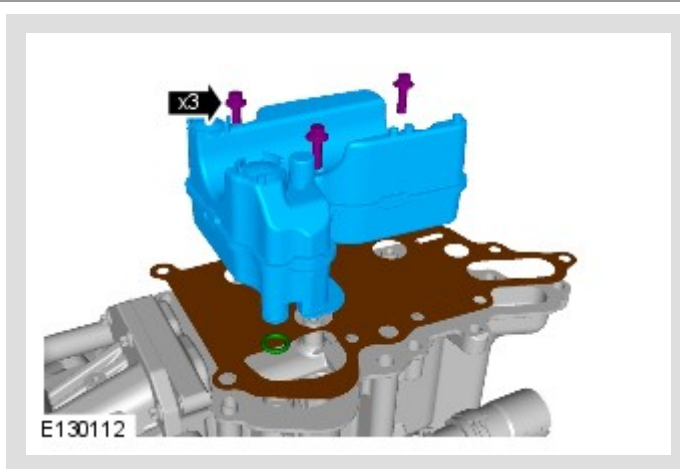


24.

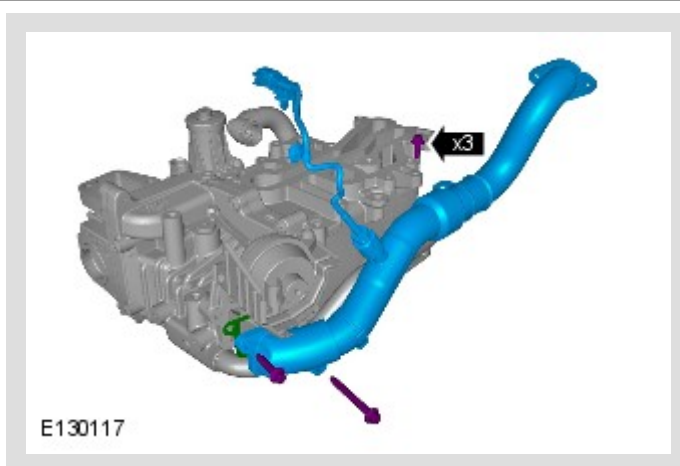


25.

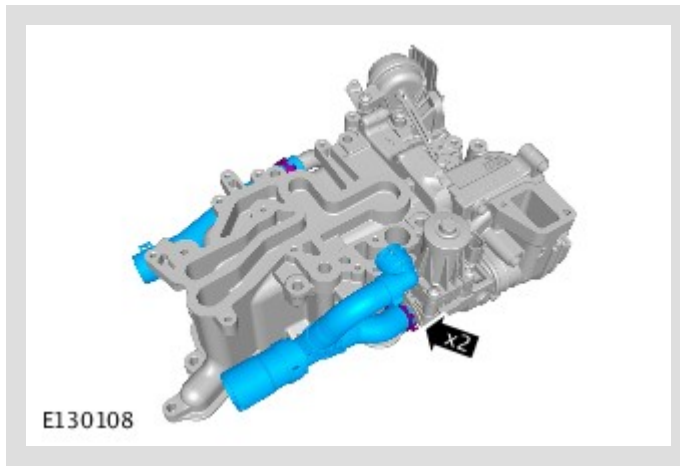

26.

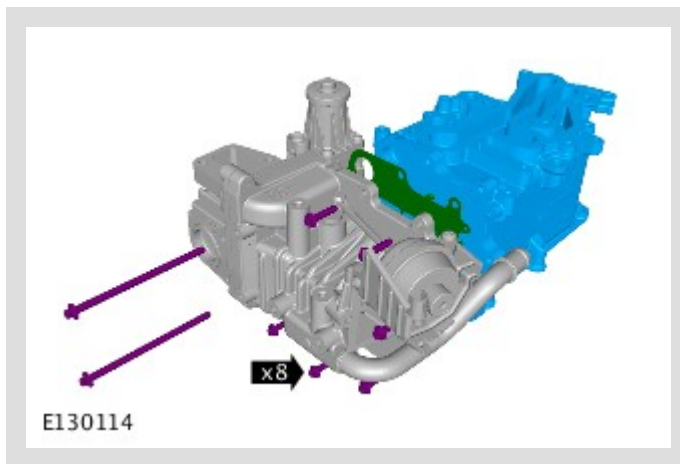

27.

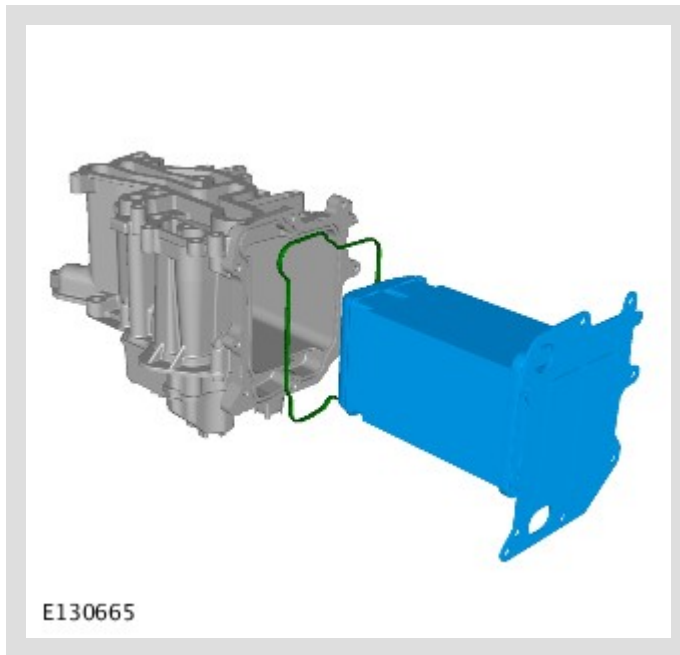

INSTALLATION

1.




CAUTION:

Make sure the rubber mounts are installed correctly.



2.

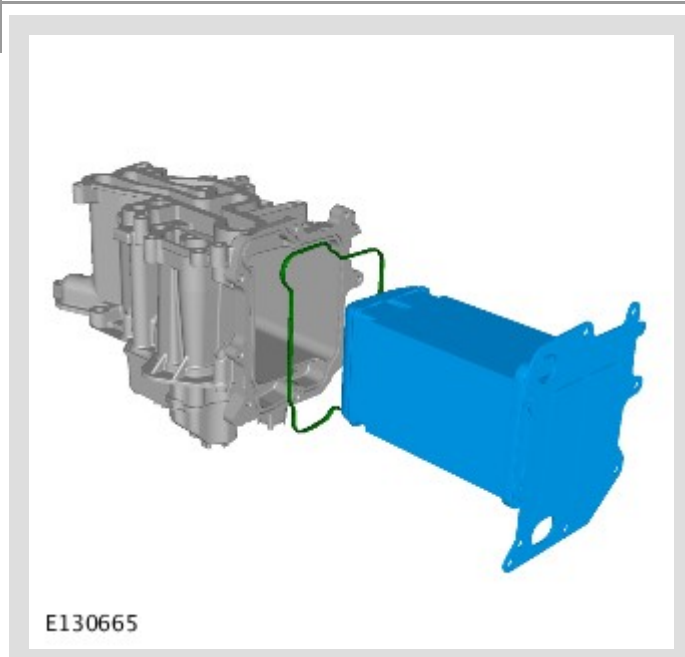


3.




CAUTION:

Install all the bolts finger tight before final tightening.

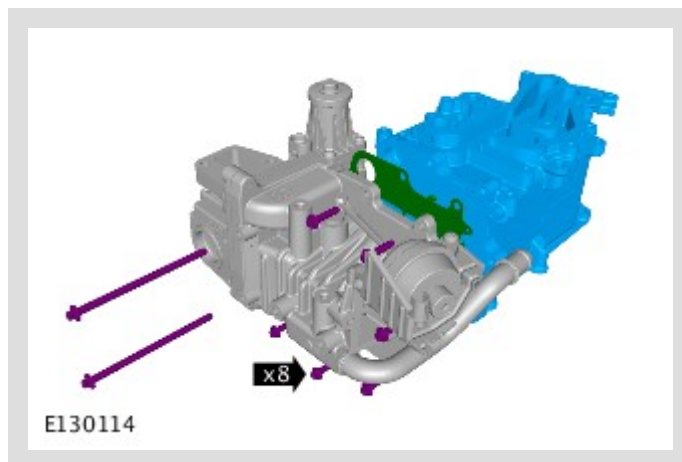

Torque: 12 Nm

4.

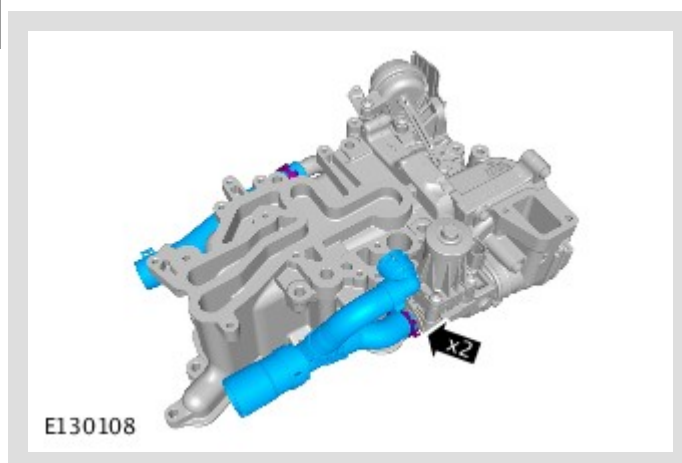


5.




CAUTION:

Install all the bolts finger tight before final tightening.

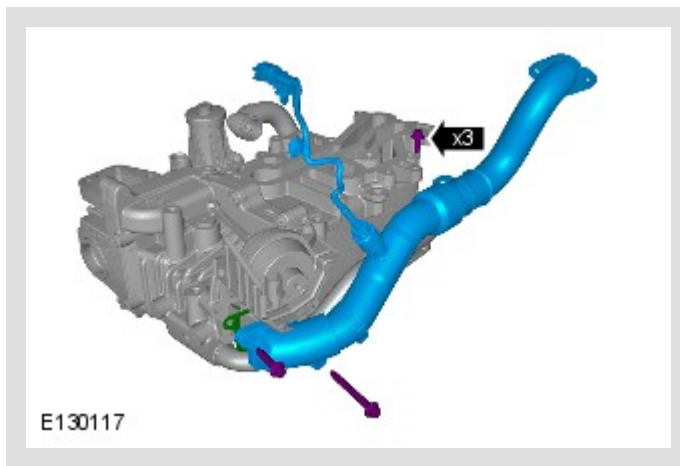


Torque: 10 Nm

6.

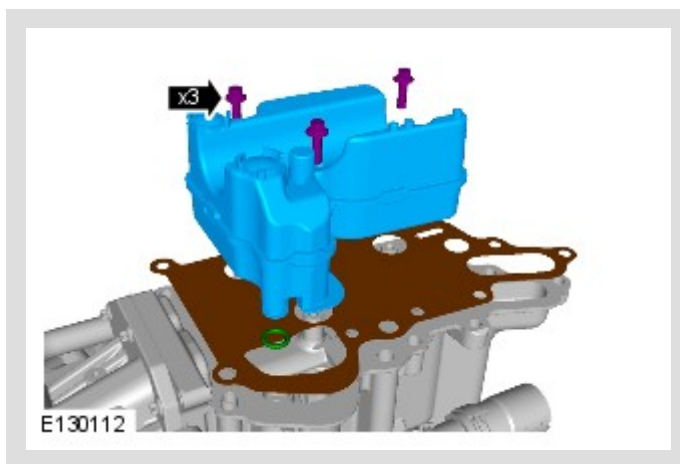

Torque: 5 Nm

7.

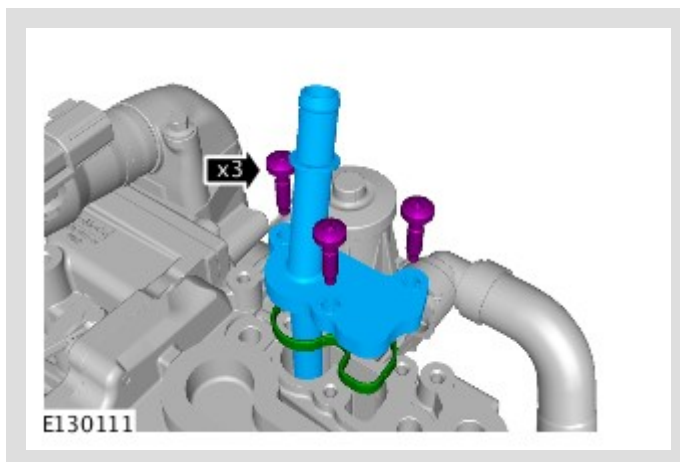


Torque: 10 Nm

8.




CAUTIONS:


- Make sure that the mating faces are clean and free of corrosion and foreign material.
- Install all the bolts finger tight before final tightening.

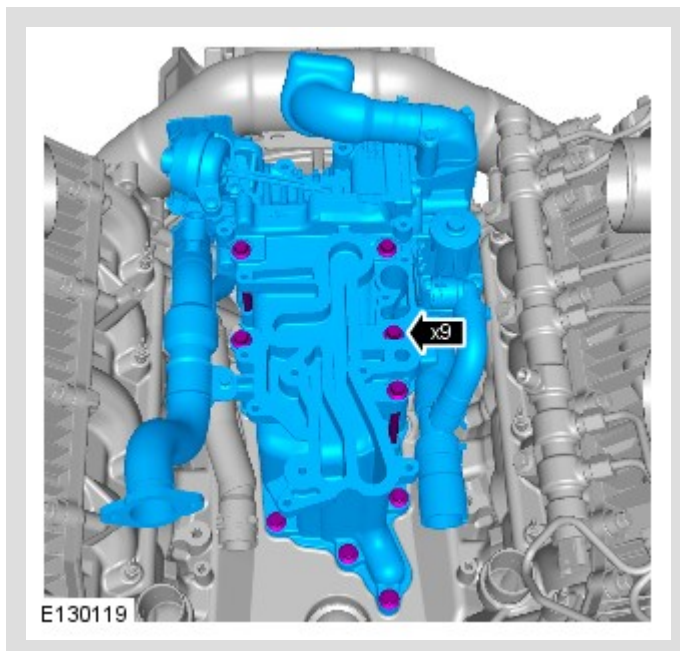

Torque: 23 Nm

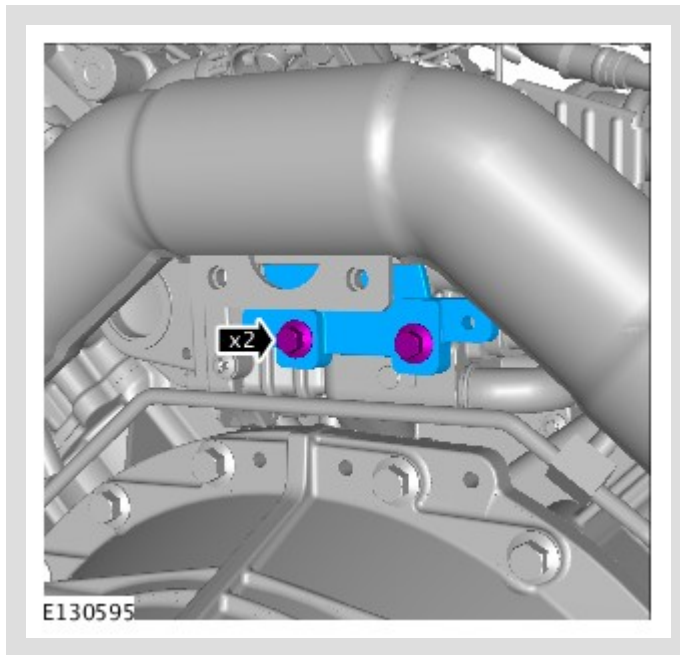

Torque: 23 Nm

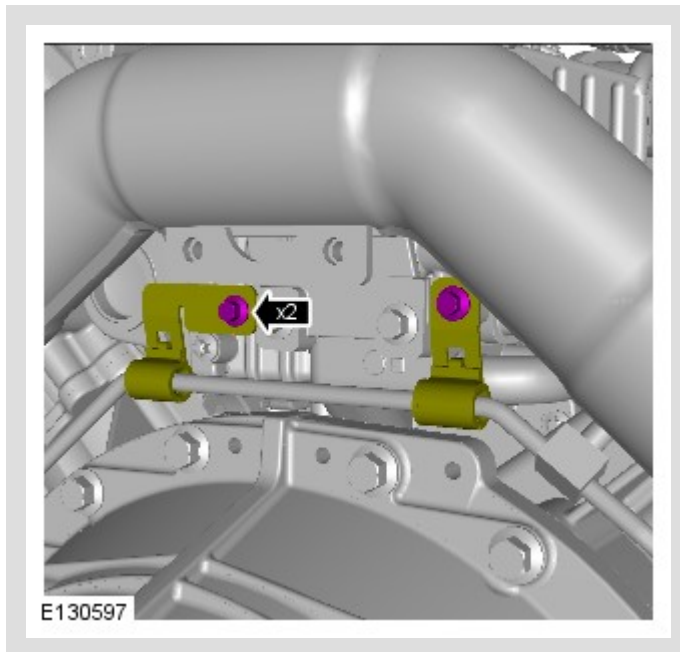


Torque: 10 Nm

11.

⚠ CAUTION:


Install all the bolts finger tight before final tightening.

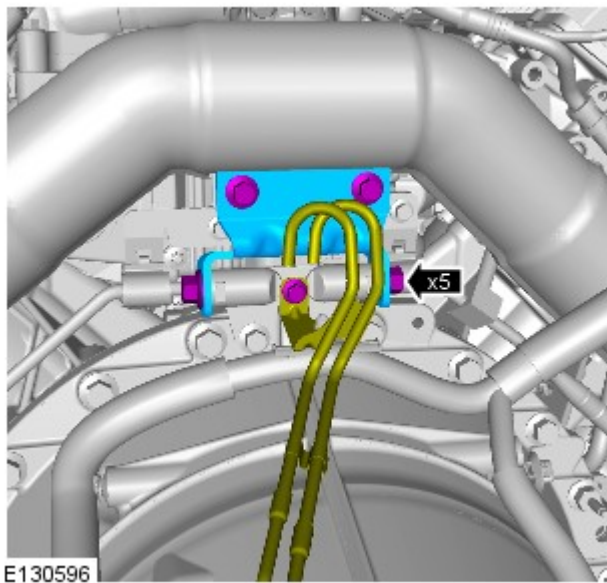

Torque:

M8 23 Nm

M6 10 Nm

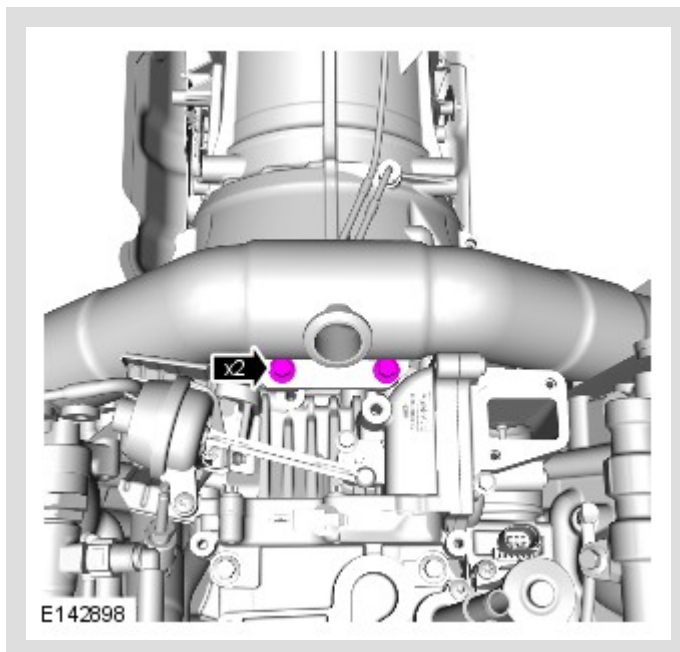


Torque: 23 Nm

13.

 NOTE:

Install a new gasket.

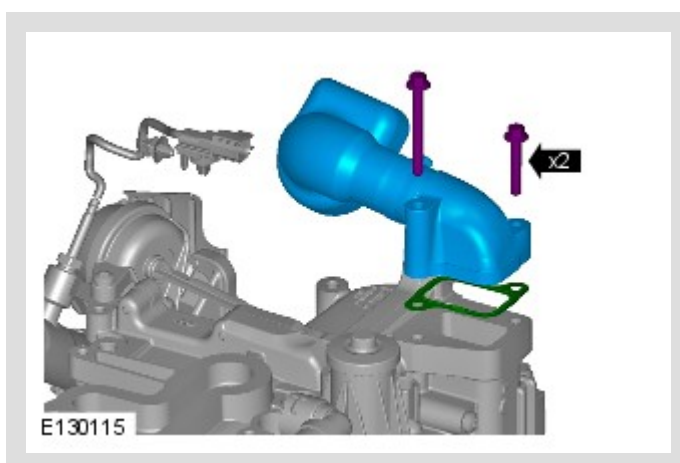


Renew Part: [Exhaust manifold to EGR valve gasket](#) : 1 .

Torque: 10 Nm


14.

 NOTES:

- Remove and discard the blanking caps.
- Install a new gasket.

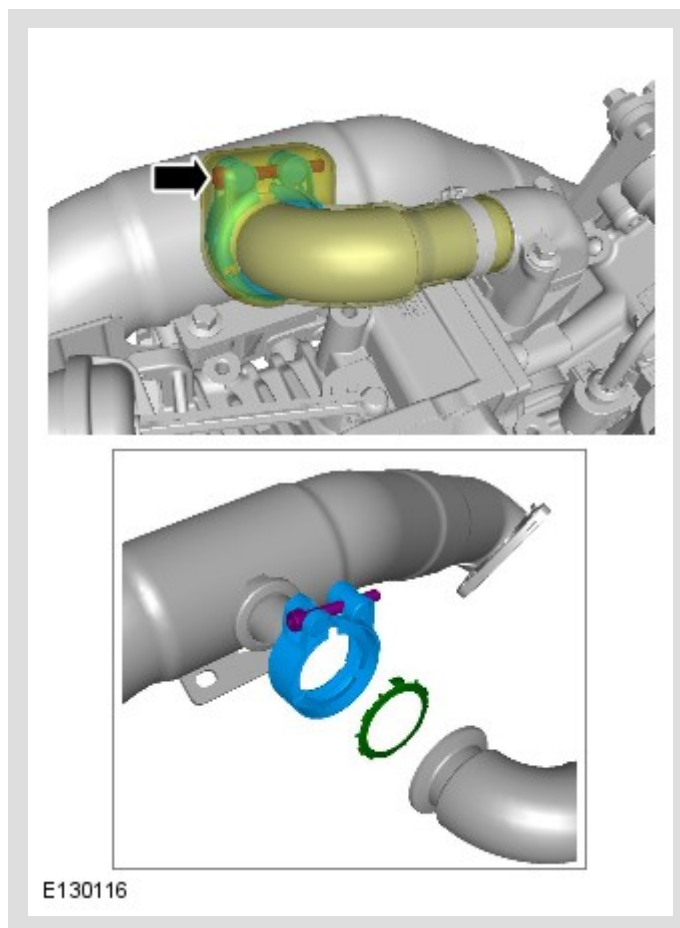


Renew Part: *Exhaust gas recirculation valve to crossover pipe gasket : 1 .*
Torque: 7 Nm

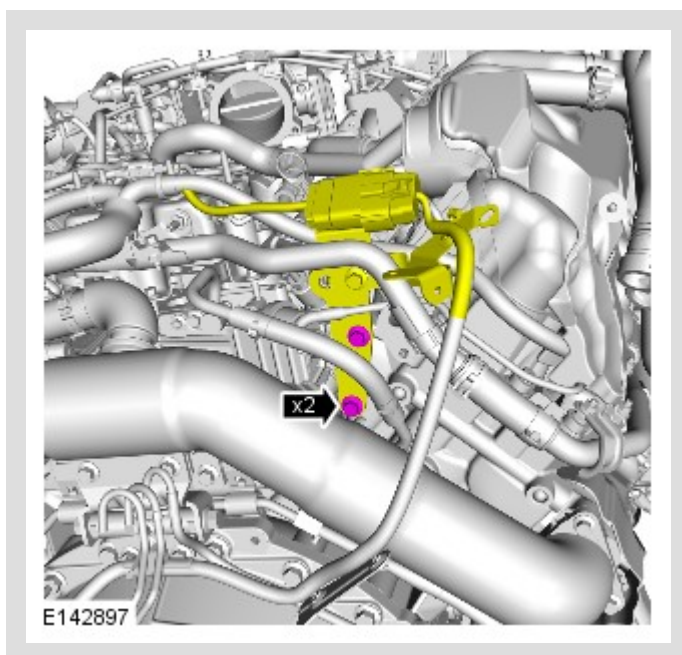

Torque: 25 Nm

16.

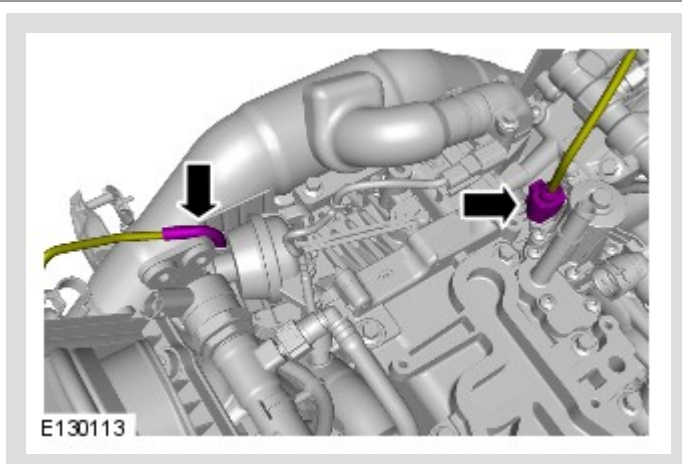

17.



ⓘ CAUTIONS:

- Make sure that the surface is clean and free of foreign material.
- Install all the bolts finger tight before final tightening.



NOTE:

Install a new gasket.

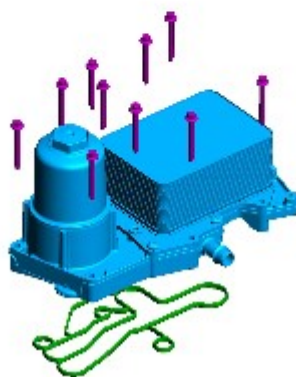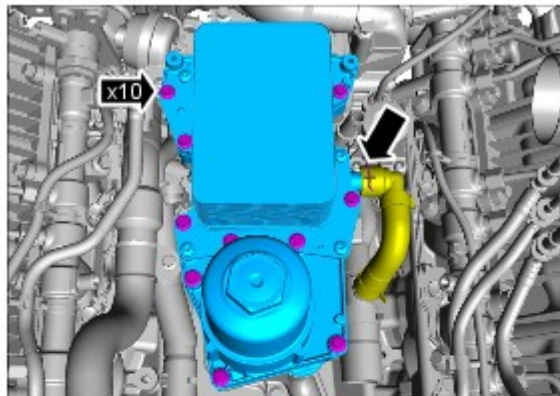

E130123

Renew Part: *Oil filter housing gasket* : 1 .

Torque: 13 Nm




CAUTION:

Make sure that the mating faces are clean and free of corrosion and foreign material.



NOTE:

Remove and discard the blanking caps.

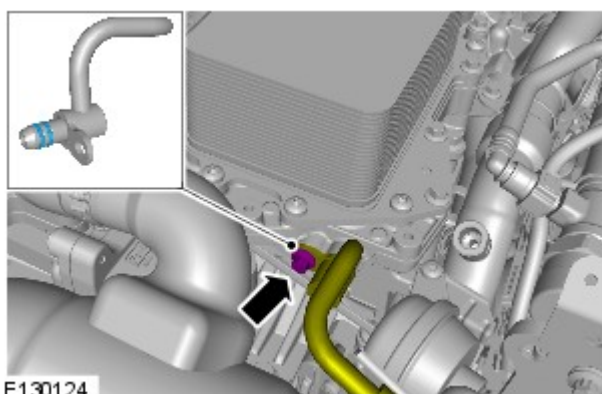


Torque: 10 Nm

19.



CAUTION:

Install all the bolts finger tight before final tightening.

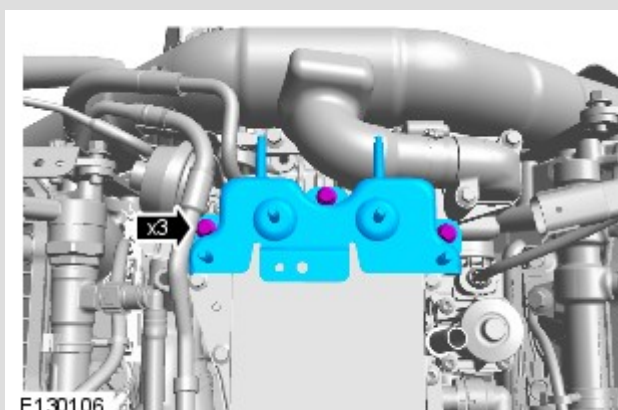


Torque: 10 Nm

20.




NOTE:

Remove and discard the blanking caps.

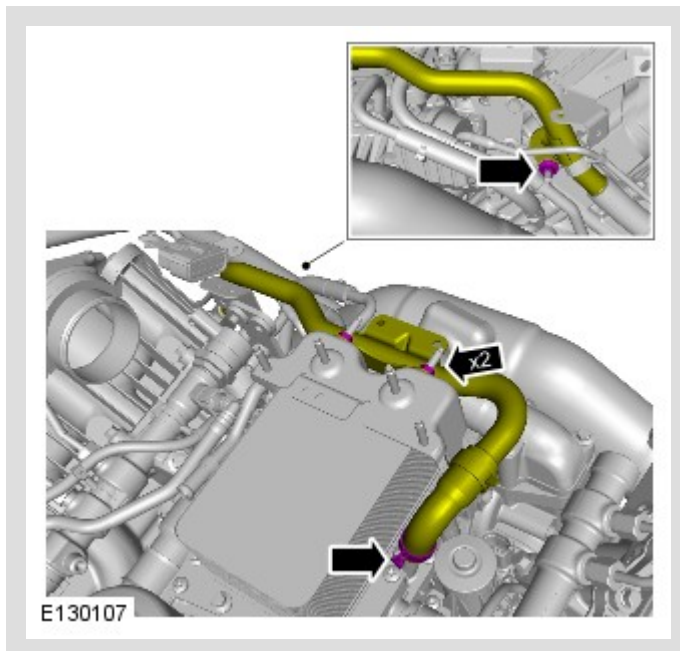


Torque: 10 Nm

21.

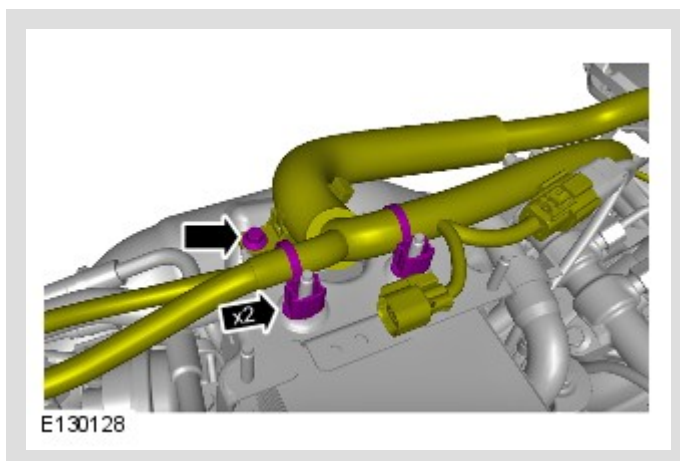

Torque: 10 Nm

22.

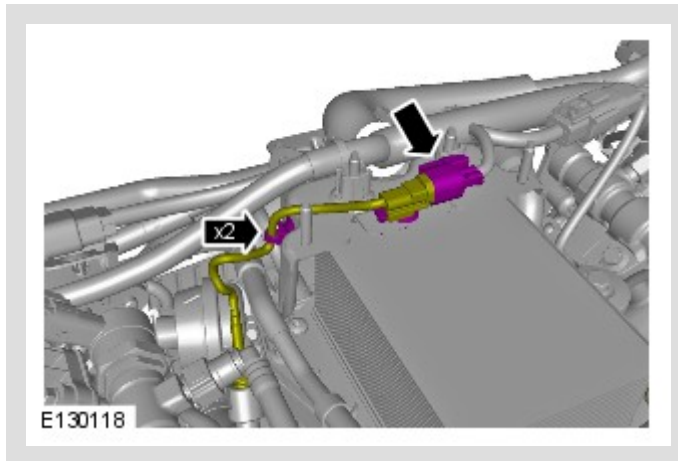

23.




CAUTION:

Install all the bolts finger tight before final tightening.



NOTES:

- Remove and discard the blanking caps.
- Install a new O-ring seal.

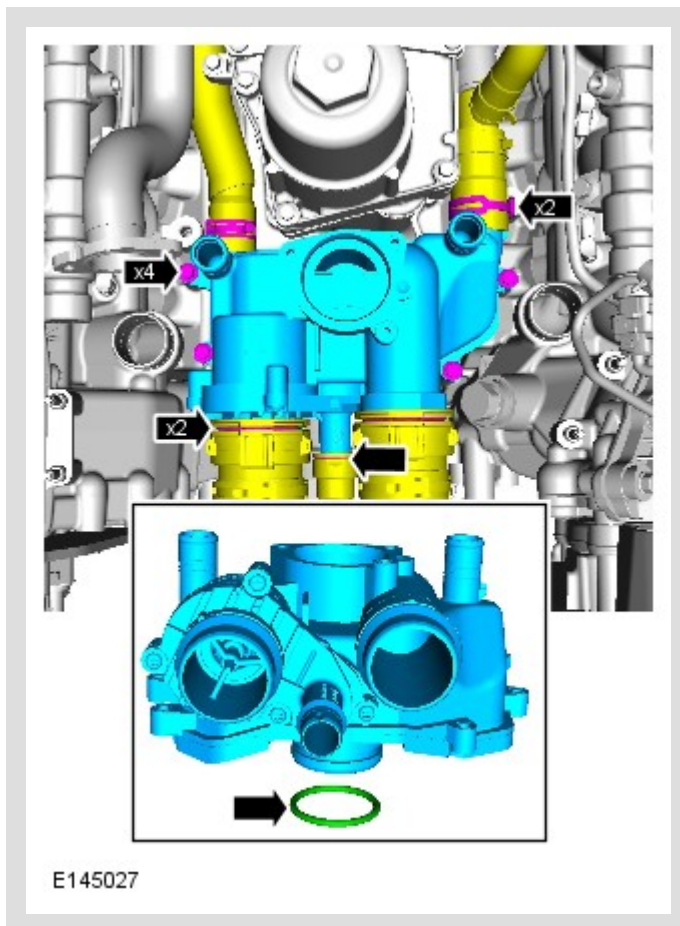

Renew Part: *Water outlet connection O-ring seals* : 1 .

Torque: 10 Nm


24.

⚠ CAUTION:

Install all the bolts finger tight before final tightening.

△ NOTES:

- Remove and discard the blanking caps.
- Install a new O-ring seal.

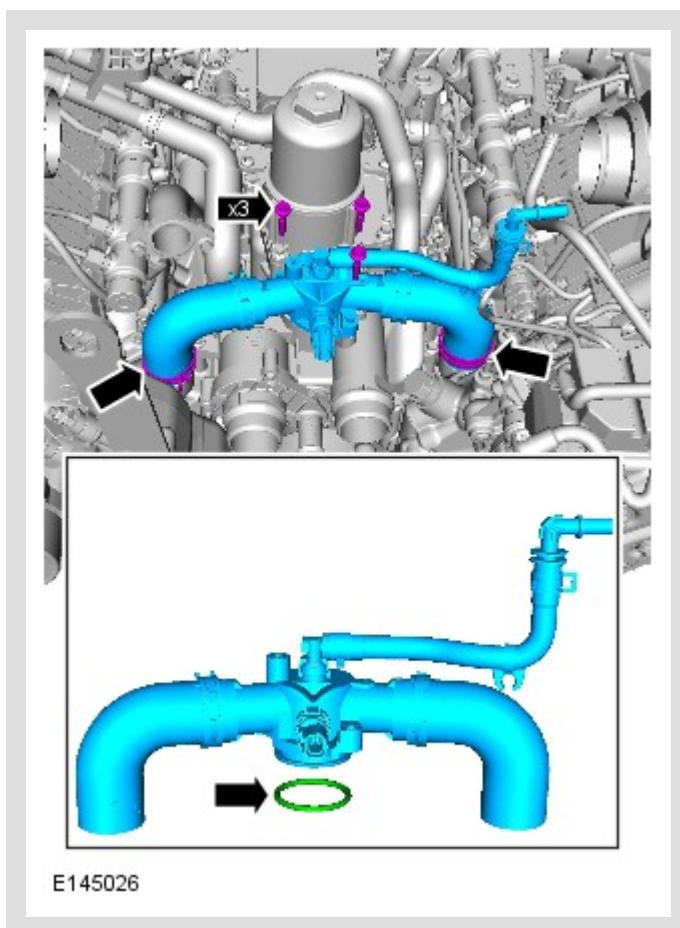


Renew Part: *Water outlet connection O-ring seals : 1 .*
 Torque: 10 Nm

25.




NOTE:

Remove and discard the blanking caps.

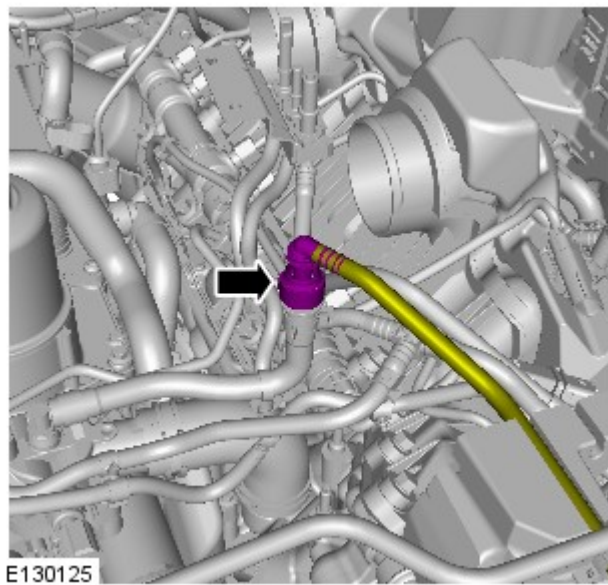


26.

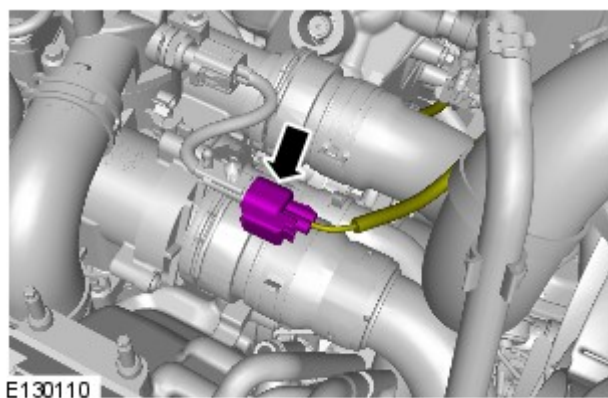

27.

⚠ CAUTION:

Tighten the component finger tight first.

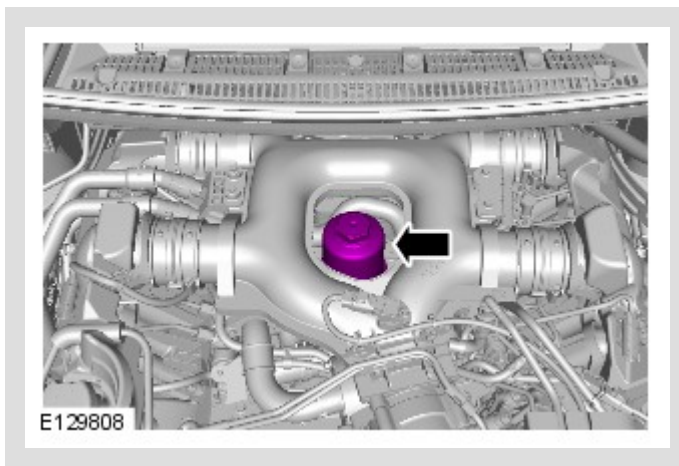

Torque: 35 Nm

-
28. Refer to: [Right Fuel Rail](#) (303-04F Fuel Charging and Controls - TDV8 4.4L Diesel, Removal and Installation).

-
29. Check and top-up the engine oil.