

PUBLISHED: 31-AUG-2017
2015.0 RANGE ROVER (LG), 303-08

ENGINE EMISSION CONTROL - TDV8 4.4L DIESEL

EXHAUST GAS RECIRCULATION VALVE (G1509517)

REMOVAL AND INSTALLATION

17.45.01	VALVE - EGR - RENEW	4400 CC, TDV8, WITHOUT FUEL FIRED BOOSTER HEATER	4.8	USED WITHINS	
----------	---------------------------	--	-----	-----------------	--

PART(S)

STEP	REPLACE PART / RENEW PART	PART NAME	
Installation Step 1	Renew Part	EGR cooler to cylinder block gasket	1
Installation Step 3	Renew Part	Exhaust gas recirculation valve to crossover pipe gasket	1
Installation Step 4	Renew Part	Exhaust gas recirculation gasket	1
Installation Step 11	Renew Part	EGR cooler to EGR valve gasket	1
Installation Step 12	Renew Part	EGR pipe to exhaust manifold gasket	1
Installation Step 15	Renew Part	Oil cooler seal	1
Installation Step 21	Renew Part	Thermostat housing seal(s)	1
Installation Step 22	Renew Part	Thermostat seal	1

REMOVAL




NOTE:

- This procedure contains some variation in the illustrations depending on the vehicle specification, but the essential information is always correct.
- This procedure contains illustrations showing certain components removed to provide extra clarity.

1. Remove the right fuel rail.


Refer to: [Right Fuel Rail](#) (303-04F Fuel Charging and Controls - TDV8 4.4L Diesel, Removal and Installation).

- 2.

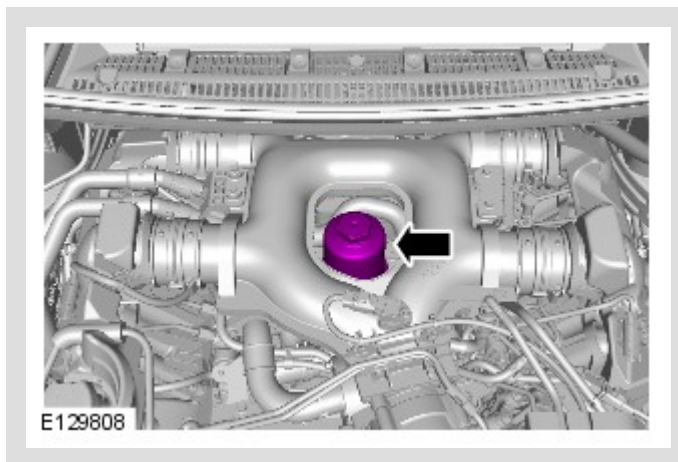

- Loosen the oil filter cover 3 turns and allow the engine oil to drain.

- 3.

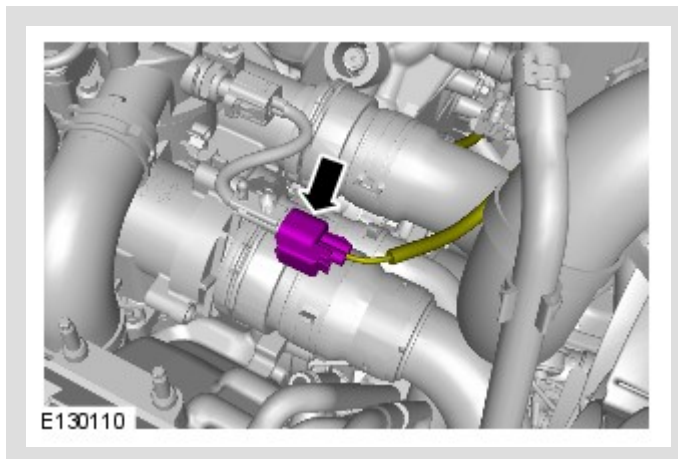


- 4.



CAUTIONS:

- Be prepared to collect escaping coolant.
- Make sure that all openings are sealed. Use new blanking caps.

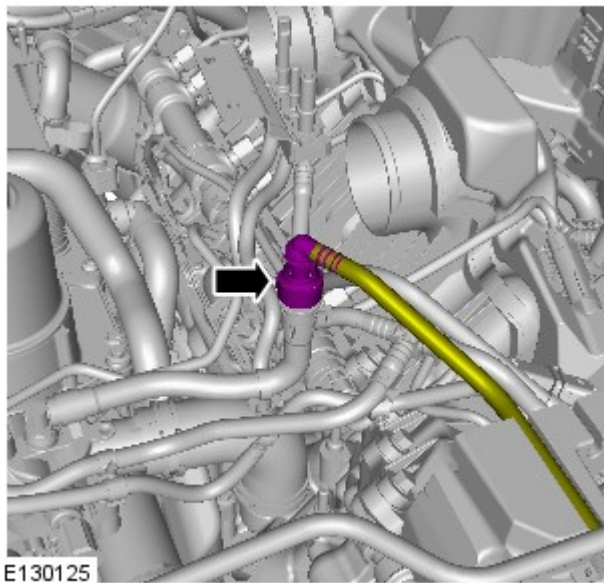


5.

⚠ CAUTIONS:

- Be prepared to collect escaping coolant.
- Make sure that all openings are sealed. Use new blanking caps.

△ NOTE:

Remove and discard the O-ring seal.

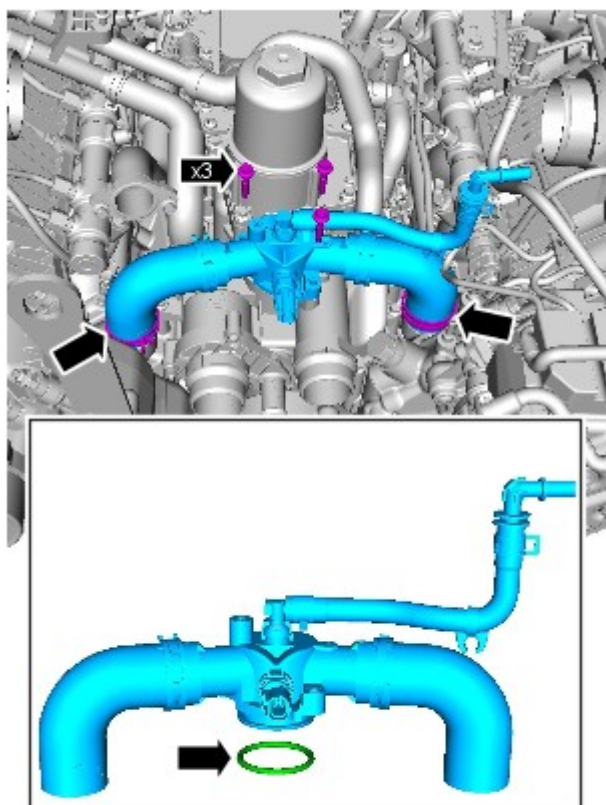

E145026


6.

⚠ CAUTIONS:


- Clamp the hoses to minimize coolant loss.
- Be prepared to collect escaping coolant.
- Make sure that all openings are sealed. Use new blanking caps.

⚠ NOTE:


Remove and discard the O-ring seal.

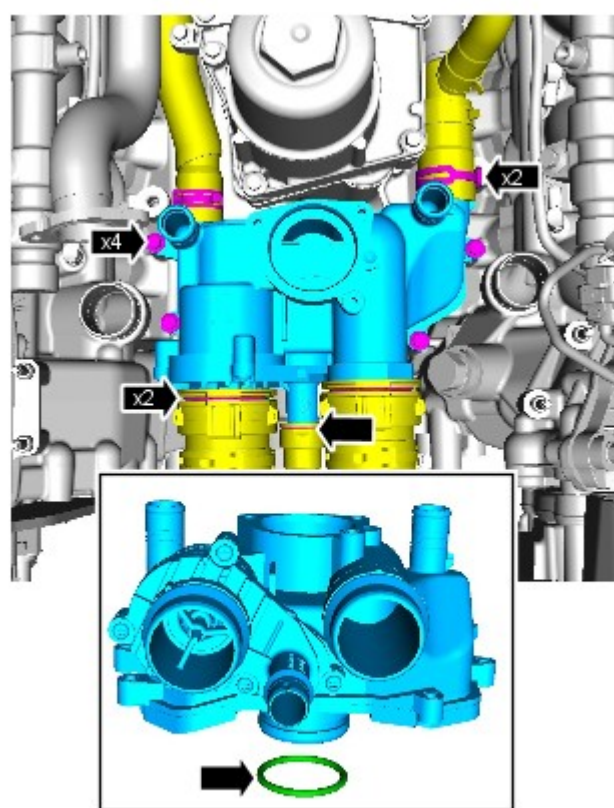

E145027

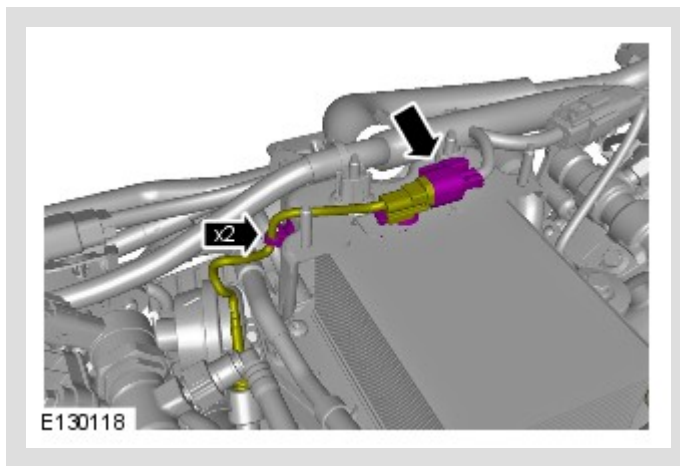


8.

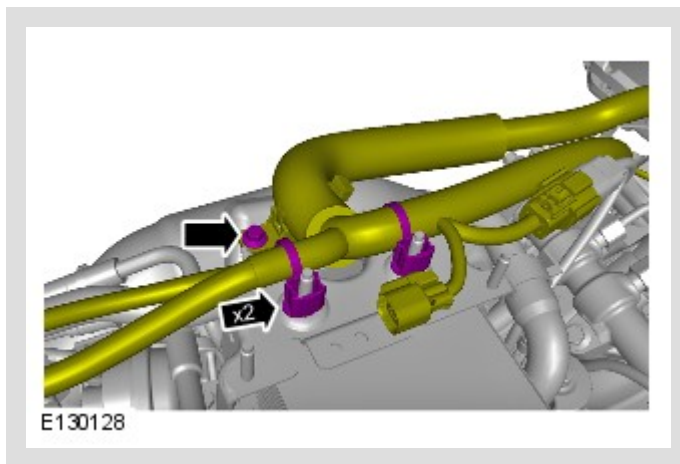


9.

⚠ CAUTION:

Make sure that all openings are sealed. Use new blanking caps.

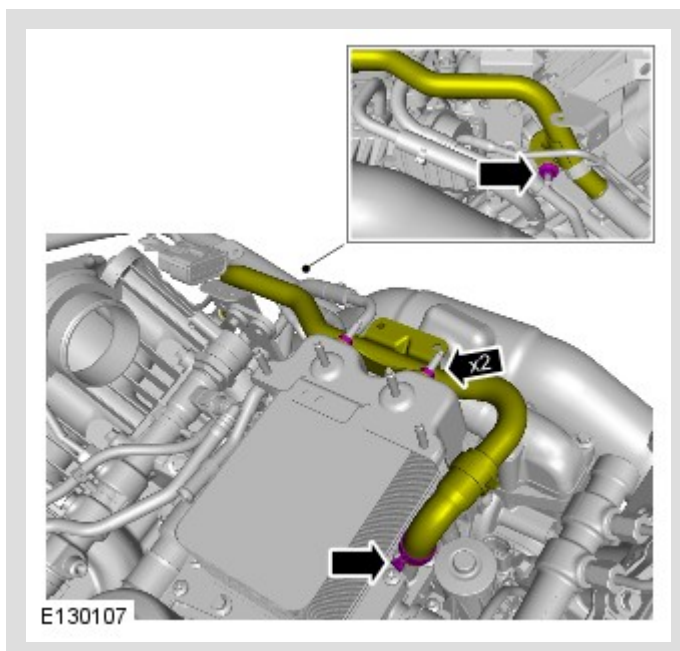


10.

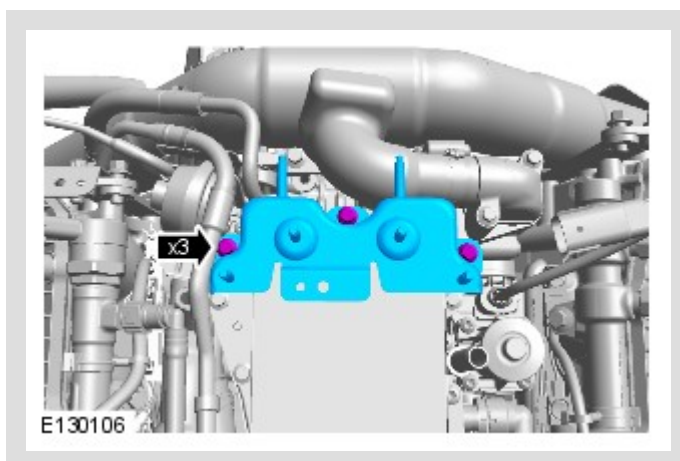

11.

⚠ CAUTIONS:

- Be prepared to collect escaping oil.
- Make sure that all openings are sealed. Use new blanking caps.
- Inspect the O-rings, replace if damaged.

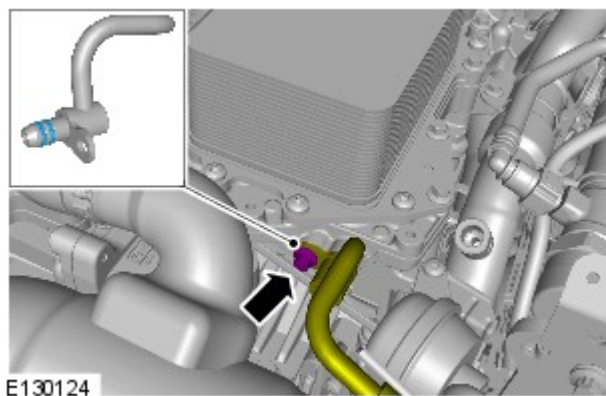

12.





CAUTIONS:

- Be prepared to collect escaping oil.
- Be prepared to collect escaping coolant.




NOTE:

Remove and discard the gasket.

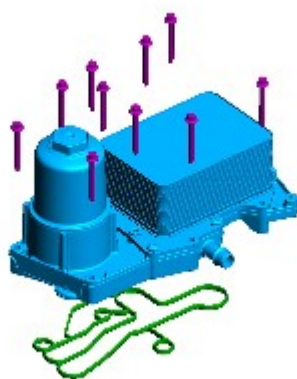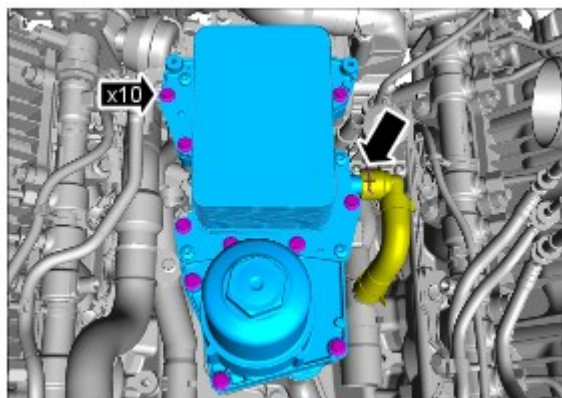


E130123

13.

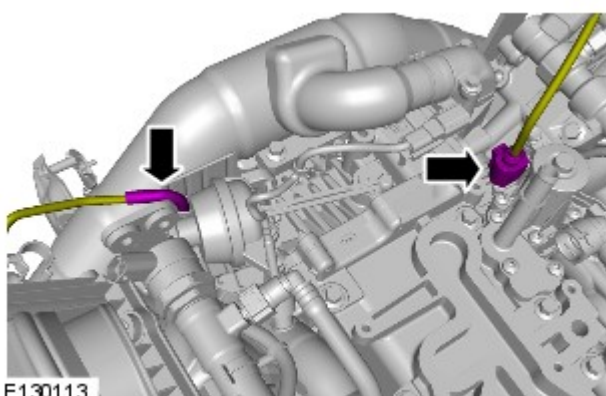

E130113

14.

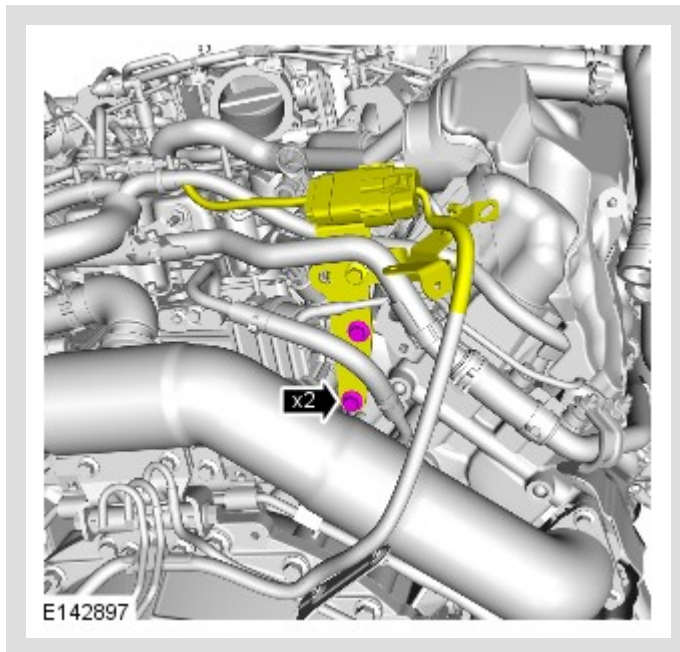



15.

⚠ CAUTION:

Make sure that all openings are sealed. Use new blanking caps.

⚠ NOTE:

Remove and discard the gasket.

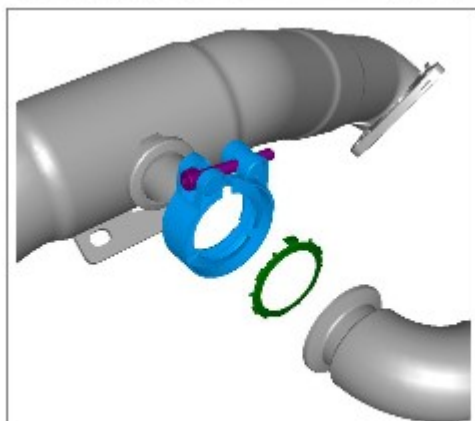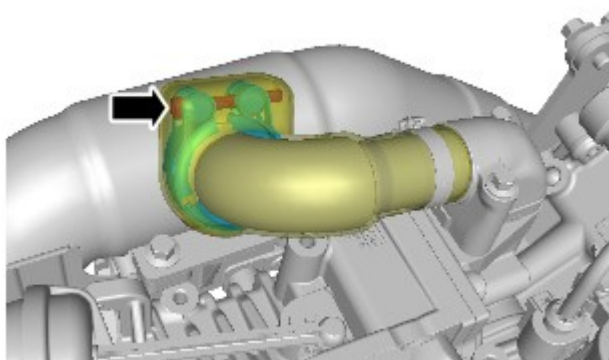


E130116

16.




NOTE:


Remove and discard the gasket.

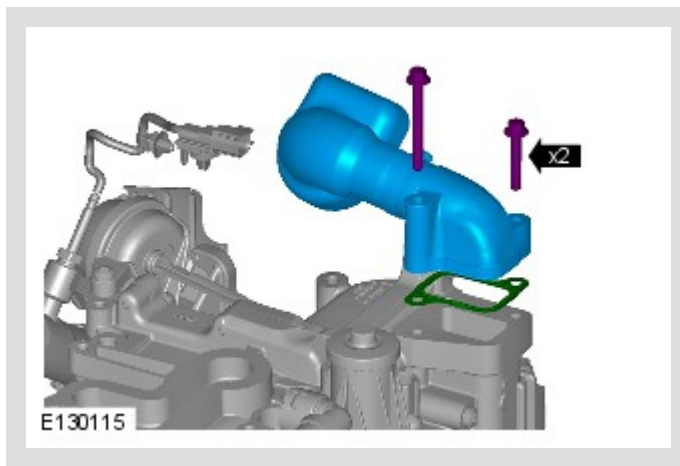

17.

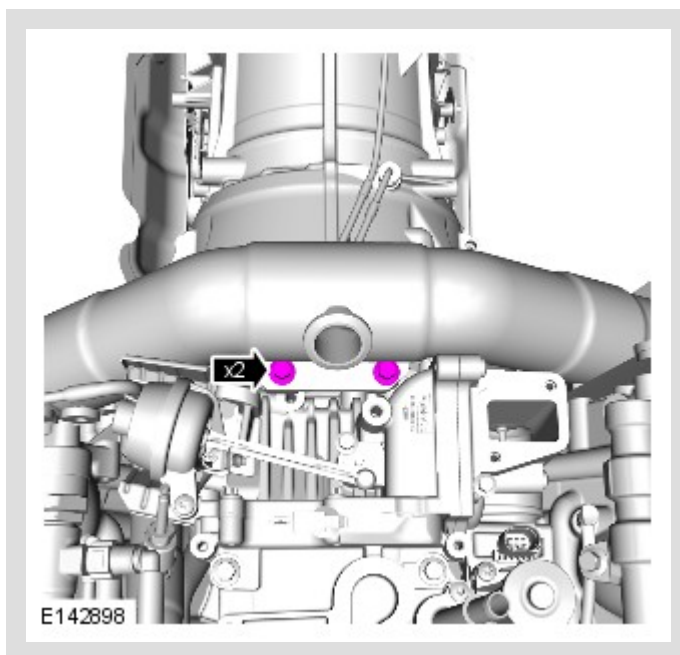


18.

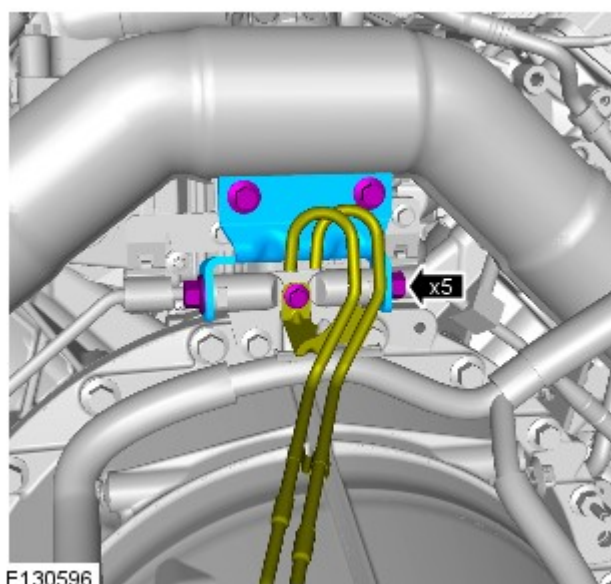


E130596

19.

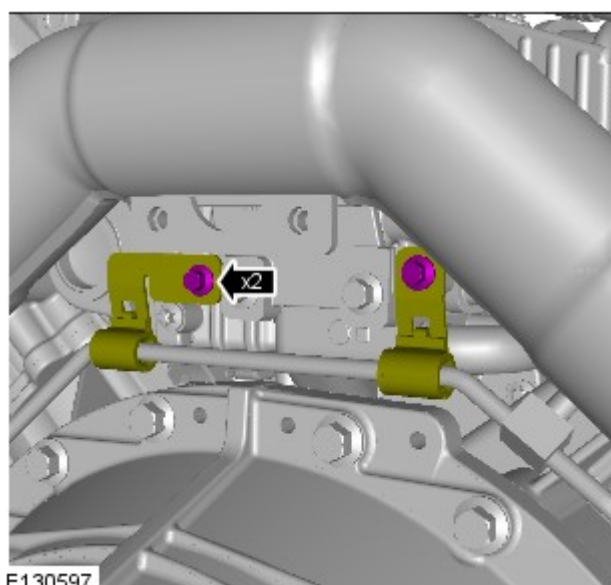


E130597

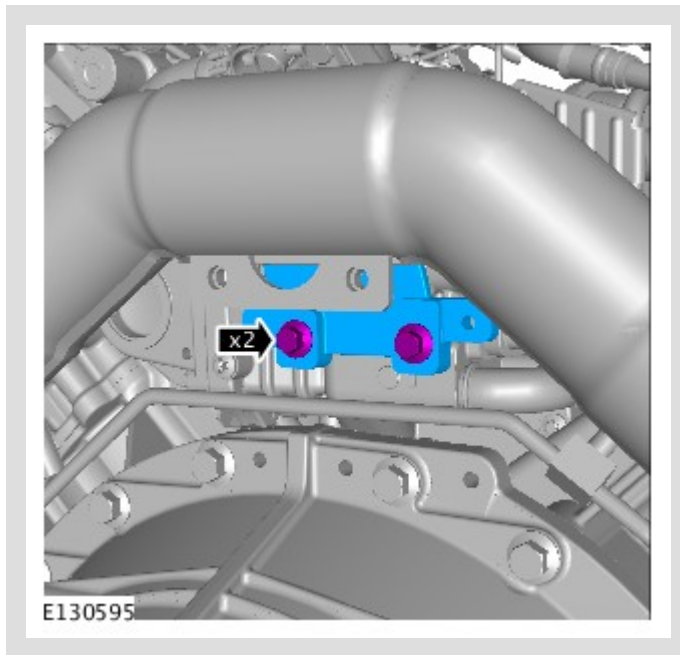

⚠ CAUTIONS:


- Be prepared to collect escaping oil.
- Be prepared to collect escaping coolant.

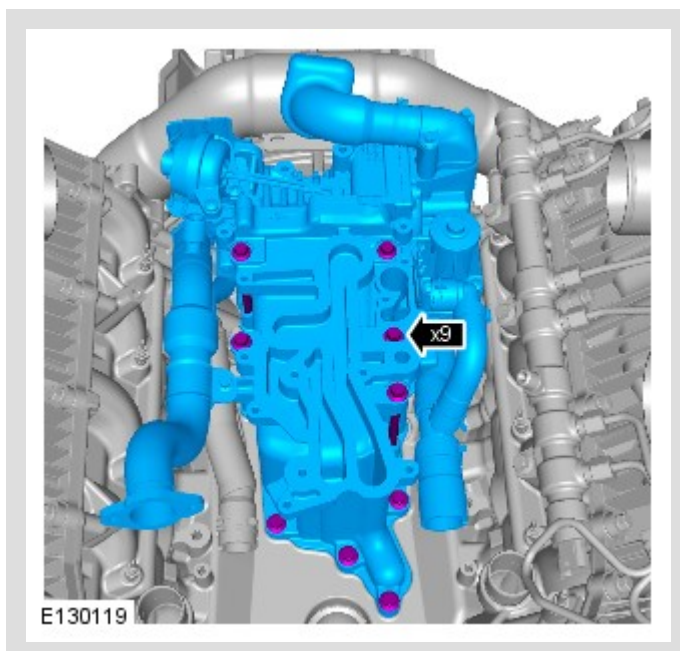

22.

⚠ CAUTION:

Inspect the seal, replace the component if damaged.

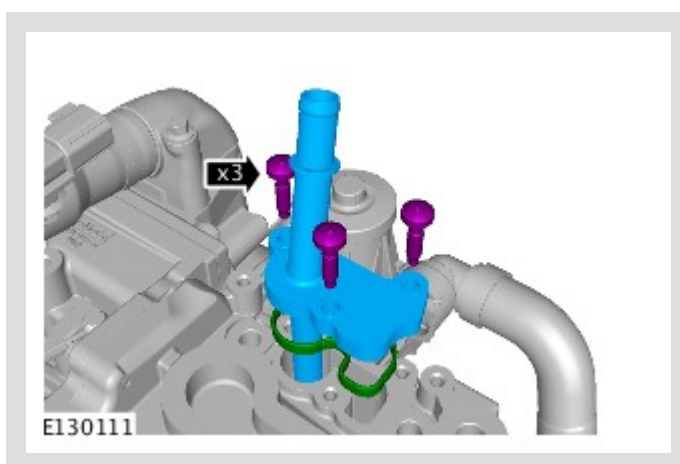

Do not disassemble further if removed for access only

23.


⚠ CAUTION:

Inspect the O-ring seal, replace if damaged.



NOTE:

Remove and discard the gasket.

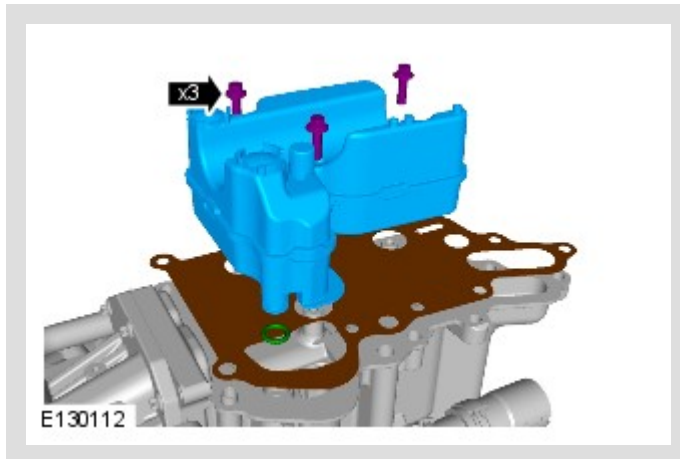


24.




NOTE:

Remove and discard the gasket.

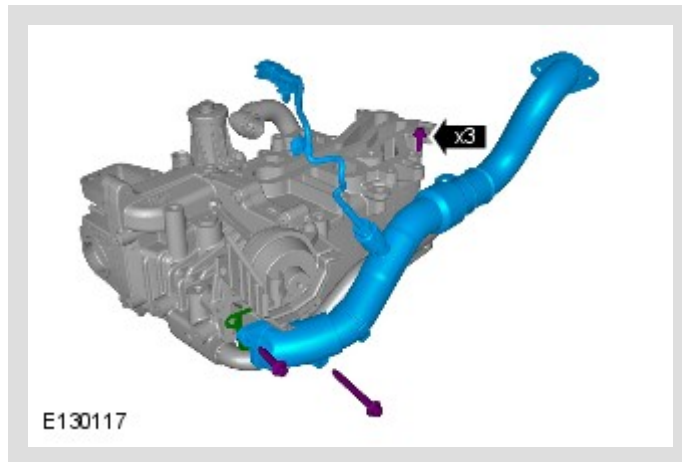

25.

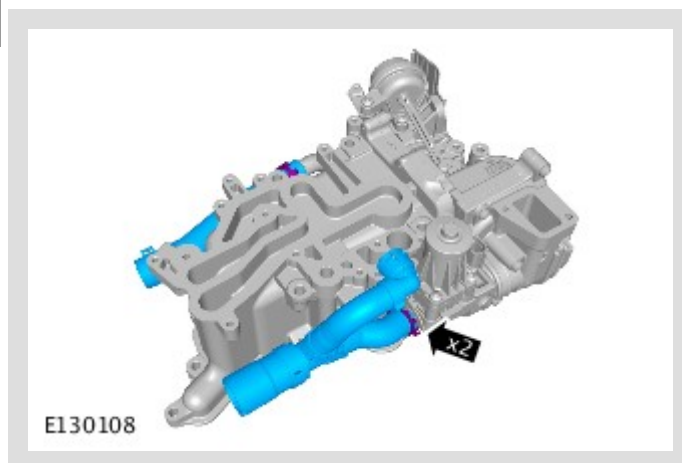


26.



NOTE:

Remove and discard the gasket.

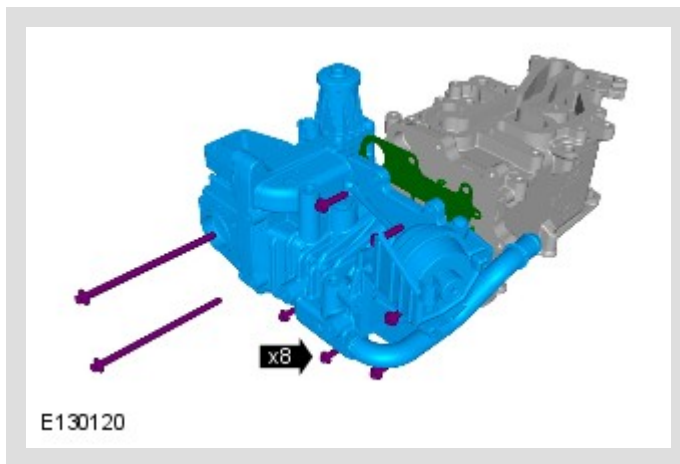

INSTALLATION


1.

⚠ CAUTION:

Install all the bolts finger tight before final tightening.

△ NOTE:


Install a new gasket.

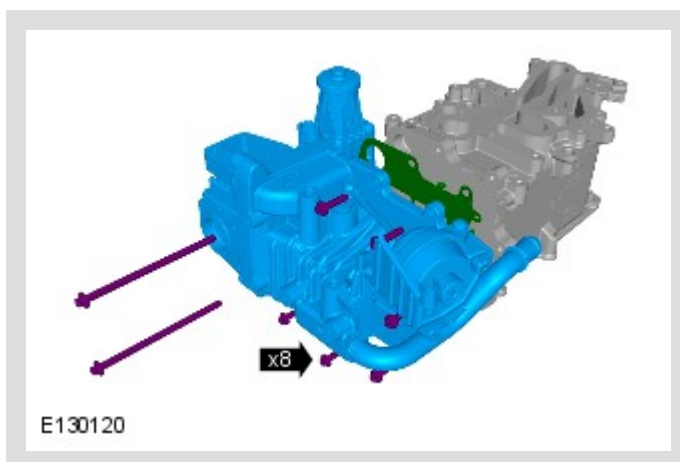

Renew Part: *EGR cooler to cylinder block gasket* : 1 .

Torque: 12 Nm

2.

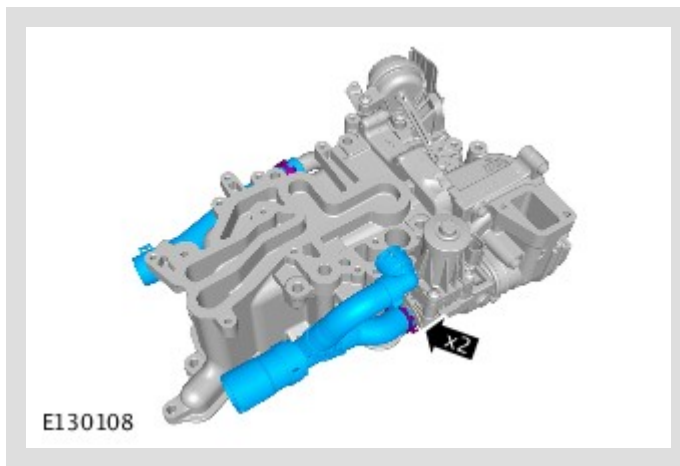


3.

⚠ CAUTION:

Install all the bolts finger tight before final tightening.

△ NOTE:

Install a new gasket.

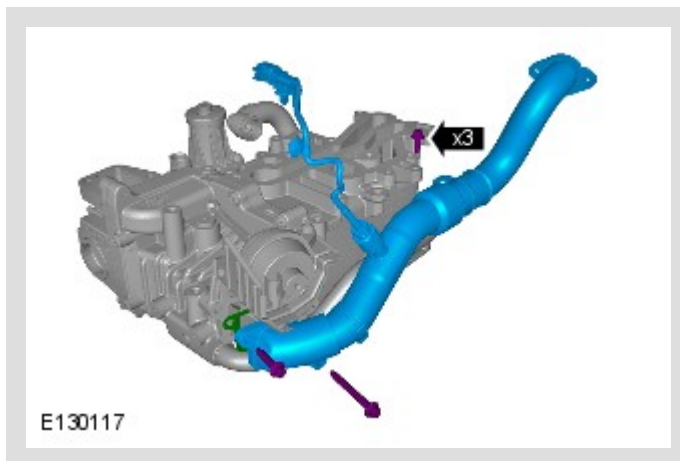

Renew Part: *Exhaust gas recirculation valve to crossover pipe gasket : 1 .*
Torque: 10 Nm

4.


⚠ CAUTION:

Make sure that the mating faces are clean and free of corrosion and foreign material.



NOTE:

Install a new gasket.

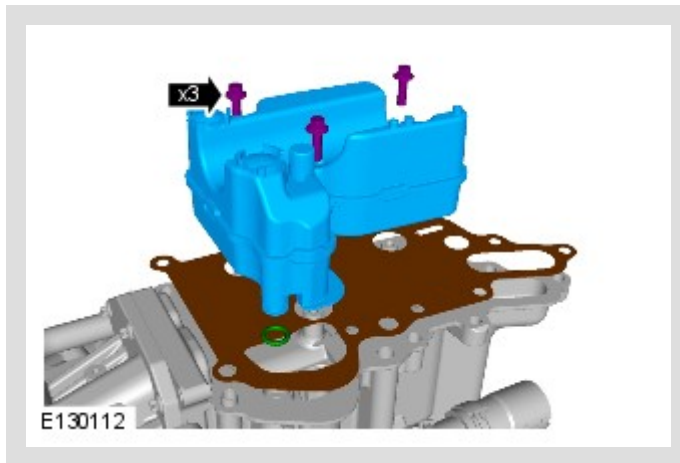

Renew Part: *Exhaust gas recirculation gasket* : 1 .


Torque: 5 Nm

5.



CAUTION:

Make sure that the mating faces are clean and free of corrosion and foreign material.

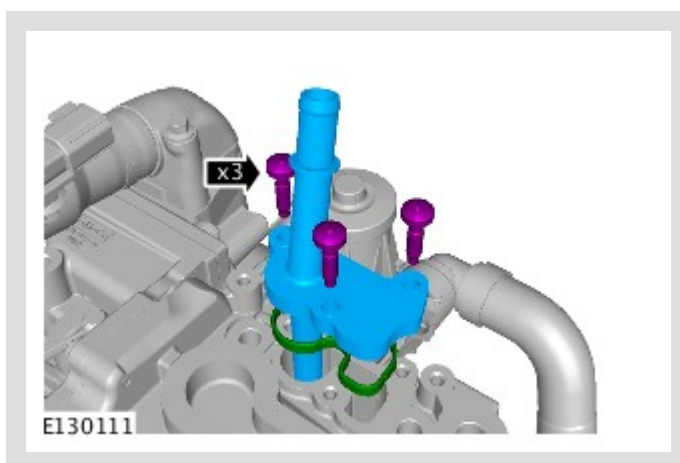


Torque: 10 Nm

6.




CAUTIONS:

- Make sure that the mating faces are clean and free of corrosion and foreign material.
- Install all the bolts finger tight before final tightening.

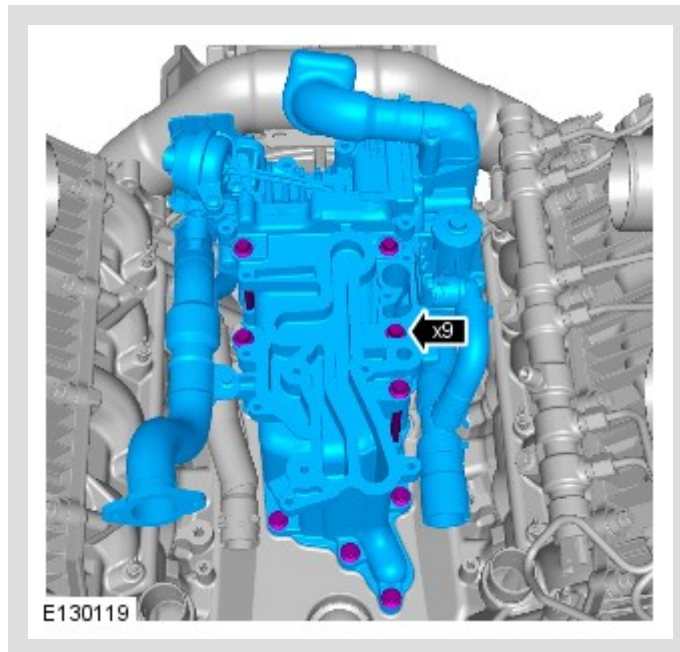


Torque: 23 Nm

7.

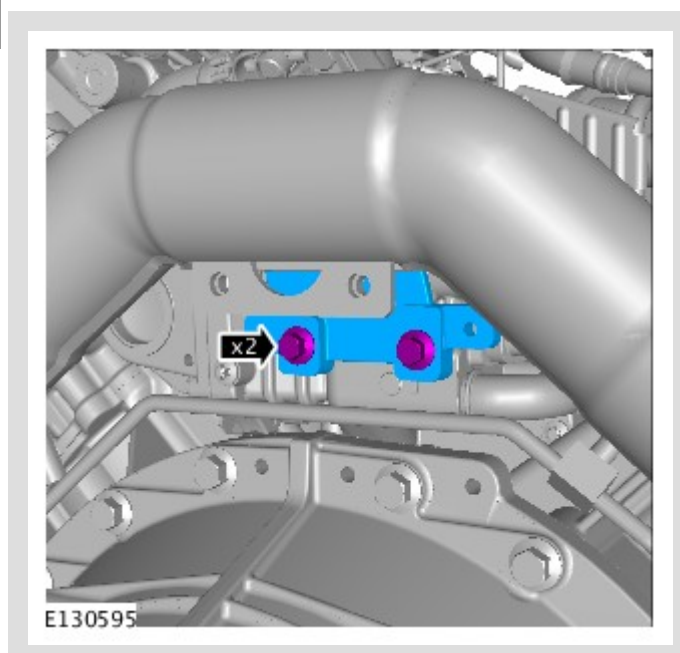

Torque: 23 Nm

8.

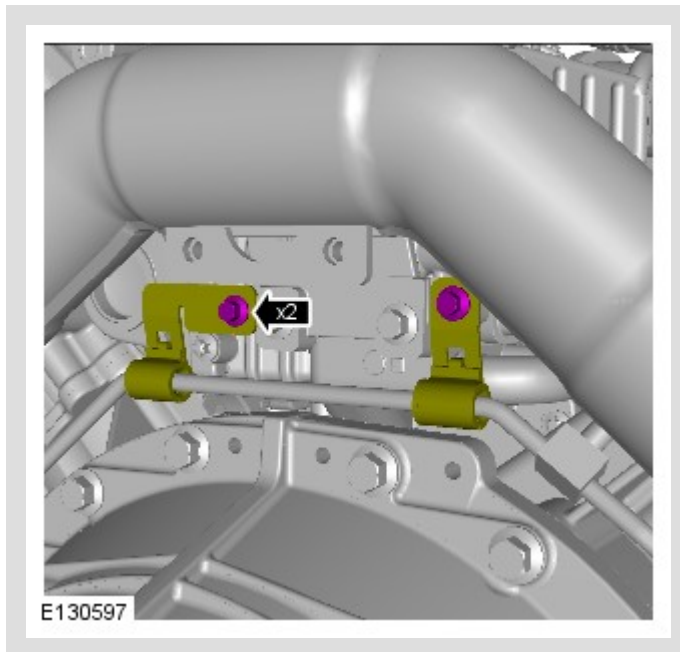


Torque: 10 Nm

9.

⚠ CAUTION:


Install all the bolts finger tight before final tightening.

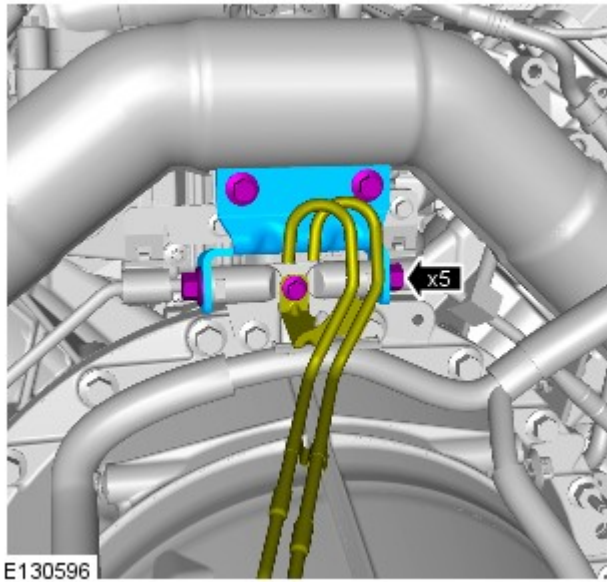

Torque:

M8 23 Nm

M6 10 Nm

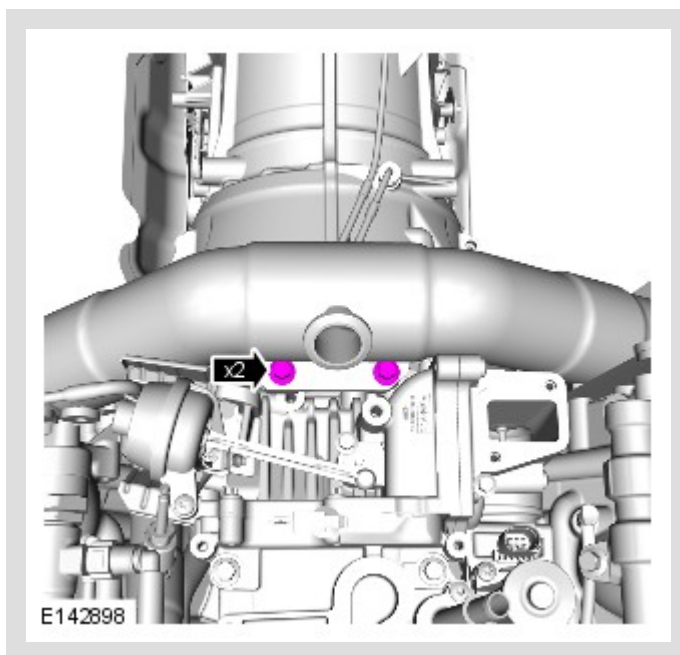


Torque: 23 Nm

11.



NOTE:

Install a new gasket.

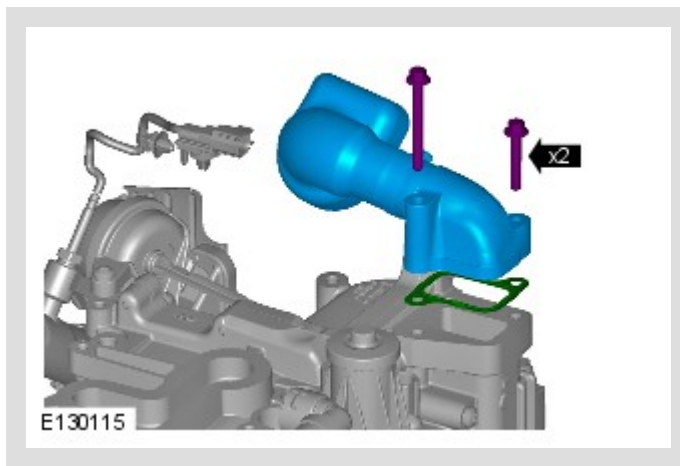

Renew Part: *EGR cooler to EGR valve gasket* : 1 .



Torque: 10 Nm

12.



NOTES:


- Remove and discard the blanking caps.
- Install a new gasket.

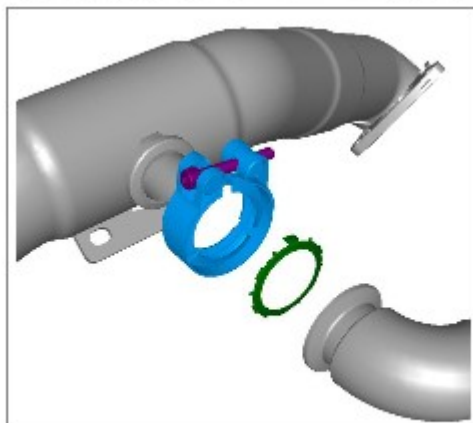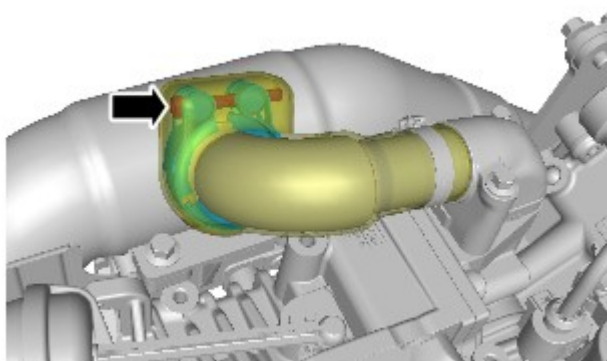

E130116


Renew Part: *EGR pipe to exhaust manifold gasket : 1 .*

Torque: 7 Nm

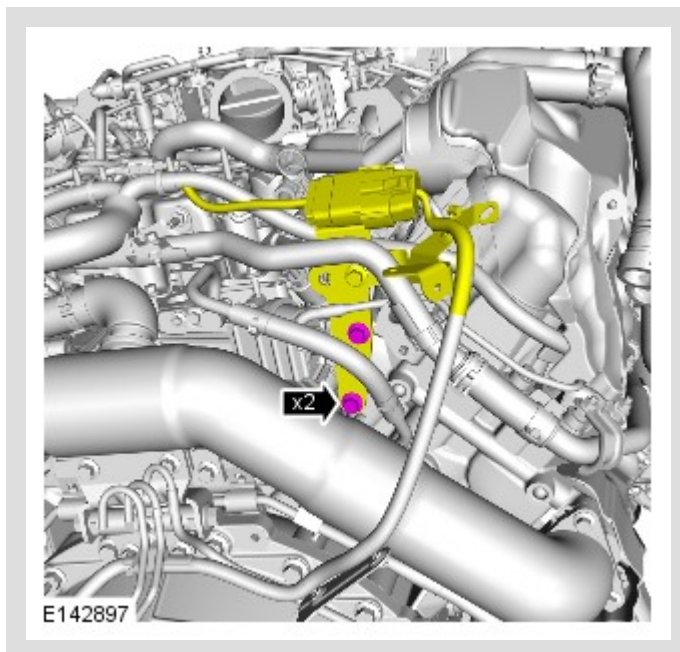

Torque: 25 Nm

14.

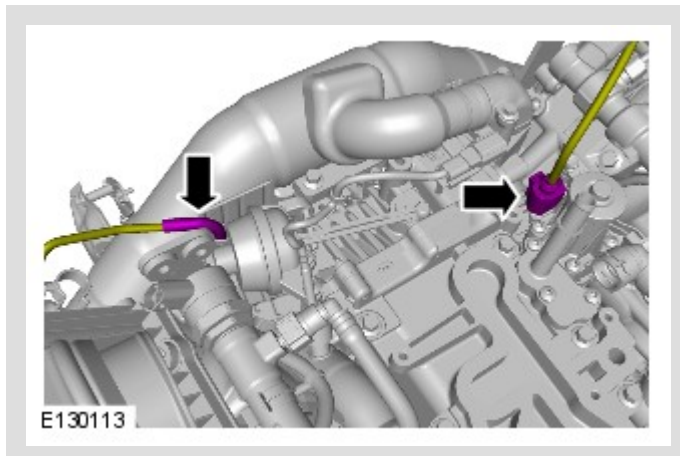



15.

⚠ **CAUTIONS:**

- Make sure that the surface is clean and free of foreign material.
- Install all the bolts finger tight before final tightening.

⚠ **NOTE:**

Install a new gasket.

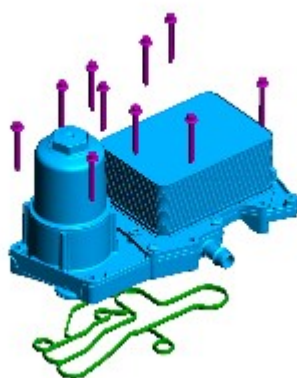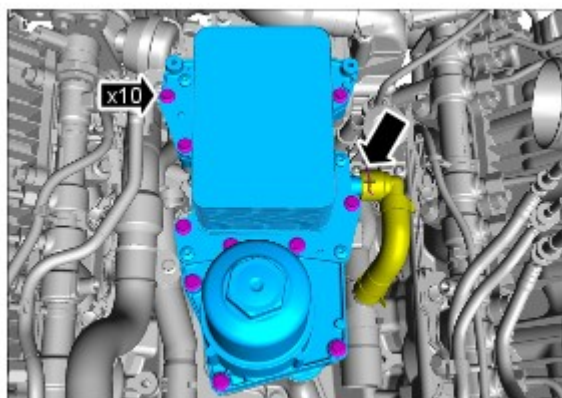

E130123

Renew Part: *Oil cooler seal* : 1 .

Torque: 13 Nm


16.

⚠ CAUTION:

Make sure that the mating faces are clean and free of corrosion and foreign material.

△ NOTE:

Remove and discard the blanking caps.

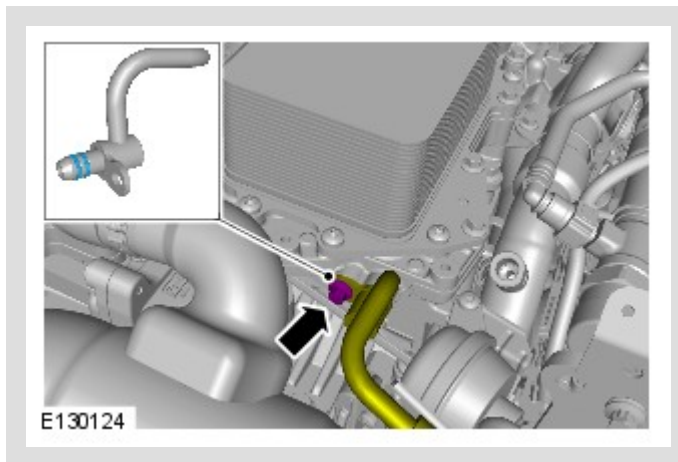


Torque: 10 Nm

17.

⚠ CAUTION:

Install all the bolts finger tight before final tightening.

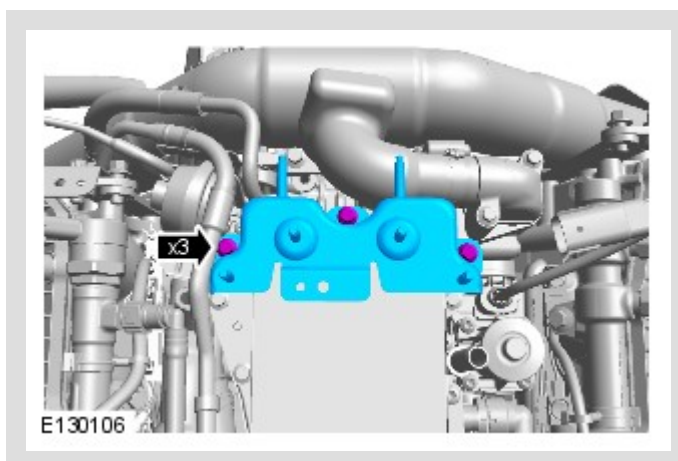


Torque: 10 Nm

18.


△ NOTE:

Remove and discard the blanking caps.

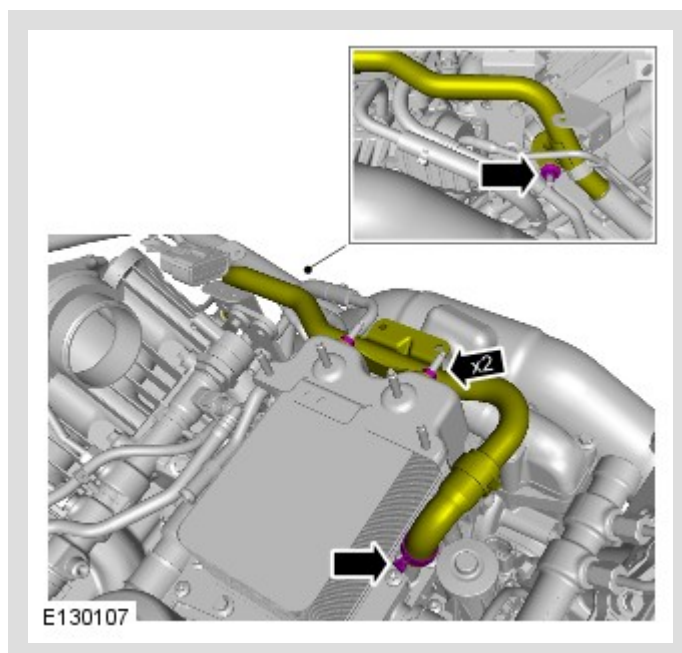


Torque: 10 Nm

19.

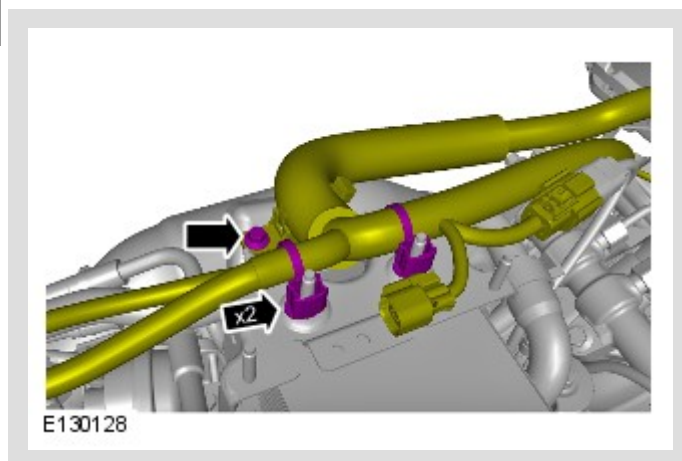

Torque: 10 Nm

20.

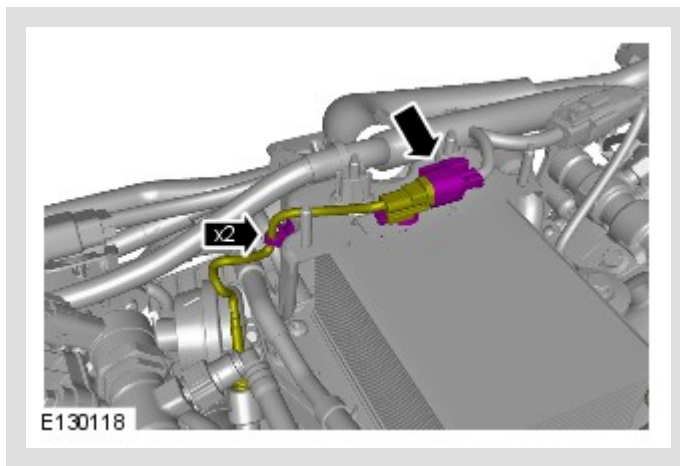


21.

⚠ CAUTION:

Install all the bolts finger tight before final tightening.

△ NOTES:

- Remove and discard the blanking caps.
- Install a new O-ring seal.

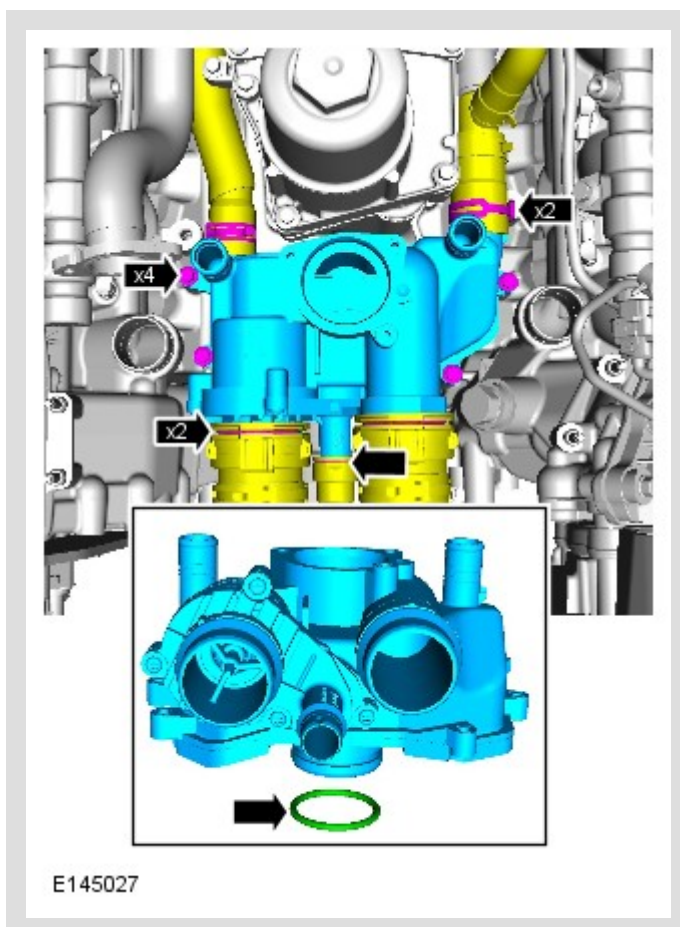

Renew Part: *Thermostat housing seal(s)* : 1 .

Torque: 10 Nm


22.

⚠ CAUTION:

Install all the bolts finger tight before final tightening.

△ NOTES:

- Remove and discard the blanking caps.
- Install a new O-ring seal.

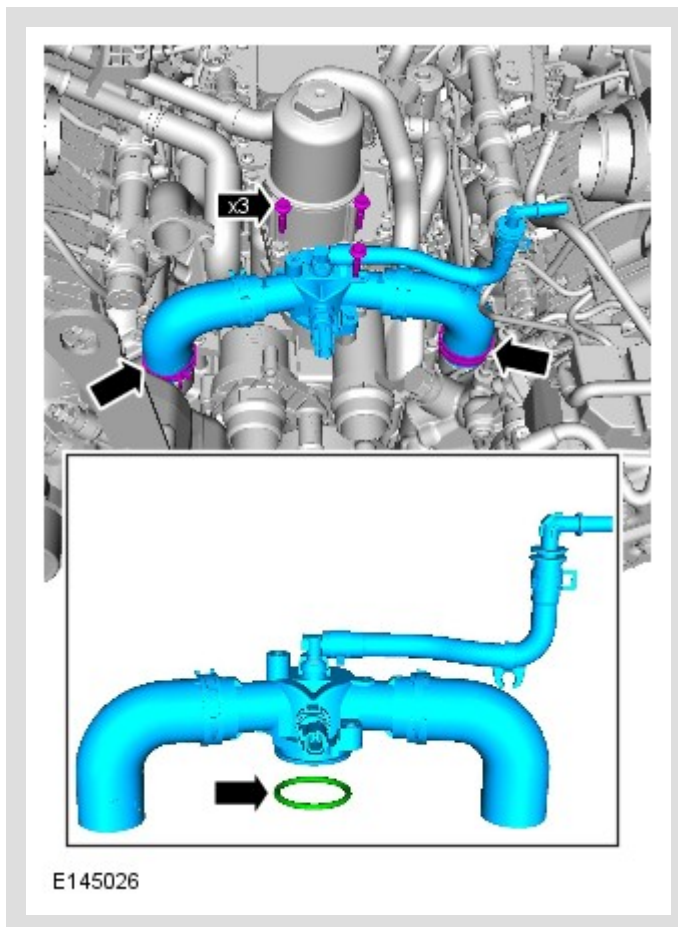

Renew Part: *Thermostat seal* : 1 .


Torque: 10 Nm

23.




NOTE:

Remove and discard the blanking caps.

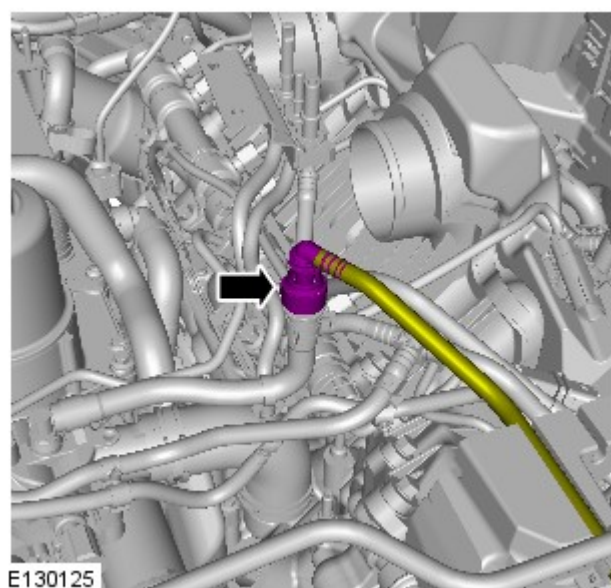


24.

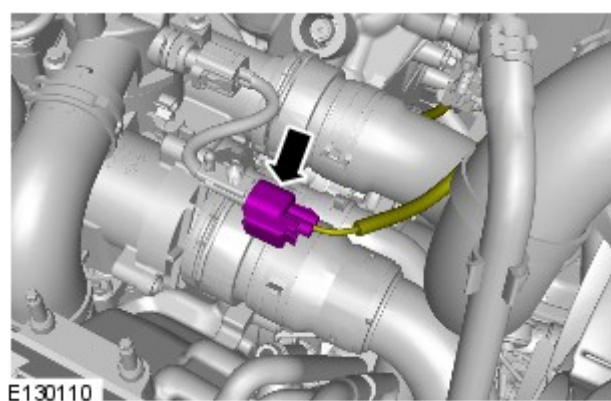

25.

ⓘ CAUTION:

Tighten the component finger tight first.

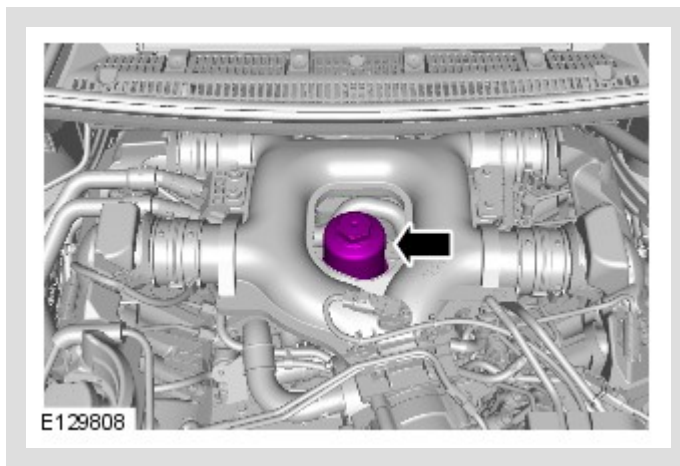

Torque: 35 Nm

-
26. Install the right fuel rail.
Refer to: [Right Fuel Rail](#) (303-04F Fuel Charging and Controls - TDV8 4.4L Diesel, Removal and Installation).

-
27. Check and top-up the engine oil.