

PUBLISHED: 14-AUG-2017
2015.0 RANGE ROVER (LG), 303-08

ENGINE EMISSION CONTROL - TDV8 4.4L DIESEL

EXHAUST GAS RECIRCULATION VALVE OUTLET TUBE

(G1509518)

REMOVAL AND INSTALLATION

17.45.21	TUBE - EGR VALVE OUTLET - LH - RENEW	4400 CC, TDV8, WITHOUT FUEL FIRED BOOSTER HEATER	4.5	USED WITHINS	
----------	---	--	-----	-----------------	--

PART(S)

STEP	REPLACE PART / RENEW PART	PART NAME	
Installation Step 1	Renew Part	Exhaust gas recirculation gasket	1
Installation Step 1	Renew Part	Low pressure exhaust gas recirculation cooler O-ring seal	1
Installation Step 2	Renew Part	Exhaust gas recirculation valve to crossover pipe gasket	1
Installation Step 8	Renew Part	EGR cooler to EGR valve gasket	1
Installation Step 9	Renew Part	EGR pipe to exhaust manifold gasket	1
Installation Step 12	Renew Part	Oil cooler seal	1
Installation Step 18	Renew Part	Thermostat housing seal(s)	1
Installation Step 19	Renew Part	Thermostat seal	1

REMOVAL




NOTE:

- This procedure contains some variation in the illustrations depending on the vehicle specification, but the essential information is always correct.
- This procedure contains illustrations showing certain components removed to provide extra clarity.

1. Remove the right fuel rail.


Refer to: [Right Fuel Rail](#) (303-04F Fuel Charging and Controls - TDV8 4.4L Diesel, Removal and Installation).

- 2.

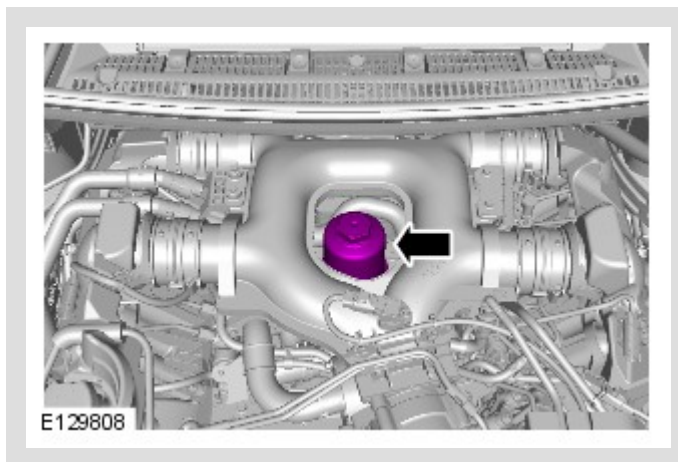

- Loosen the oil filter cover 3 turns and allow the engine oil to drain.


- 3.

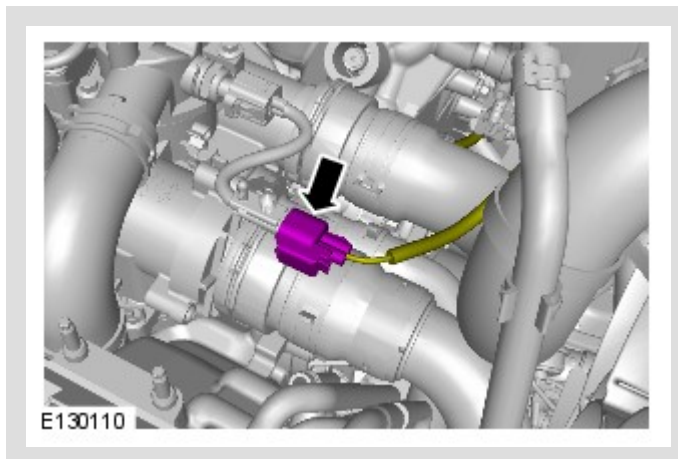

- 4.

⚠ CAUTIONS:

- Be prepared to collect escaping coolant.
- Make sure that all openings are sealed. Use new blanking caps.

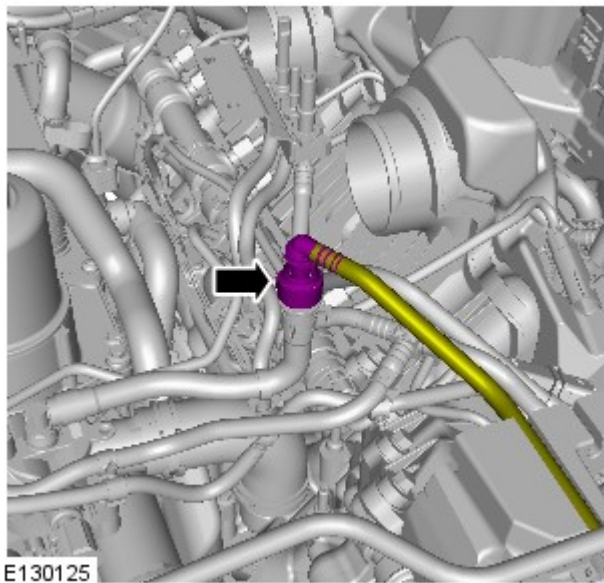


5.

⚠ CAUTIONS:

- Be prepared to collect escaping coolant.
- Make sure that all openings are sealed. Use new blanking caps.

⚠ NOTE:

Remove and discard the O-ring seal.

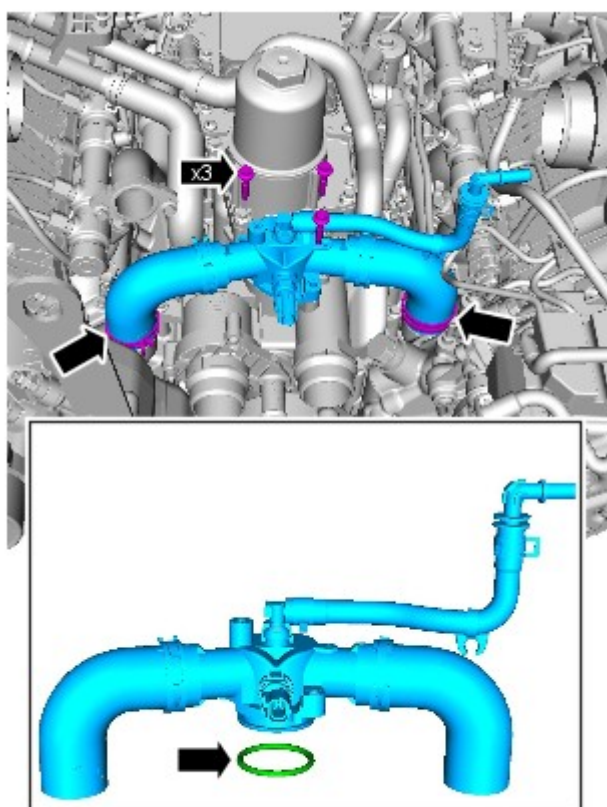

E145026


6.

⚠ CAUTIONS:


- Clamp the hoses to minimize coolant loss.
- Be prepared to collect escaping coolant.
- Make sure that all openings are sealed. Use new blanking caps.

⚠ NOTE:


Remove and discard the O-ring seal.

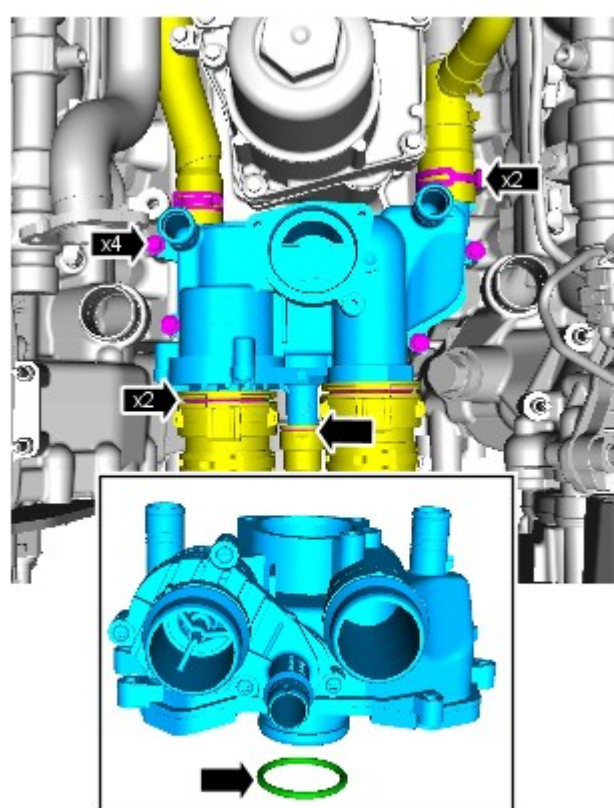

E145027

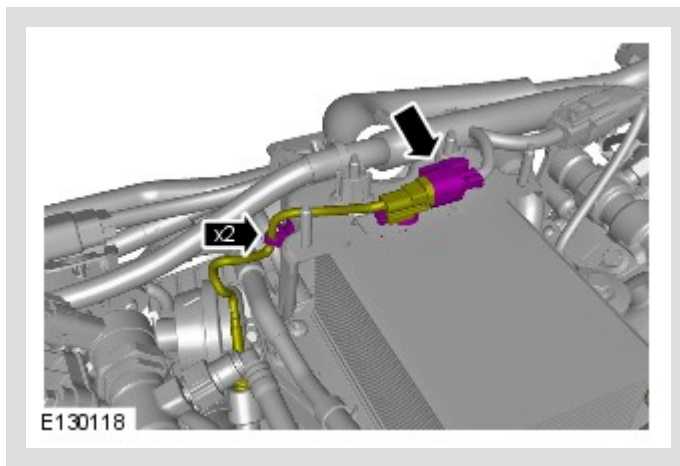


8.

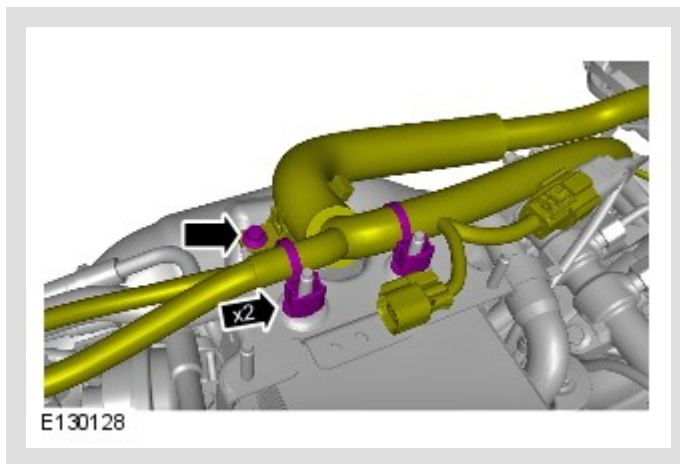


9.

⚠ CAUTION:

Make sure that all openings are sealed. Use new blanking caps.

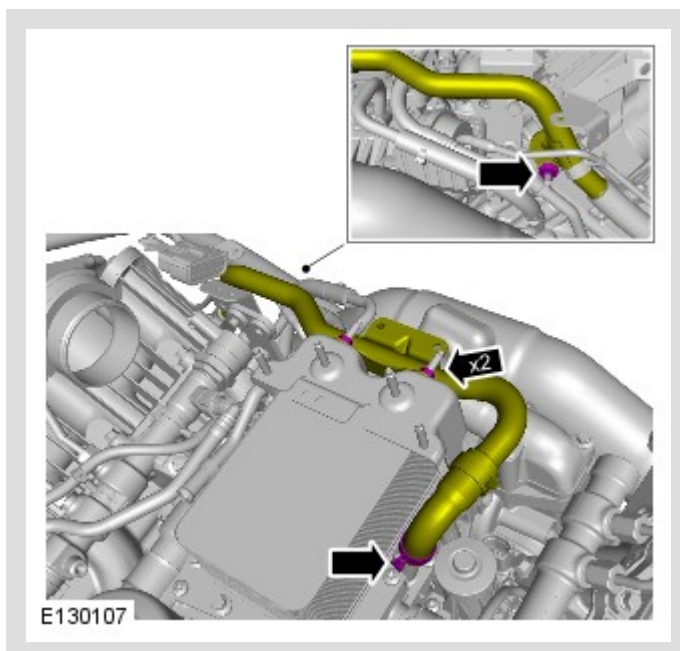


10.

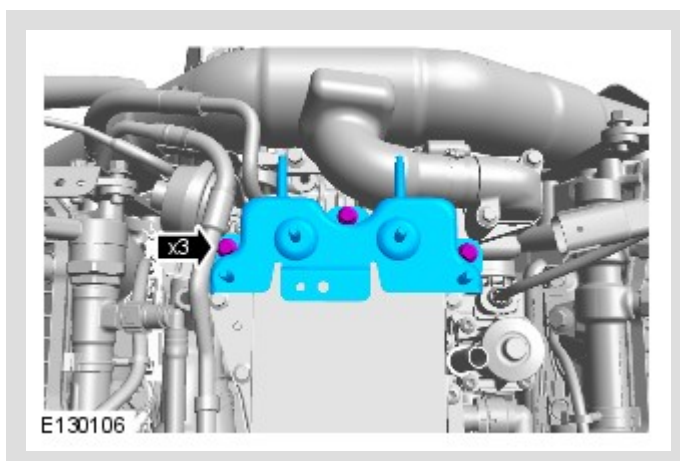

11.

⚠ CAUTIONS:

- Be prepared to collect escaping oil.
- Make sure that all openings are sealed. Use new blanking caps.
- Inspect the O-rings, replace if damaged.

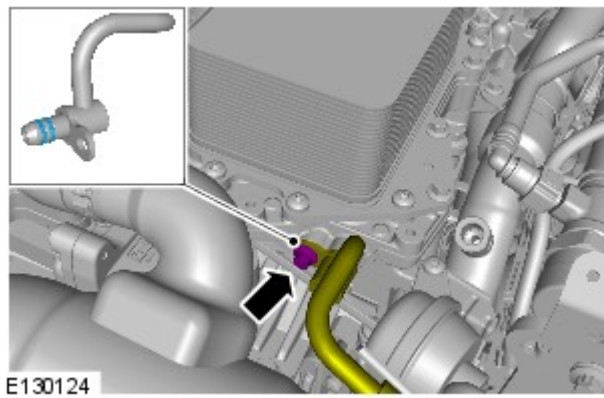



12.

⚠ CAUTIONS:

- Be prepared to collect escaping oil.
- Be prepared to collect escaping coolant.


⚠ NOTE:

Remove and discard the gasket.

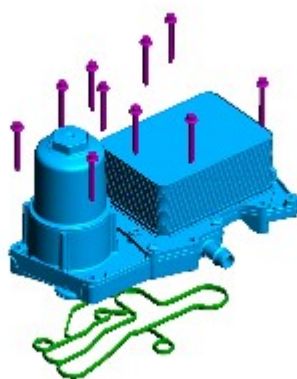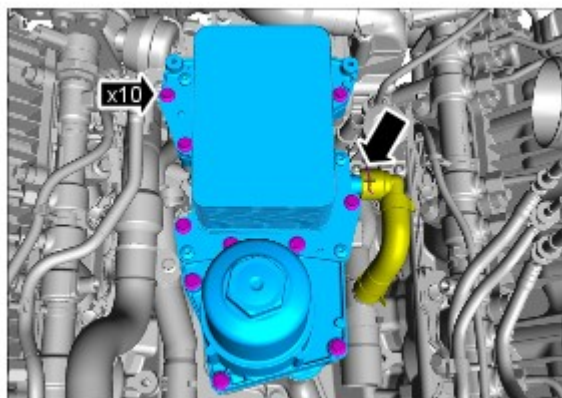


E130123

13.

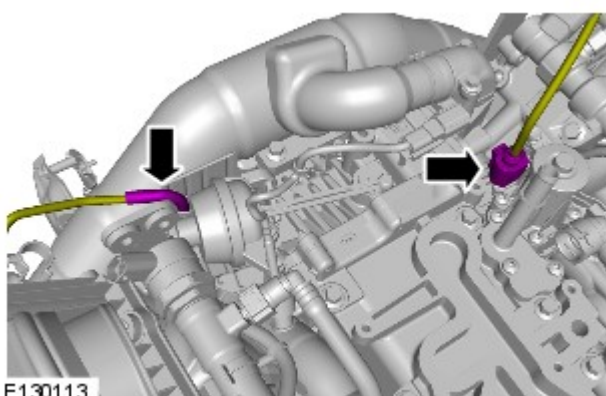

E130113

14.

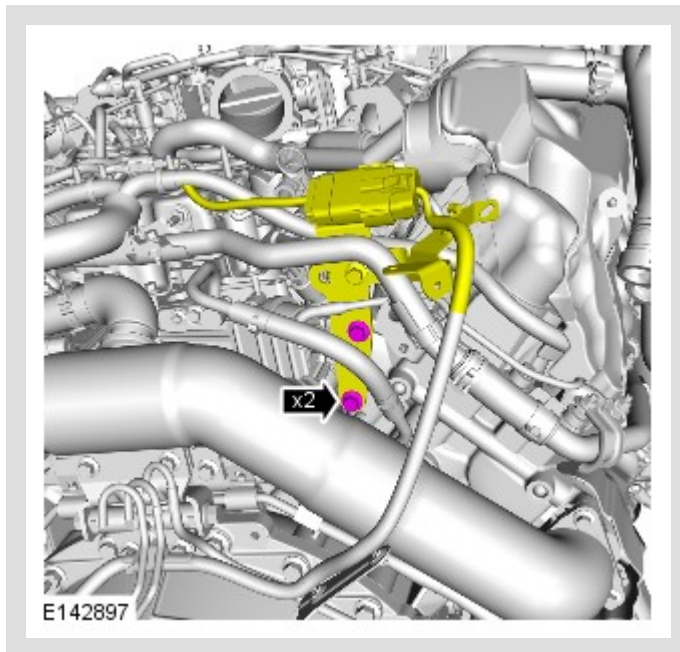



15.

⚠ CAUTION:

Make sure that all openings are sealed. Use new blanking caps.

⚠ NOTE:

Remove and discard the gasket.

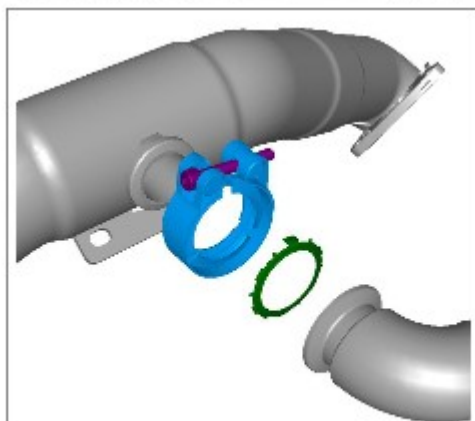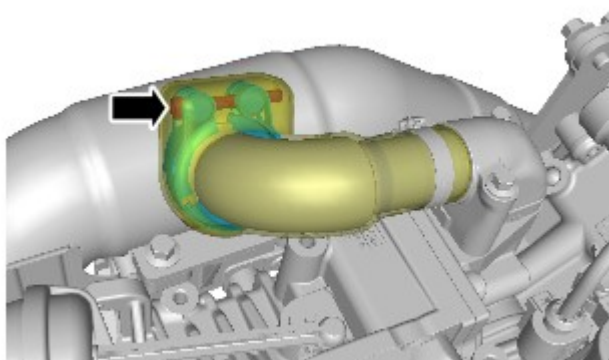


E130116

16.




NOTE:


Remove and discard the gasket.

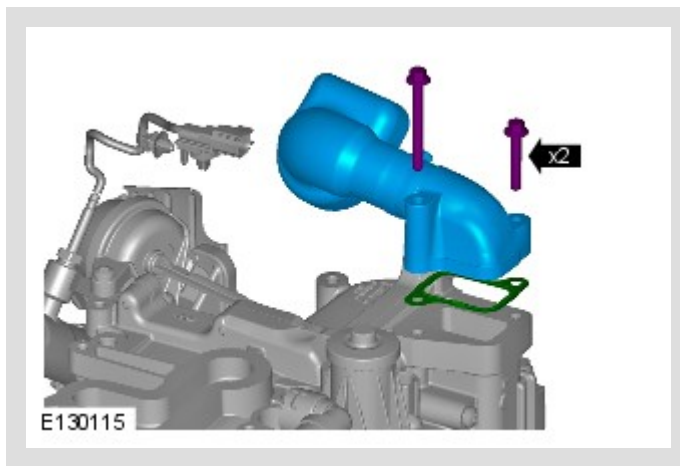

17.

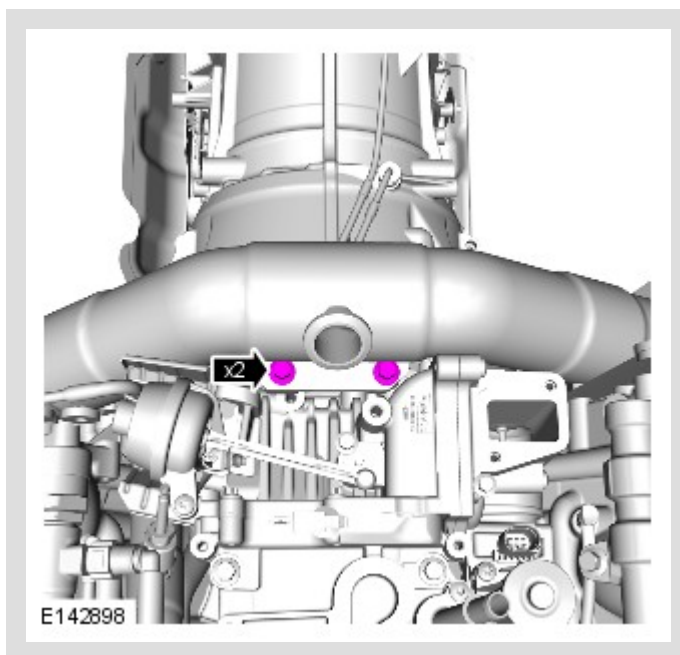


18.

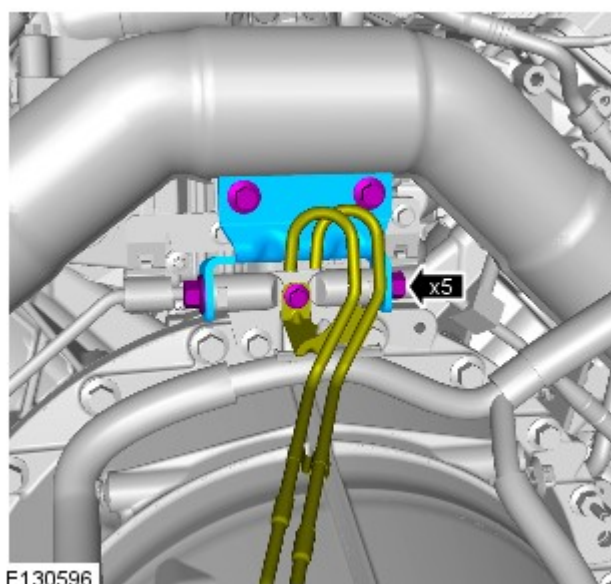


E130596

19.

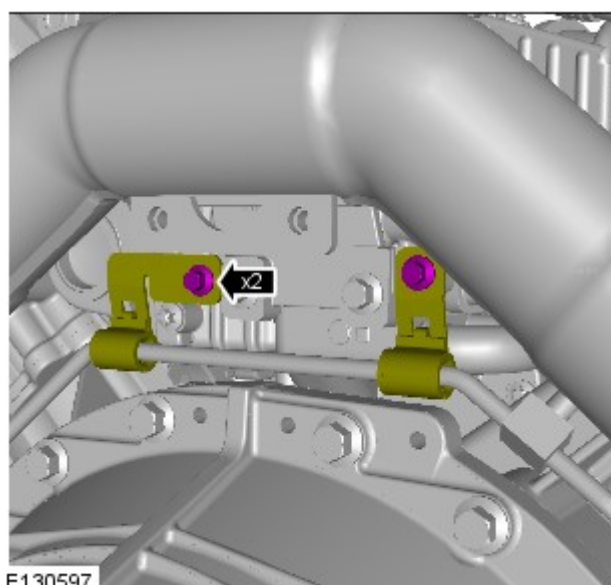


E130597

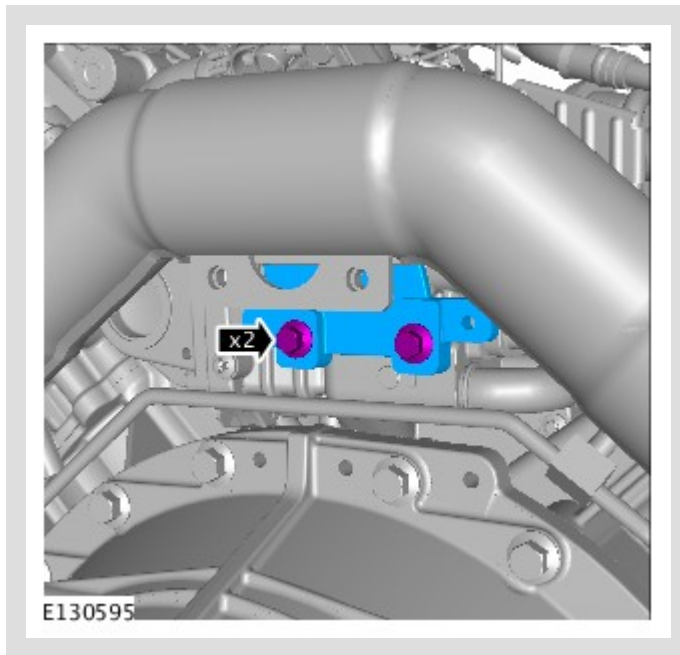

⚠ CAUTIONS:

- Be prepared to collect escaping oil.
- Be prepared to collect escaping coolant.

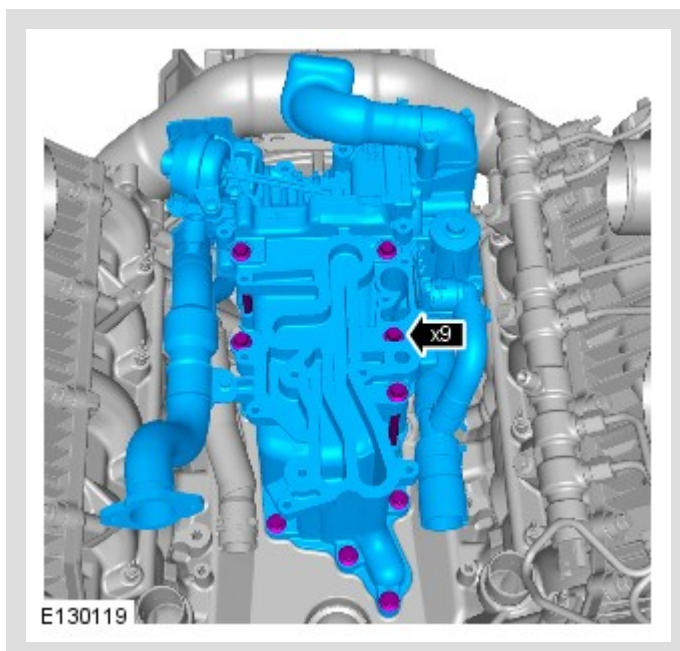


22.



NOTE:

Remove and discard the gasket.

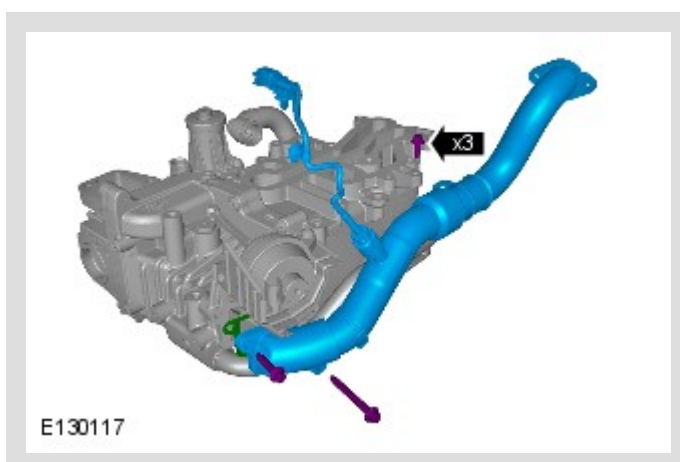

23.




CAUTION:

Inspect the seal, replace if damaged.



NOTE:

Remove and discard the gasket.

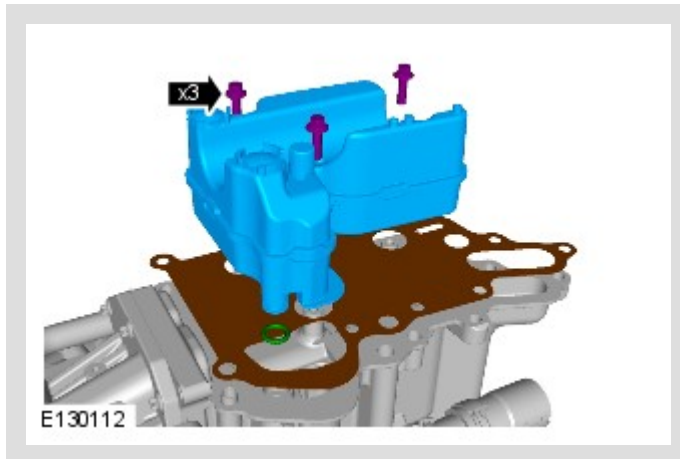

INSTALLATION

1.




CAUTION:

Make sure that the mating surfaces are clean and free of corrosion and foreign material.



NOTE:

Install a new gasket.

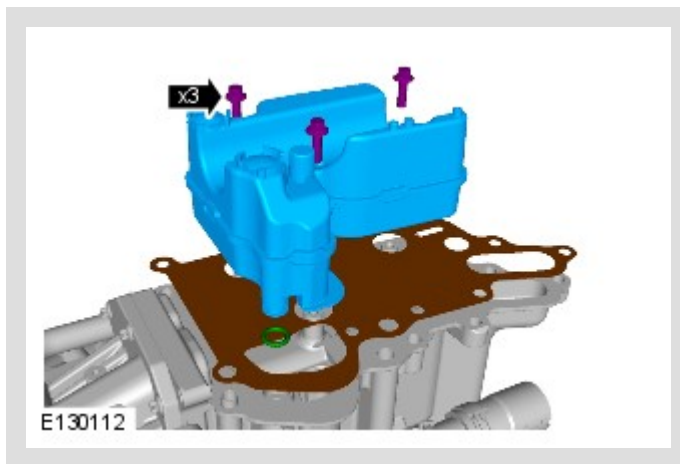

Renew Part: *Exhaust gas recirculation gasket* : 1 .

Renew Part: *Low pressure exhaust gas recirculation cooler O-ring seal* : 1 .

Torque: 5 Nm


2.

⚠ CAUTION:

Install all the bolts finger tight before final tightening.

△ NOTE:

Install a new gasket.

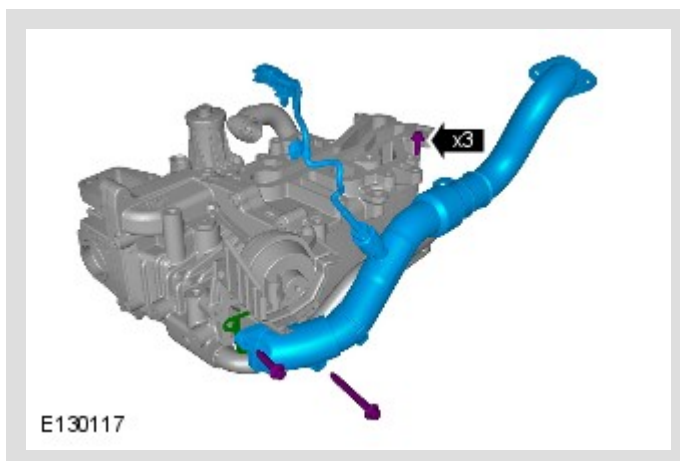


Renew Part: *Exhaust gas recirculation valve to crossover pipe gasket* : 1 .

Torque: 10 Nm


3.

⚠ CAUTIONS:

- Make sure that the mating faces are clean and free of corrosion and foreign material.
- Install all the bolts finger tight before final tightening.

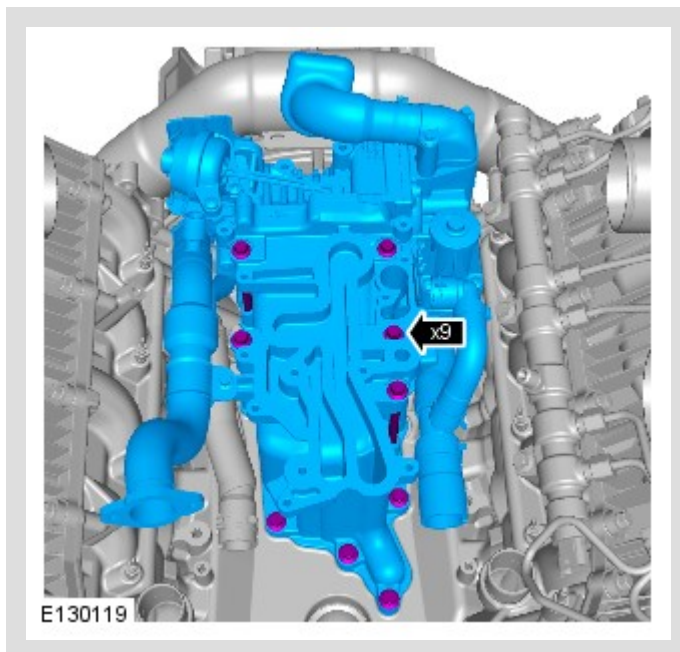


Torque: 23 Nm

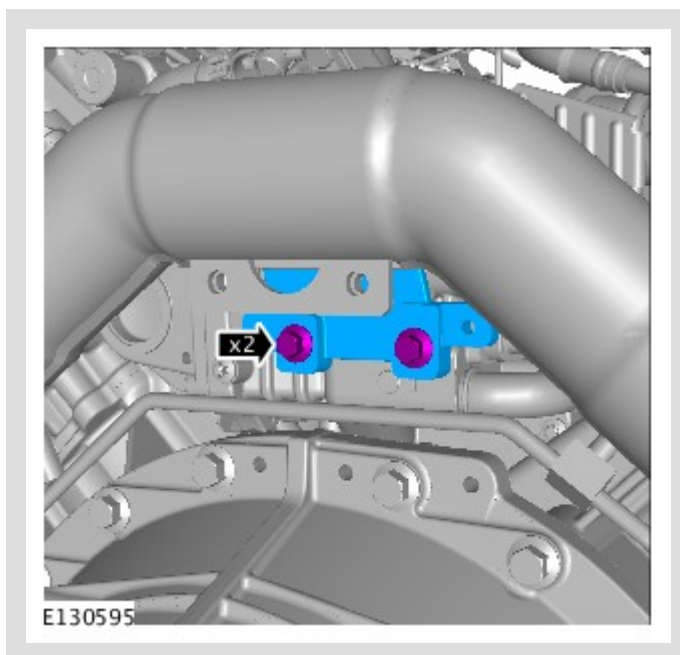

Torque: 23 Nm

5.

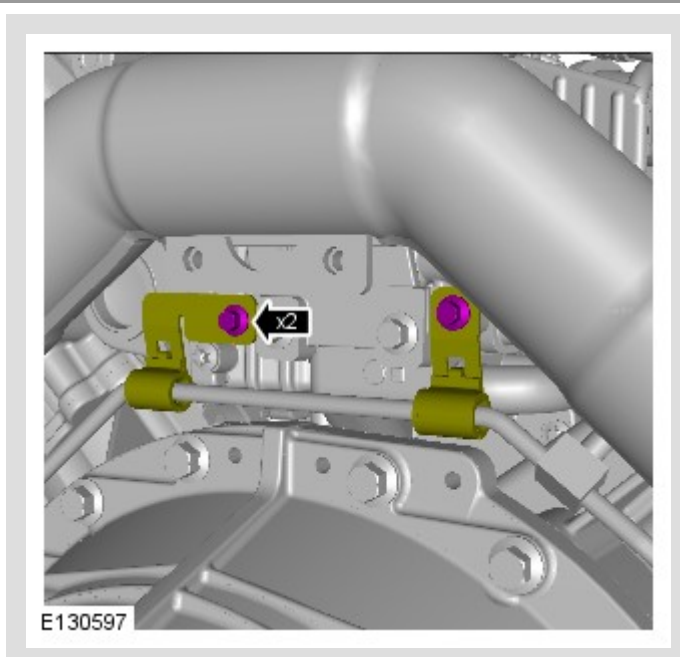


Torque: 10 Nm

6.



CAUTION:


Install all the bolts finger tight before final tightening.

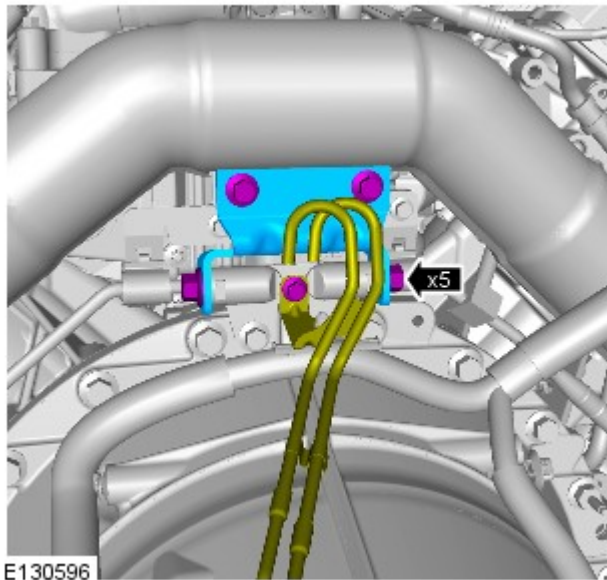

Torque:

M8 23 Nm

M6 10 Nm

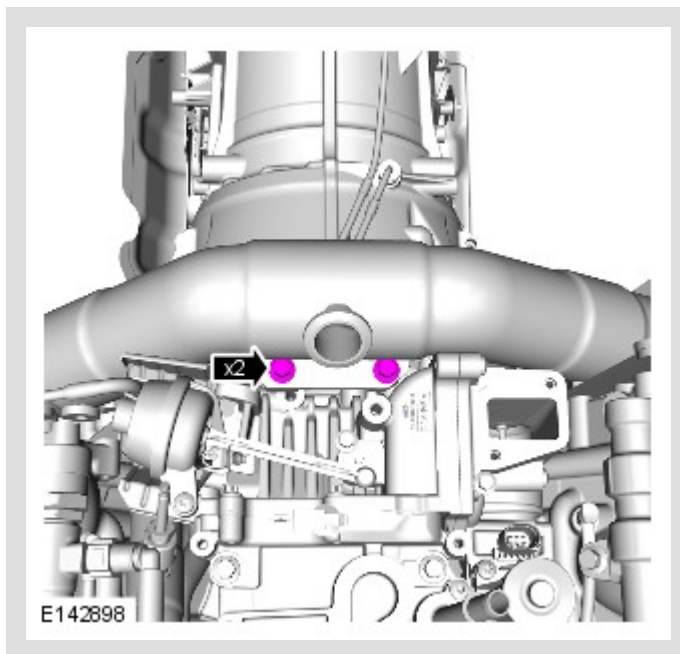


Torque: 23 Nm

8.



NOTE:

Install a new gasket.

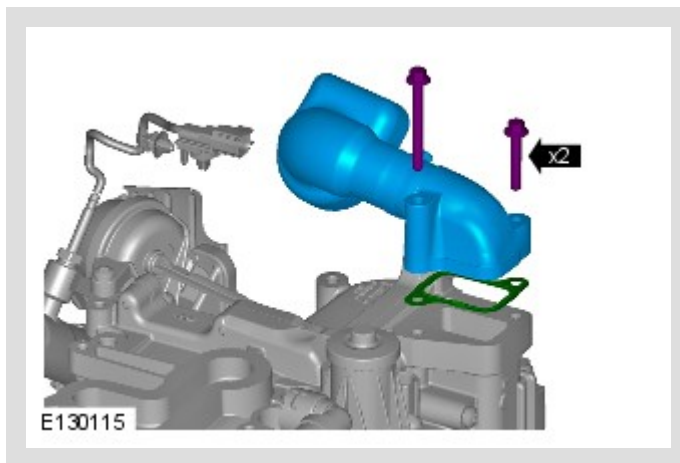

*Renew Part: **EGR cooler to EGR valve gasket** : 1 .*


Torque: 10 Nm

9.




NOTES:

- Remove and discard the blanking caps.
- Install a new gasket.

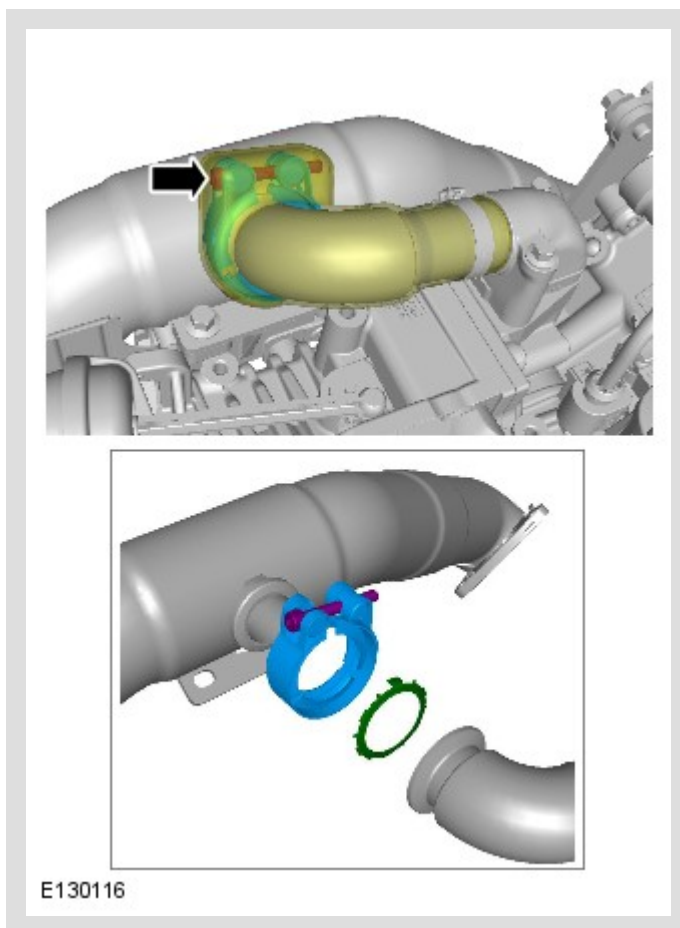


Renew Part: *EGR pipe to exhaust manifold gasket : 1 .*
Torque: 7 Nm

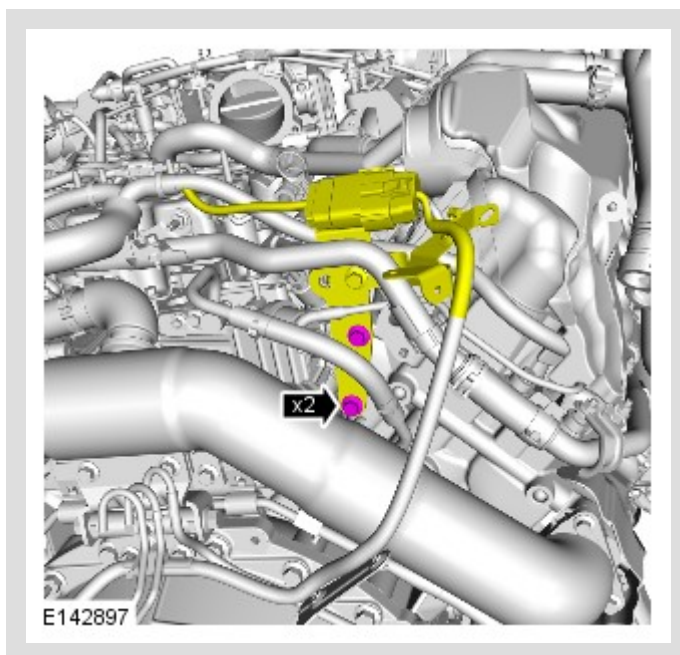

Torque: 25 Nm

11.

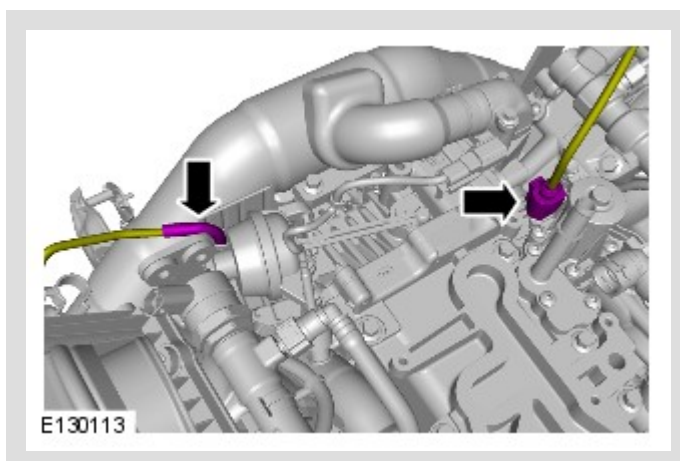

12.





CAUTIONS:

- Make sure that the surface is clean and free of foreign material.
- Install all the bolts finger tight before final tightening.



NOTE:

Install a new gasket.

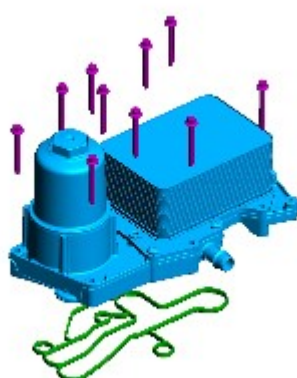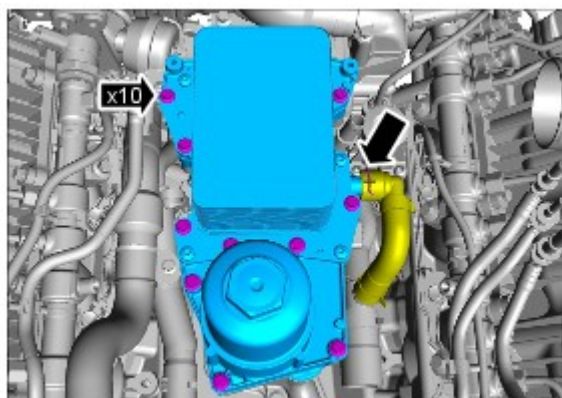

E130123

Renew Part: *Oil cooler seal* : 1 .

Torque: 13 Nm

13.




CAUTION:

Make sure that the mating faces are clean and free of corrosion and foreign material.



NOTE:

Remove and discard the blanking caps.

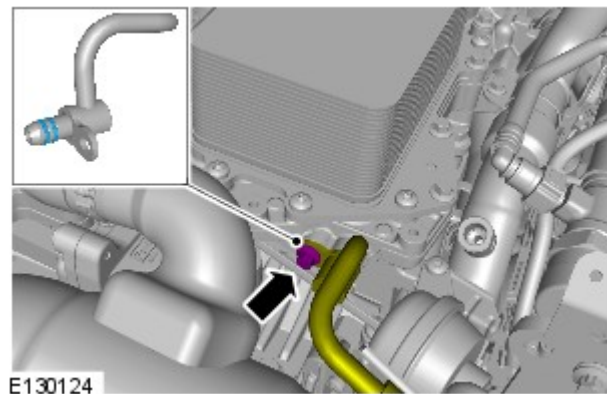


Torque: 10 Nm

14.



CAUTION:

Install all the bolts finger tight before final tightening.

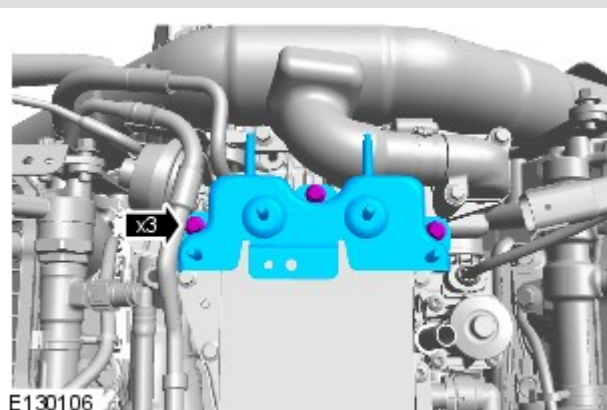


Torque: 10 Nm

15.




NOTE:

Remove and discard the blanking caps.

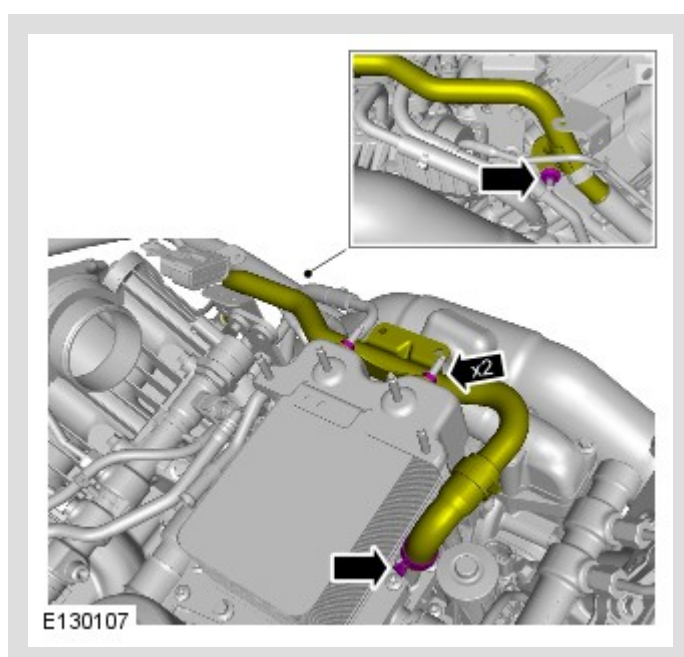


Torque: 10 Nm

16.

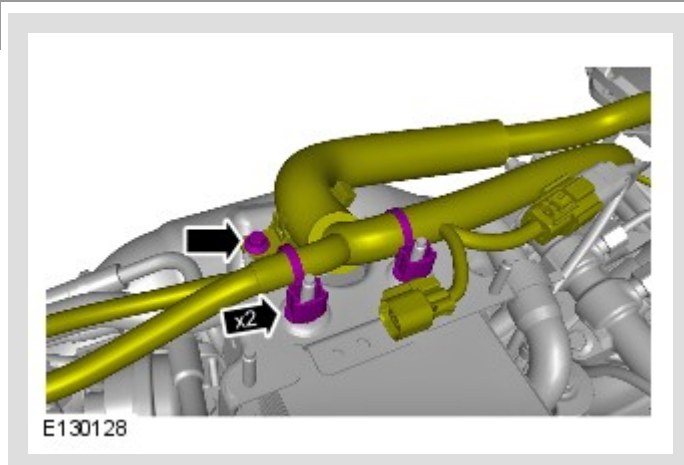

Torque: 10 Nm

17.

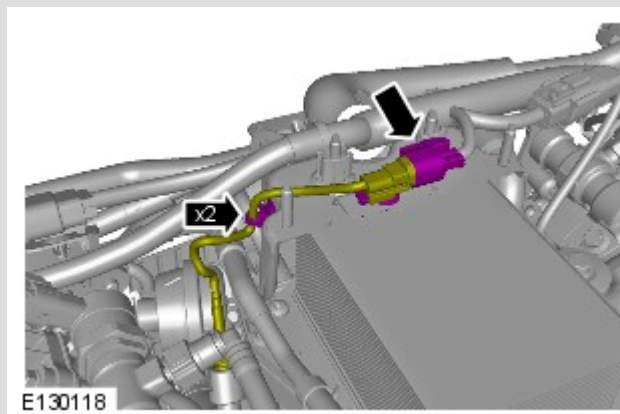


18.

⚠ CAUTION:

Install all the bolts finger tight before final tightening.

⚠ NOTES:

- Remove and discard the blanking caps.
- Install a new O-ring seal.

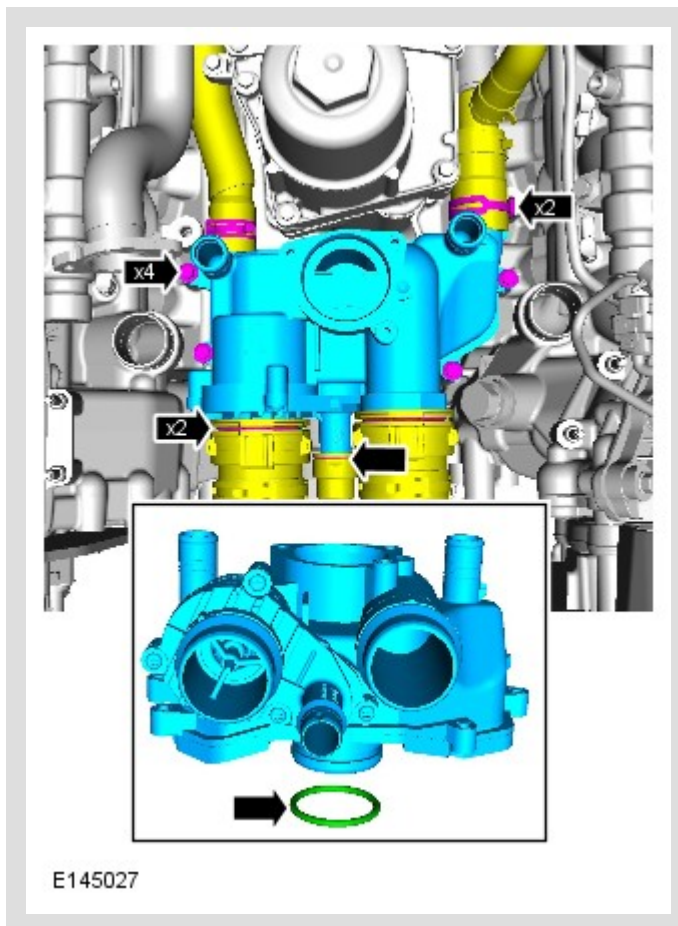

Renew Part: *Thermostat housing seal(s)* : 1 .

Torque: 10 Nm


19.

⚠ CAUTION:

Install all the bolts finger tight before final tightening.

△ NOTES:

- Remove and discard the blanking caps.
- Install a new O-ring seal.

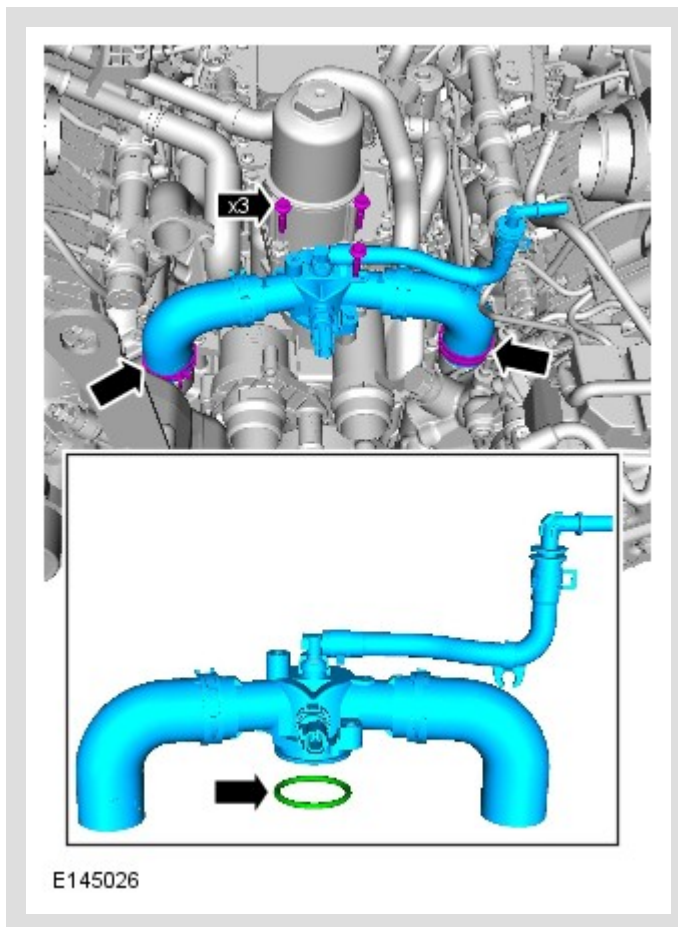

Renew Part: *Thermostat seal* : 1 .


Torque: 10 Nm

20.




NOTE:

Remove and discard the blanking caps.

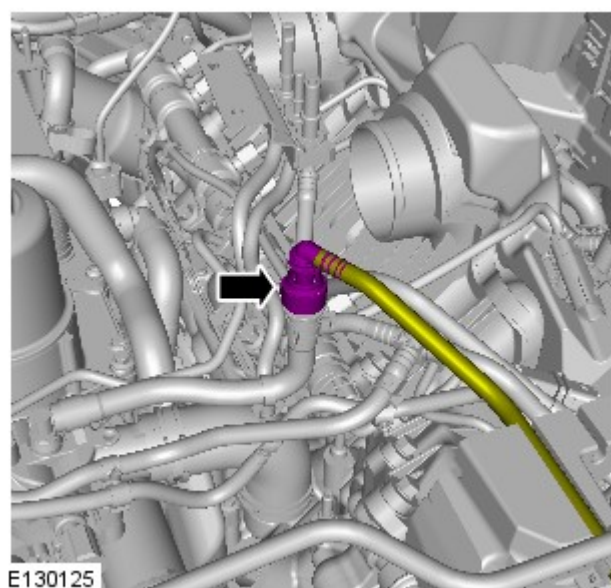


21.

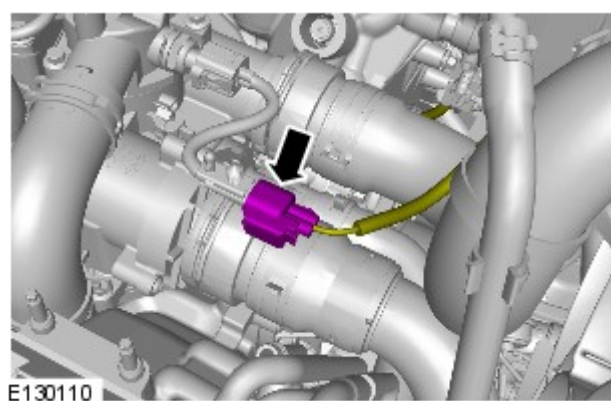

22.

⚠ CAUTION:

Tighten the component finger tight first.

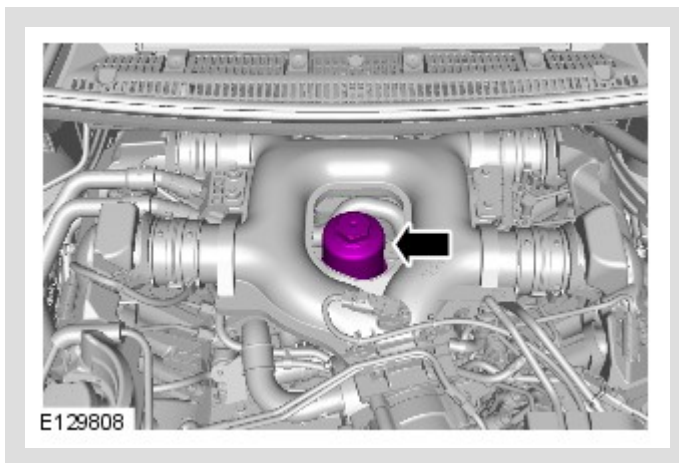

Torque: 35 Nm

-
23. Install the right fuel rail.
Refer to: [Right Fuel Rail](#) (303-04F Fuel Charging and Controls - TDV8 4.4L Diesel, Removal and Installation).

-
24. Check and top-up the engine oil.