

2016.0 RANGE ROVER (LG), 309-00

EXHAUST SYSTEM - TDV6 3.0L DIESEL

EXHAUST SYSTEM - VEHICLES WITH: DIESEL EXHAUST FLUID

[G1875430]

REMOVAL AND INSTALLATION

SPECIAL TOOL(S)



310-121

Wrench, H02S

GENERAL EQUIPMENT

EQUIPMENT NAME

Land Rover diagnostic equipment

PART(S)

STEP	REPLACE PART / RENEW PART	PART NAME
Step 20	Renew Part	Diesel exhaust fluid injector seal
Step 20	Renew Part	Diesel exhaust fluid injector clamp and bolt

REMOVAL

WARNING:

Observe due care when working near a hot exhaust system.

NOTE:

Removal steps in this procedure may contain installation details.

 All vehicles


1.

WARNING:


Make sure to support the vehicle with axle stands.

Raise and support the vehicle.


2.

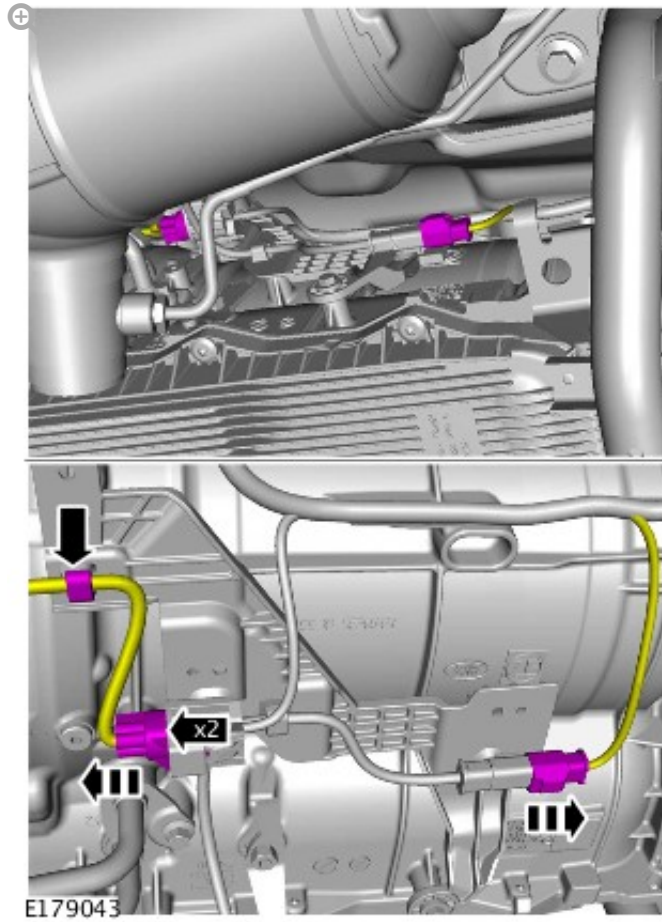


3.

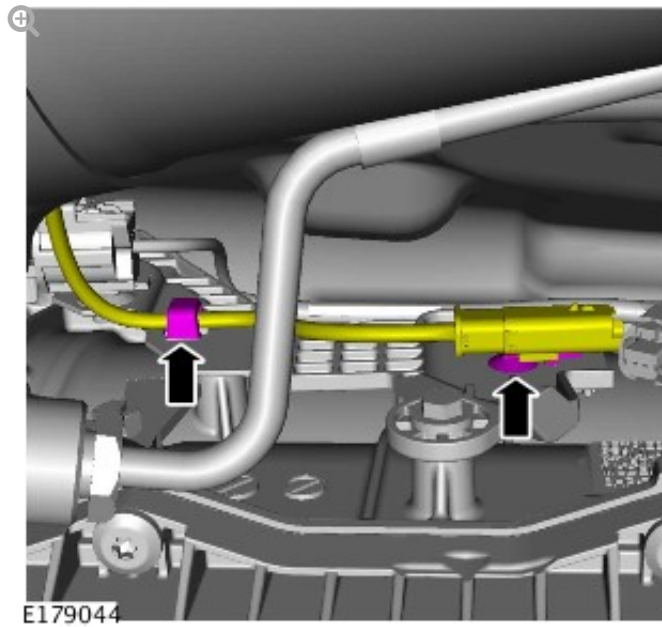


4.

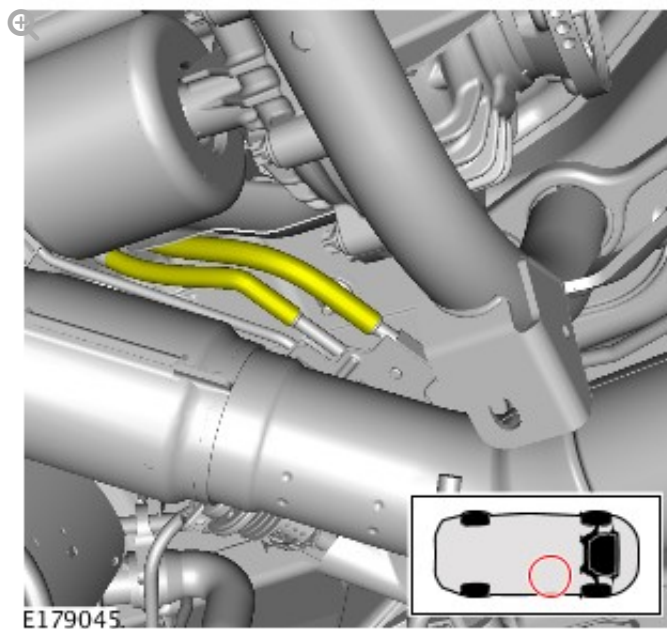

5.

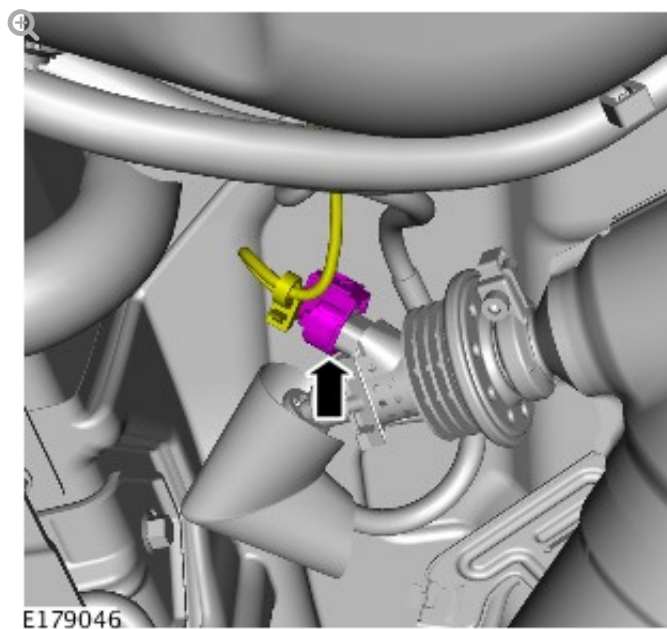

6.

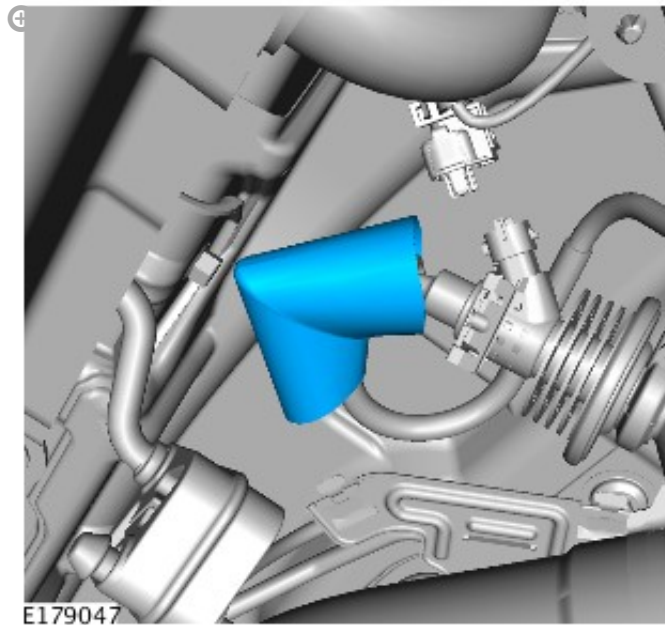

7.

WARNING:


Be prepared to collect escaping fluid.

CAUTION:


Make sure that the area around the component is clean and free of foreign material.

NOTE:


Make sure that all openings are sealed. Use new blanking caps.

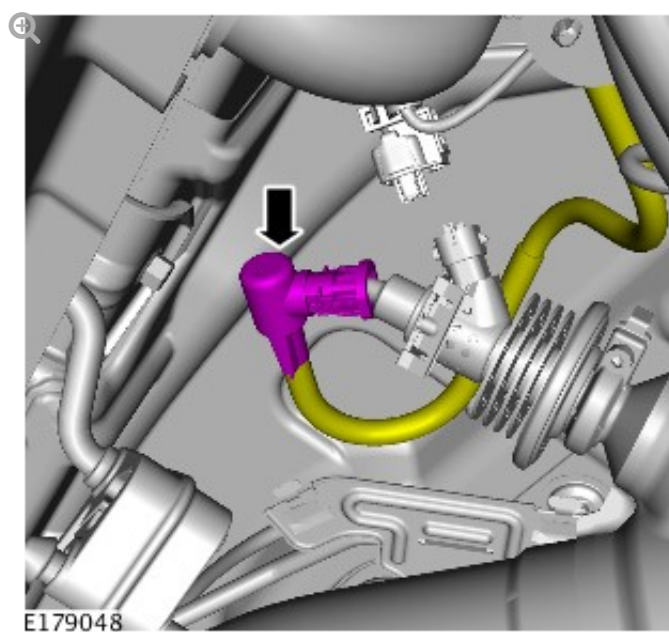


8.

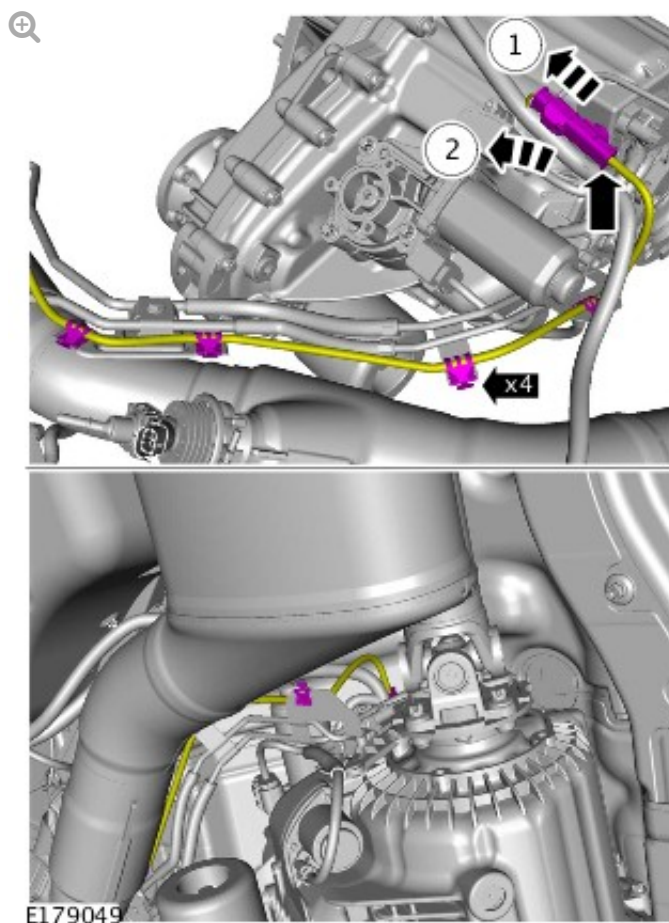

9.

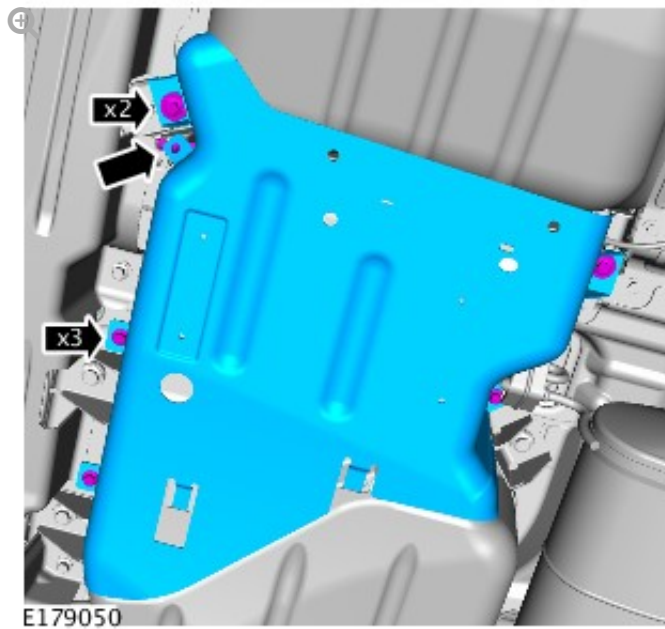

10.

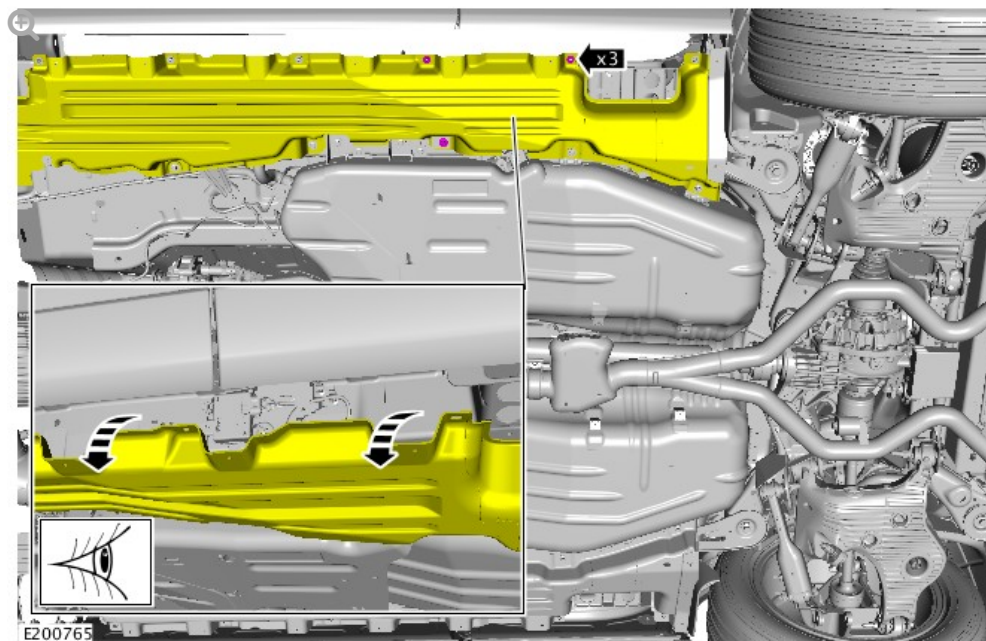

- Remove the nuts.
- Using a suitable tool move the aeroshield down to gain access to the Nitrogen Oxide (NOx) sensor control module.




All vehicles

11.

CAUTION:


Make sure that the area around the component is clean and free of foreign material.

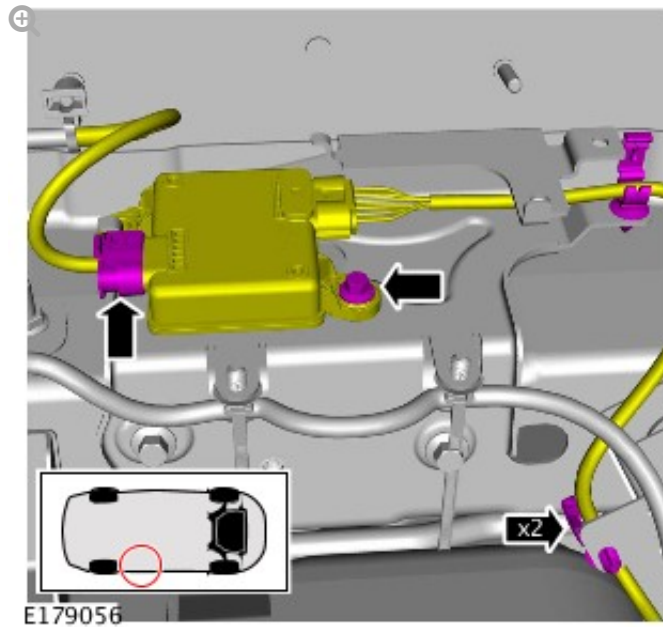

12.

CAUTION:


Take extra care not to damage the component.

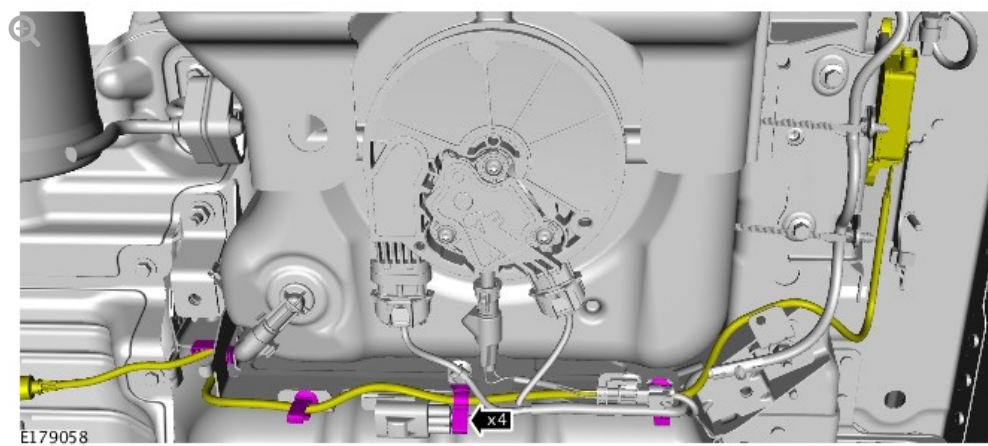


13.

CAUTION:

Take extra care not to damage the component.

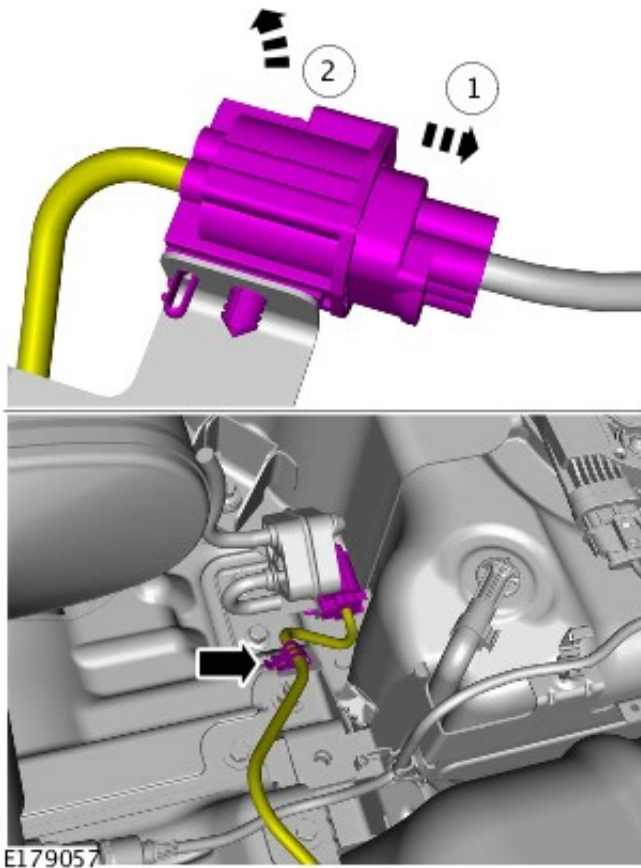


14.

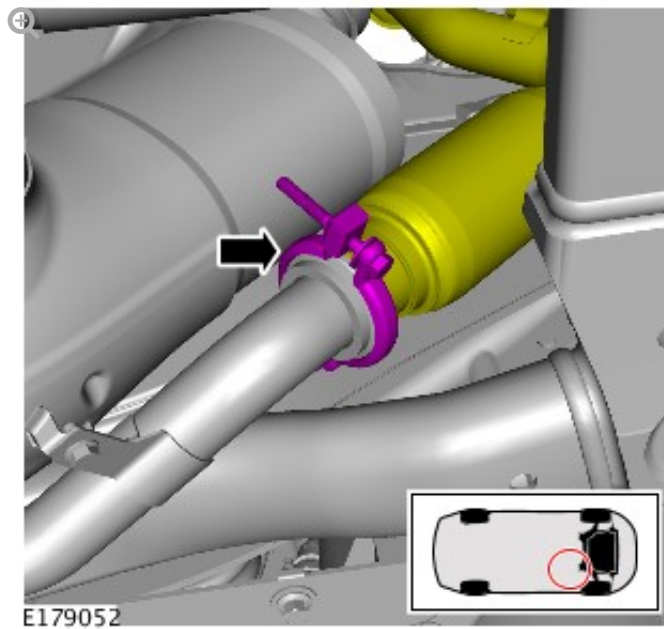


Torque: 9 Nm

15.

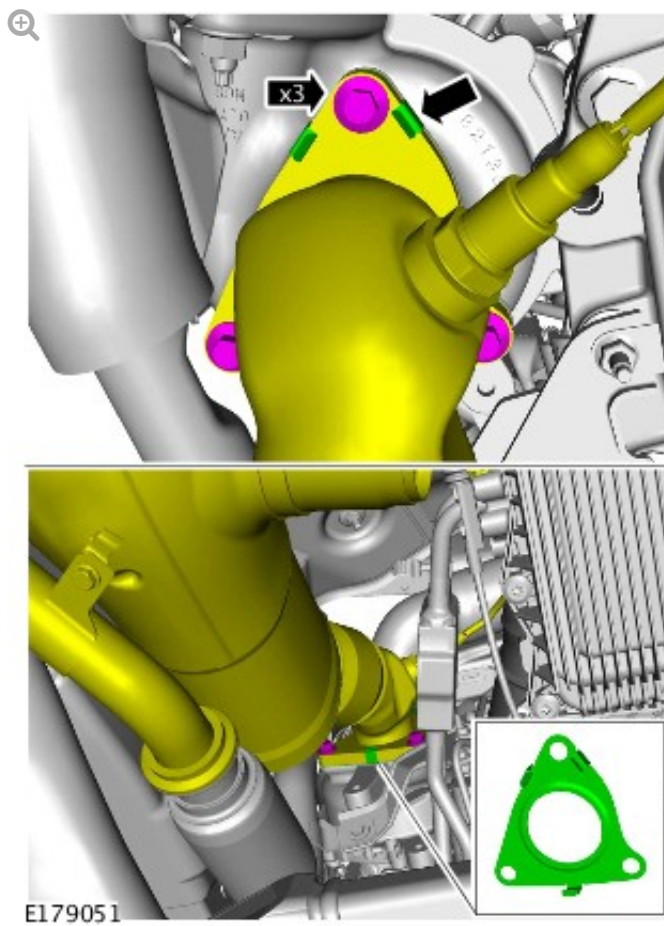

Torque: 28 Nm

16.

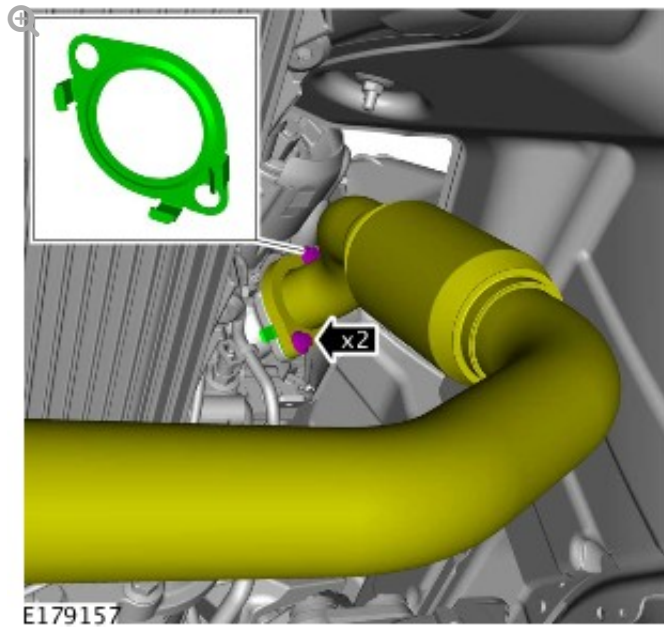


Vehicles with twin turbo system:

Torque: 28 Nm

17.

CAUTION:


Make sure that the exhaust system is supported with suitable retaining straps.

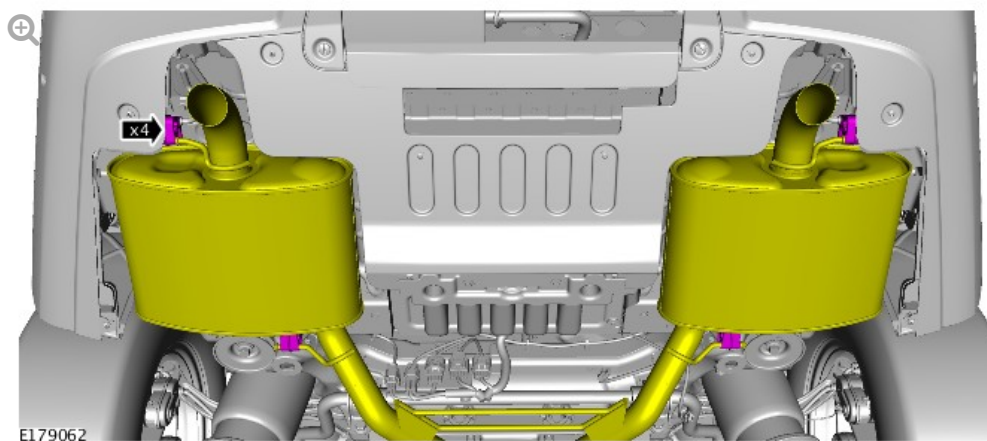

18.

CAUTION:

Make sure that the exhaust system is supported with suitable retaining straps.

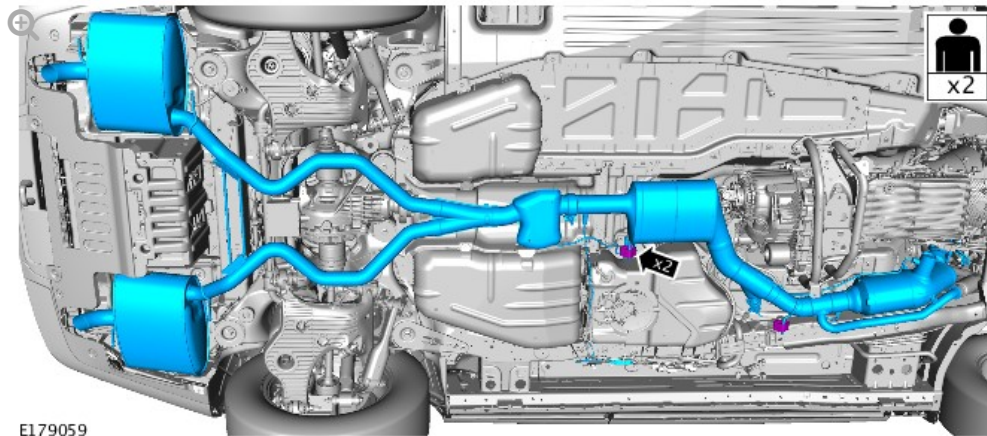


Vehicles with mono turbo system:

19.

CAUTION:

Make sure that the exhaust system is supported with suitable retaining straps.

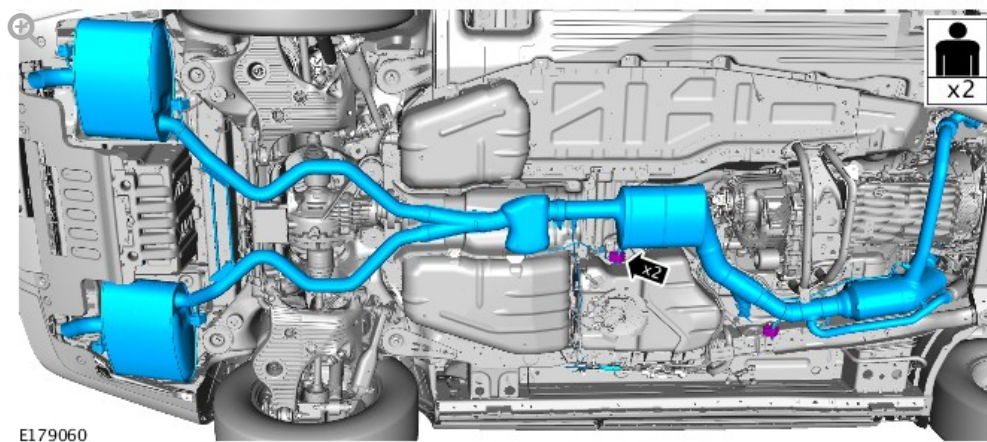


Vehicles with twin turbo system:

CAUTION:

Discard the seal.

NOTES:

- Do not disassemble further if the component is removed for access only.
- Discard the bolt and clamp.

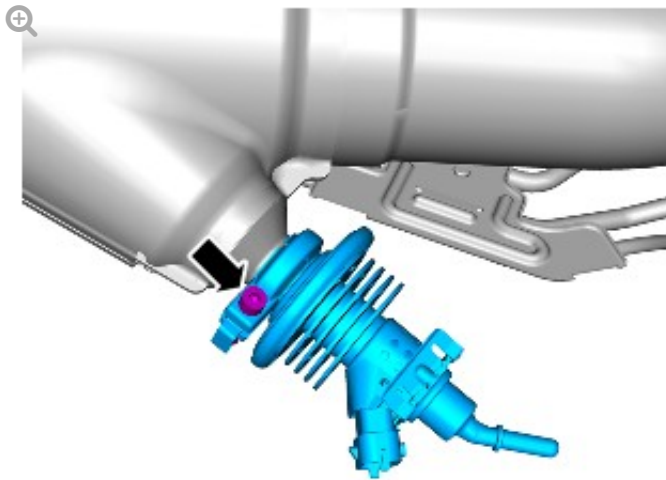


E179061

Renew Part: *Diesel exhaust fluid injector seal.*

Renew Part: *Diesel exhaust fluid injector clamp and bolt.*


Torque: **5 Nm**

21.

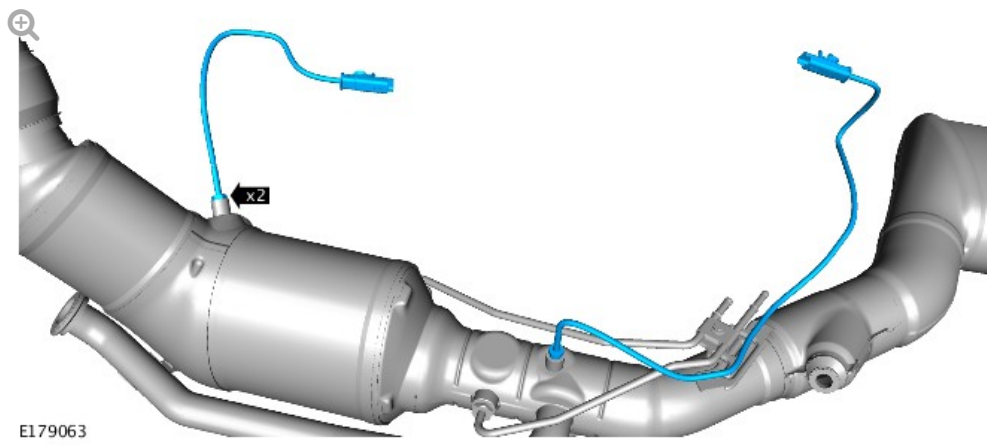

Torque: 35 Nm


22.

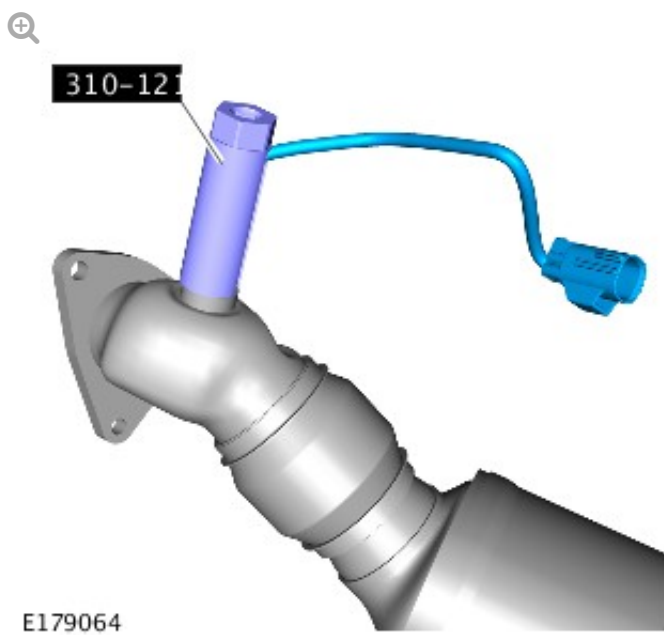

Special Tool(s): 310-121

Torque: 48 Nm

23.

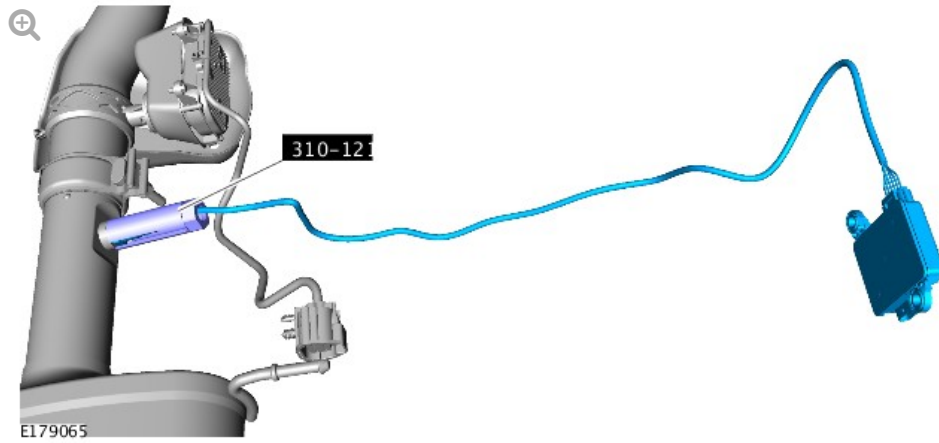

Special Tool(s): [310-121](#)

Torque: **48 Nm**

INSTALLATION

1. To install, reverse the removal procedure.
2. Using Land Rover approved diagnostic equipment, prime the diesel exhaust fluid system.

General Equipment: [Land Rover diagnostic equipment](#)