

2016.0 RANGE ROVER (LG), 308-07

FOUR-WHEEL DRIVE SYSTEMS

FOUR-WHEEL DRIVE
CONTROL MODULE (G1557261)

REMOVAL AND INSTALLATION

41.30.01	ELECTRONIC CONTROL	ALL DERIVATIVES	2.1	USED WITHINS	+
	UNIT - RATIO CONTROL - RENEW				



REMOVAL

NOTE:

Removal steps in this procedure may contain installation details.


1. Disconnect the battery ground cable.
Refer to: Specifications (414-00, Specifications).
2. Refer to: Floor Console (501-12, Removal and Installation).

3.

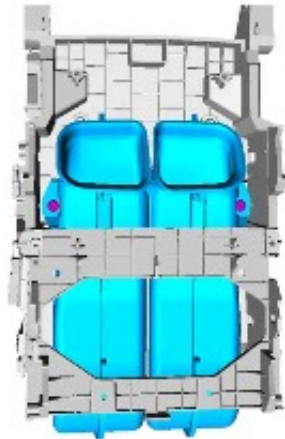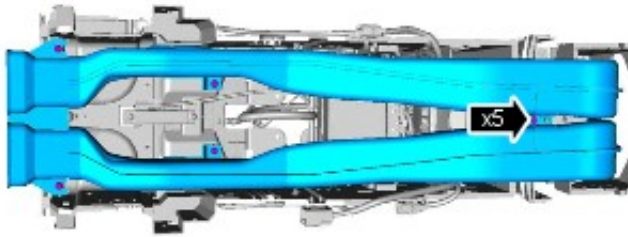

E148000

4.

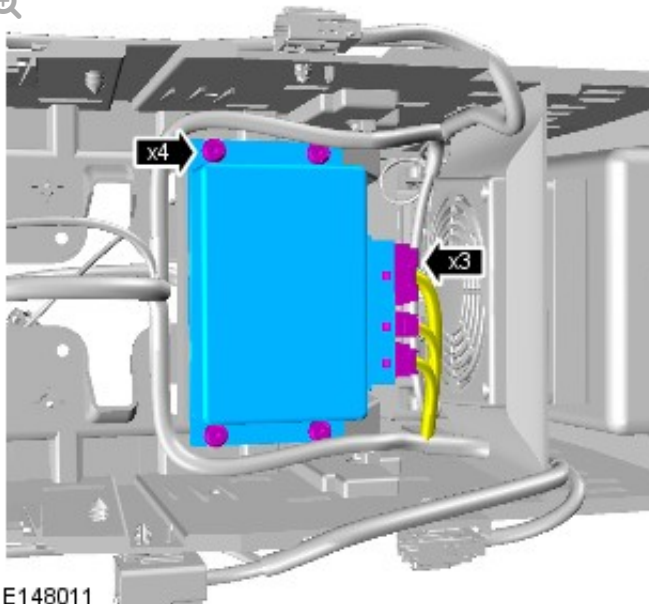

E148011

INSTALLATION

1. To install, reverse the removal procedure.

2.
 1. Connect the Land Rover approved diagnostic equipment.
 2. Clear any Diagnostic Trouble Codes (DTCs).
 3. Start the diagnostic service function "transfer case-transfer case replacement".
 4. Clear any Diagnostic Trouble Codes (DTCs) after calibration and check for correct operation.