

2016.0 RANGE ROVER (LG), 308-07

FOUR-WHEEL DRIVE SYSTEMS

HIGH/LOW RANGE SENSOR

[G1605109]

REMOVAL AND INSTALLATION

41.30.07	SENSOR - POSITION - HI/LOW RATIO - RENEW	ALL DERIVATIVES	0.6	USED WITHINS	+
----------	--	--------------------	-----	-----------------	---

REMOVAL

NOTE:

Removal steps in this procedure may contain installation details.



All vehicles

1.

WARNING:


Make sure to support the vehicle with axle stands.

Raise and support the vehicle.



Vehicles with 4.4L diesel engine

2.

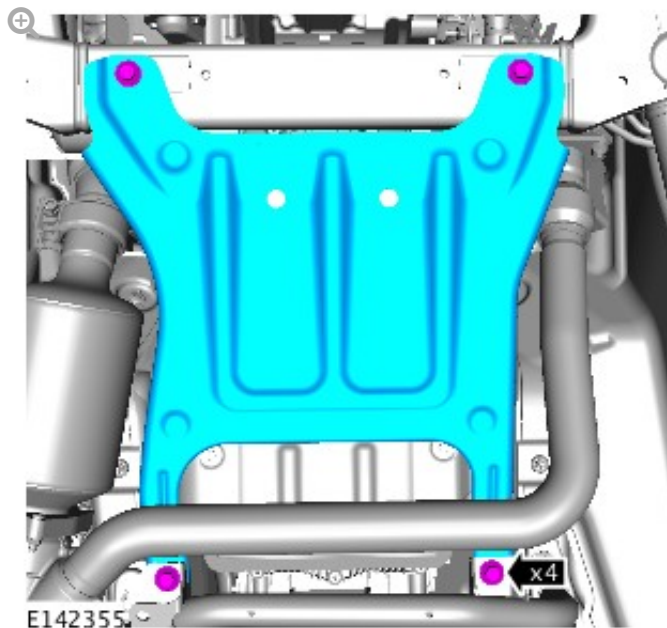


Torque: 60 Nm



All other engine types

3.

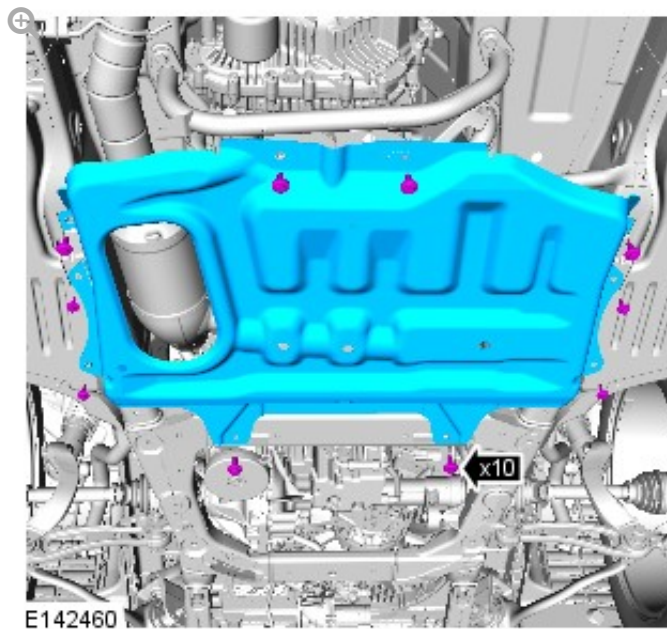

Torque:

M10 60 Nm

M6 10 Nm




All vehicles

4.

WARNING:

Secure the component to the transmission jack.

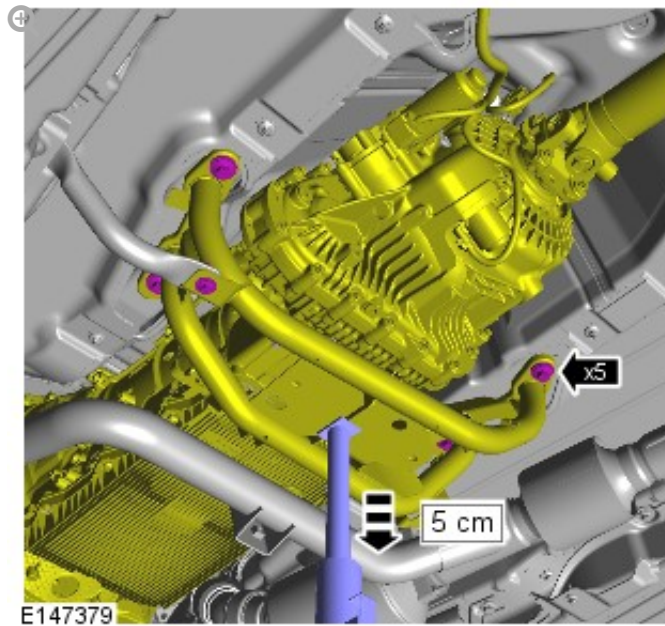


5.

CAUTION:

Make sure that new bolts are installed.

NOTE:

The transmission is lowered for access.

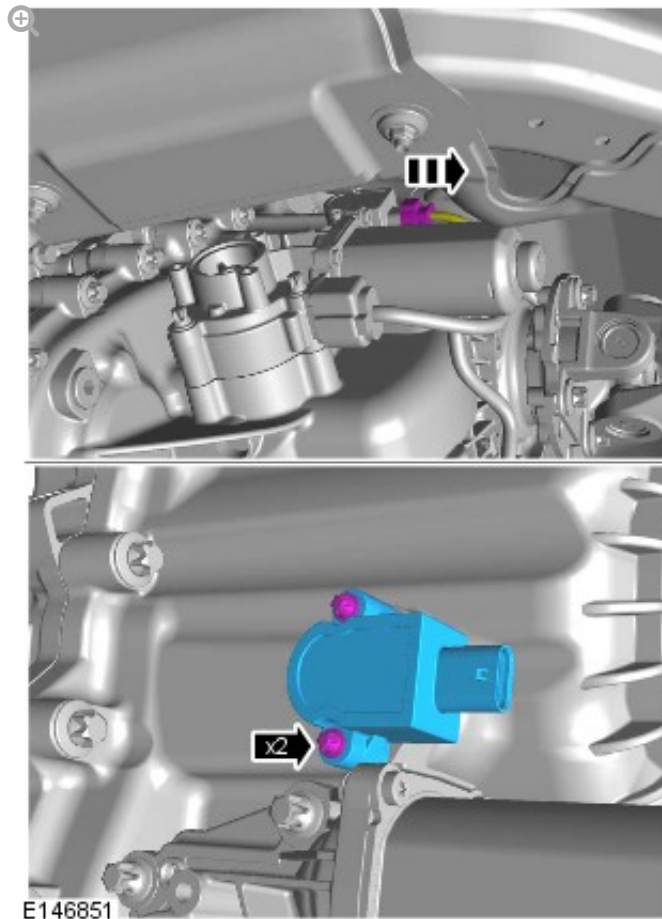

Torque: 5 Nm

INSTALLATION

1.

NOTE:

Lubricate the new O ring seal with transmission fluid.

To install, reverse the removal procedure.

- 2.
1. Connect the Land Rover approved diagnostic equipment.
 2. Start the service function "transfer case-absolute position sensor replacement".
 3. Clear any Diagnostic Trouble Codes (DTCs) after calibration and check for correct operation.

