

2016.0 RANGE ROVER (LG), 308-07

FOUR-WHEEL DRIVE SYSTEMS

TRANSFER CASE CLUTCH SOLENOID (G1549892)

REMOVAL AND INSTALLATION

41.30.08	SOLENOID - CLUTCH CONTROL - RENEW	ALL DERIVATIVES	0.2	USED WITHINS	+
----------	--	--------------------	-----	-----------------	---

REMOVAL

1.

WARNING:

Make sure to support the vehicle with axle stands.

Raise and support the vehicle.

2. Drain the transfer case.

Refer to: [Transfer Case Draining and Filling](#) (308-07C Transfer Case - Vehicles With: Twin Speed Transfer Case, General Procedures).


3.

CAUTION:

Connect the diagnostic tool, prior to removal of the solenoid.
Carry out the diagnostic service function **transfer case – solenoid replacement**.


NOTES:

- Some fluid spillage is inevitable during this operation.
- Note the orientation of the electrical connector prior to removal.

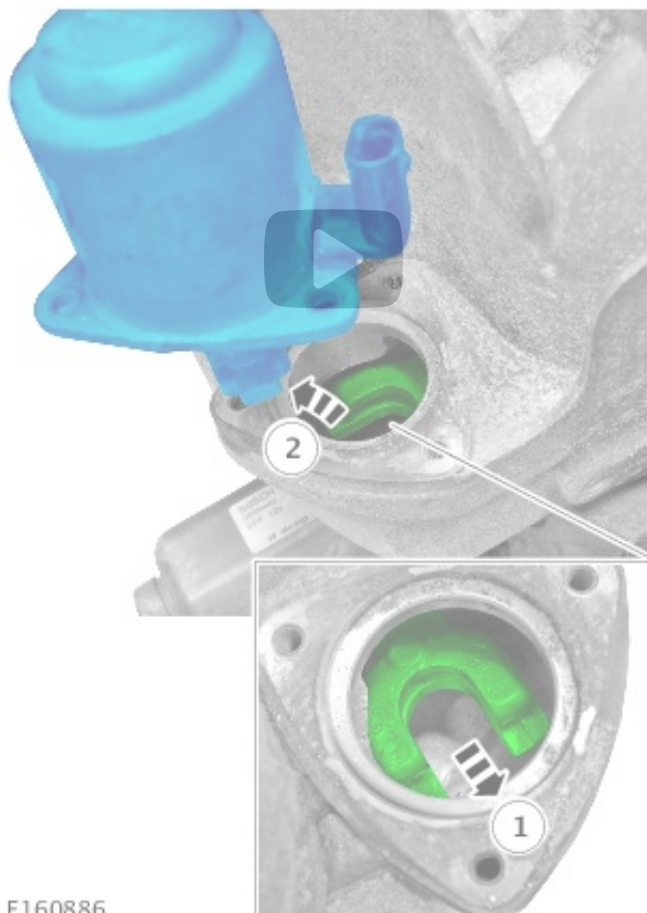

E160886

4.

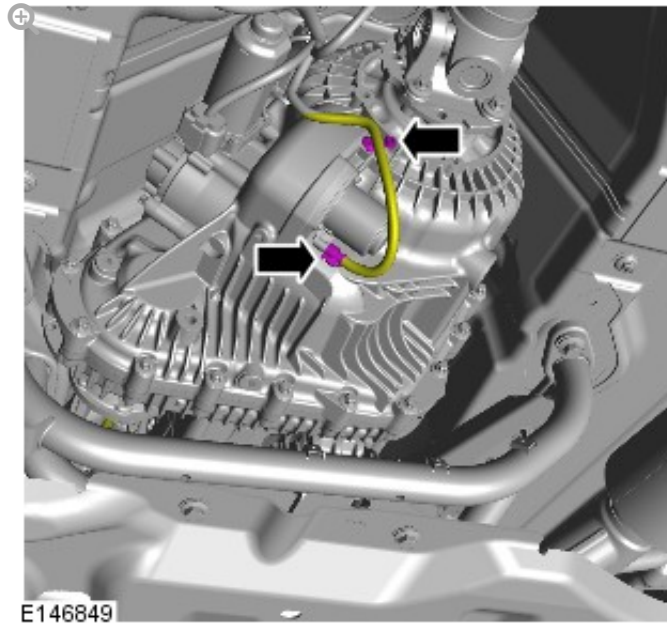

INSTALLATION


1.

CAUTIONS:

- Failure to energise the solenoid to aid installation of the arm, may result in damage to the shift fork once the component is installed and the system is operated.
- Make sure the seal is installed correctly.
- Make sure that new bolts are installed.
- Make sure that the electrical connector is installed in the correct orientation as noted in the removal step.
- Make sure that the component sits flush to the transfer case.

NOTE:

Tighten the retaining bolts evenly and progressively.

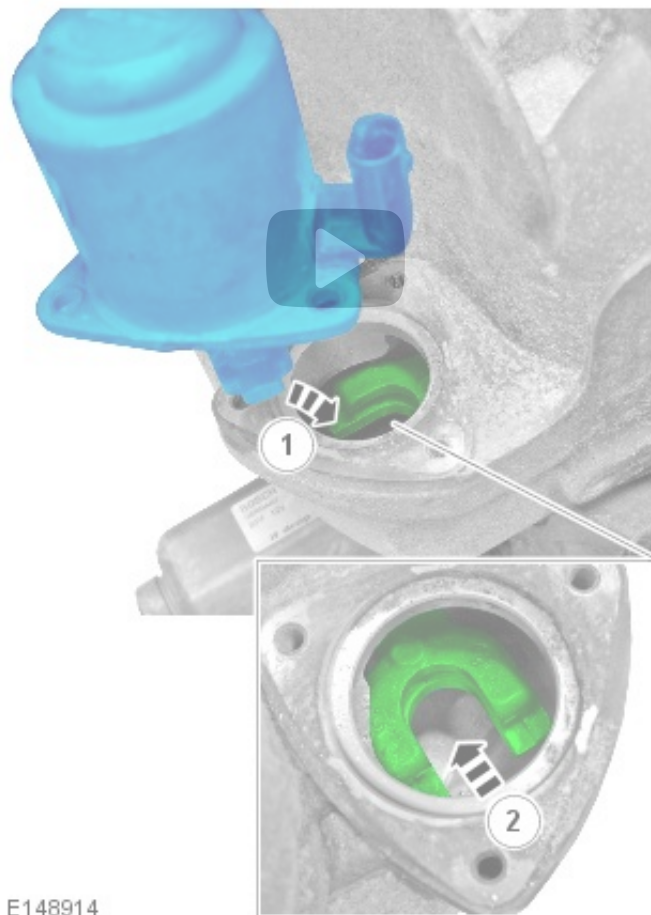


E148914

Connect the electrical connector and energise the solenoid (use the service function **transfer case – solenoid replacement** to assist with energising the solenoid) to allow the arm to extend and correctly locate into the shift fork.

Torque: 5 Nm

2.

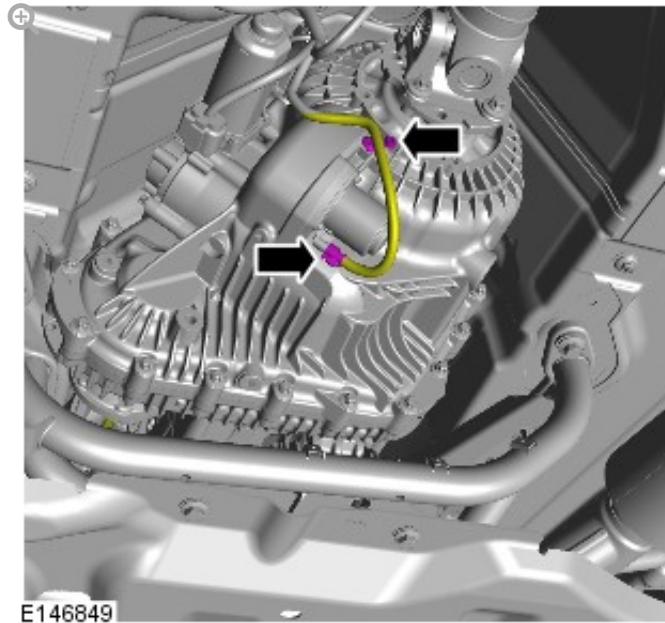

3. Fill the transfer case.

Refer to: [Transfer Case Draining and Filling](#) (308-07C Transfer Case - Vehicles With: Twin Speed Transfer Case, General Procedures).

4. Using the approved diagnostic equipment, clear all diagnostic trouble code(s) (DTCs) and check for correct operation.