


2016.0 RANGE ROVER (LG), 303-04

FUEL CHARGING AND CONTROLS - TDV6 3.0L DIESEL

FUEL PUMP (G1509433)

REMOVAL AND INSTALLATION

SPECIAL TOOL(S)

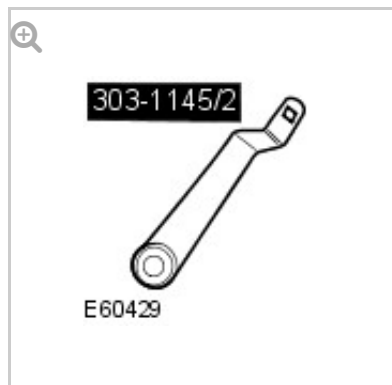

**303-
1145/2**

Remover, Camshaft
Rear Pulley Bolt



310-138A

Holding Tool, Fuel
Pump Pulley



310-139A

Holding Tool, Fuel
Pump Pulley



JLR-303- 1523

Remover/Installer,
Camshaft Rear
Pulley

REMOVAL


NOTES:

- Removal steps in this procedure may contain installation details.
- Some variation in the illustrations may occur, but the essential information is always correct.


1. Refer to: [Fuel Injection Component Cleaning](#) (303-04F Fuel Charging and Controls - TDV8 4.4L Diesel, General Procedures).
2. Refer to: [Rear End Accessory Drive](#) (303-05A Accessory Drive - TDV6 3.0L Diesel, Removal and Installation).

3. Refer to: [Crankcase Vent Oil Separator](#) (303-08A Engine Emission Control - TDV6 3.0L Diesel - Gen 2/TDV6 3.0L Diesel, Removal and Installation).

4.

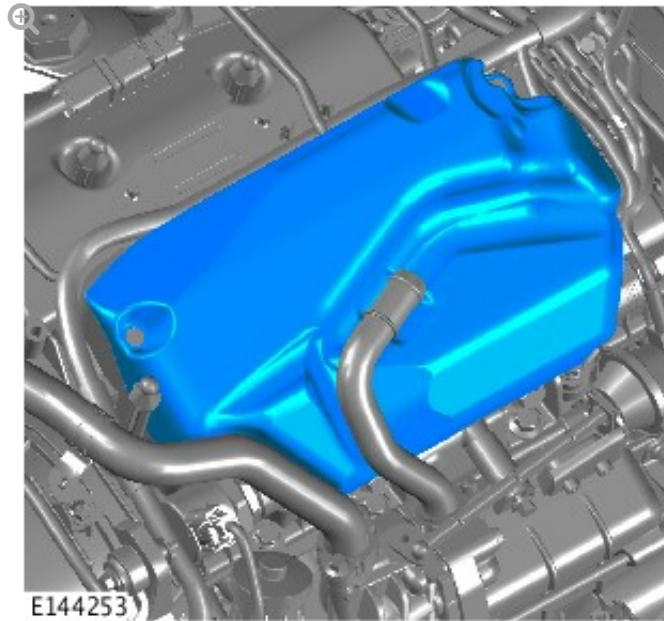


5.

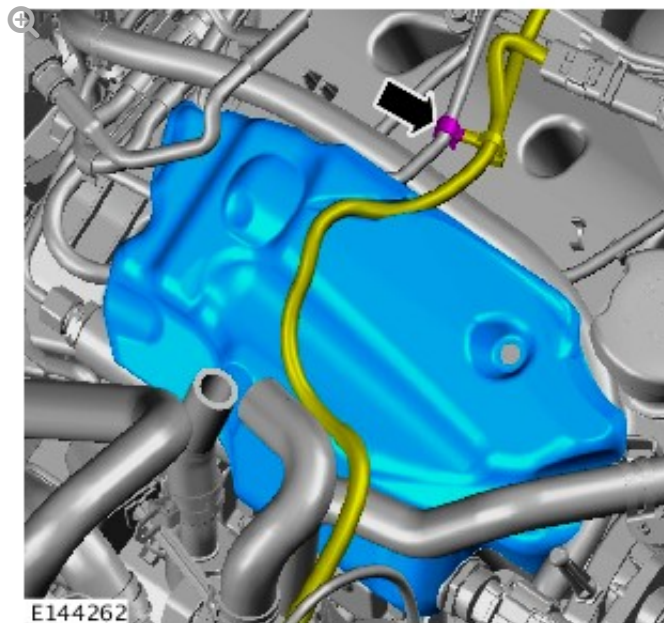

6.

CAUTION:


Be prepared to collect escaping fuel.

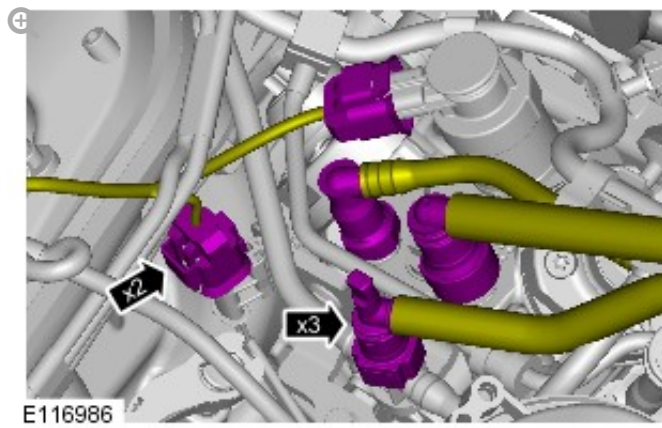


7.

CAUTION:

Be prepared to collect escaping fuel.

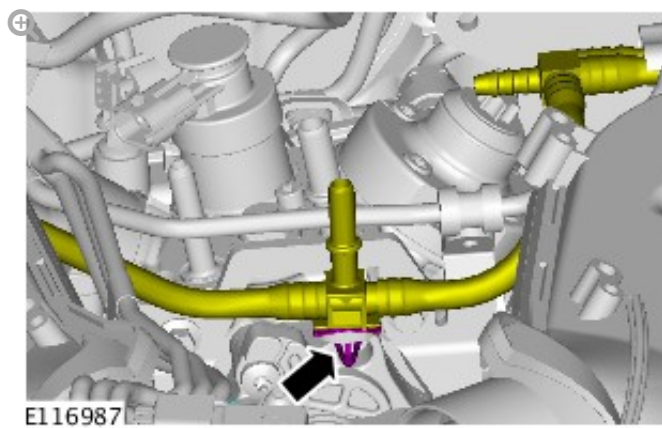


8.

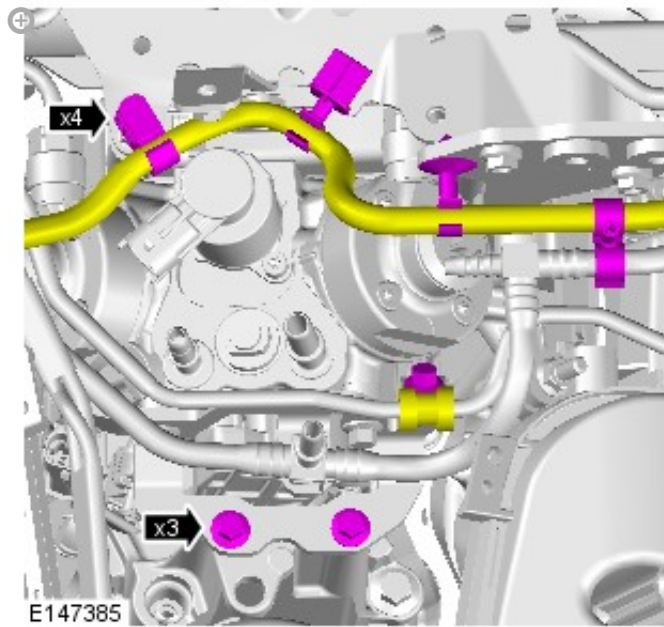

9.

CAUTIONS:


- Be prepared to collect escaping fuel.
- Discard the component.

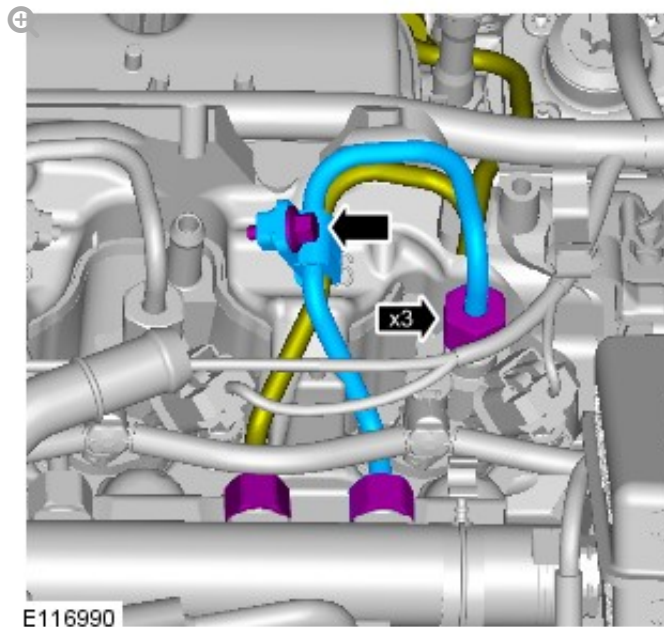

10.

CAUTIONS:

- Be prepared to collect escaping fuel.
- Discard the component.

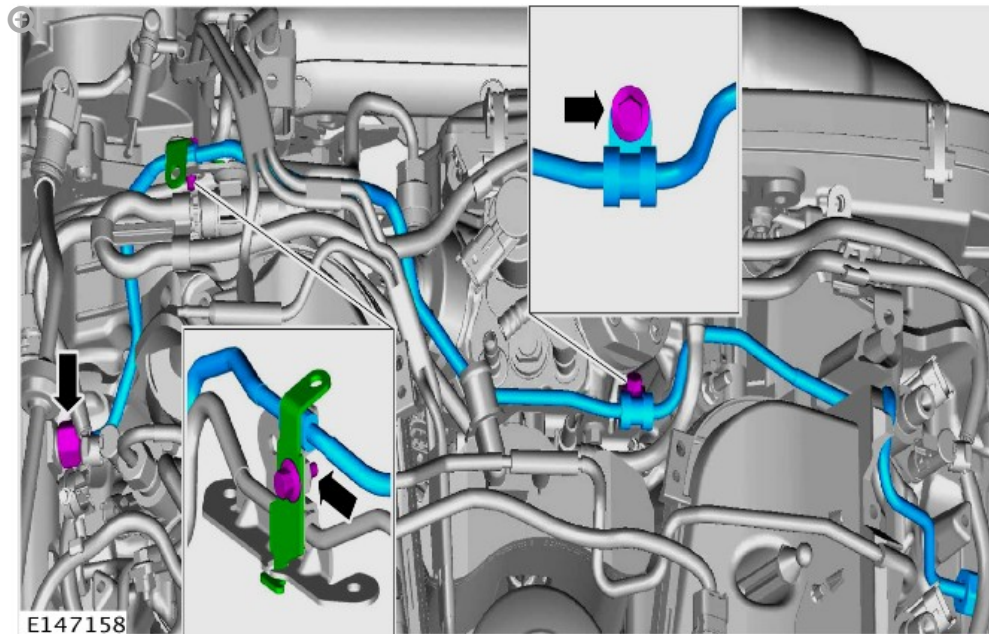


11.

CAUTIONS:

- Be prepared to collect escaping fuel.
- Discard the component.

NOTE:

Some variation in the illustrations may occur, but the essential information is always correct.

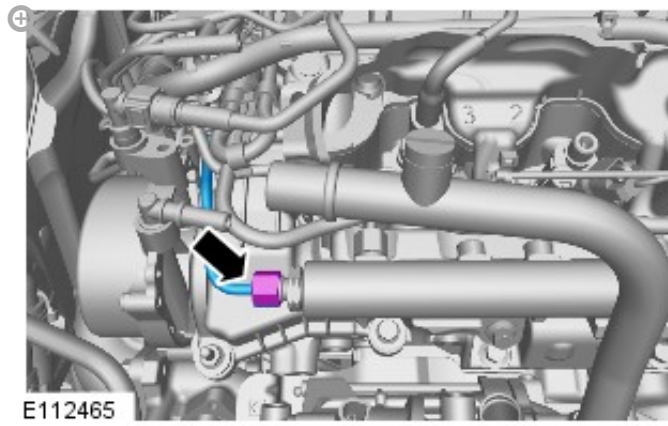


12.

CAUTIONS:

- Be prepared to collect escaping fuel.
- Discard the component.

NOTE:


Some variation in the illustrations may occur, but the essential information is always correct.

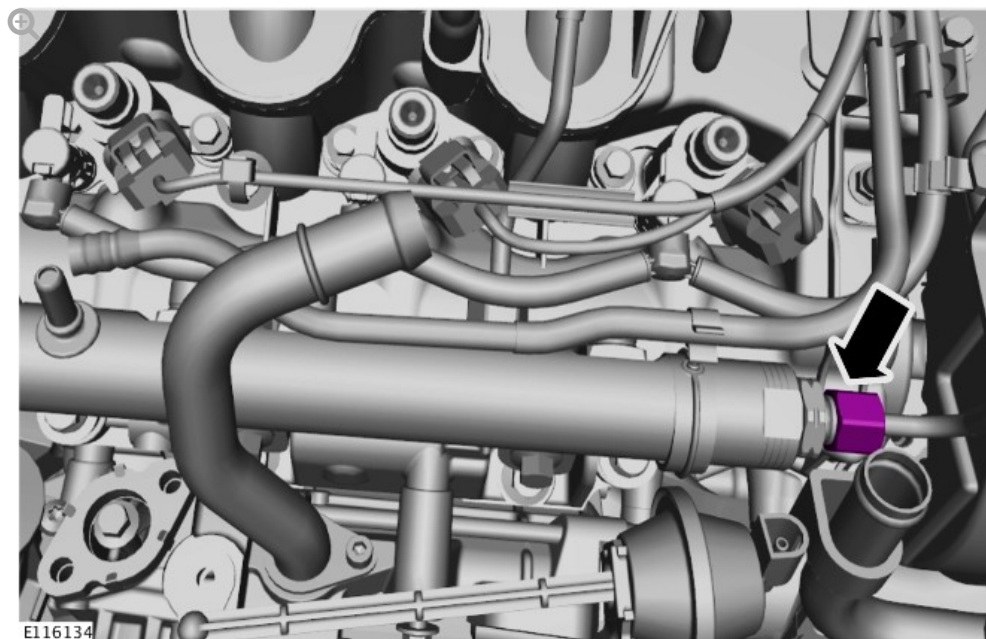

13.

CAUTIONS:


- Be prepared to collect escaping fuel.
- Discard the components.

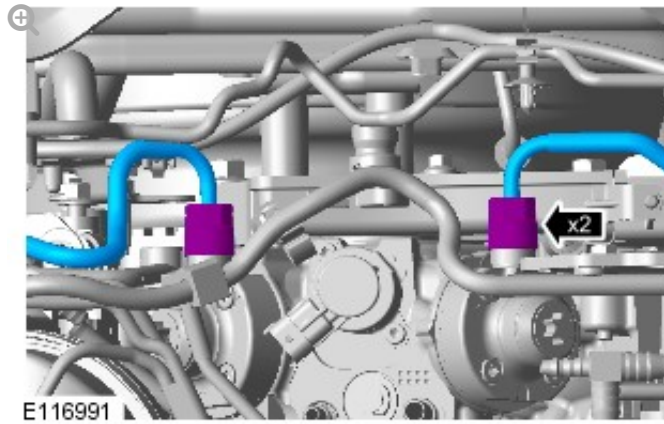

14.

NOTE:


Fuel injection pump pulley shown removed for clarity.

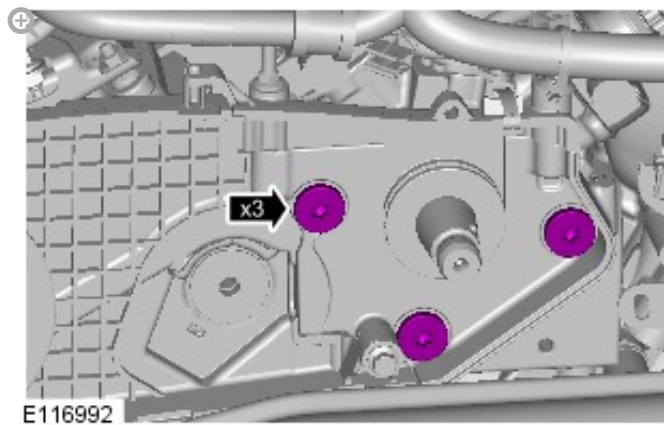

15.

NOTE:


Fuel injection pump pulley shown removed for clarity.

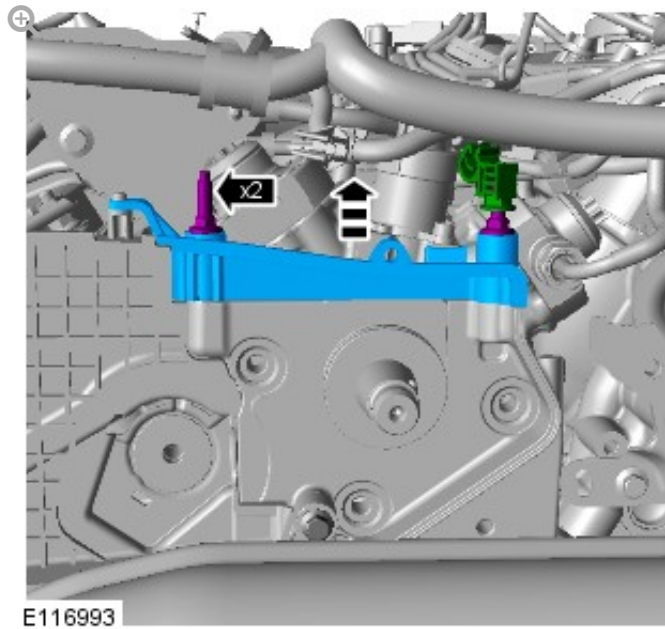

16.

NOTE:

If equipped.

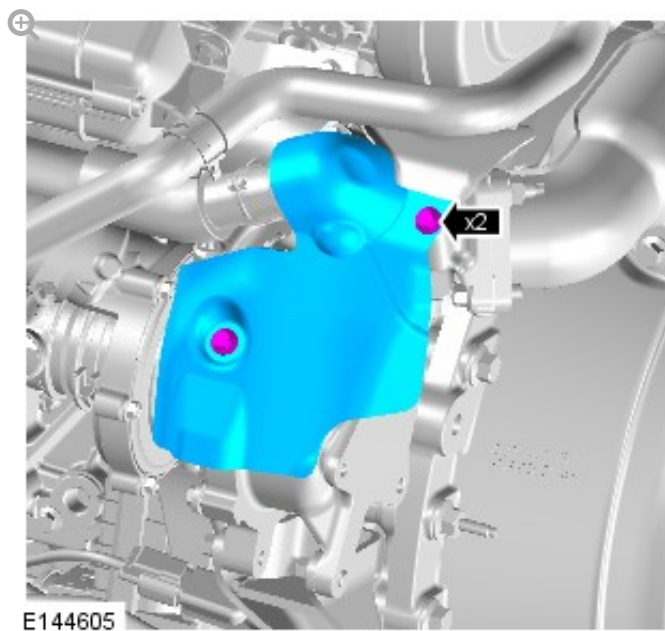


E144605

17.

NOTE:

If equipped.

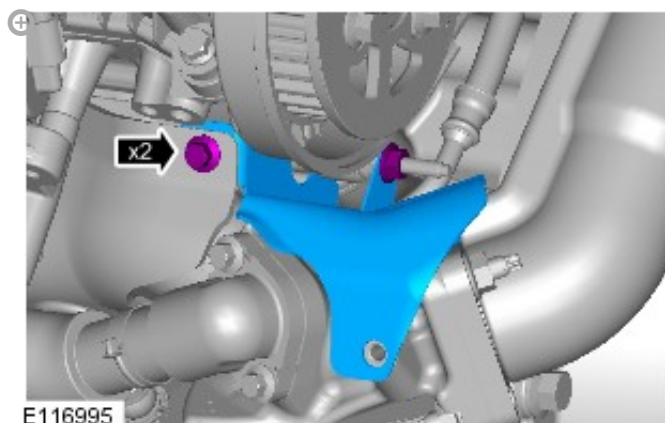


E116995

18.



Special Tool(s): JLR-303-1523

19.

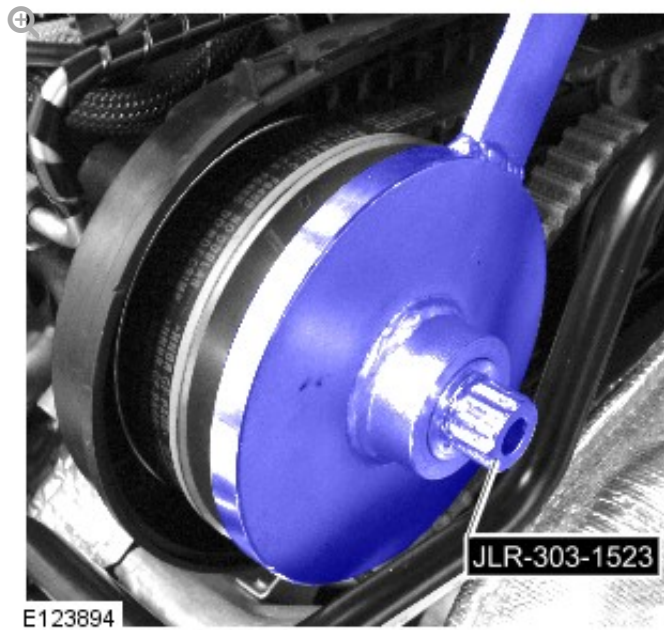

Special Tool(s): JLR-303-1523

20.




Remove the camshaft rear pulley retaining bolt.


Special Tool(s): [303-1145/2](#)

21. Remove the special tools.


22.

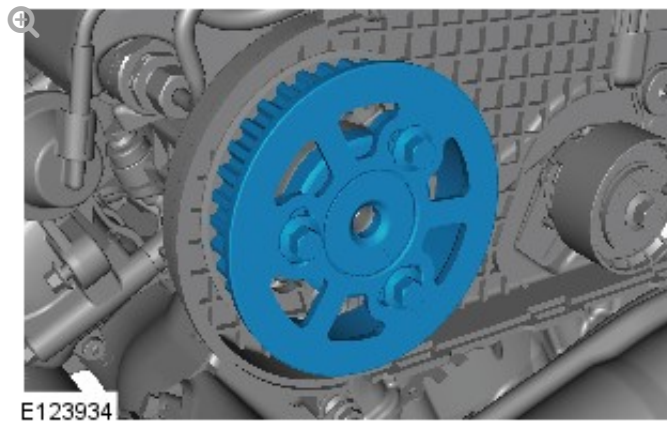


23.

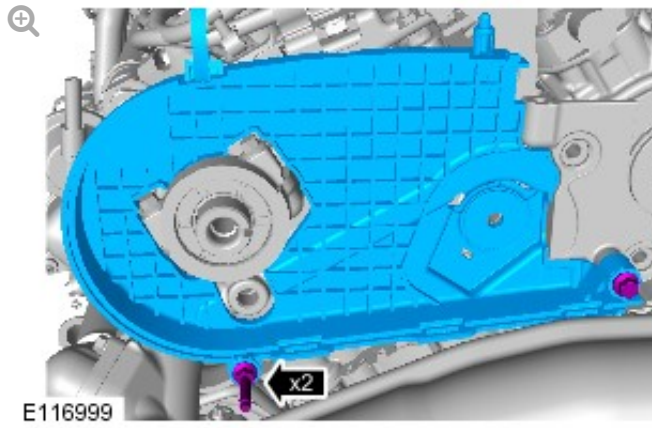

24.

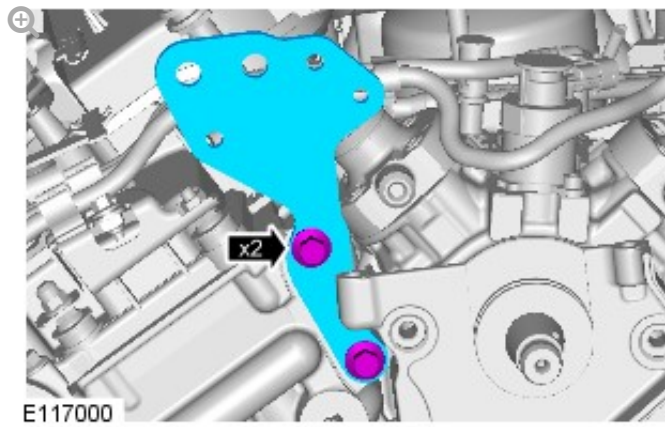


25.

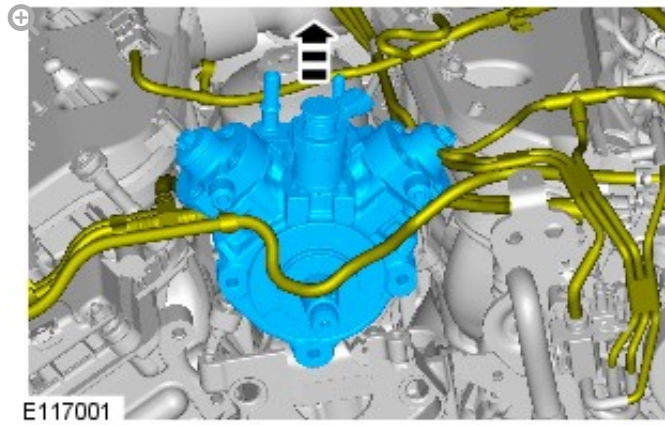

26.


NOTE:

Do not disassemble further if the component is removed for access only.

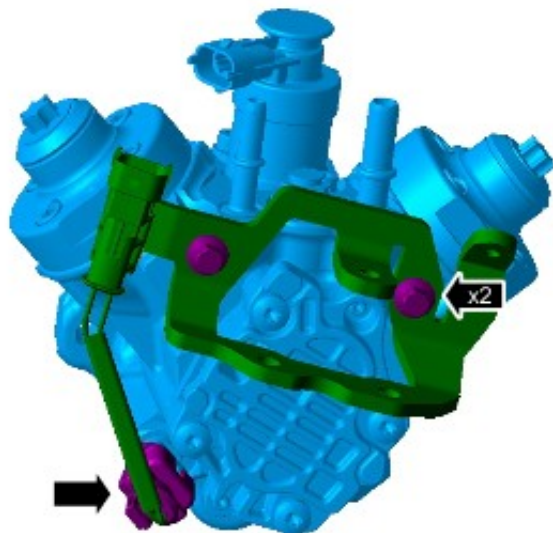

E117002


27.

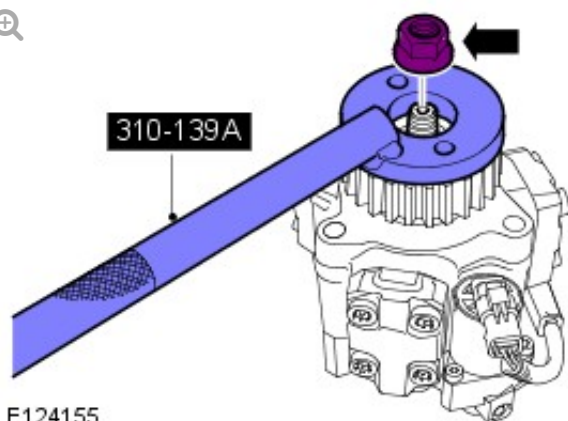

E124155

Special Tool(s): [310-139A](#)

28.

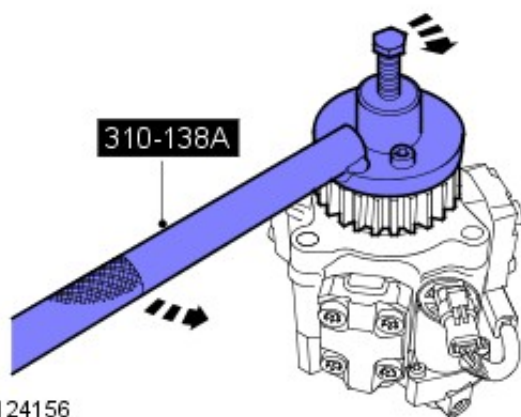


E124156

Special Tool(s): [310-138A](#)

INSTALLATION


1.

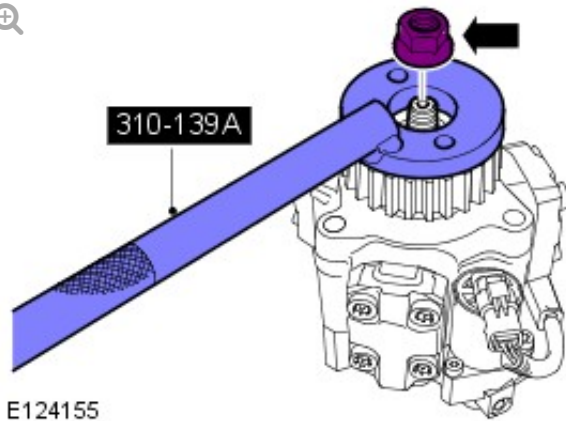

Special Tool(s): [310-139A](#)


Torque: 50 Nm

2.

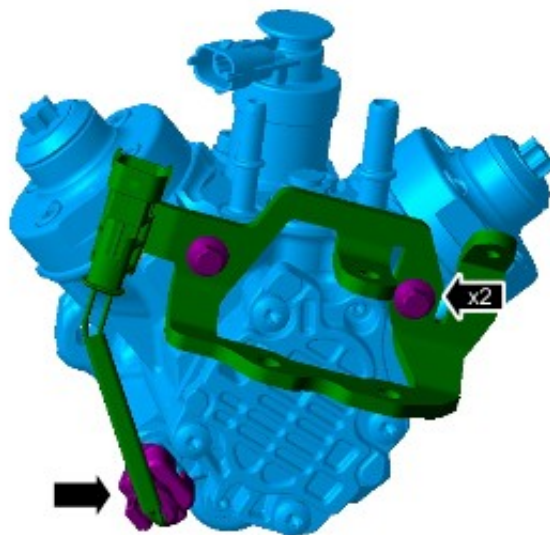


Torque: 3 Nm

3.

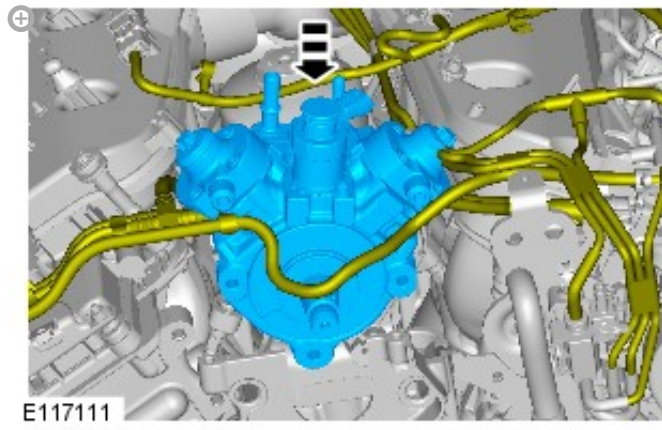


4.

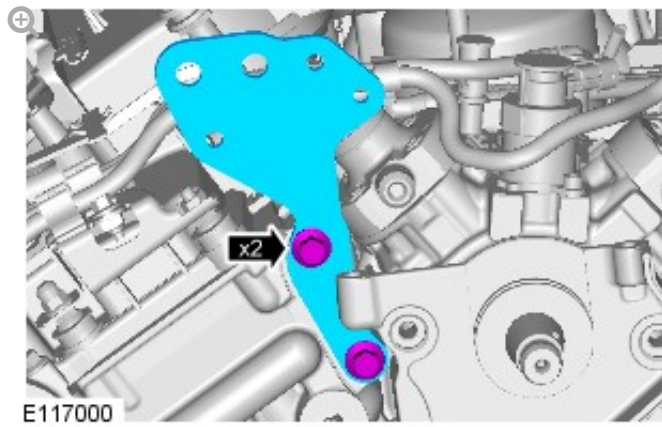

Torque: 23 Nm

5.

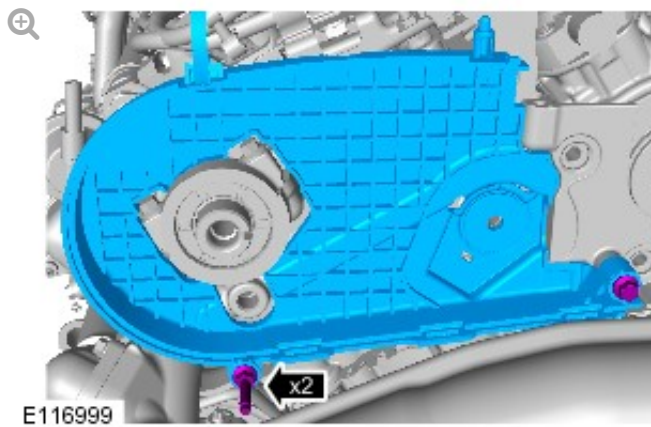


Torque: 10 Nm

6.

CAUTIONS:

- Apply loctite 242 to the new camshaft pulley bolt.
- Install the bolt finger tight.

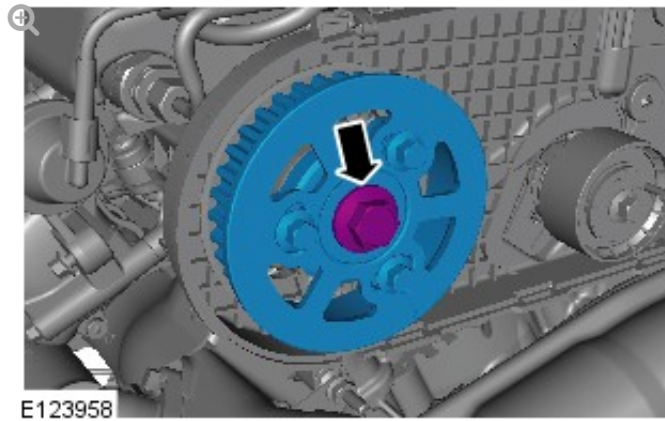

7.



Special Tool(s): [JLR-303-1523](#)

Torque: 10 Nm

8.




Special Tool(s): [JLR-303-1523](#)

9.

CAUTION:

Make sure the torque wrench setting procedure is followed correctly. Failure to follow this instruction may result in damage to the vehicle.

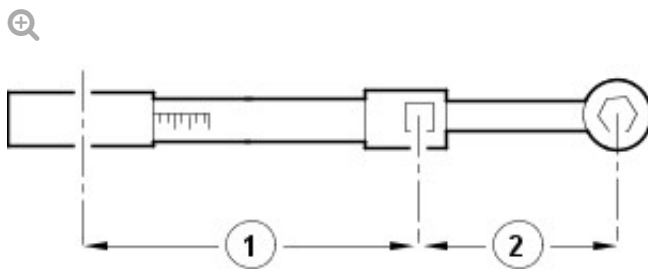

E37107

1. Calculate the setting for the torque wrench:
2. **Stage 1:** Multiply the required torque by the effective length of the torque wrench (1).
3. **Stage 2:** Add the effective length of the special tool (2) to

the effective length of the torque wrench.

4. Stage 3: Divide the total of stage 1 by the total of stage 2.

5. Stage 4: Set the torque wrench to the figure arrived at in stage 3.

10.

CAUTION:

Make sure the torque wrench setting procedure is followed correctly. Failure to follow this instruction may result in damage to the vehicle.



Special Tool(s): [303-1145/2](#)

Torque:

Stage 1: **80 Nm**


Stage 2: **80°**

11. Remove the special tools.

12.

NOTE:

If equipped.

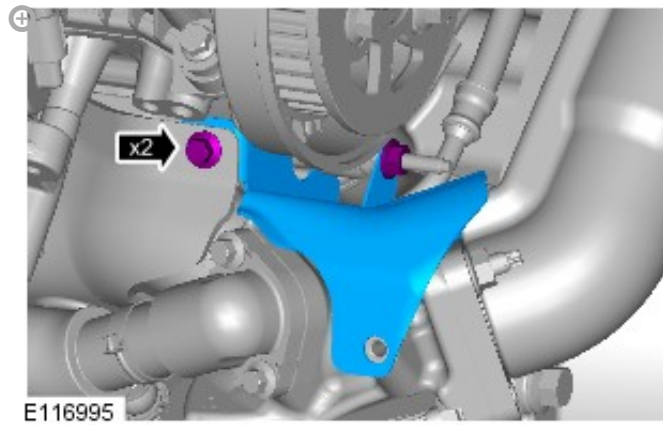


Torque: 10 Nm

13.

NOTE:

If equipped.

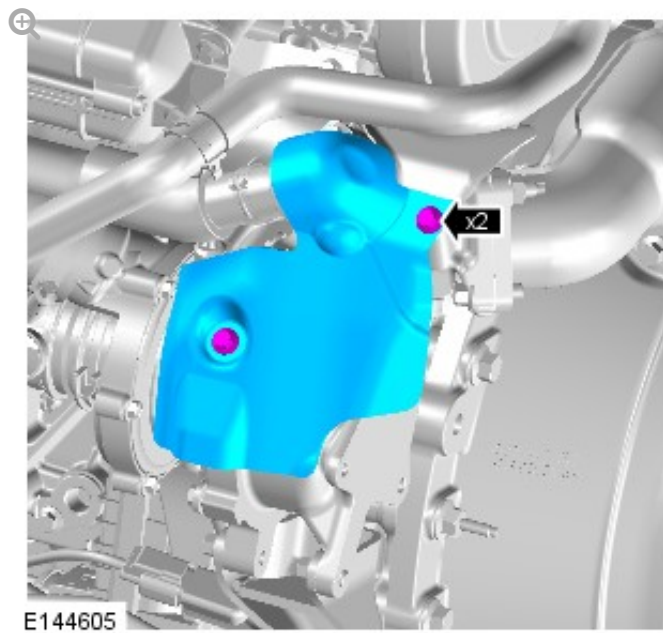


Torque: 10 Nm

14.

NOTE:

Fuel injection pump pulley shown removed for clarity.

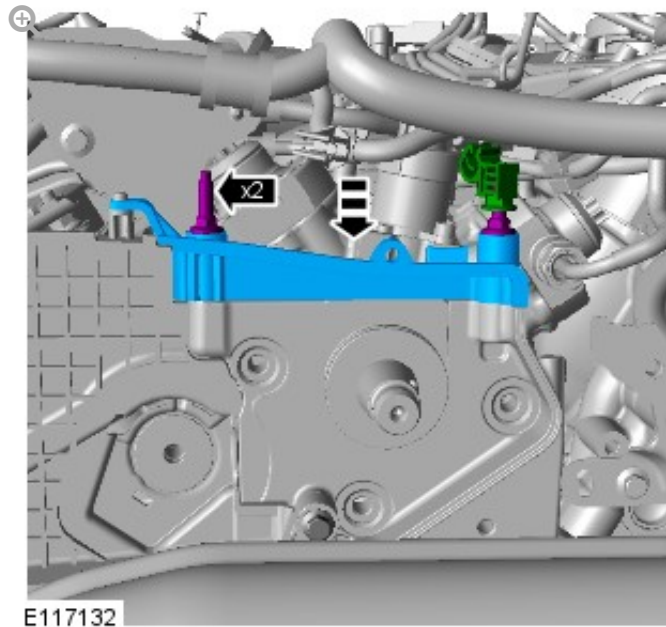


Torque: 10 Nm

15.

NOTE:

Fuel injection pump pulley shown removed for clarity.

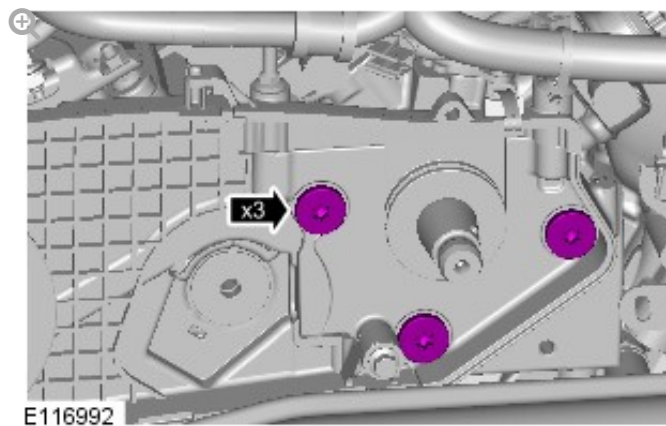


Torque: 23 Nm

16.

CAUTIONS:

- Tighten the fuel supply line unions finger tight.
- Make sure that a new component is installed.

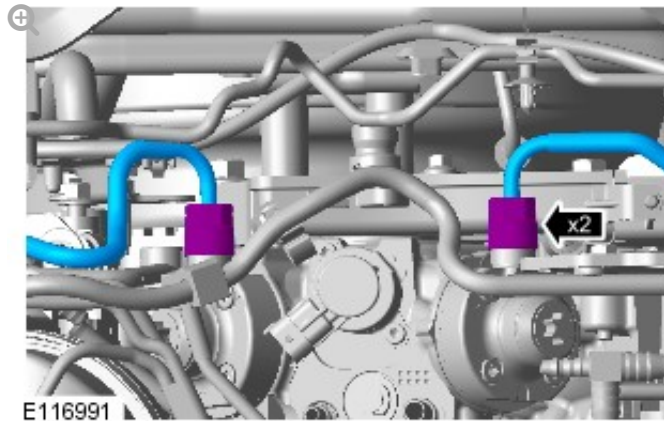


17.

CAUTION:

Tighten the fuel supply line unions finger tight.

NOTE:

Some variation in the illustrations may occur, but the essential information is always correct.

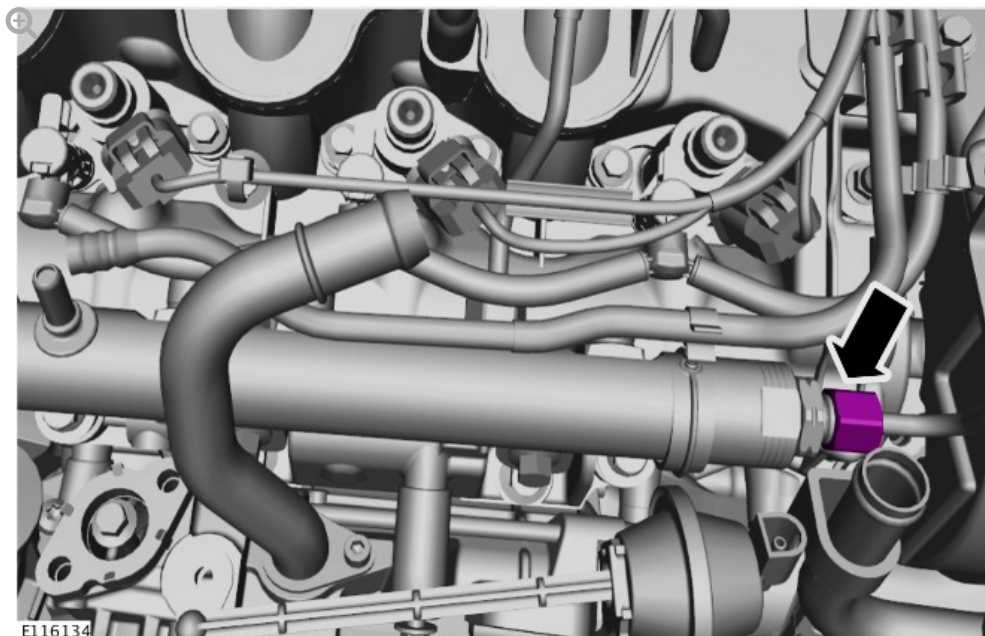


18.

CAUTION:

Tighten the fuel supply line unions finger tight.

NOTE:


Some variation in the illustrations may occur, but the essential information is always correct.

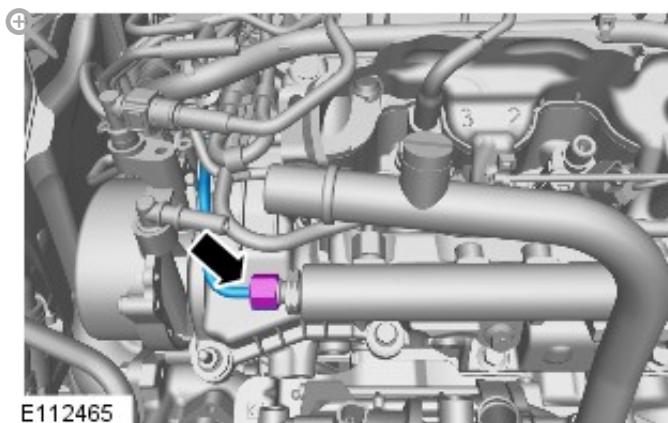

19.

CAUTIONS:


- Make sure that a new component is installed.
- Tighten the fuel supply line unions finger tight.
- Only tighten the bolts finger-tight at this stage.

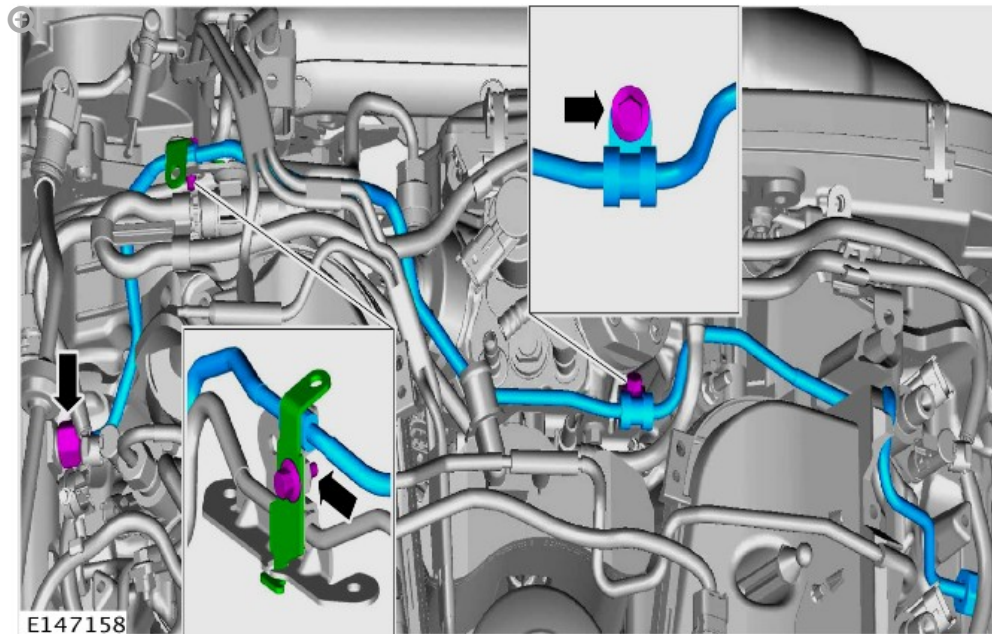


20.

CAUTIONS:

- Tighten the fuel supply line unions finger tight.
- Make sure that new components are installed.

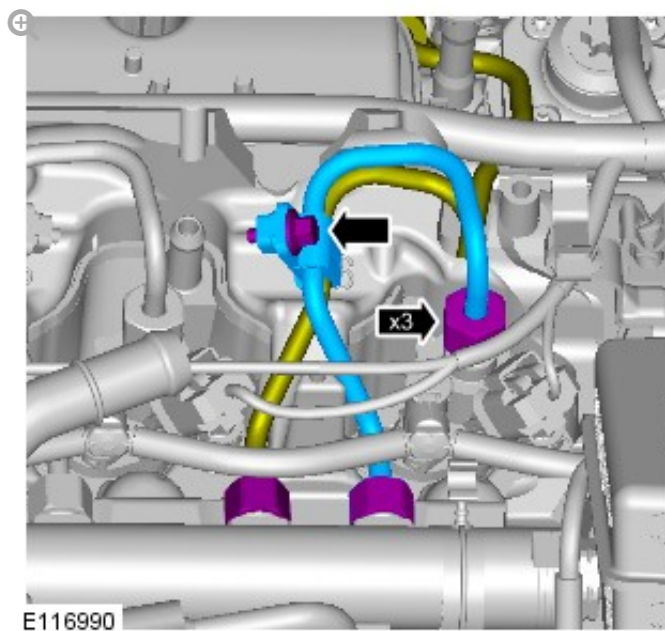


21.

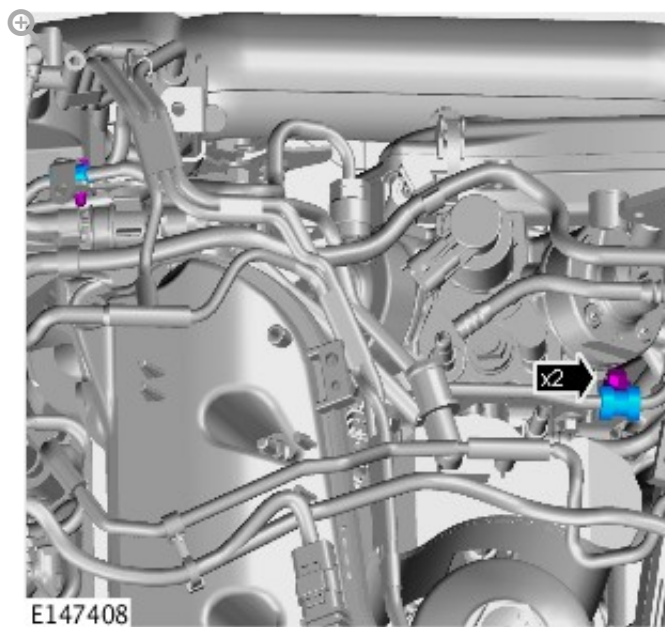

Torque: 10 Nm

22.

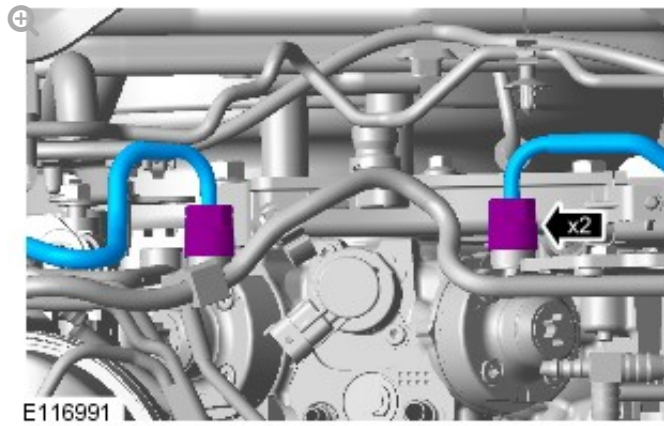


Tighten the high-pressure fuel lines union to 15Nm.

23.

NOTE:

Some variation in the illustrations may occur, but the essential information is always correct.

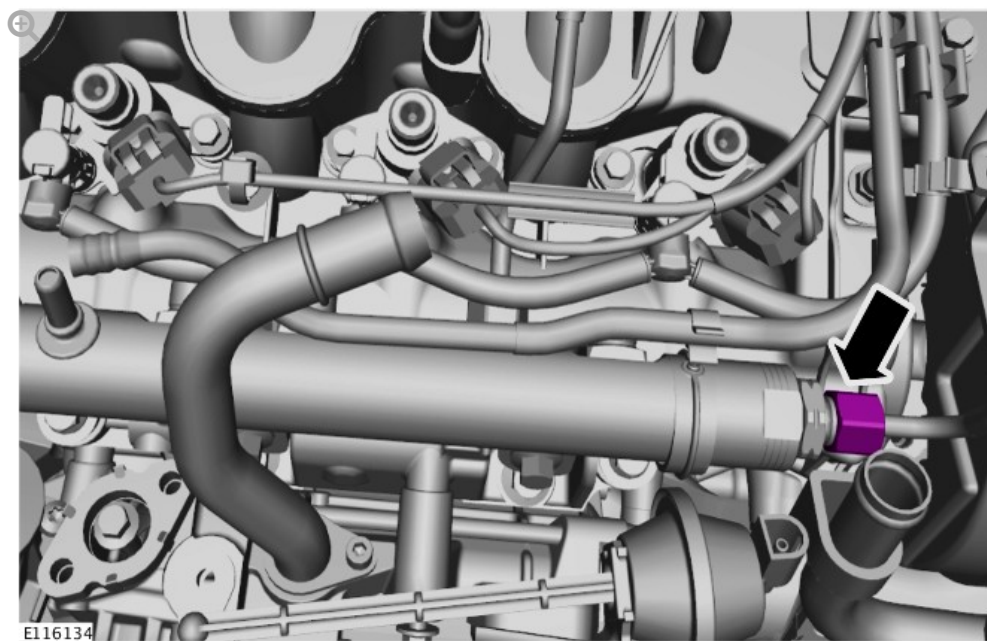


Tighten the high-pressure fuel lines union to 15Nm.

24.


NOTE:

Some variation in the illustrations may occur, but the essential information is always correct.

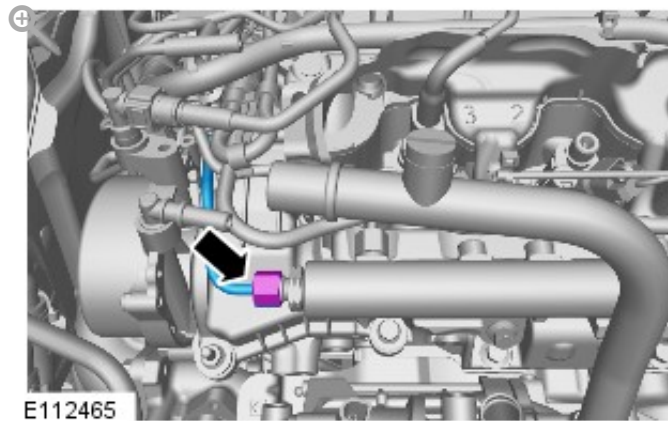


Tighten the high-pressure fuel lines union to 15Nm.

25.

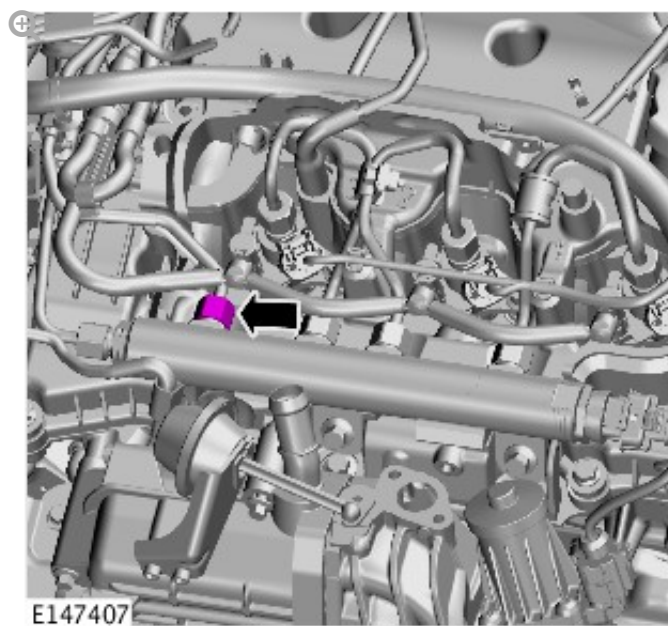


Tighten the high-pressure fuel line union to 15 Nm.

26.

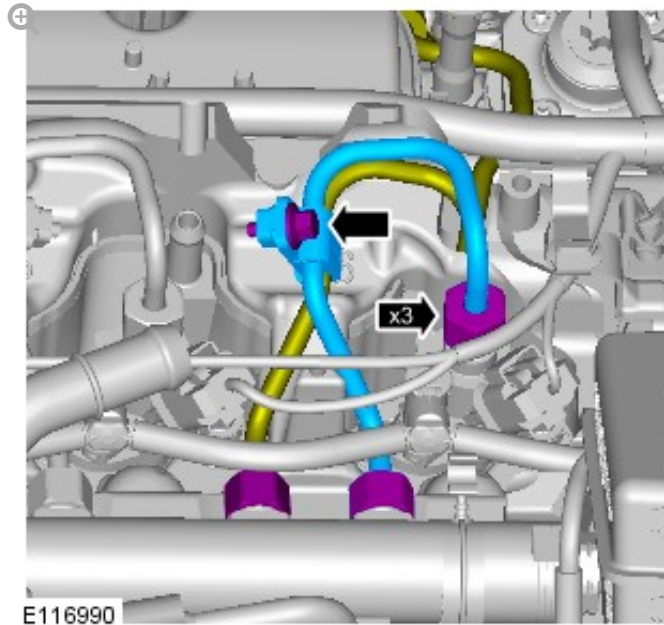

Tighten the high-pressure fuel lines union to 15Nm.

27.

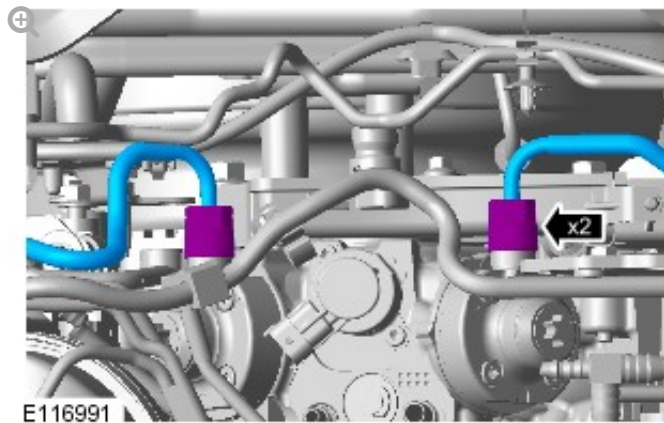


Tighten the high-pressure fuel line union to 35 Nm.

28.

NOTE:

Some variation in the illustrations may occur, but the essential information is always correct.

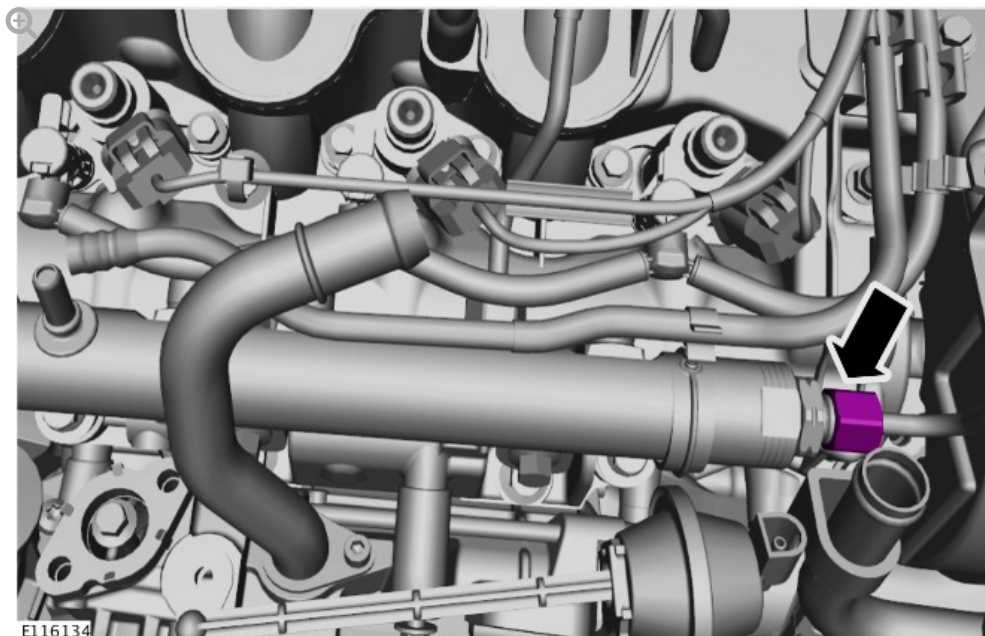


Tighten the high-pressure fuel line union to 35 Nm.

29.


NOTE:

Some variation in the illustrations may occur, but the essential information is always correct.

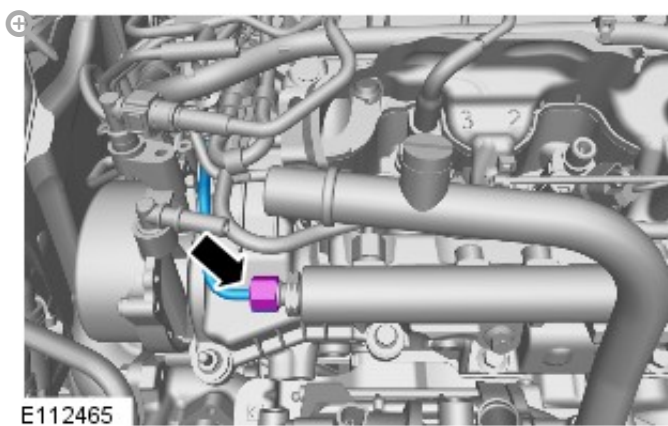


Tighten the high-pressure fuel line union to 35 Nm.

30.

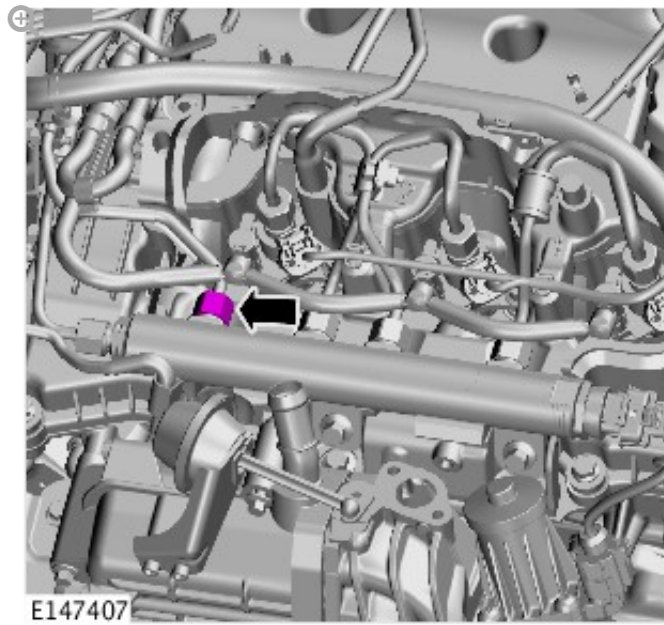


Tighten the high-pressure fuel line union to 35 Nm.

31.

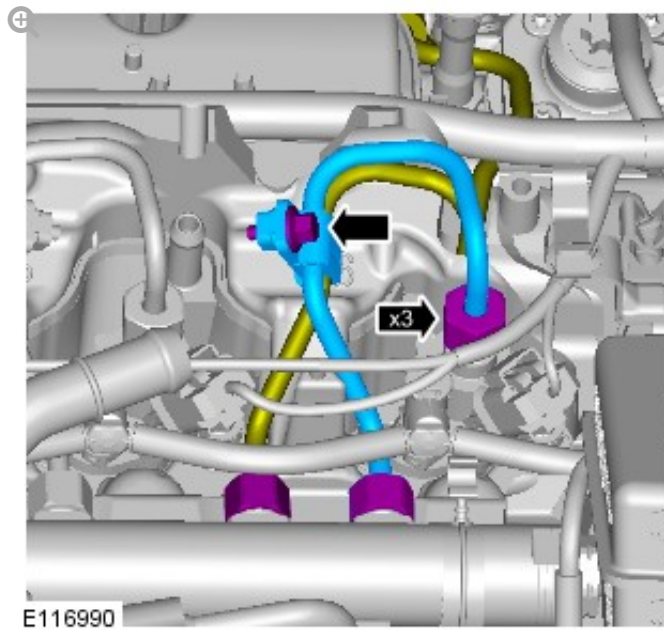


Tighten the high-pressure fuel line union to 35 Nm.

32.

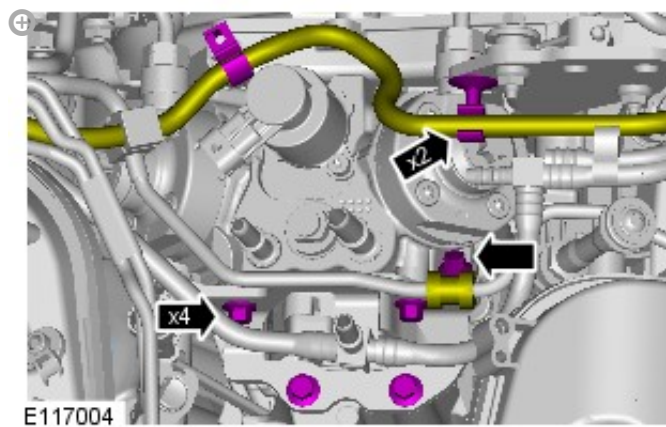


Torque: 10 Nm


33.

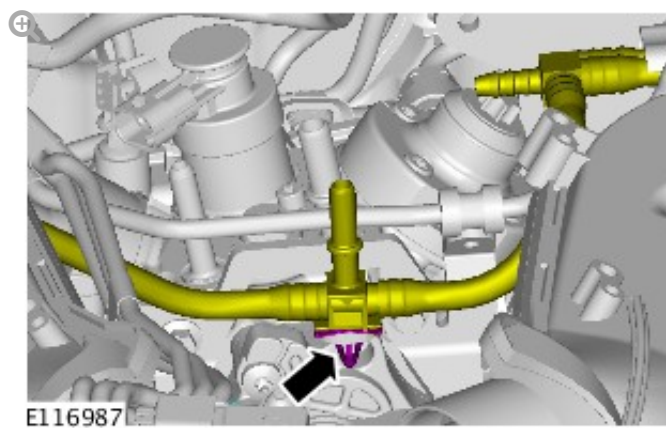


34.

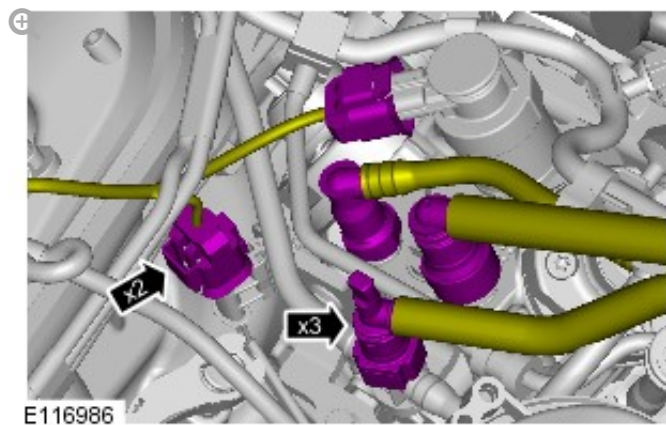

35.

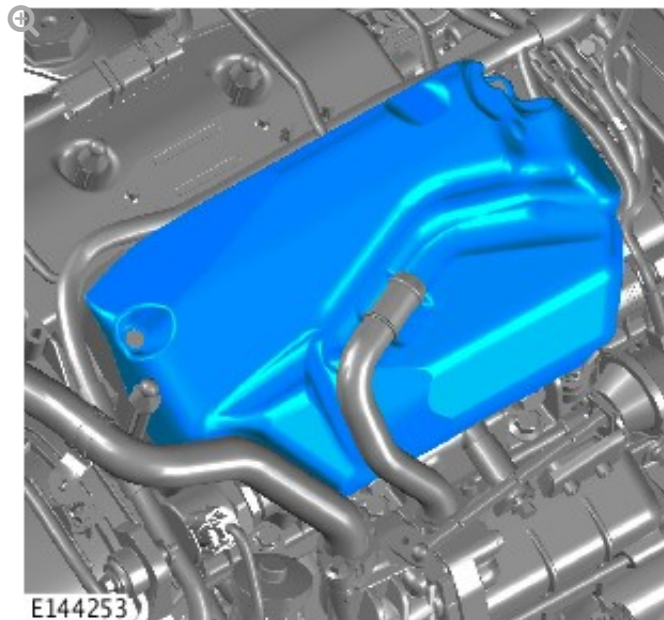

36.

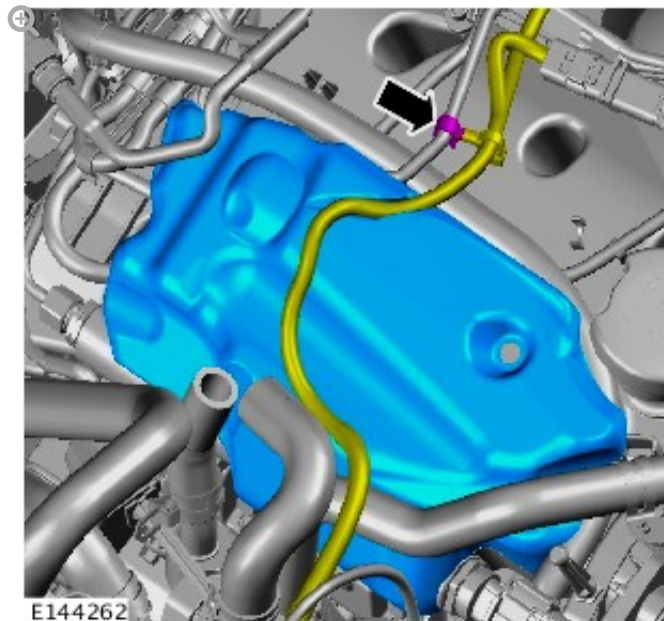

- 37. Refer to: [Crankcase Vent Oil Separator](#) (303-08A Engine Emission Control - TDV6 3.0L Diesel - Gen 2/TDV6 3.0L Diesel, Removal and Installation).
- 38. Refer to: [Rear End Accessory Drive](#) (303-05A Accessory Drive - TDV6 3.0L Diesel, Removal and Installation).
- 39. Refer to: [High-Pressure Fuel System Bleeding](#) (310-00 Fuel System -

General Information, General Procedures).