

2016.0 RANGE ROVER (LG), 303-04

FUEL CHARGING AND CONTROLS - TDV6 3.0L DIESEL

LEFT FUEL RAIL (G1509434)

REMOVAL AND INSTALLATION

19.60.03	FUEL RAIL - LH BANK - RENEW	3000 CC, TDV6	3.4	USED WITHINS	+
----------	-----------------------------------	------------------	-----	-----------------	---

PART(S)

STEP	REPLACE PART / RENEW PART	PART NAME
Installation Step 1	Renew Part	Fuel rail balance pipe
Installation Step 6	Renew Part	Fuel rail LH supply pipe
Installation Step 12	Renew Part	Fuel injector high pressure pipes


REMOVAL

NOTE:


Some variation in the illustrations may occur, but the essential information is always correct.

1. Refer to: [Specifications](#) (414-00 Battery and Charging System - General Information, Specifications).


2. Refer to: [Secondary Bulkhead Centre Panel - TDV6 3.0L Diesel](#) (501-02 Front End Body Panels, Removal and Installation).
3. Refer to: [Cooling System Partial Draining and Vacuum Filling](#) (303-03F Engine Cooling - TDV8 4.4L Diesel, General Procedures).
4. Refer to: [Left Exhaust Gas Recirculation Valve Outlet Tube](#) (303-08A Engine Emission Control - TDV6 3.0L Diesel - Gen 2/TDV6 3.0L Diesel, Removal and Installation).
5. Refer to: [Fuel Injection Component Cleaning](#) (303-04A Fuel Charging and Controls - TDV6 3.0L Diesel, General Procedures).

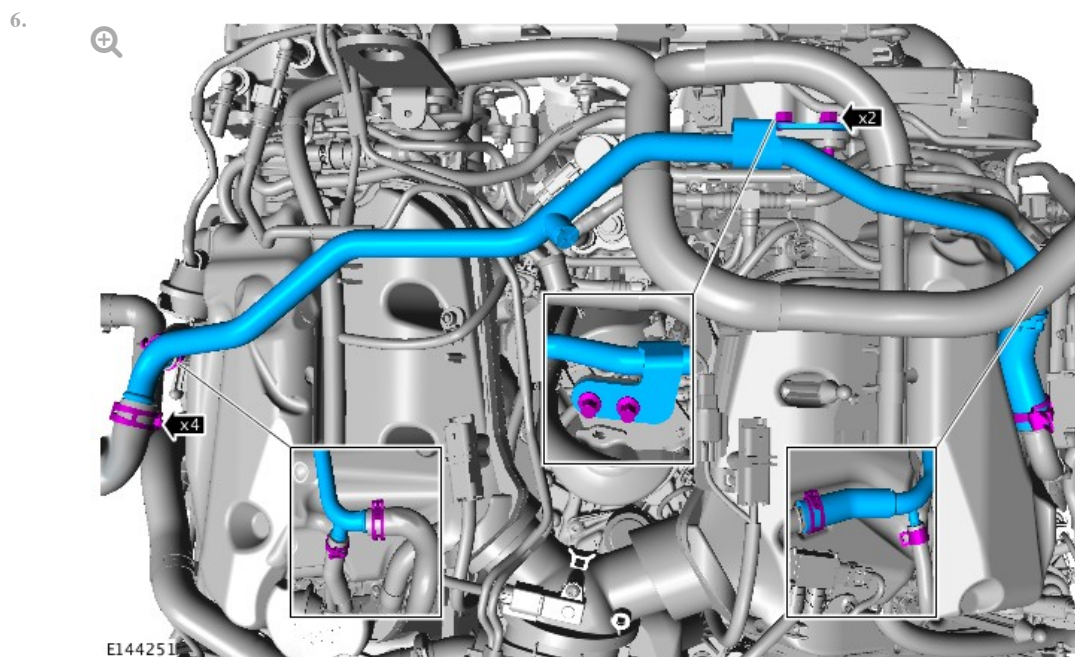


7.

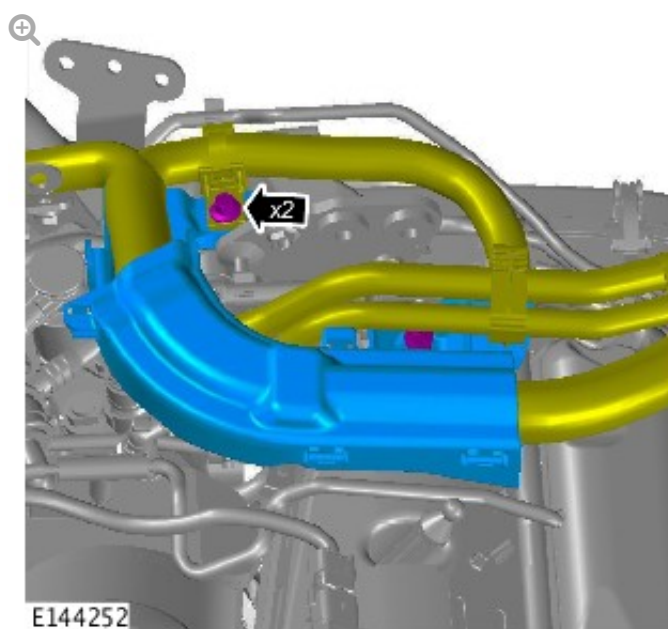


8.

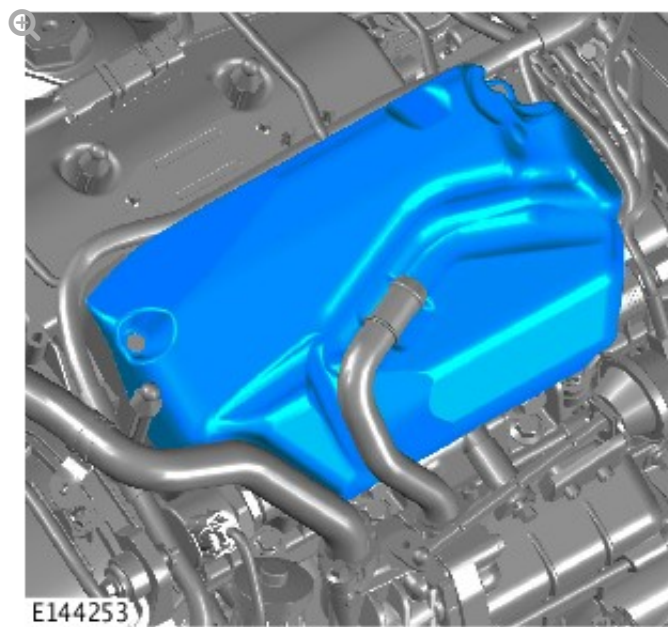

9.

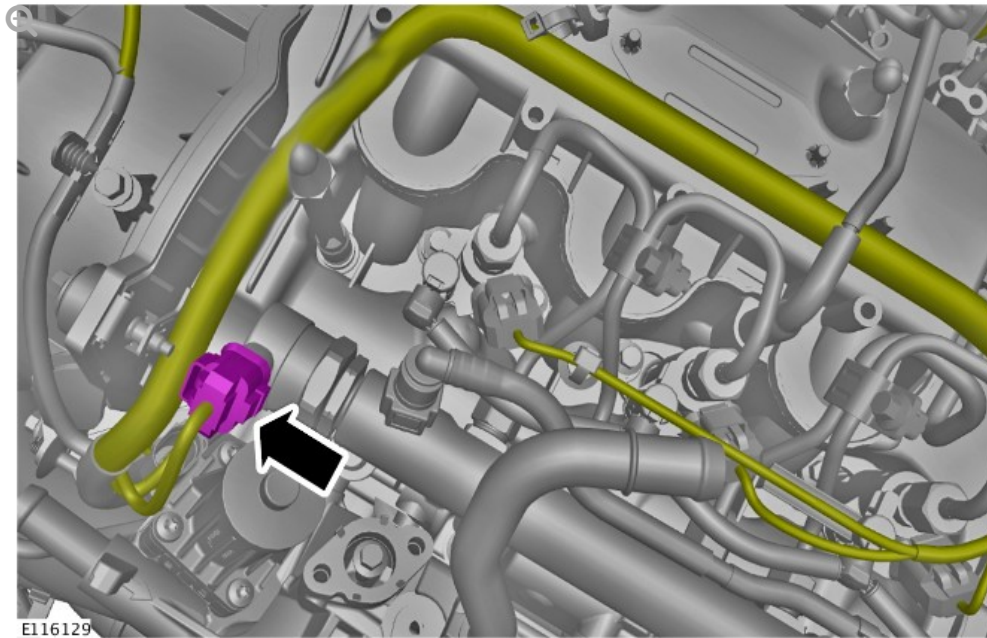


10.

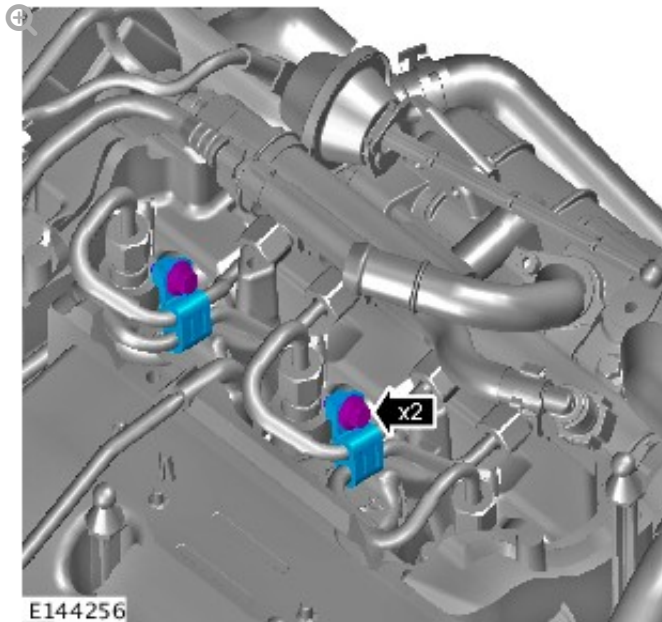

11.

CAUTIONS:


- Be prepared to collect escaping fuel.
- Before disconnecting or removing components, ensure the area around the joint faces and connections are clean. Plug open connections to prevent contamination.

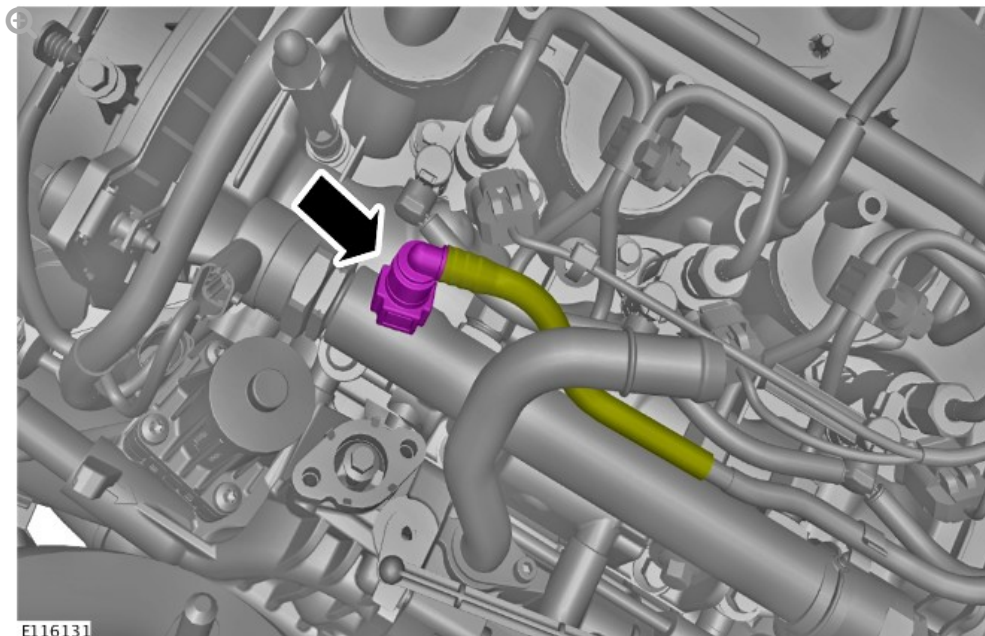

12.

CAUTIONS:


- Be prepared to collect escaping fuel.
- Discard the component.
- Before disconnecting or removing components, ensure the area around the joint faces and connections are clean. Plug open connections to prevent contamination.

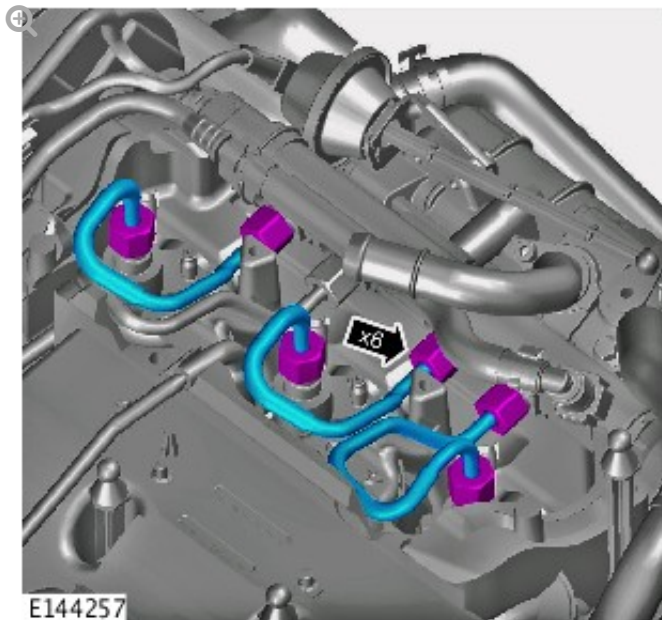


13.

CAUTIONS:

- Be prepared to collect escaping fuel.
- Before disconnecting or removing components, ensure the area around the joint faces and connections are clean. Plug open connections to prevent contamination.

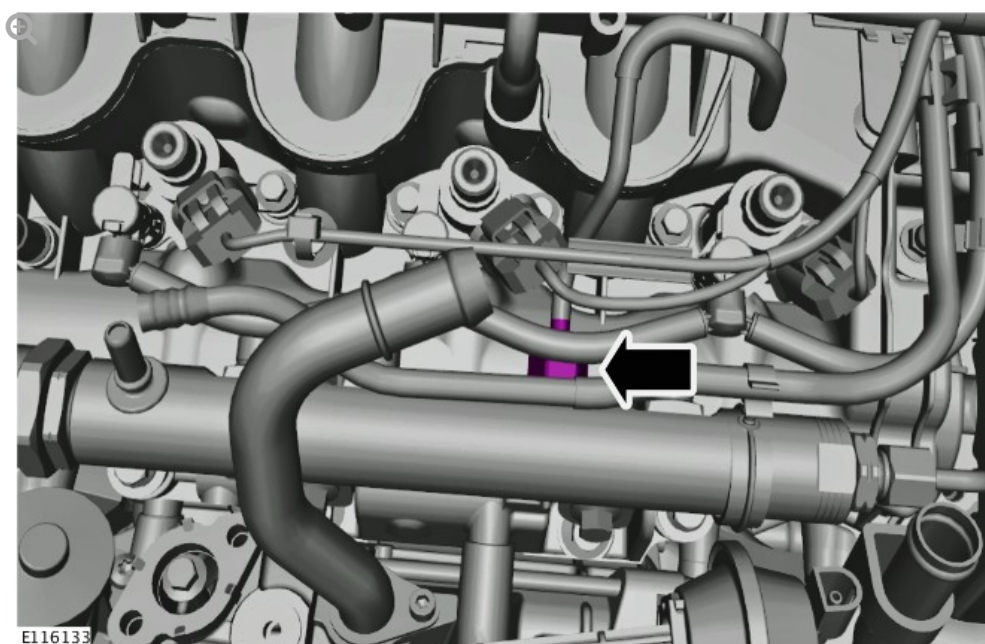


14.

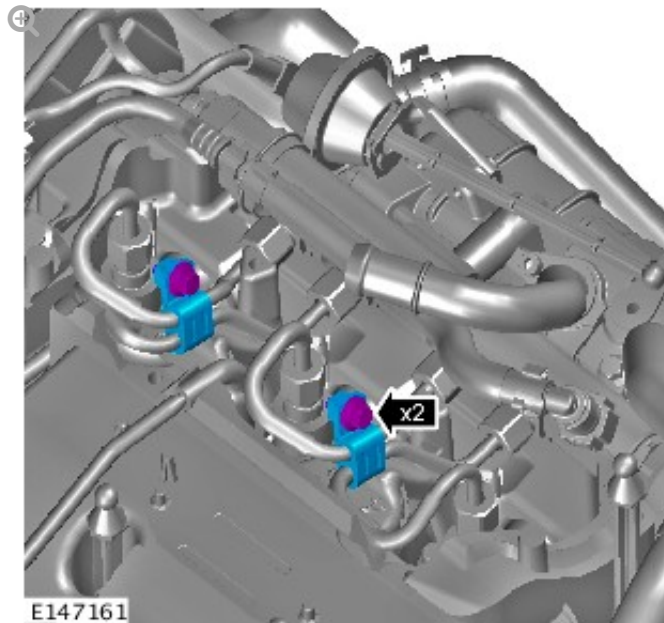


15.

CAUTIONS:


- Be prepared to collect escaping fuel.
- Discard the component.
- Before disconnecting or removing the components, make sure the area around the joint faces and connections are clean and dry. Plug open connections to prevent contamination.

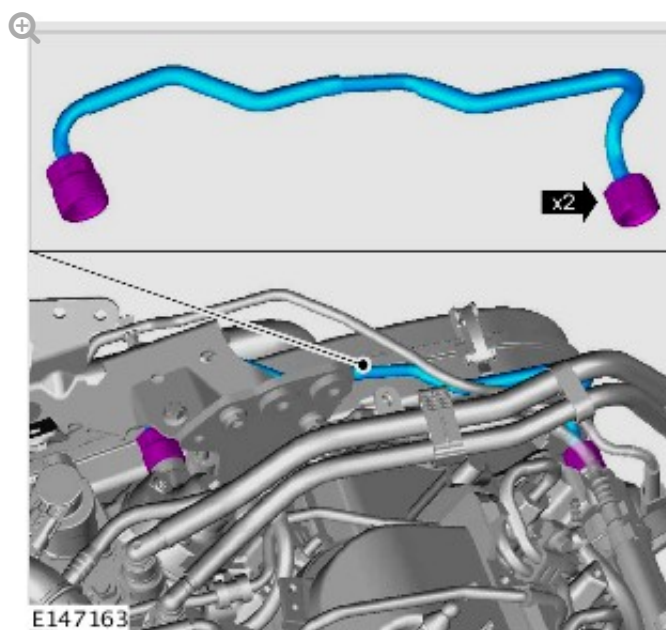


16.

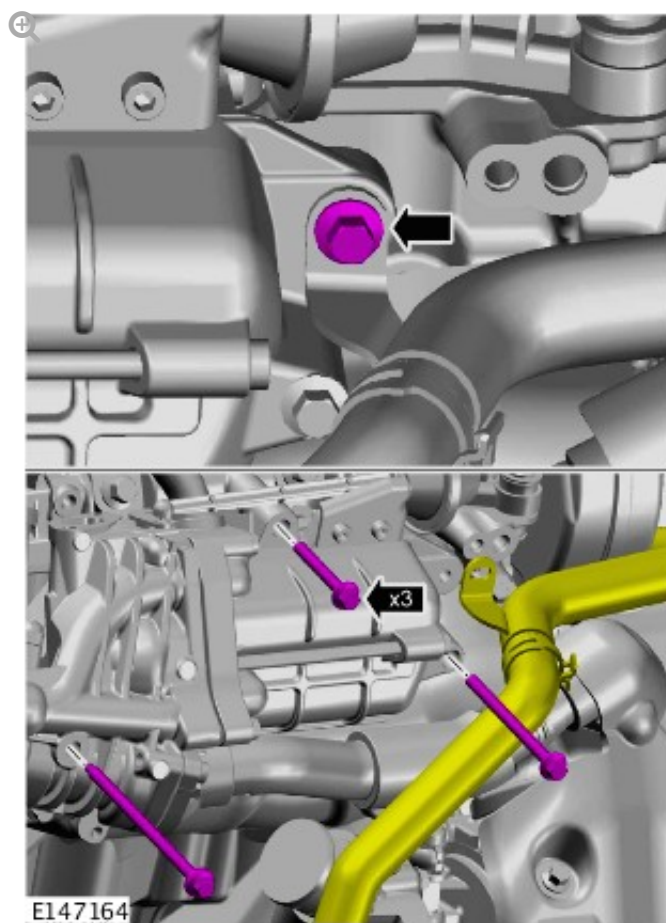

17.

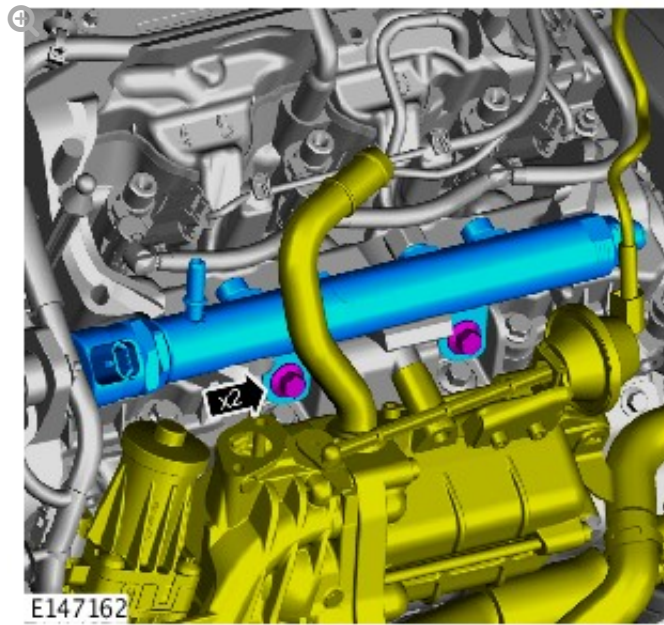


18.

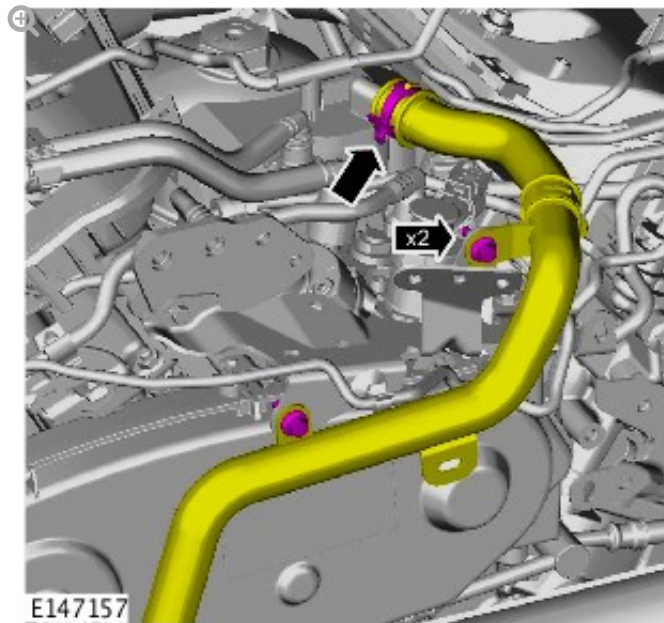


19.

CAUTION:


Be prepared to collect escaping fuel.

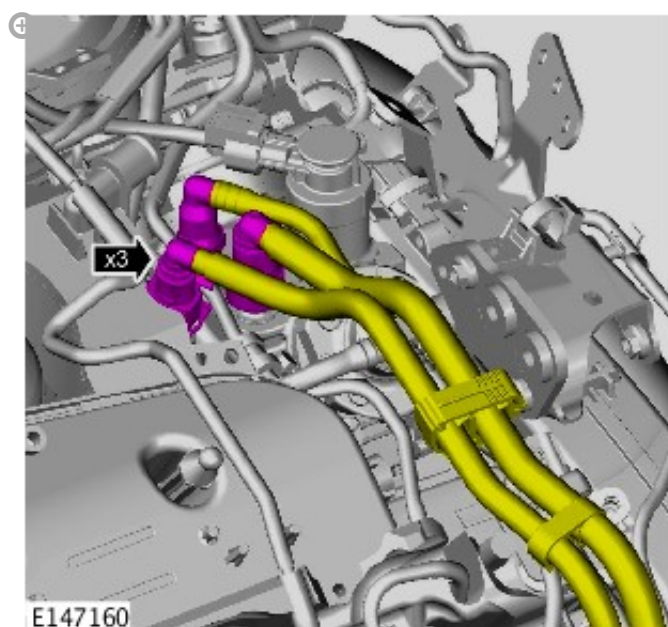

20.

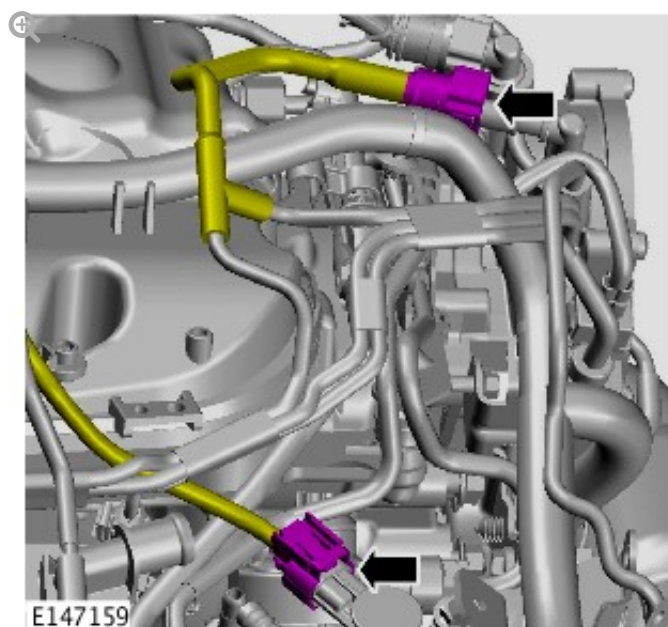


21.

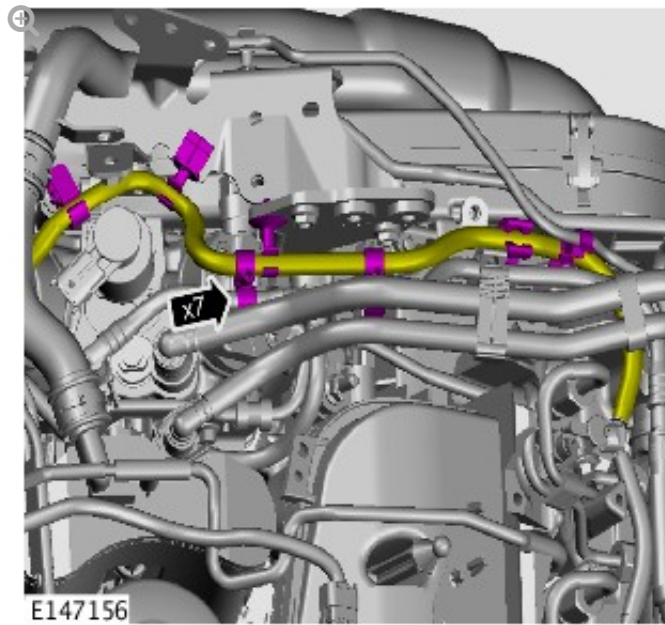

22.

CAUTIONS:

- Be prepared to collect escaping fuel.
- Discard the component.

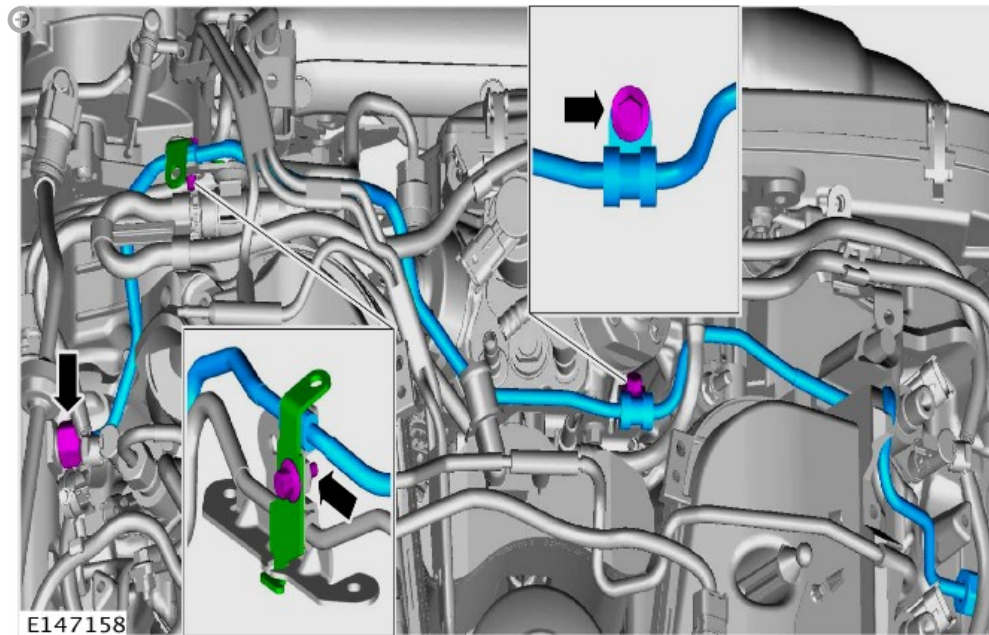


INSTALLATION

1.


CAUTIONS:

- Make sure that a new component is installed.
- Tighten the fuel supply line unions finger tight.
- Only tighten the bolts finger-tight at this stage.

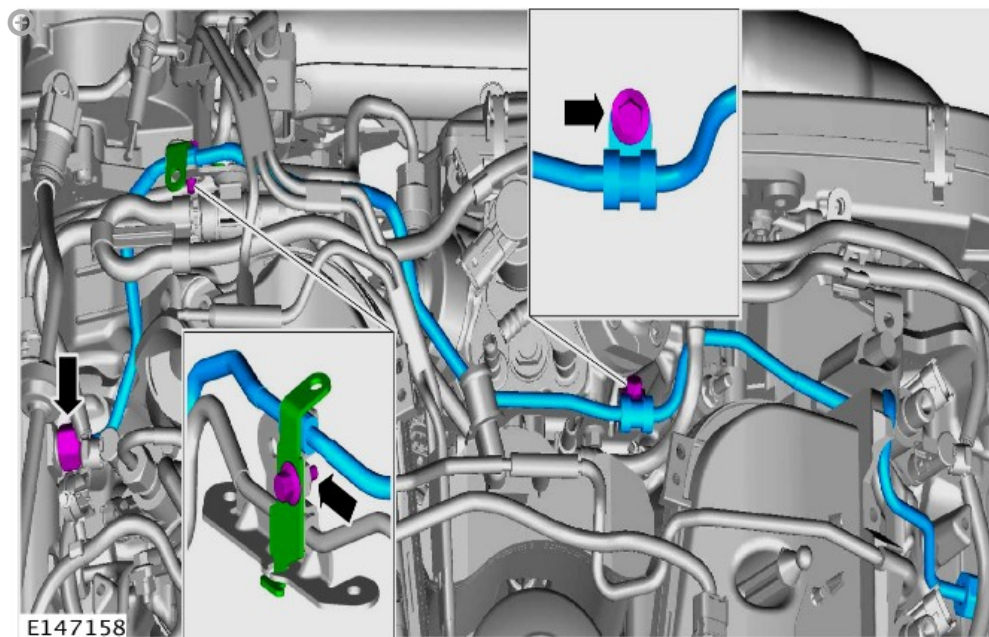


Renew Part: *Fuel rail balance pipe.*


2.

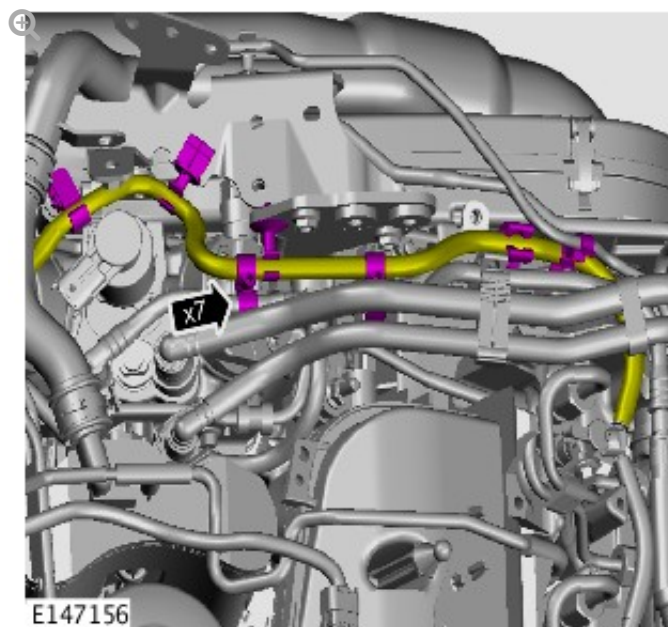

3.

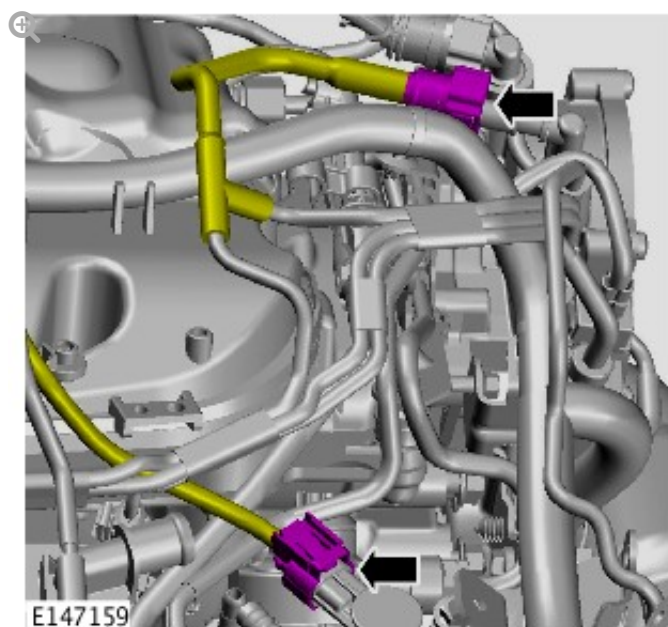


4.

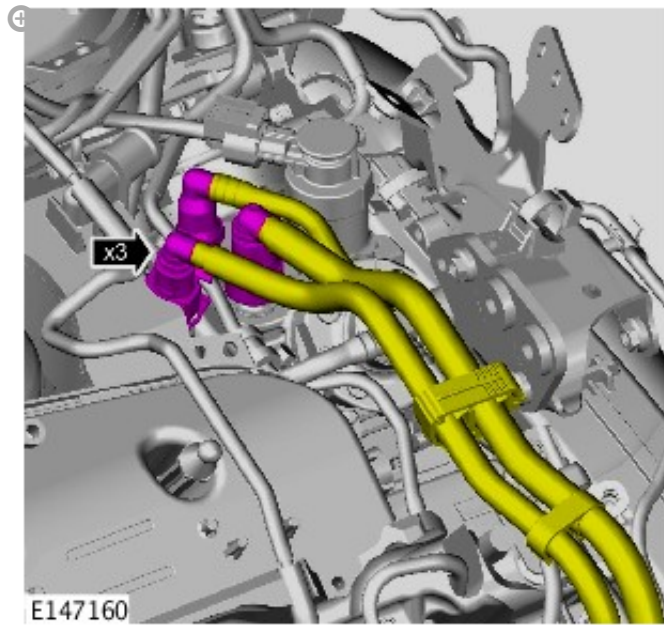

5.

CAUTION:


Only tighten the bolts finger-tight at this stage.

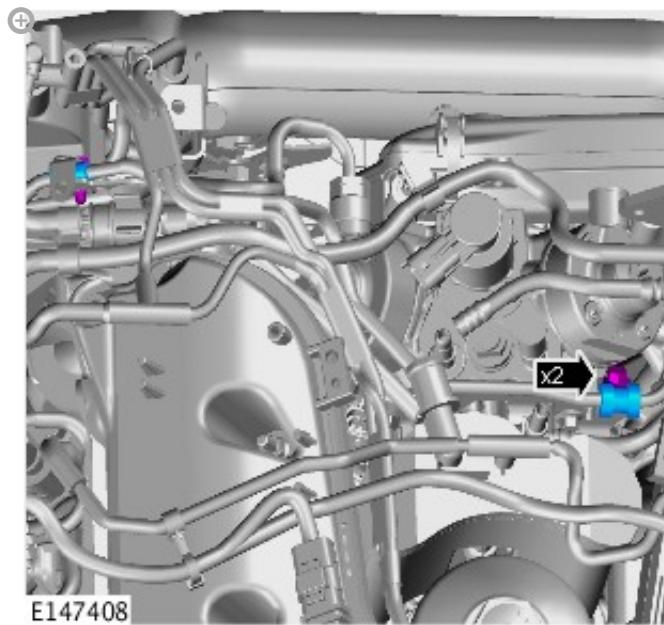

6.


CAUTIONS:

- Make sure that a new component is installed.
- Tighten the fuel supply line unions finger tight.

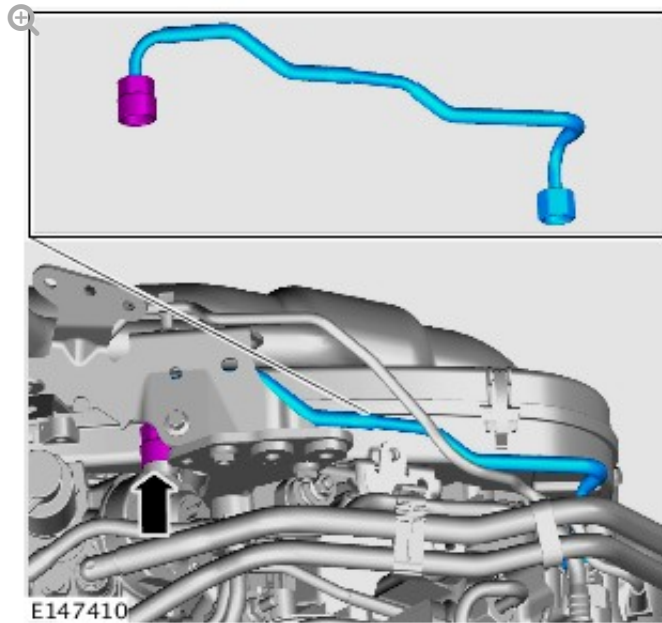

Renew Part: *Fuel rail LH supply pipe.*

7.

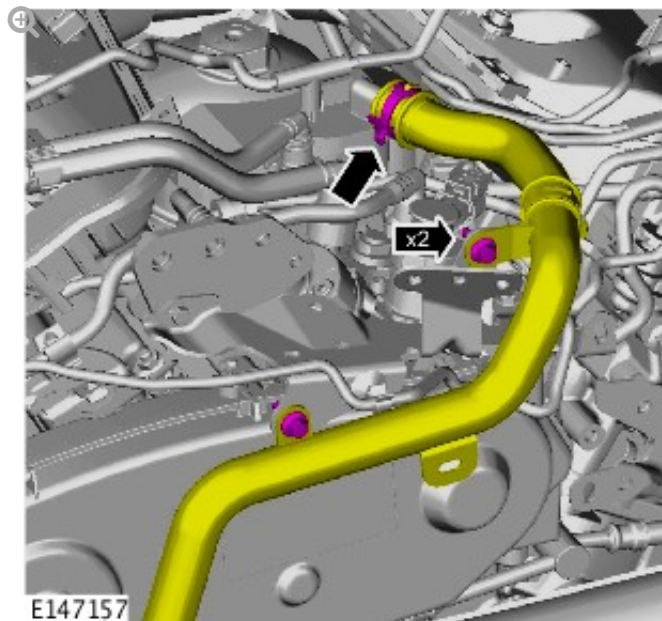


Torque: 10 Nm

8.

CAUTION:


Only tighten the bolts finger-tight at this stage.

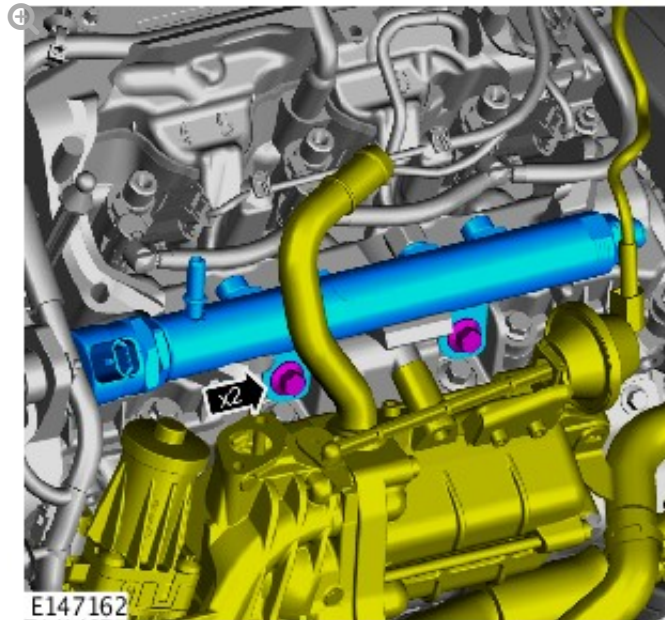

9.

CAUTION:


Tighten the fuel supply line unions finger tight.

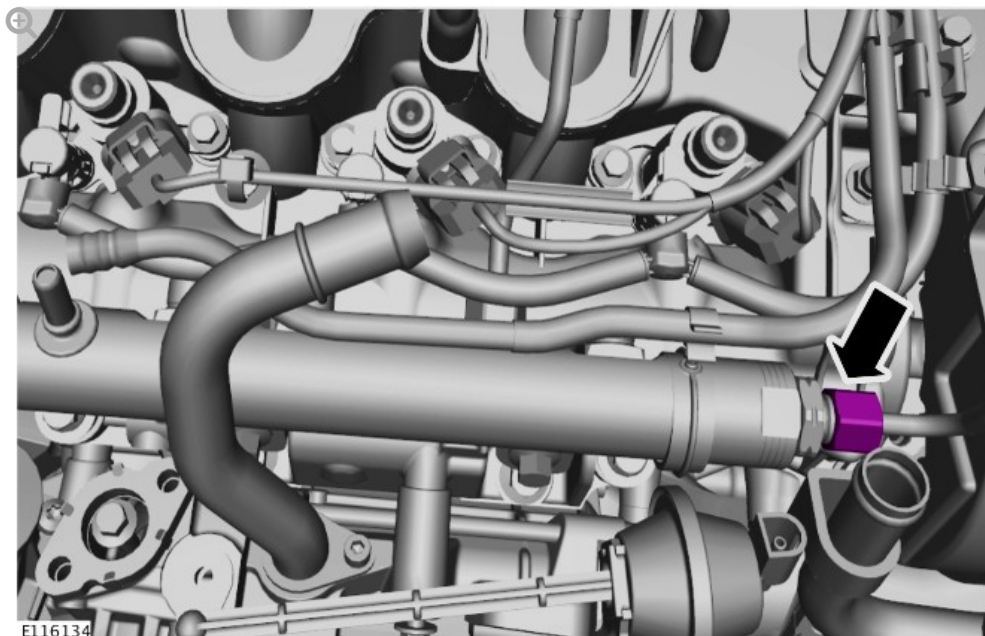


10.

CAUTION:

Tighten the fuel supply line unions finger tight.

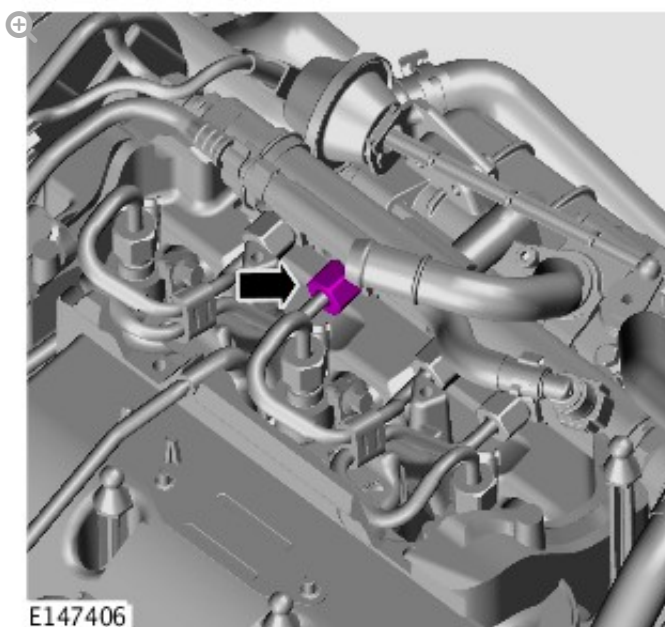


11.

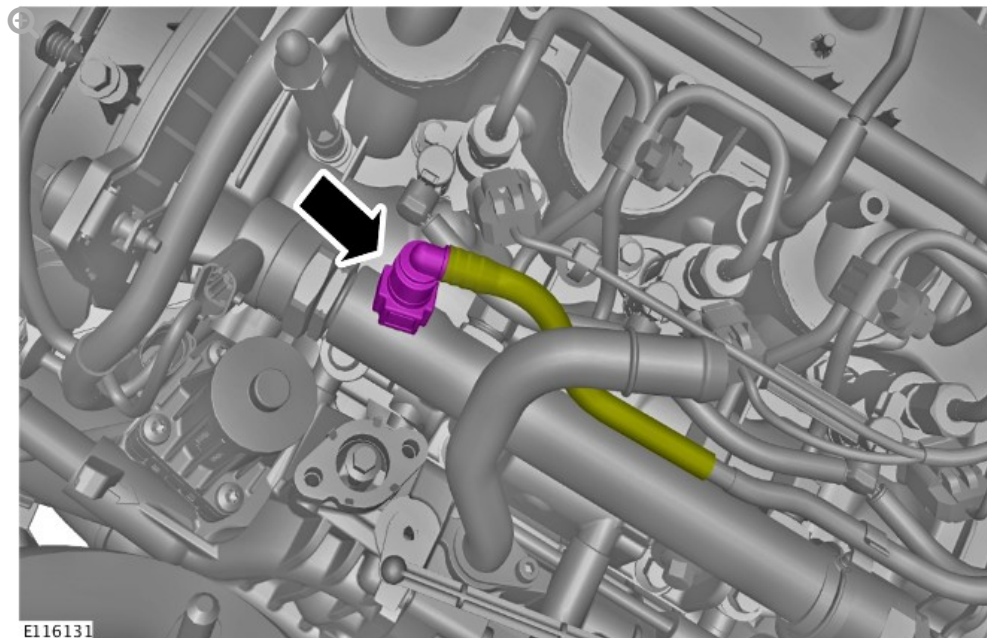

12.


CAUTIONS:

- Make sure that a new component is installed.
- Tighten the fuel supply line unions finger tight.

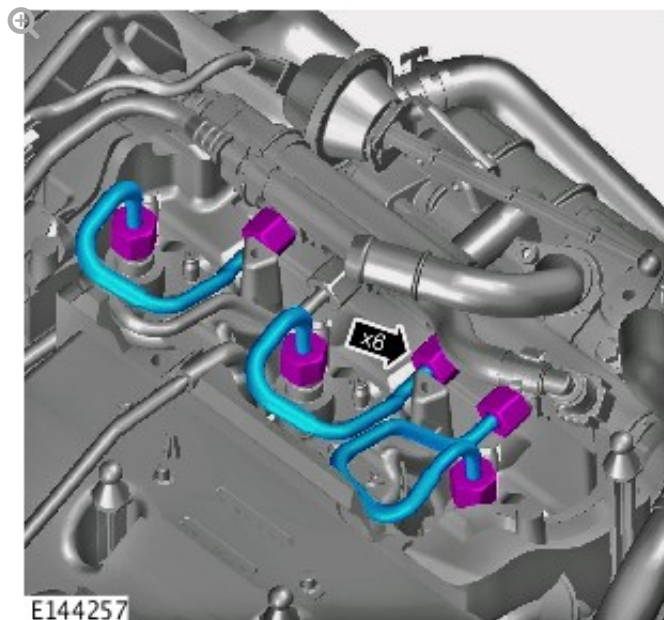


Renew Part: *Fuel injector high pressure pipes.*

13.

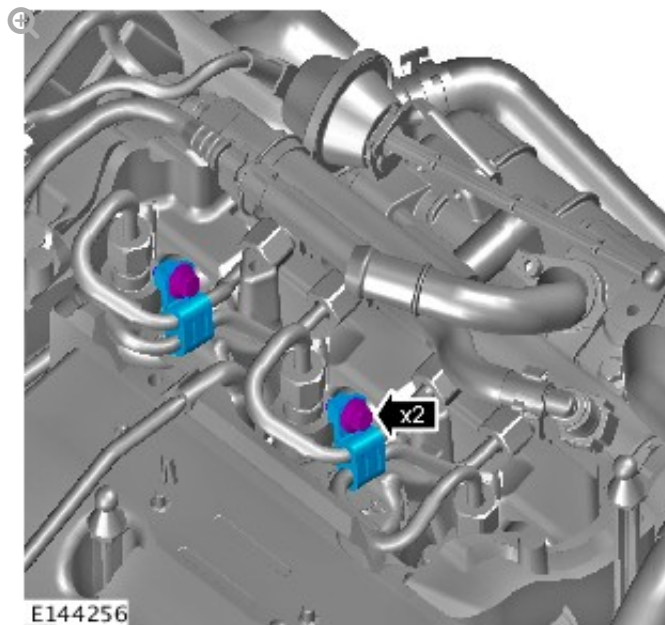


Torque: 9 Nm

14.

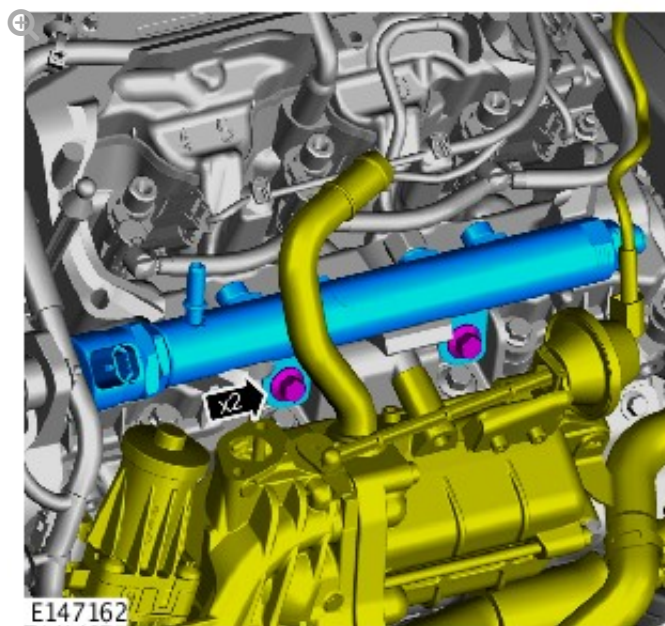


Torque: 24 Nm

15.

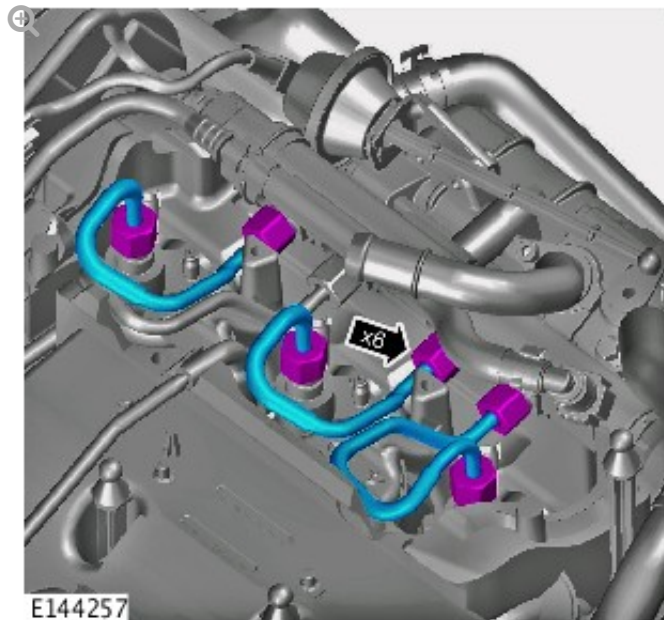


- Stage 1: Tighten the high-pressure fuel supply line unions at the fuel rail to 15Nm.
- Stage 2: Tighten the high-pressure fuel supply line unions at the injector to 15Nm.

16.

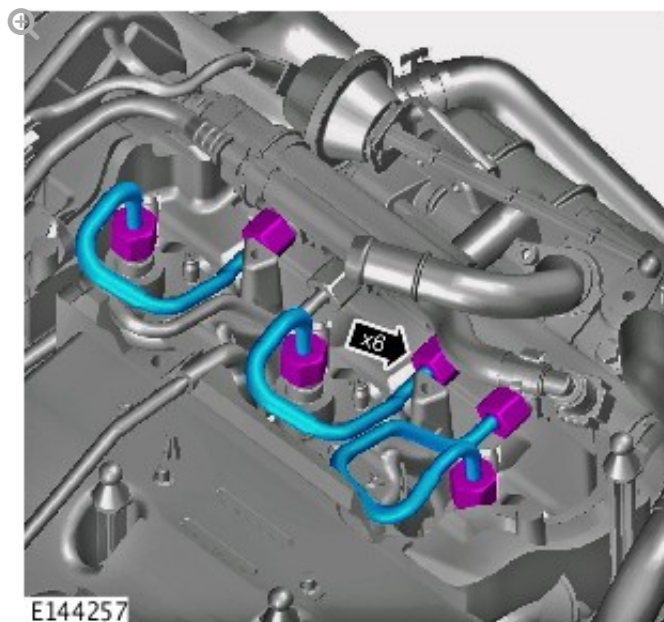


- Stage 1: Tighten the high-pressure fuel supply line unions at the fuel rail to 35Nm.
- Stage 2: Tighten the high-pressure fuel supply line unions at the injector to 35Nm.

17.

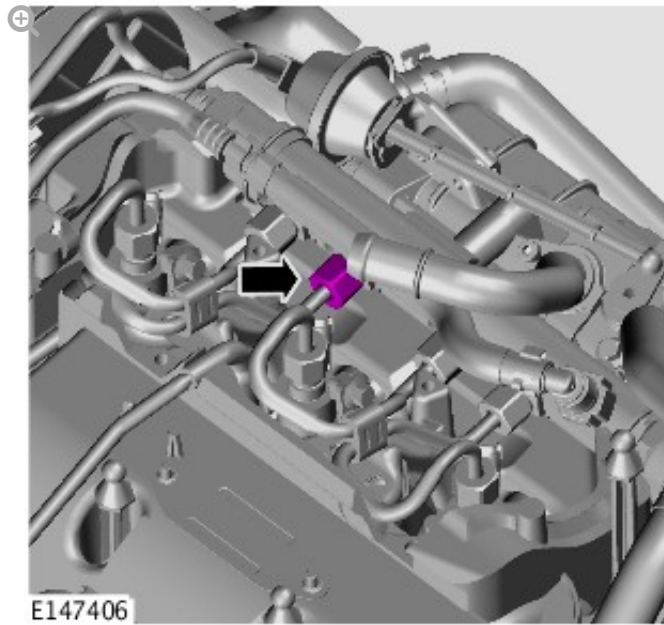


Tighten the high-pressure fuel lines union to 15Nm.

18.

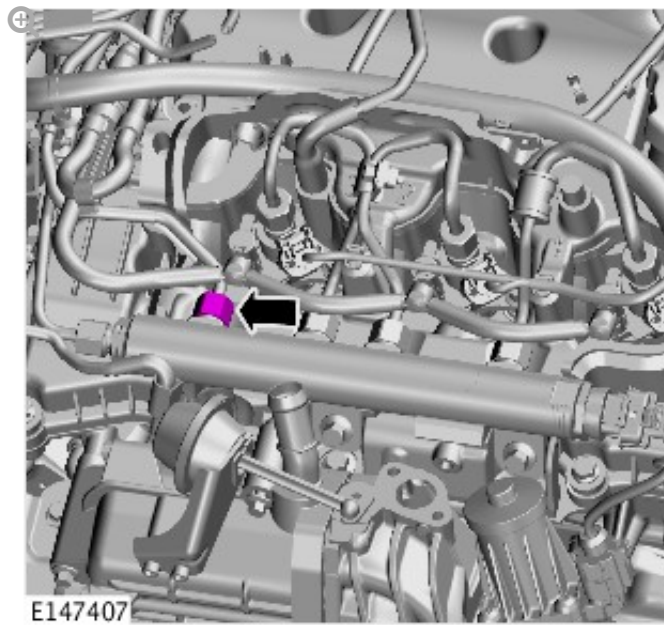


Tighten the high-pressure fuel lines union to 15Nm.

19.

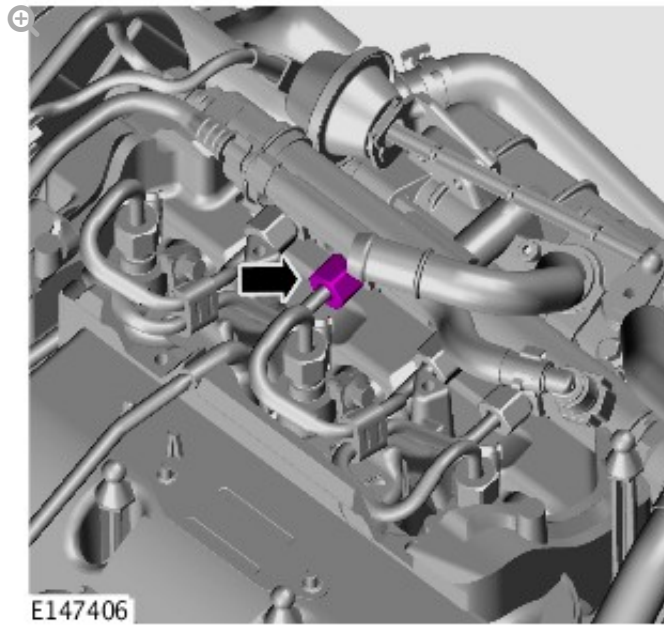


Tighten the high-pressure fuel line union to 35 Nm.

20.

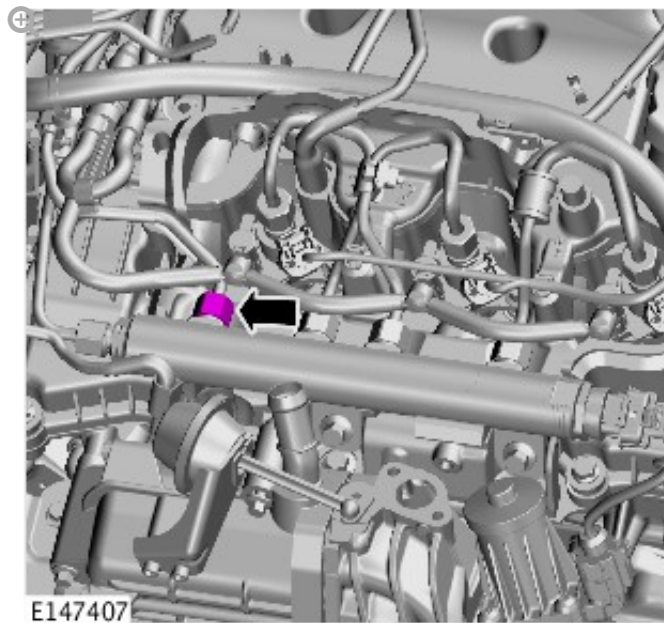


Tighten the high-pressure fuel line union to 35 Nm.

21.

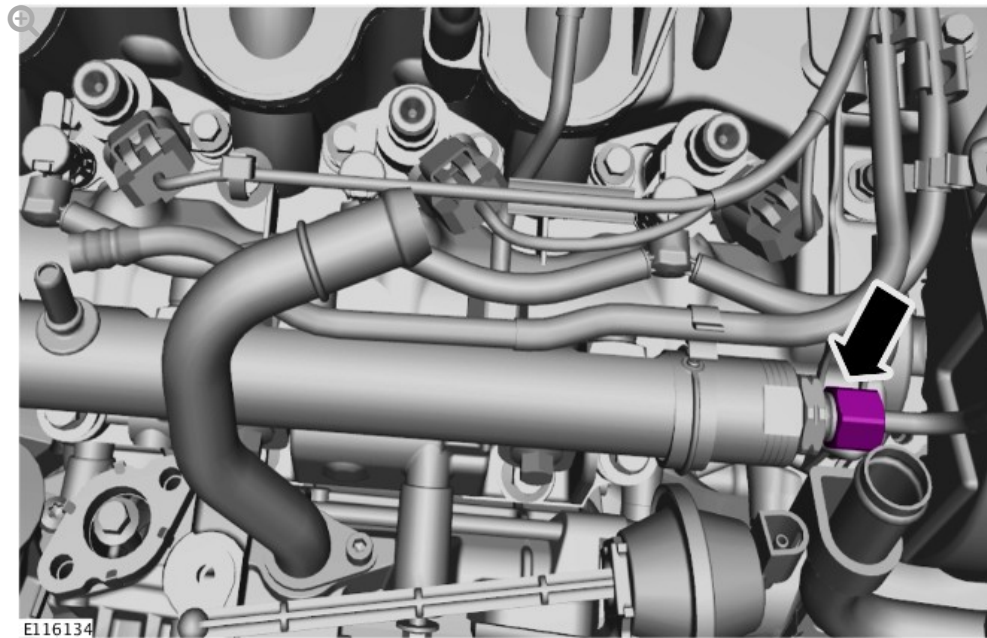


Tighten the high-pressure fuel lines union to 15Nm.

22.

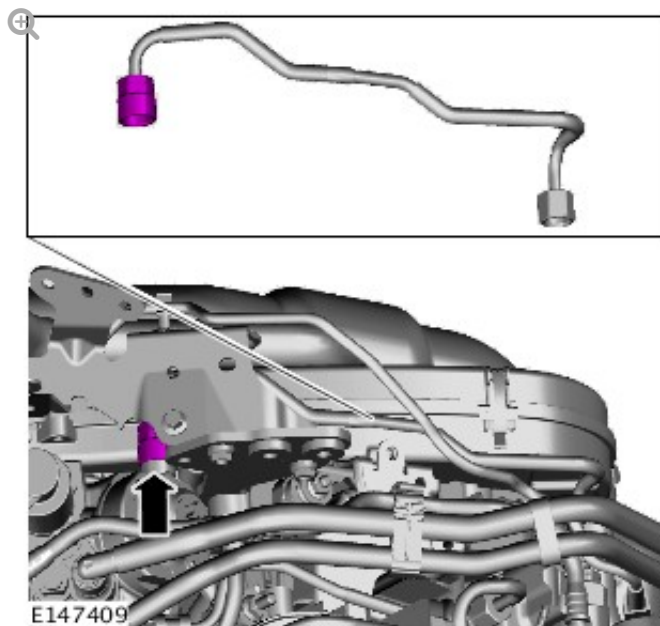


Tighten the high-pressure fuel lines union to 15Nm.

23.

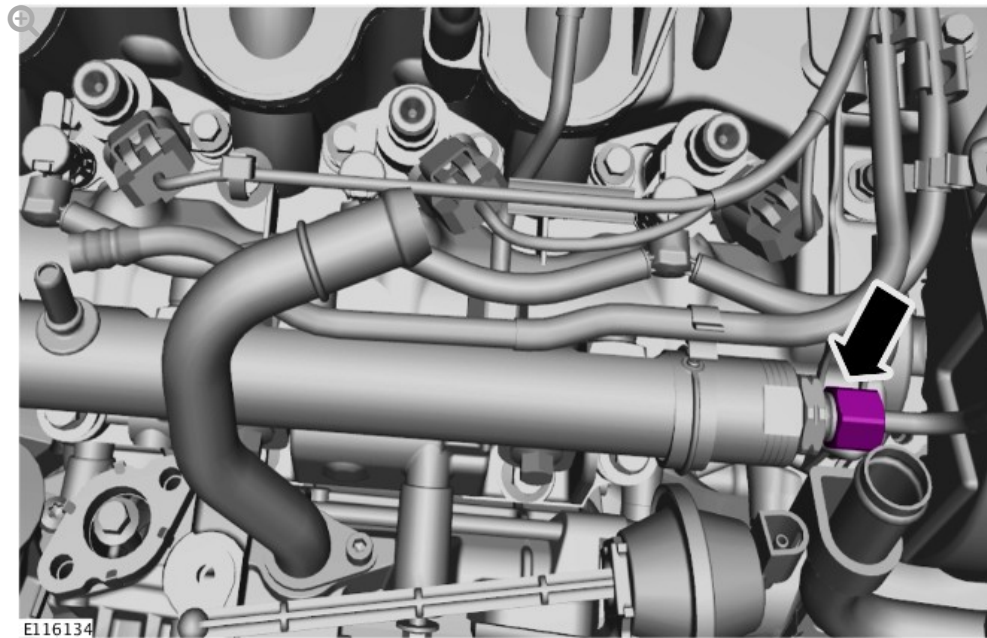


Tighten the high-pressure fuel line union to 35 Nm.

24.

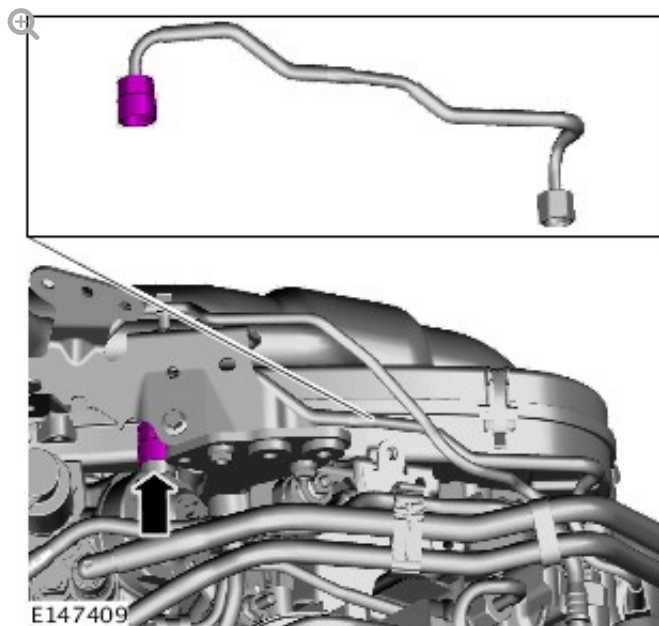


Tighten the high-pressure fuel line union to 35 Nm.

25.

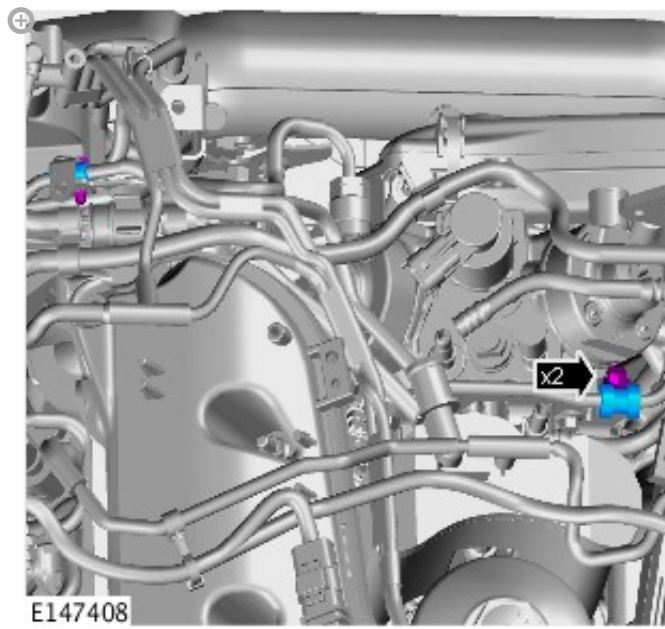


Torque: 10 Nm

26.

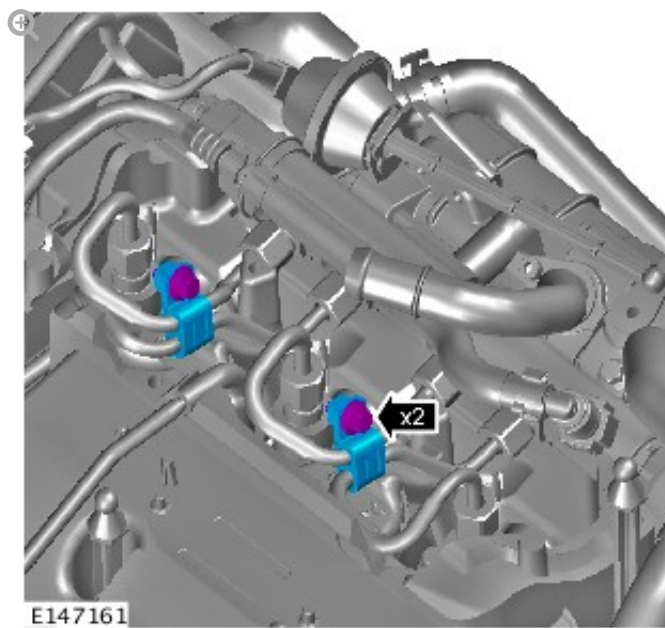


Torque: 10 Nm


27.

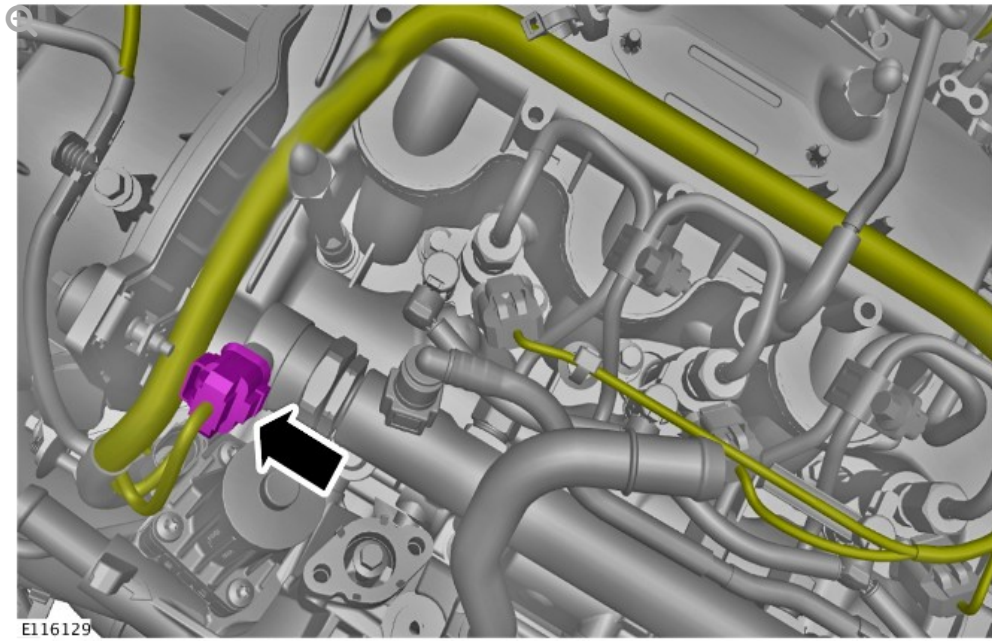

28.

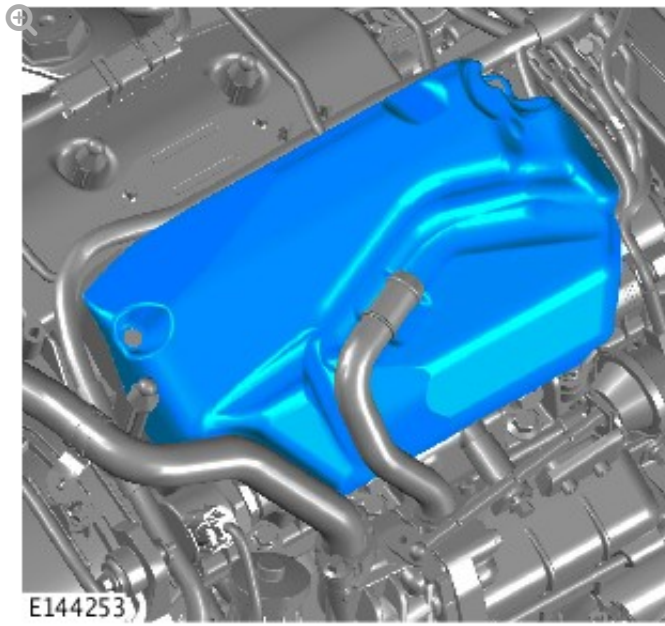


29.

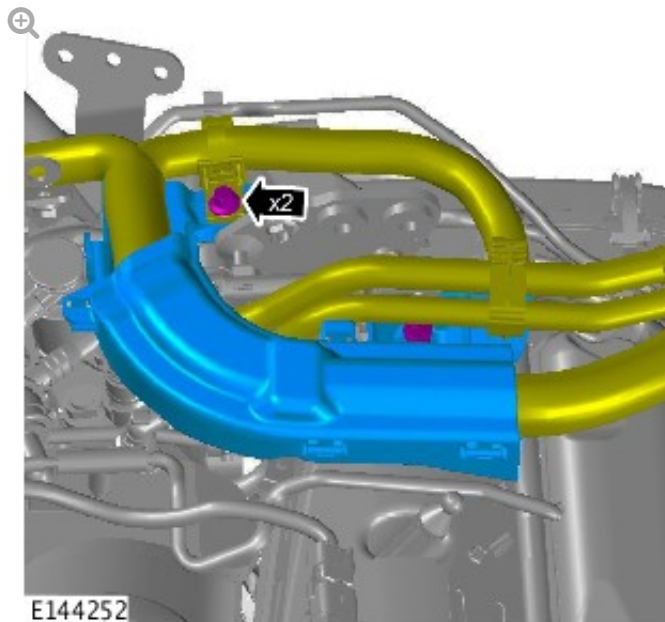

Torque: 10 Nm

30.

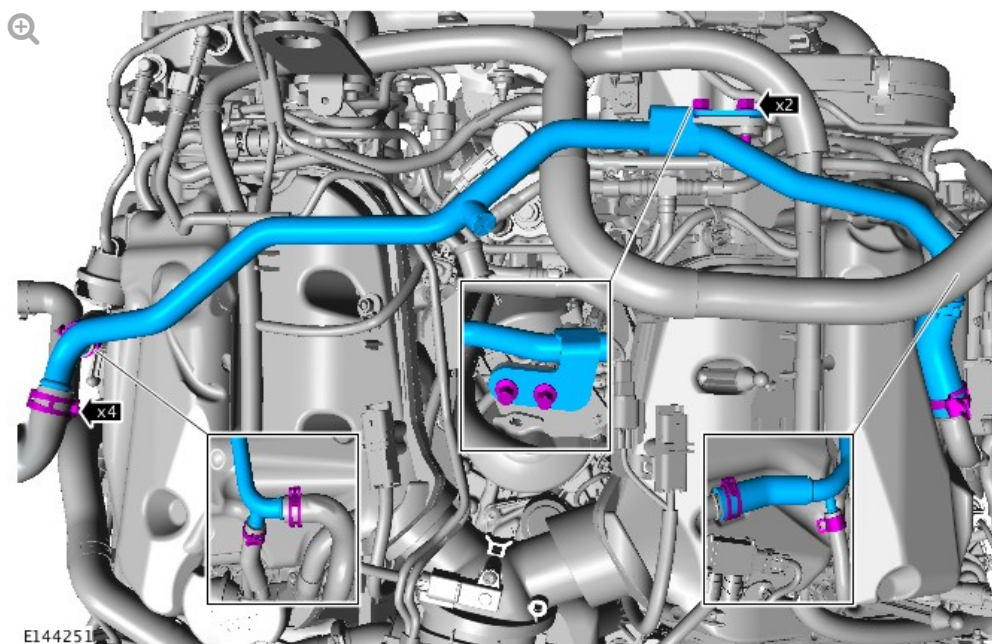

Torque: 10 Nm

31. Refer to: [Left Exhaust Gas Recirculation Valve Outlet Tube](#) (303-08A Engine Emission Control - TDV6 3.0L Diesel - Gen 2/TDV6 3.0L Diesel, Removal and Installation).
32. Refer to: [Cooling System Partial Draining and Vacuum Filling](#) (303-03F Engine Cooling - TDV8 4.4L Diesel, General Procedures).

33. Refer to: [Secondary Bulkhead Centre Panel - TDV6 3.0L Diesel](#) (501-02 Front End Body Panels, Removal and Installation).
34. Refer to: [Specifications](#) (414-00 Battery and Charging System - General Information, Specifications).