

2016.0 RANGE ROVER (LG), 303-04

FUEL CHARGING AND CONTROLS - TDV6 3.0L DIESEL

RIGHT FUEL RAIL [G 1 5 0 9 4 3 5]

REMOVAL AND INSTALLATION

19.60.05	FUEL RAIL - RH BANK - RENEW	3000 CC, TDV6	3	USED WITHINS	+
----------	--------------------------------------	------------------	---	-----------------	---

PART(S)

STEP	REPLACE PART / RENEW PART	PART NAME
Installation Step 1	Renew Part	Fuel rail RH supply pipe
Installation Step 2	Renew Part	Fuel rail balance pipe
Installation Step 10	Renew Part	Fuel injector high pressure pipes


REMOVAL

NOTE:


Some variation in the illustrations may occur, but the essential information is always correct.

1. Refer to: [Specifications](#) (414-00 Battery and Charging System - General Information, Specifications).


2. Refer to: [Secondary Bulkhead Centre Panel - TDV6 3.0L Diesel](#) (501-02 Front End Body Panels, Removal and Installation).
3. Refer to: [Cooling System Partial Draining and Vacuum Filling](#) (303-03F Engine Cooling - TDV8 4.4L Diesel, General Procedures).
4. Refer to: [Left Exhaust Gas Recirculation Valve Outlet Tube](#) (303-08A Engine Emission Control - TDV6 3.0L Diesel - Gen 2/TDV6 3.0L Diesel, Removal and Installation).
5. Refer to: [Fuel Injection Component Cleaning](#) (303-04A Fuel Charging and Controls - TDV6 3.0L Diesel, General Procedures).

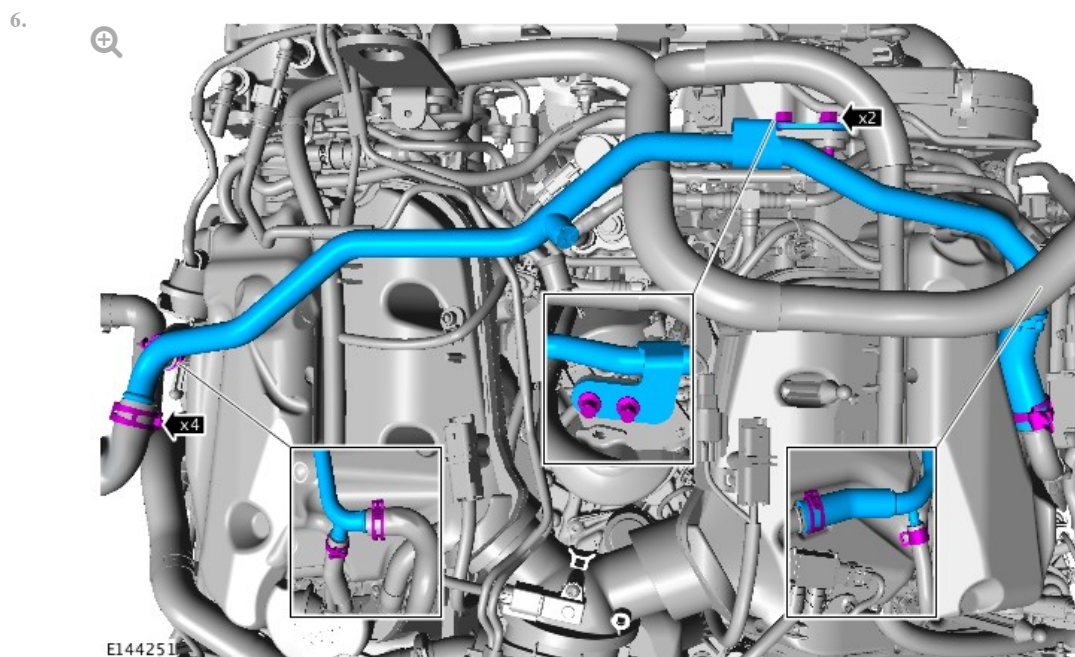


7.

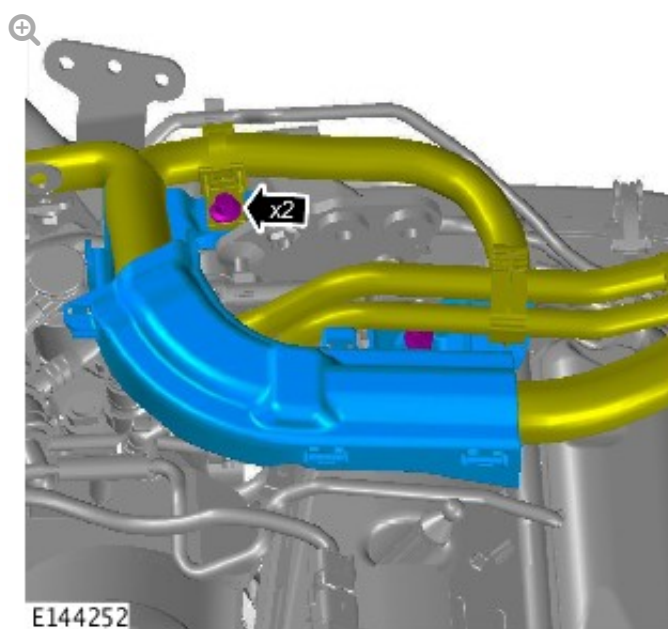


8.

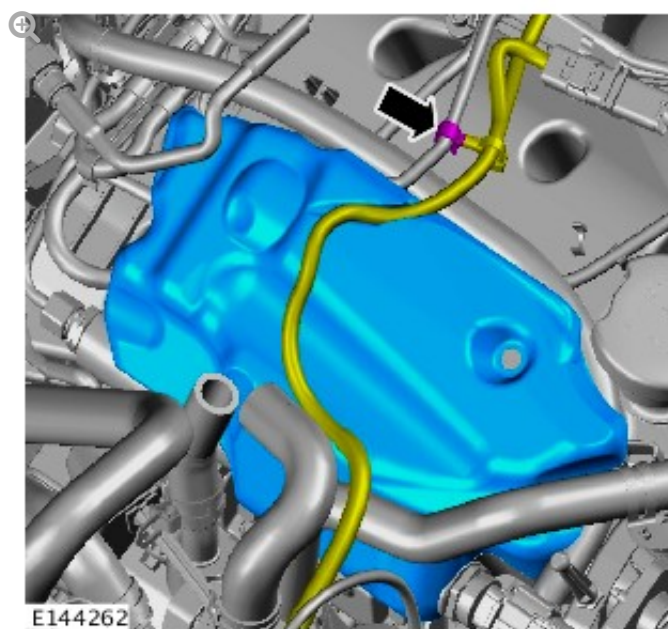

9.

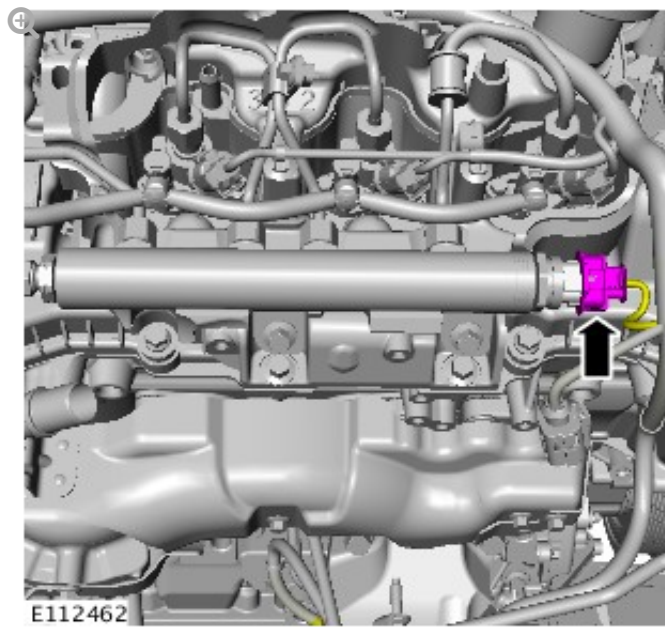


10.

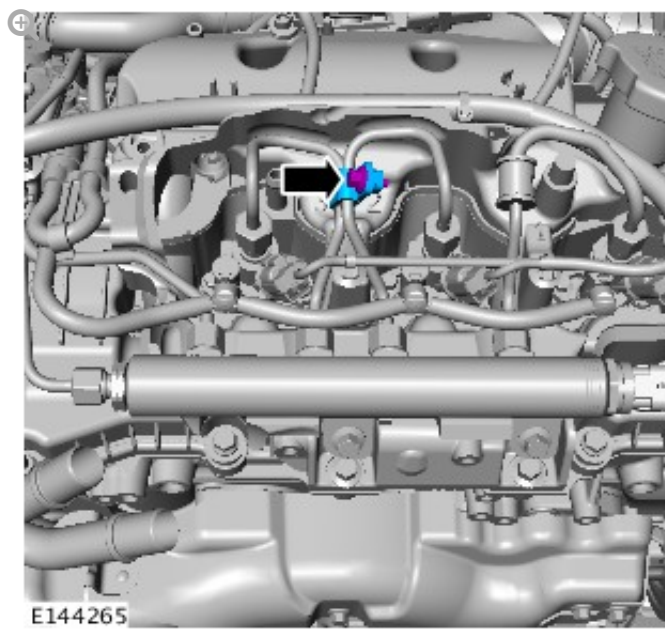

11.

CAUTIONS:


- Be prepared to collect escaping fuel.
- Discard the component.
- Before disconnecting or removing components, ensure the area around the joint faces and connections are clean. Plug open connections to prevent contamination.

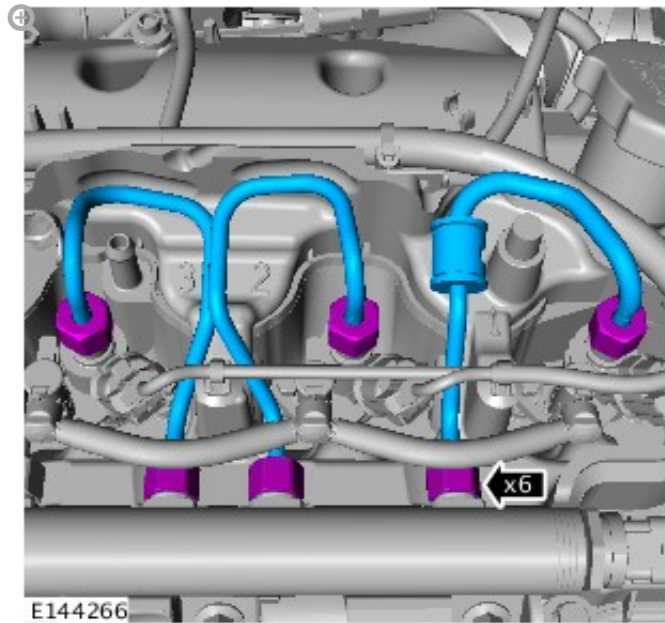

12.

CAUTIONS:


- Be prepared to collect escaping fuel.
- Before disconnecting or removing components, ensure the area around the joint faces and connections are clean. Plug open connections to prevent contamination.

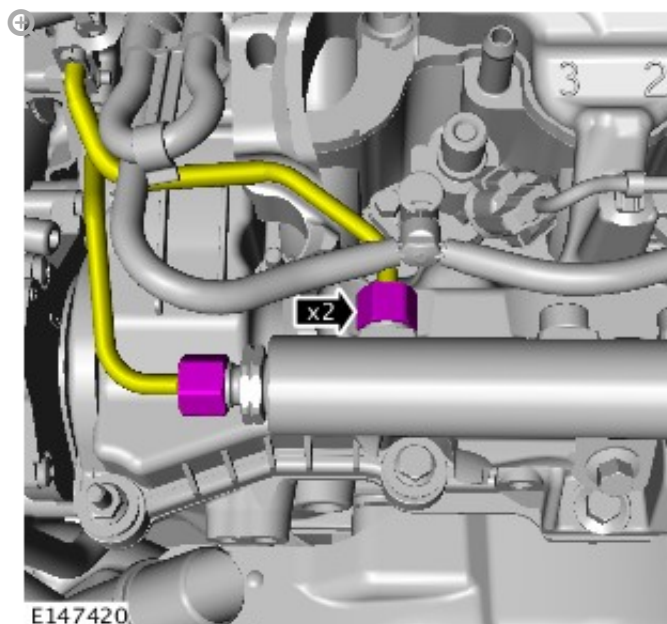


13.

CAUTION:


Be prepared to collect escaping fuel.

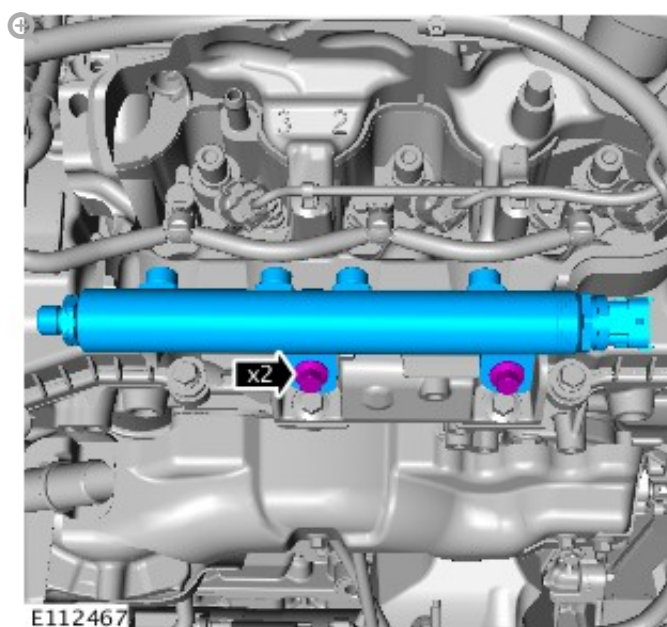


14.

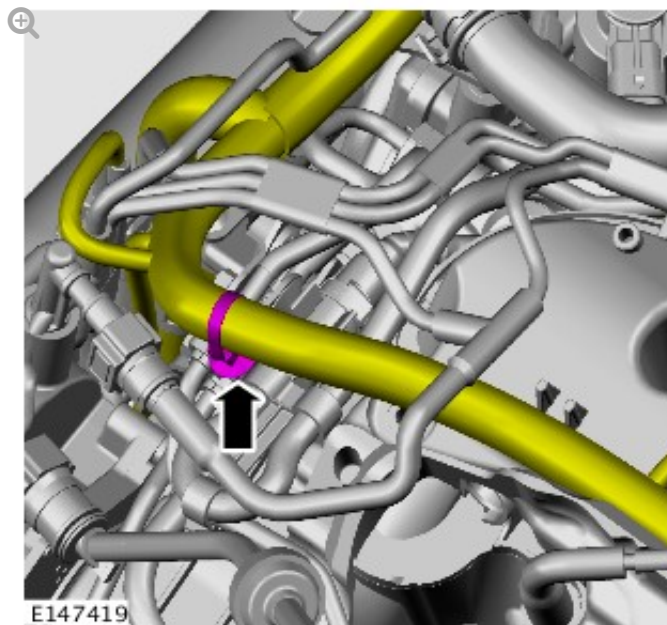


15.

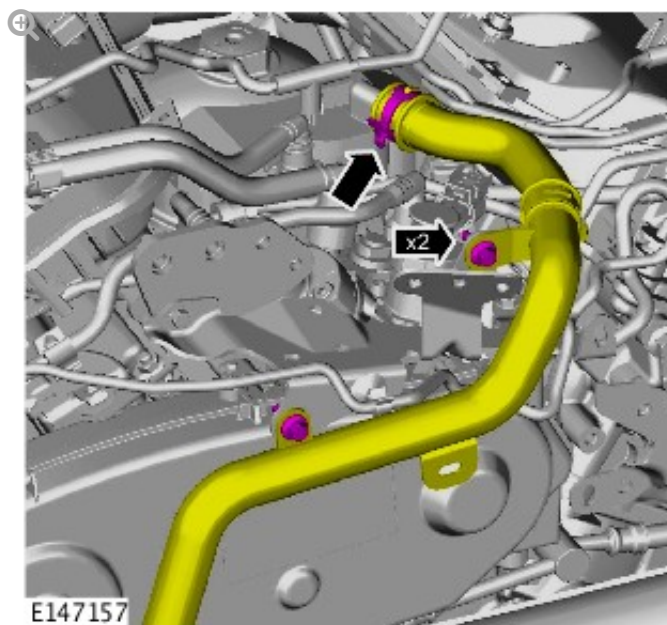

16.

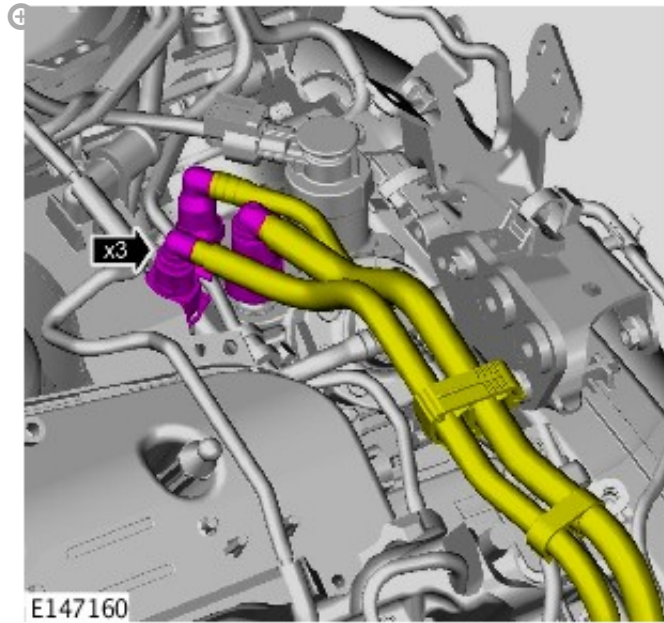


17.

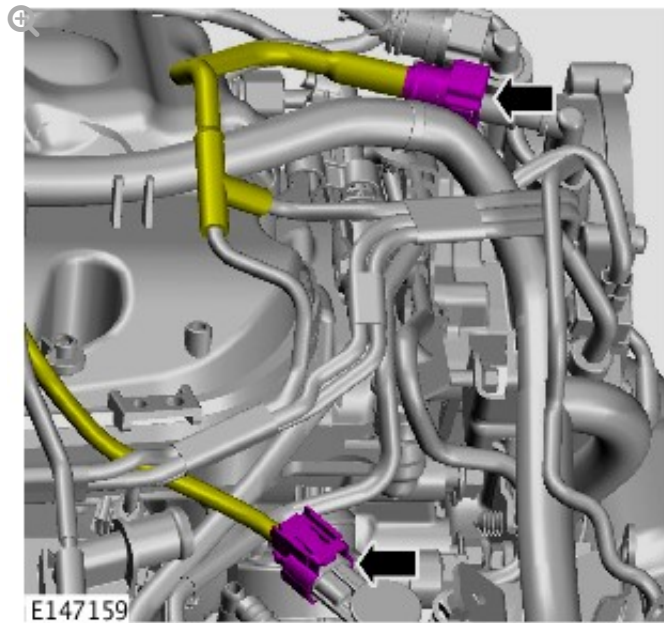

18.

CAUTION:


Be prepared to collect escaping fuel.

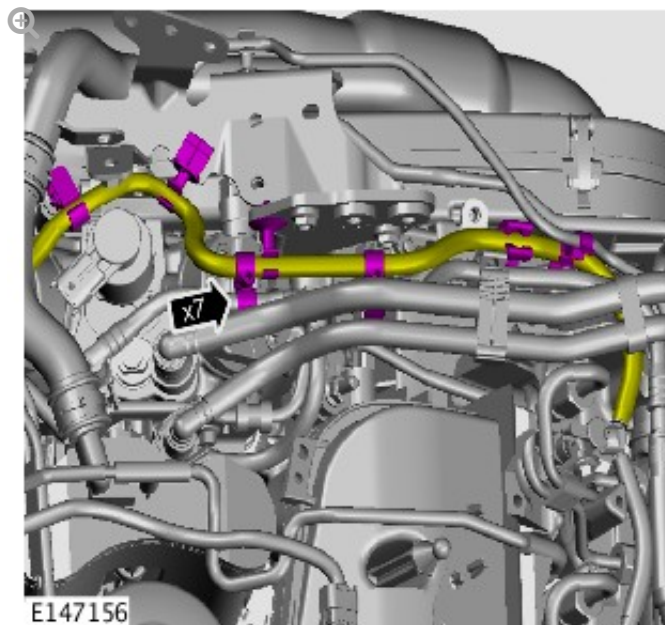

19.

CAUTIONS:


- Be prepared to collect escaping fuel.
- Discard the component.

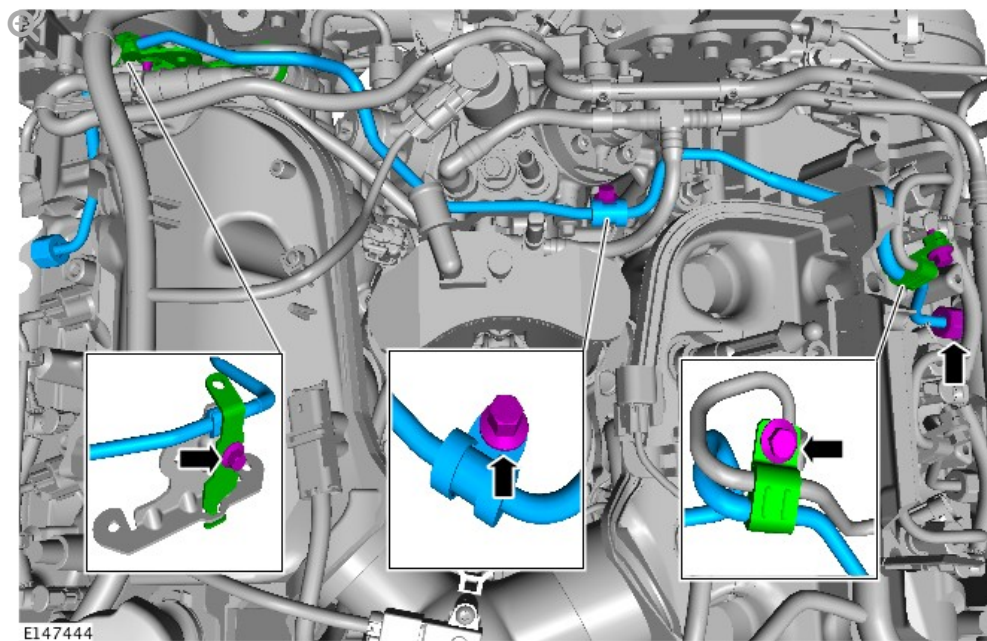

20.

CAUTIONS:

- Be prepared to collect escaping fuel.
- Discard the component.

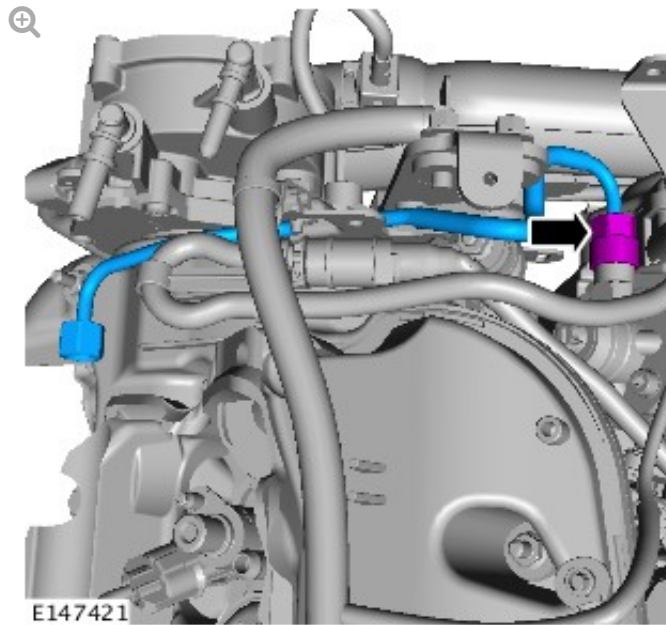


INSTALLATION

1.

CAUTIONS:

- Make sure that a new component is installed.
- Tighten the fuel supply line unions finger tight.

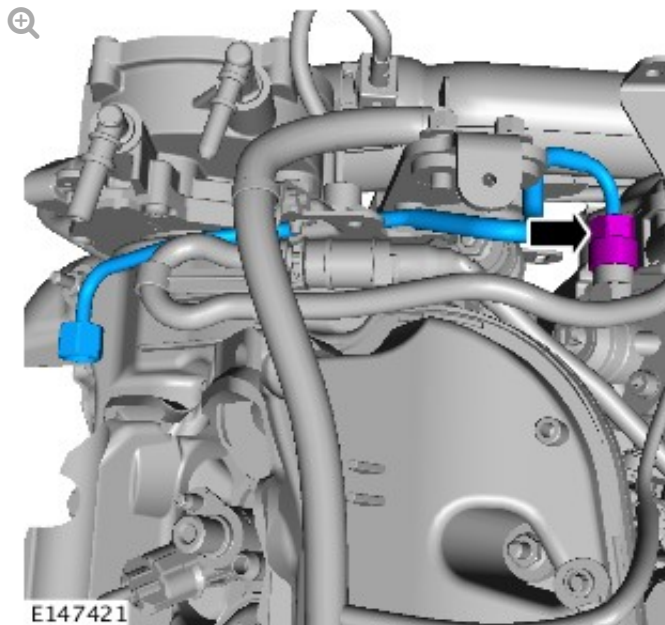


Renew Part: *Fuel rail RH supply pipe.*

2.


CAUTIONS:

- Only tighten the unions finger-tight at this stage.
- Make sure that a new component is installed.

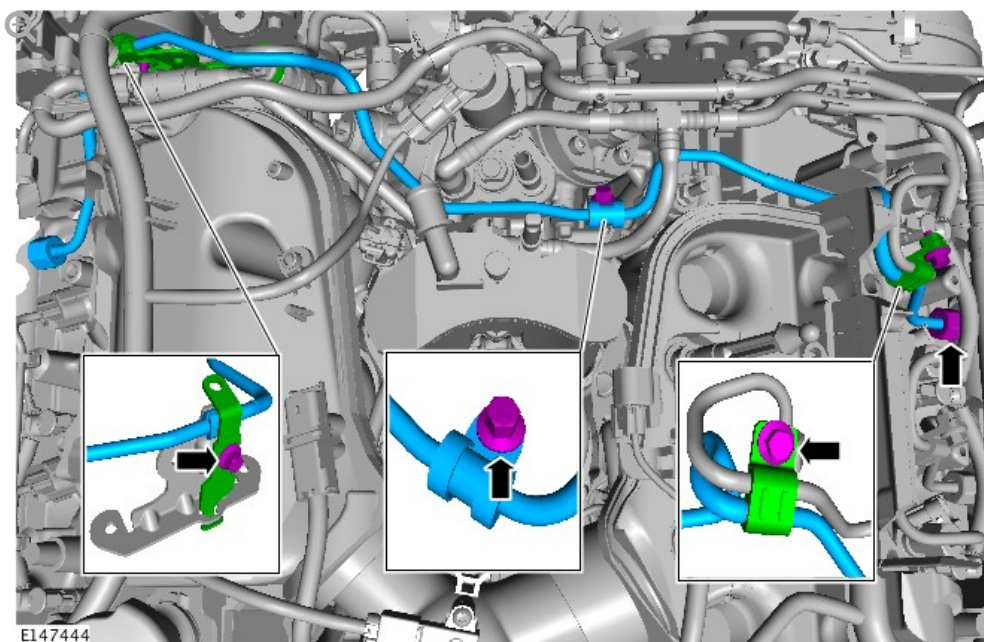


Renew Part: *Fuel rail balance pipe.*

3.

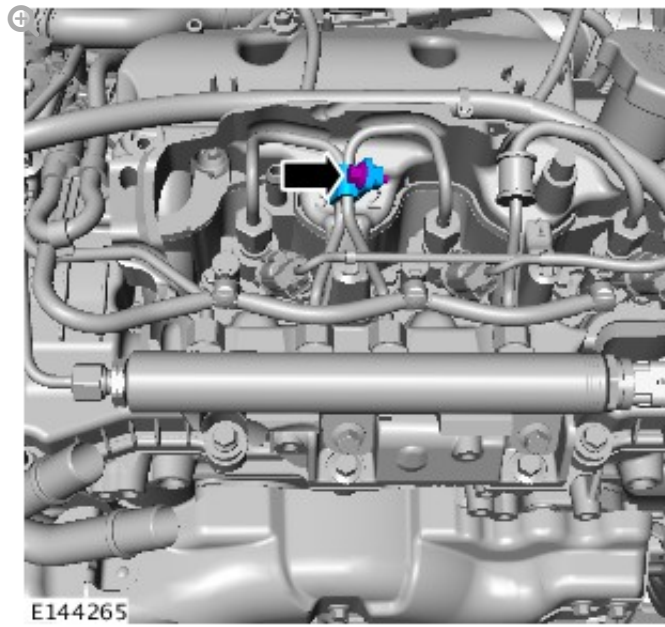


Torque: 9 Nm


4.

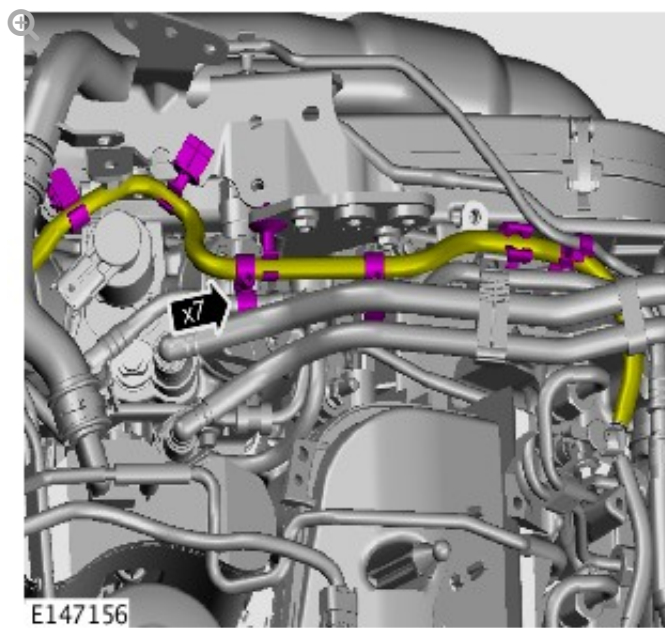


5.

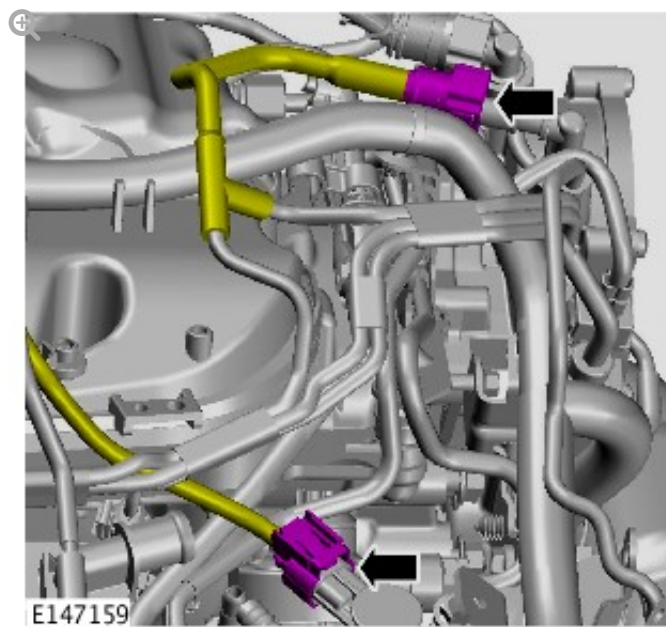

6.

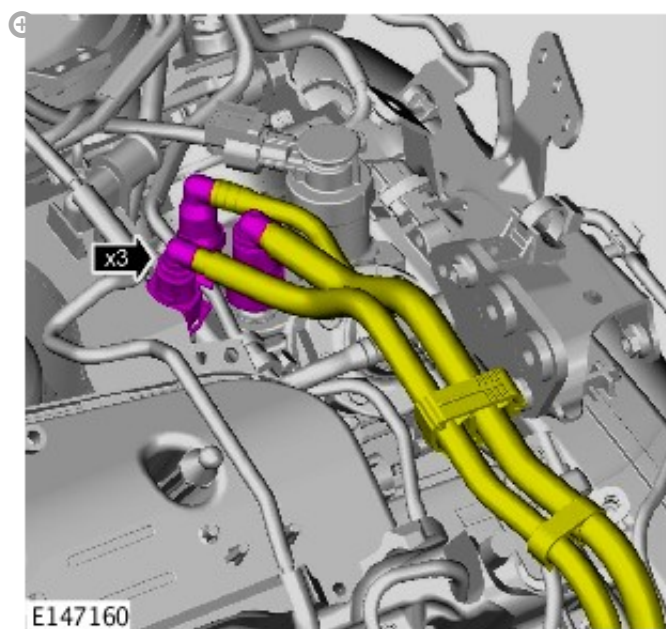


7.

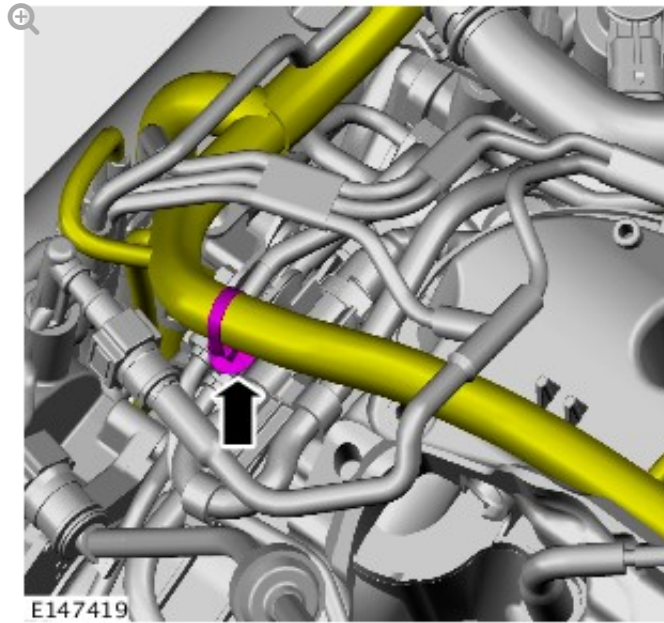

8.

CAUTION:


Only tighten the bolts finger-tight at this stage.

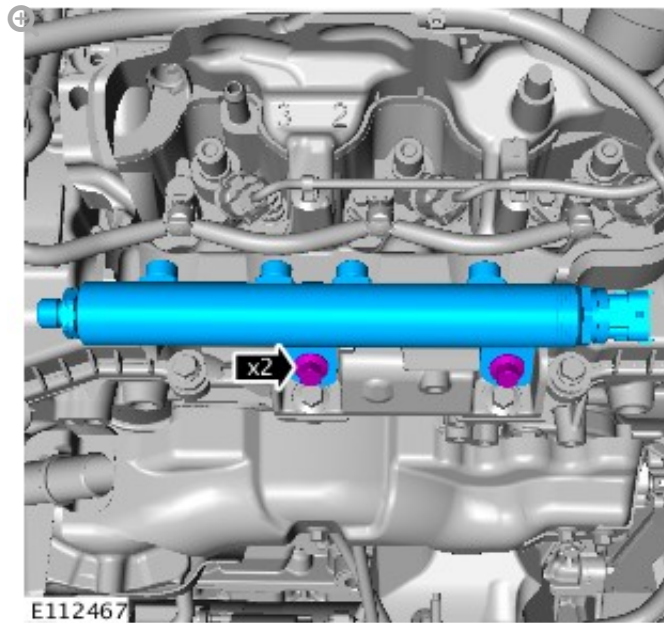

9.

CAUTION:


Only tighten the unions finger-tight at this stage.

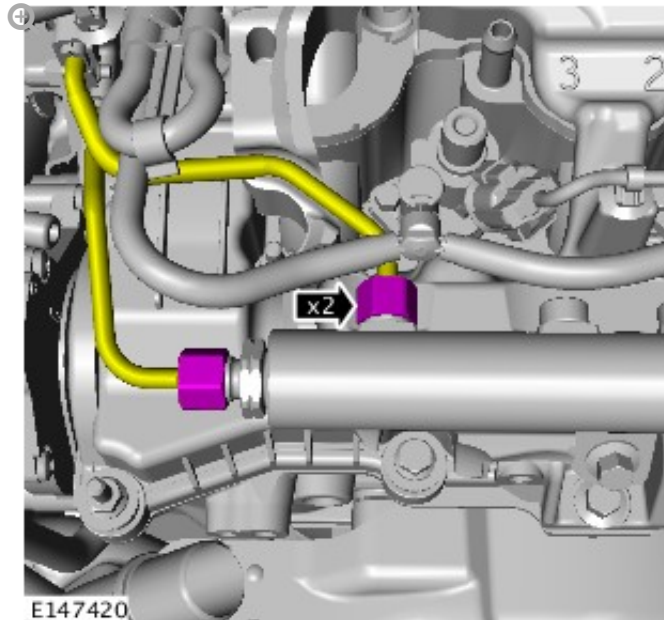

10.


CAUTIONS:

- Make sure that new components are installed.
- Only tighten the unions finger-tight at this stage.

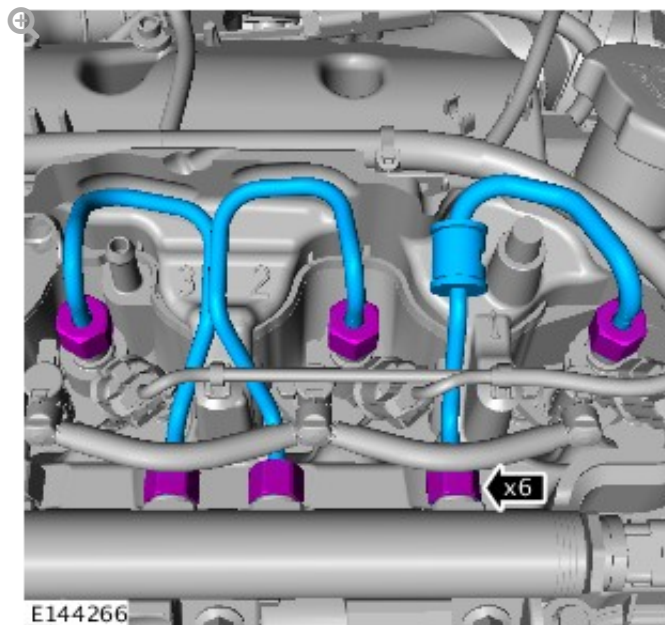


Renew Part: *Fuel injector high pressure pipes.*

11.

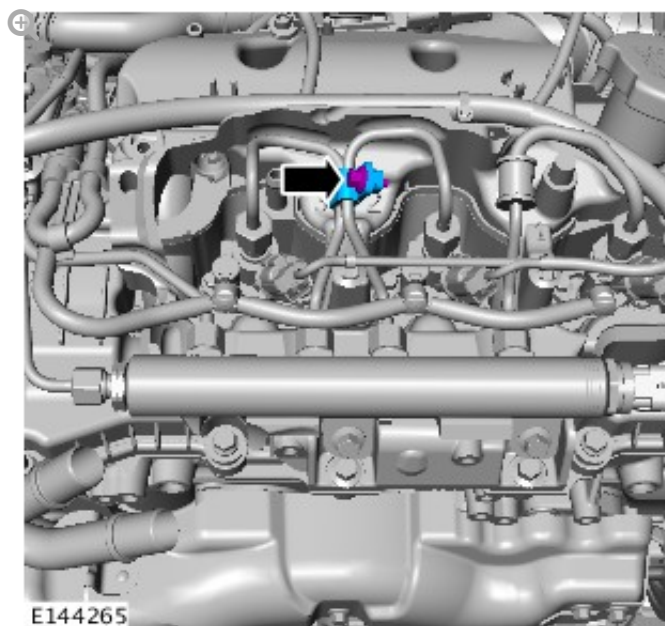

Torque: 9 Nm

12.

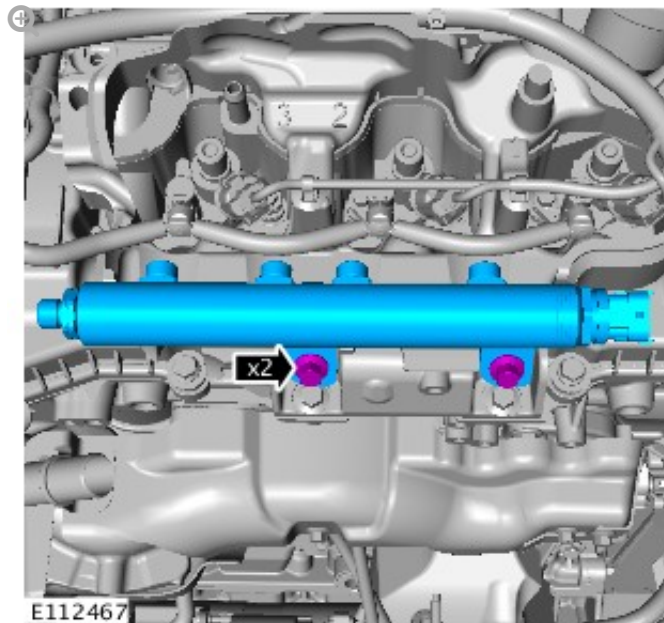


Torque: 24 Nm

13.

NOTE:

Some variation in the illustrations may occur, but the essential information is always correct.

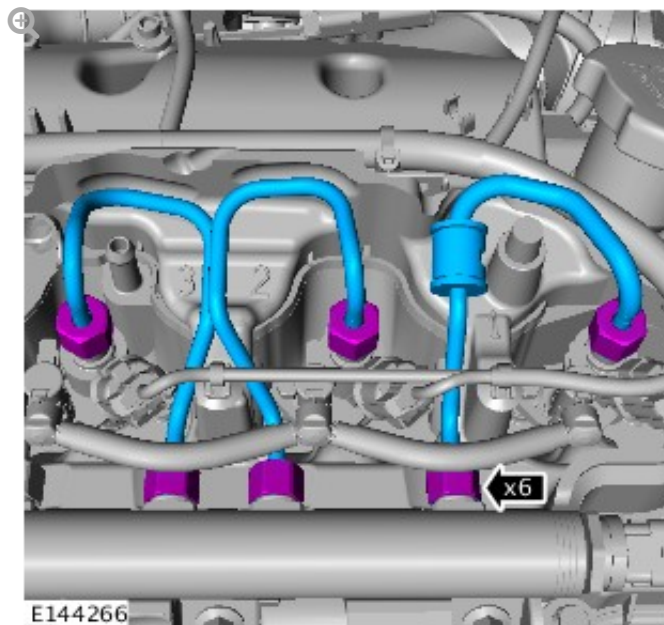


- Stage 1: Tighten the high-pressure fuel supply line unions at the fuel rail to 15Nm.

- Stage 2: Tighten the high-pressure fuel supply line unions at the injector to 15Nm.

14.


NOTE:

Some variation in the illustrations may occur, but the essential information is always correct.

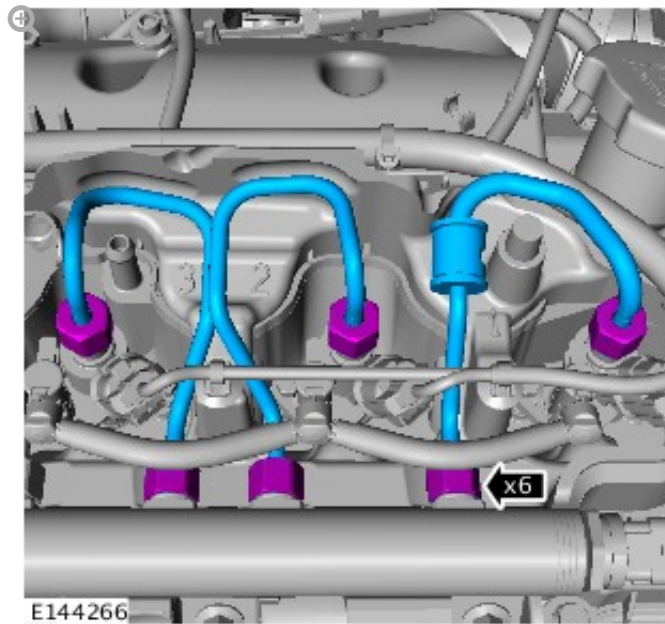


- Stage 1: Tighten the high-pressure fuel supply line unions at the fuel rail to 35Nm.
- Stage 2: Tighten the high-pressure fuel supply line unions at the injector to 35Nm.

15.

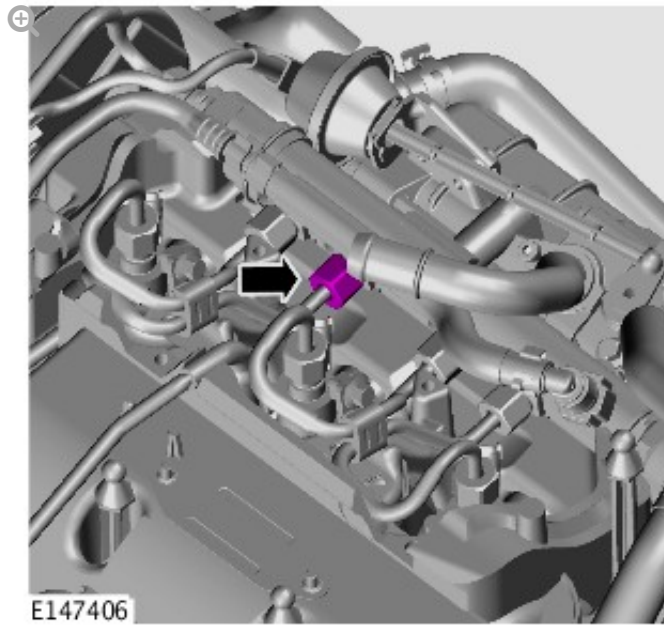


Tighten the high-pressure fuel lines union to 15Nm.

16.

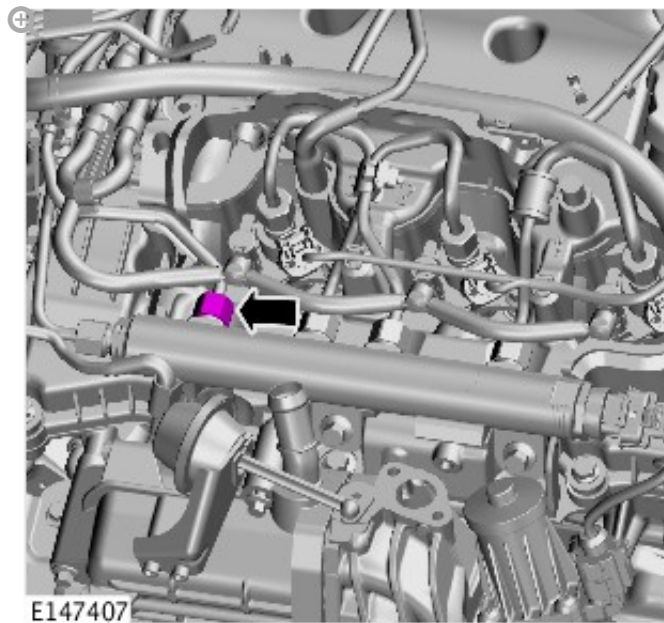


Tighten the high-pressure fuel lines union to 15Nm.

17.

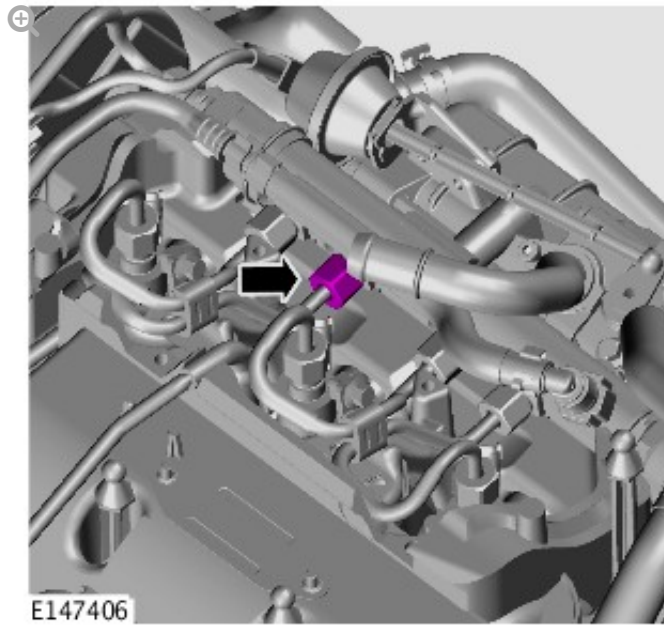


Tighten the high-pressure fuel lines union to 35Nm.

18.

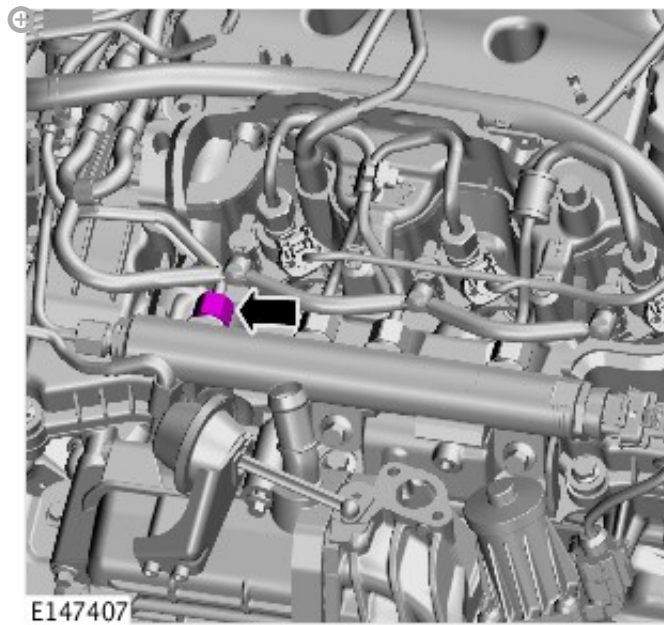


Tighten the high-pressure fuel lines union to 35Nm.

19.

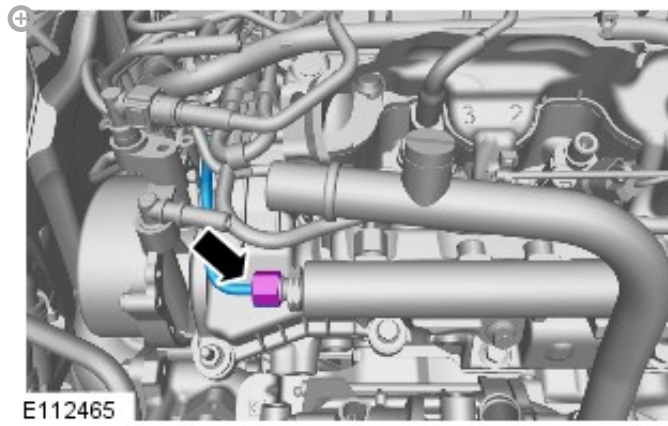


Tighten the high-pressure fuel lines union to 15Nm.

20.

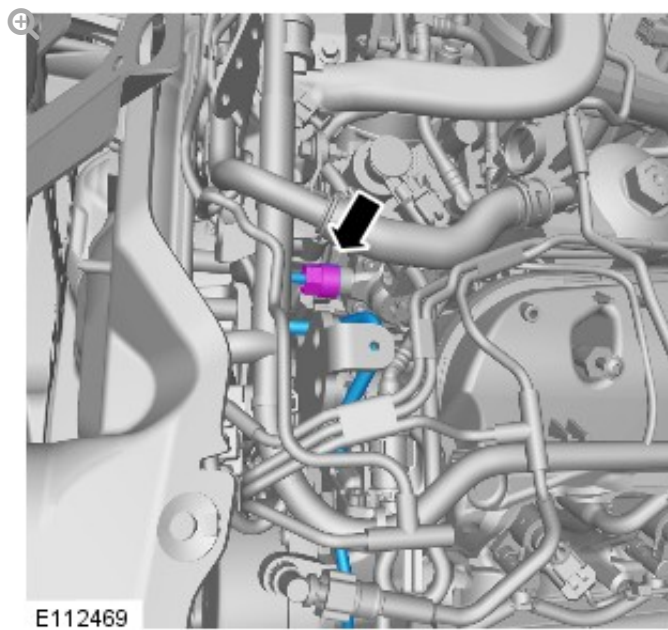


Tighten the high-pressure fuel lines union to 15Nm.

21.

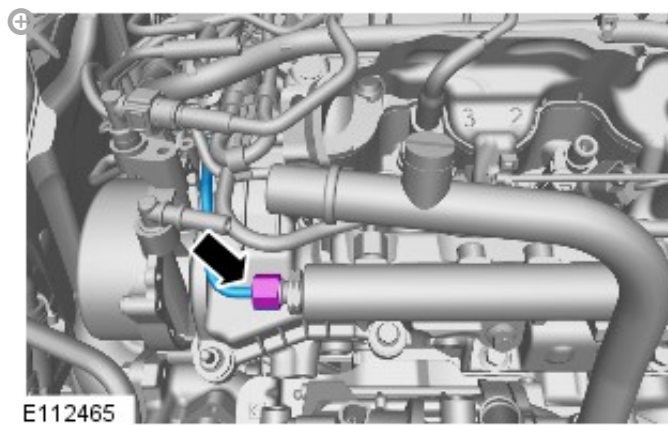


Tighten the high-pressure fuel line union to 35 Nm.

22.

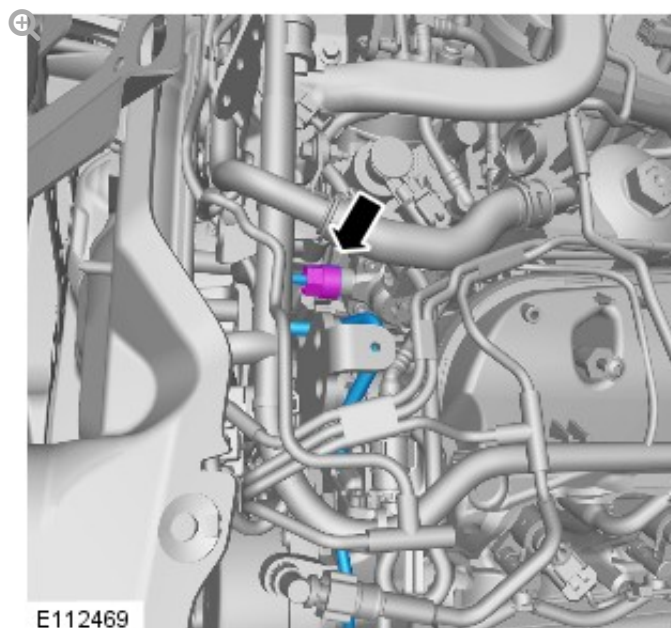


Tighten the high-pressure fuel line union to 35 Nm.

23.

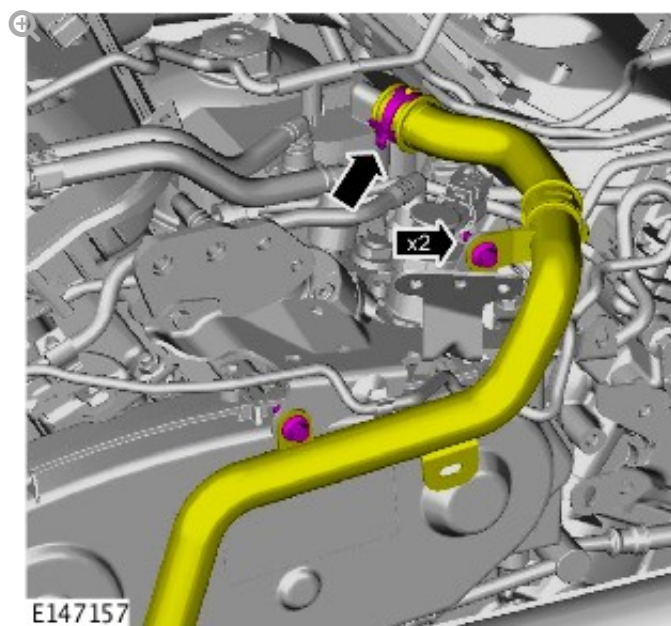


Torque: 10 Nm

24.

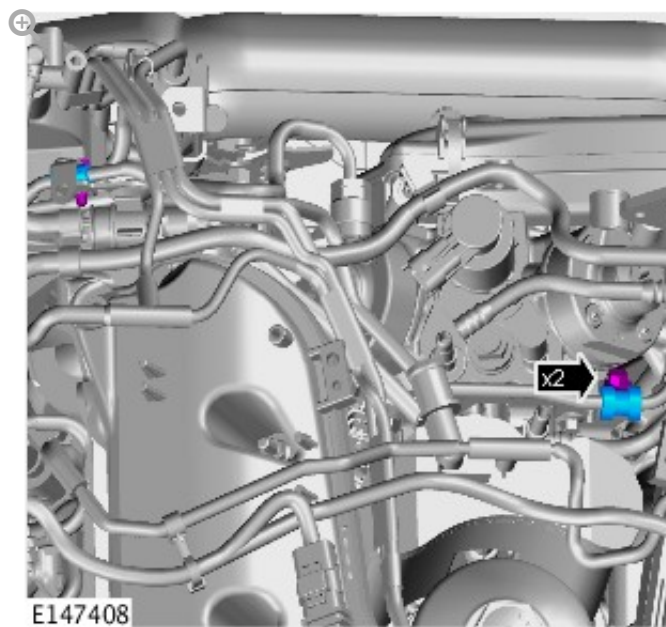


Torque: 10 Nm


25.

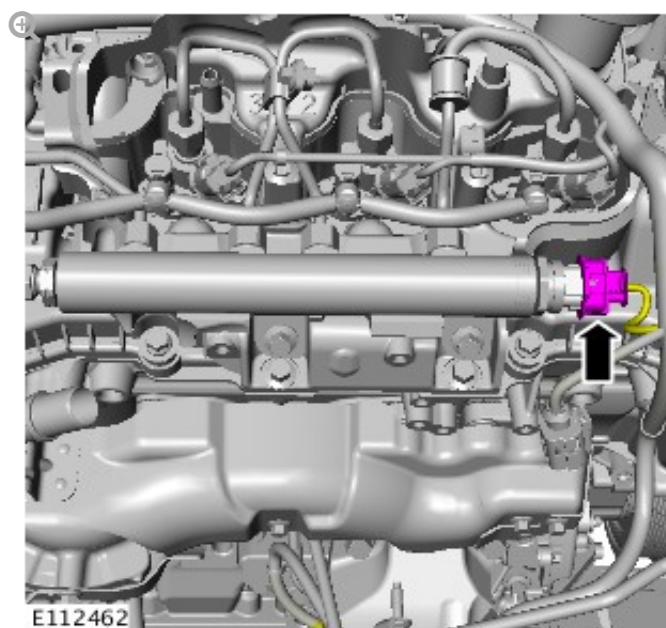

26.

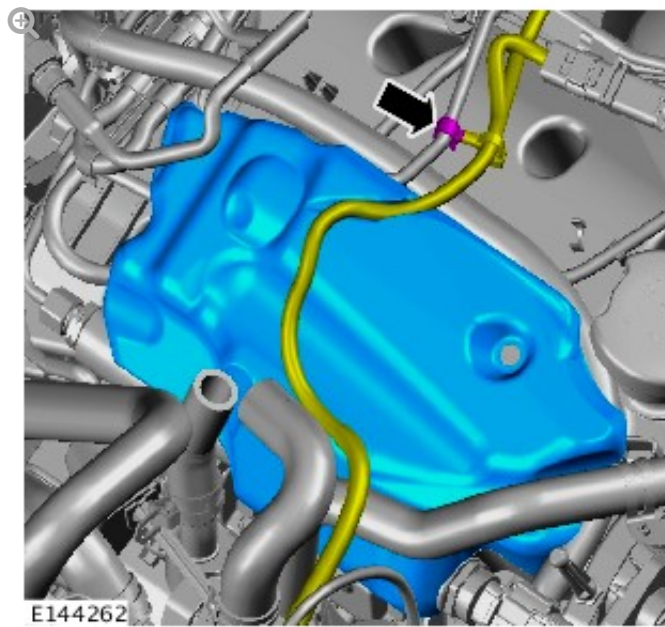


27.

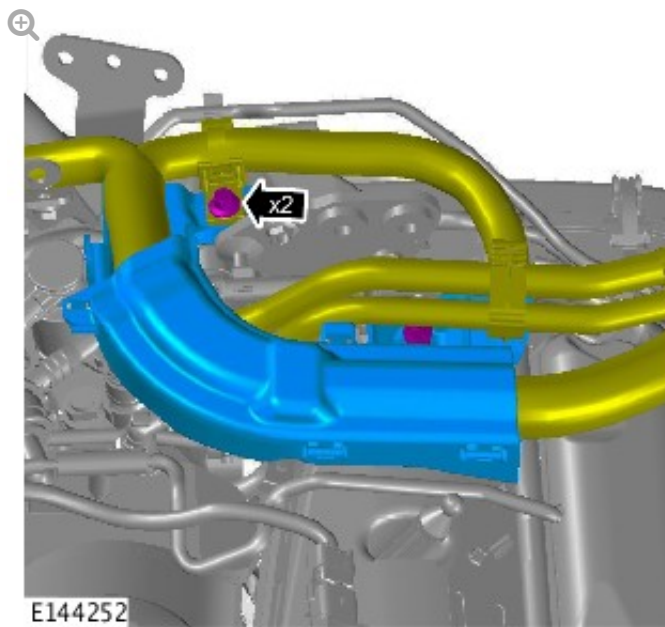

Torque: 10 Nm

28.

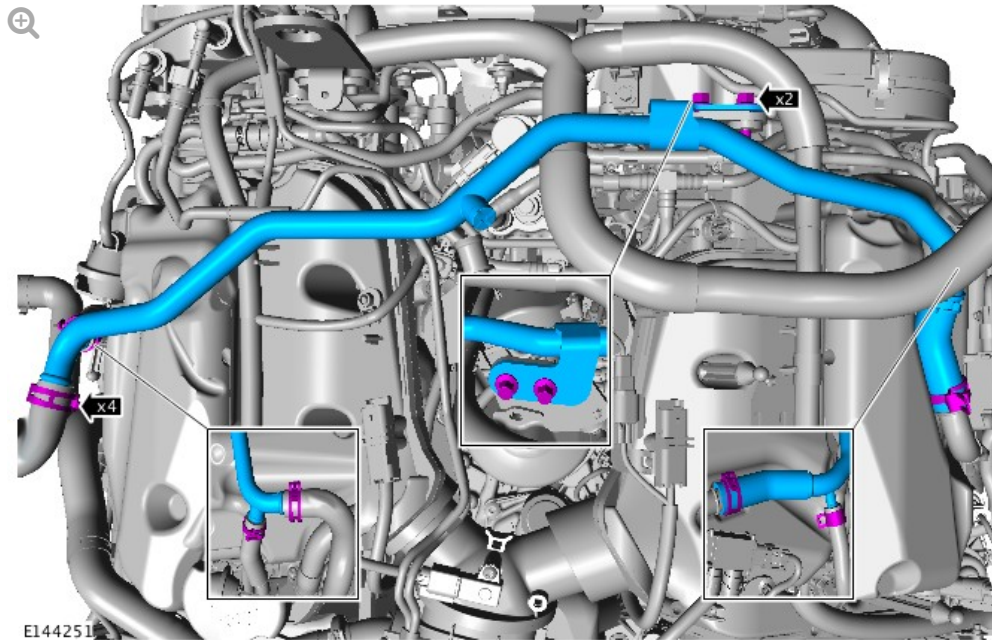

E144251

Torque: 10 Nm

29. Refer to: [Right Exhaust Gas Recirculation Valve Outlet Tube](#) (303-08A Engine Emission Control - TDV6 3.0L Diesel - Gen 2/TDV6 3.0L Diesel, Removal and Installation).
30. Refer to: [Cooling System Partial Draining and Vacuum Filling](#) (303-03F Engine Cooling - TDV8 4.4L Diesel, General Procedures).
31. Refer to: [Secondary Bulkhead Centre Panel - TDV6 3.0L Diesel](#) (501-02 Front End Body Panels, Removal and Installation).
32. Refer to: [Specifications](#) (414-00 Battery and Charging System - General Information, Specifications).