

PUBLISHED: 24-AUG-2017
2014.0 RANGE ROVER (LG), 303-04

FUEL CHARGING AND CONTROLS - V8 S/C 5.0L PETROL

HIGH PRESSURE FUEL PUMP 2 (G1509469)

REMOVAL AND INSTALLATION

19.45.30	HIGH PRESSURE FUEL PUMP - FRONT - RENEW	5000 CC, AJ V8, SUPERCHARGED	2.5	USED WITHINS	
----------	--	------------------------------------	-----	-----------------	--

PART(S)

STEP	PART NAME	QUANTITY
Installation Step 5	Fuel injector high pressure pipe(s)	1

REMOVAL



CAUTION:

Always carry out the cleaning process before carrying out any repairs to the fuel injection system components. Failure to follow this instruction may result in foreign matter ingress to the fuel injection system.



NOTES:

- Removal steps in this procedure may contain installation details.
- Some variation in the illustrations may occur, but the essential information is always correct.

1. Refer to: Petrol and Petrol-Ethanol Fuel Systems Health and Safety Precautions (100-00, Description and Operation).

2. Refer to: Fuel System Pressure Release (310-00, General Procedures).

3. Disconnect the battery ground cable.
Refer to: Specifications (414-00, Specifications).

4.



WARNING:

Do not work on or under a vehicle supported only by a jack. Always support the vehicle on safety stands.

Raise and support the vehicle.

5.

Refer to: Engine Undershield (501-02, Removal and Installation).

6.

Refer to: Fuel Injection Component Cleaning (303-04D, General Procedures).

7.


Refer to: Air Cleaner Outlet Pipe T-Connector (303-12C, Removal and Installation).

8.



CAUTION:

Be prepared to collect escaping coolant.

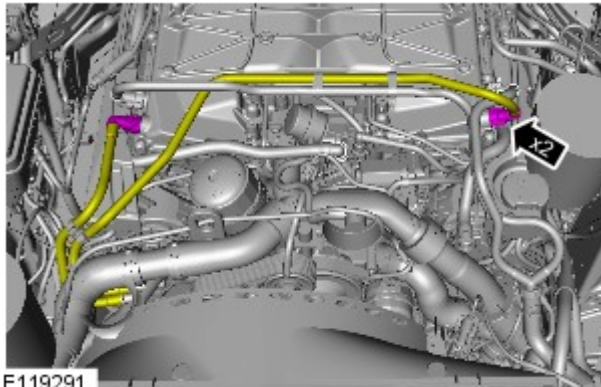


9.



WARNING:


Be prepared to collect escaping fluids.

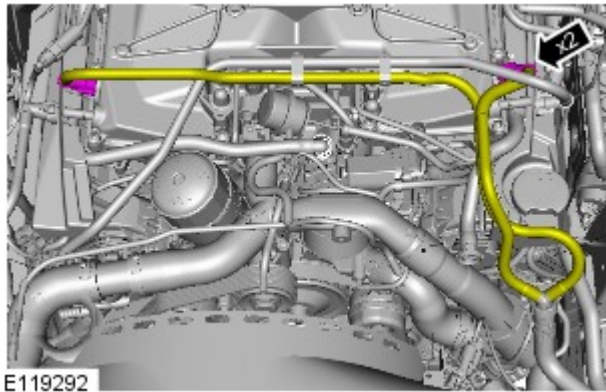

10.

⚠ CAUTION:


Be prepared to collect escaping fluids.

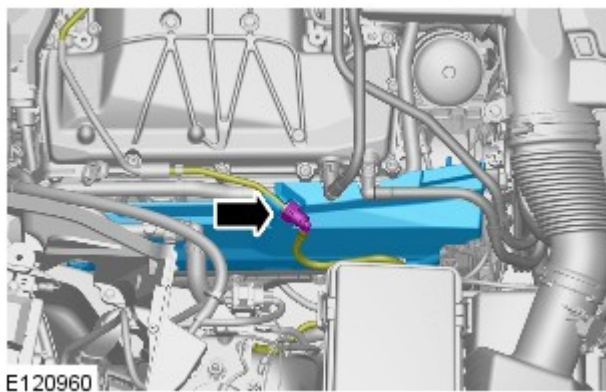

11.

⚠ CAUTION:


Be prepared to collect escaping fluids.

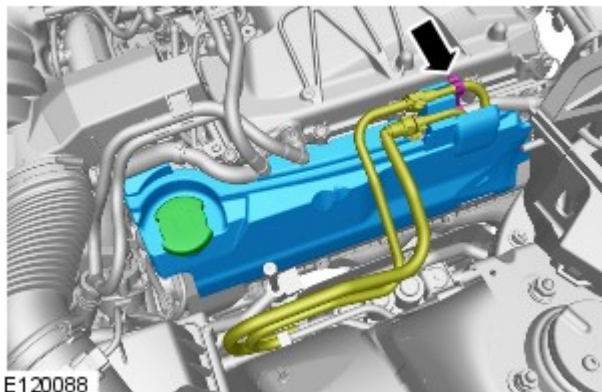

12.

⚠ **CAUTION:**


Be prepared to collect escaping fluids.

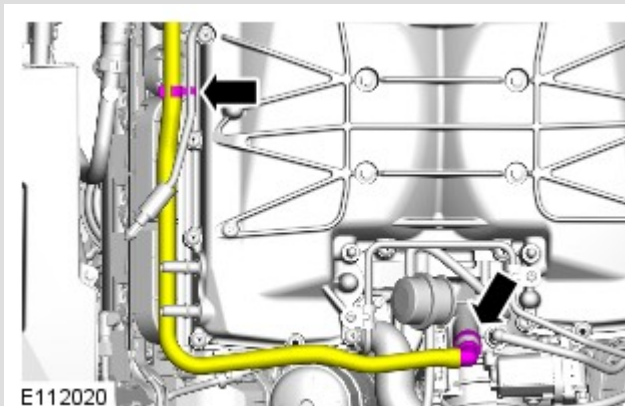


13.

⚠ **CAUTIONS:**

- Be prepared to collect escaping fluids.
- Make sure that all openings are sealed. Use new blanking caps.

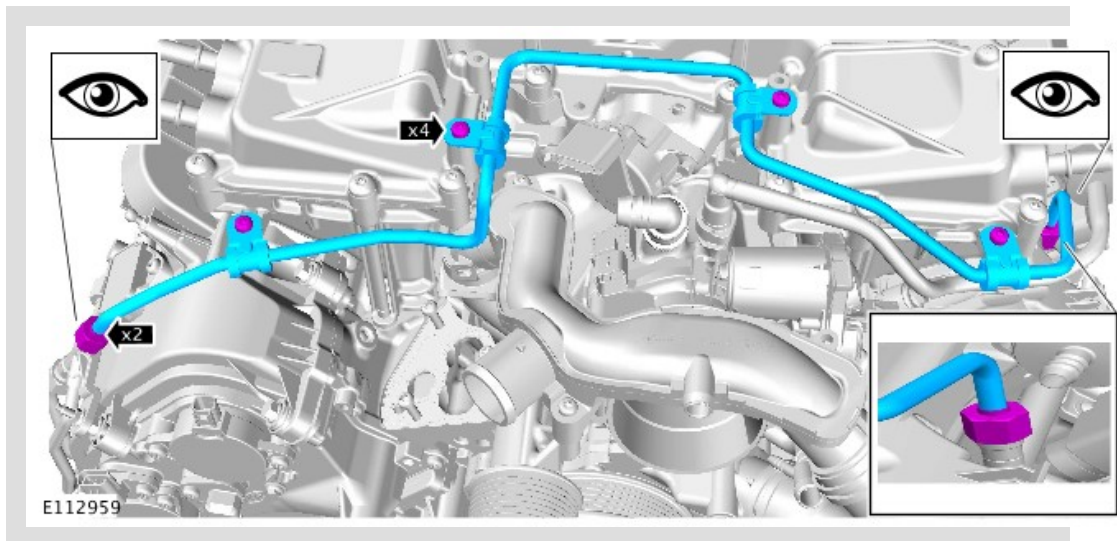


14.

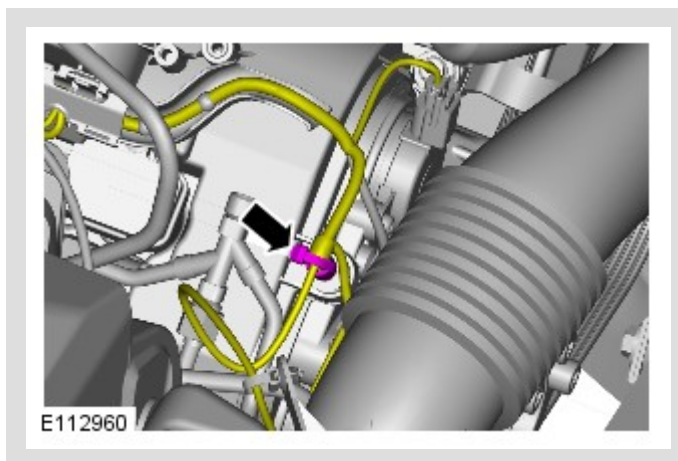

15.

⚠ CAUTIONS:

- Be prepared to collect escaping fluids.
- Make sure that all openings are sealed. Use new blanking caps.

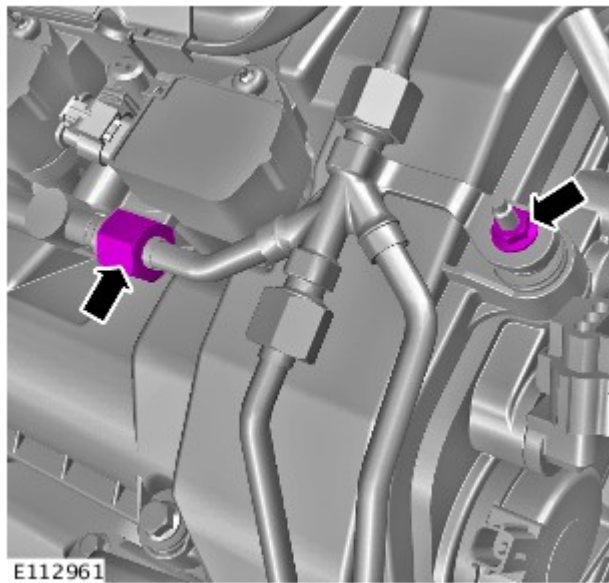

16.



WARNING:


Make sure to support the vehicle with axle stands.

Raise and support the vehicle.

17.

Refer to: Generator (414-02C, Removal and Installation).


18.

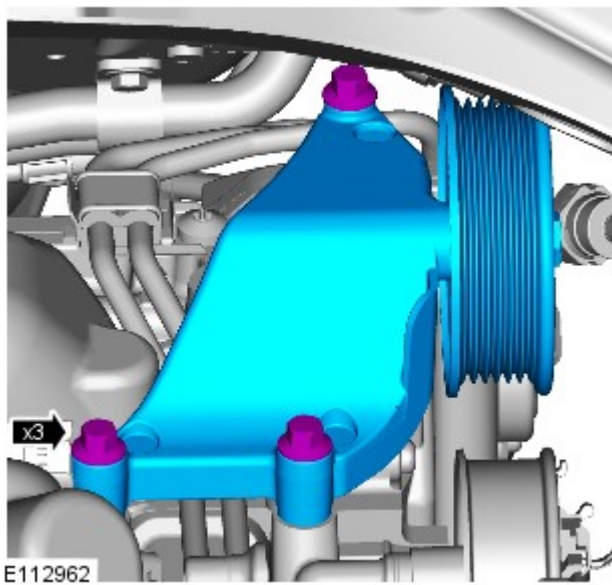

19.

 **NOTE:**

Engine shown removed for clarity.

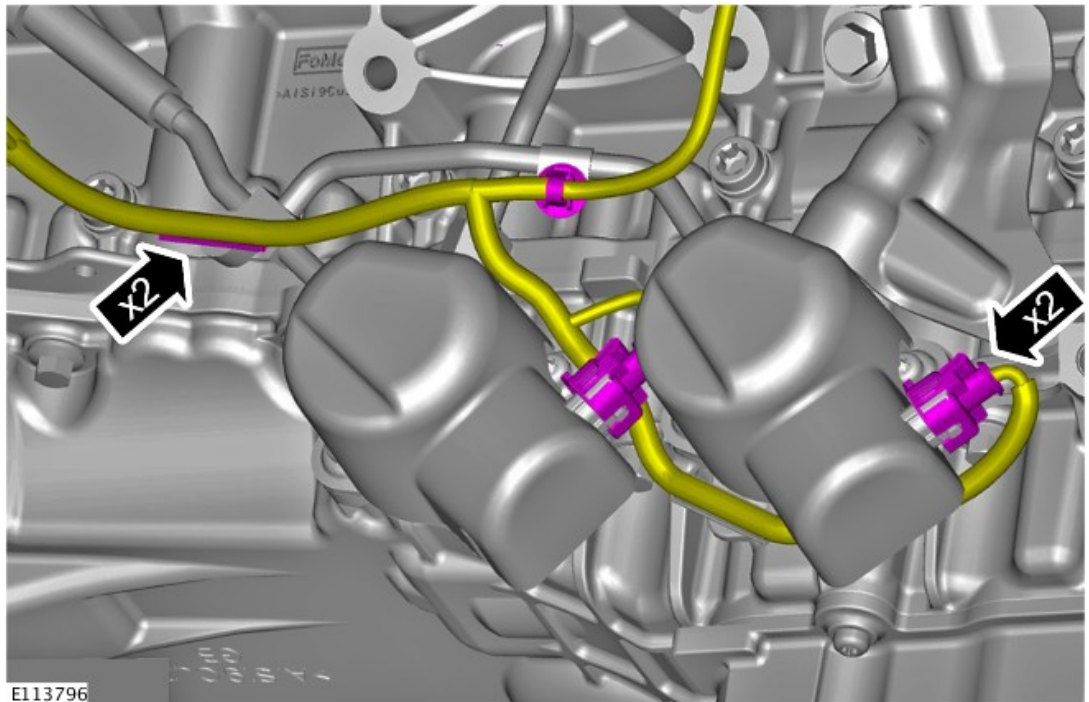


20.

⚠ CAUTIONS:

- Be prepared to collect escaping fluids.
- Make sure that all openings are sealed. Use new blanking caps.
- Remove and discard the high-pressure fuel supply lines.

⚠ NOTE:


Engine shown removed for clarity.

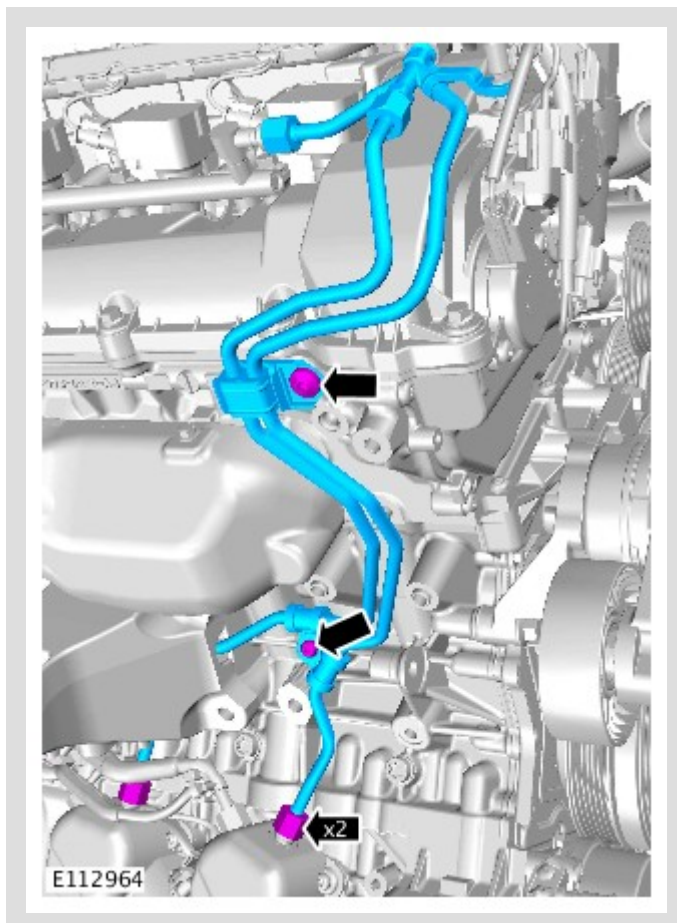


21.

⚠ CAUTIONS:

- Be prepared to collect escaping fluids.
- Make sure that all openings are sealed. Use new blanking caps.

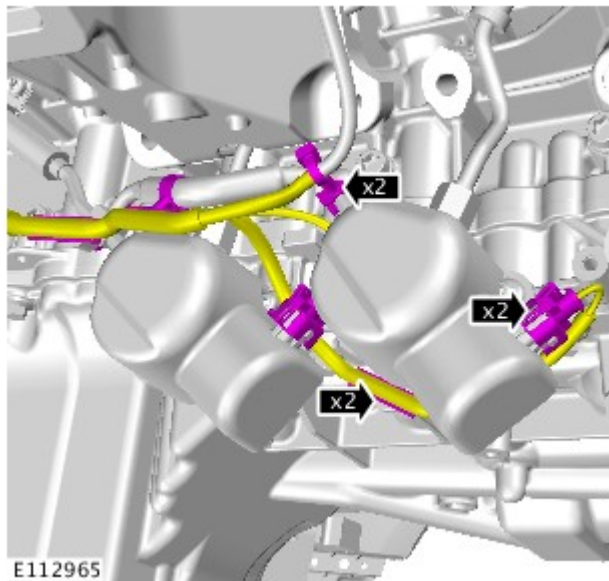


22.

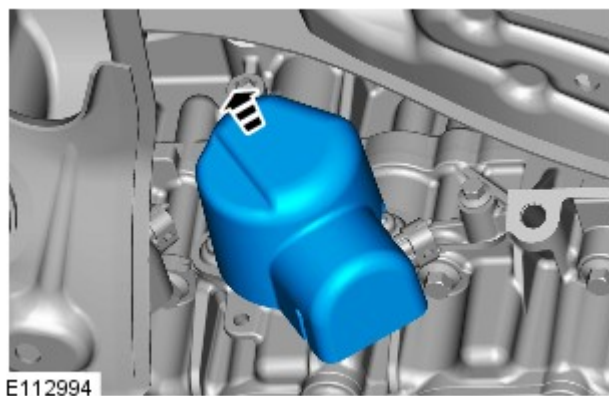

23.

⚠ CAUTION:

Be prepared to collect escaping fluids.

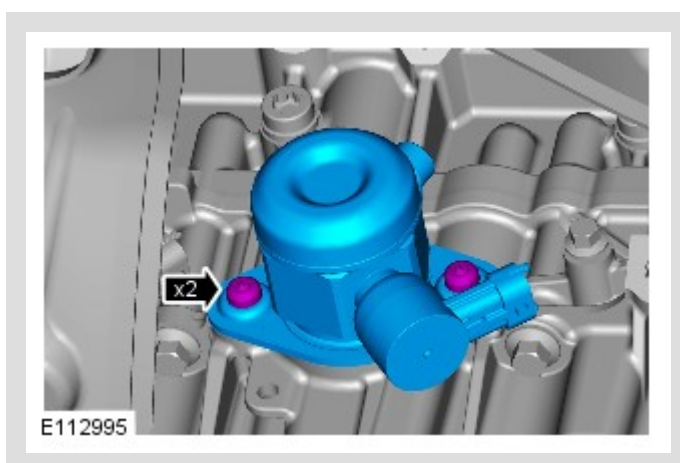

Loosen the Torx screws a turn each at a time.

24.

⚠ CAUTION:

Be prepared to collect escaping fluids.



INSTALLATION

1.

 NOTE:

Lubricate the fuel rail high-pressure fuel pump bucket with clean engine oil.




2.

 CAUTION:

Tighten the Torx screws a turn at a time until the correct torque is achieved.


 NOTE:

Lubricate the fuel rail high-pressure fuel pump O-ring seal with clean engine oil.

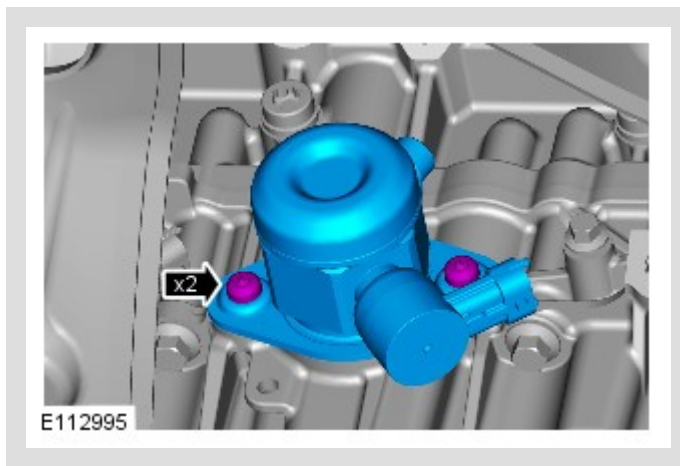


Torque: 11 Nm

3.

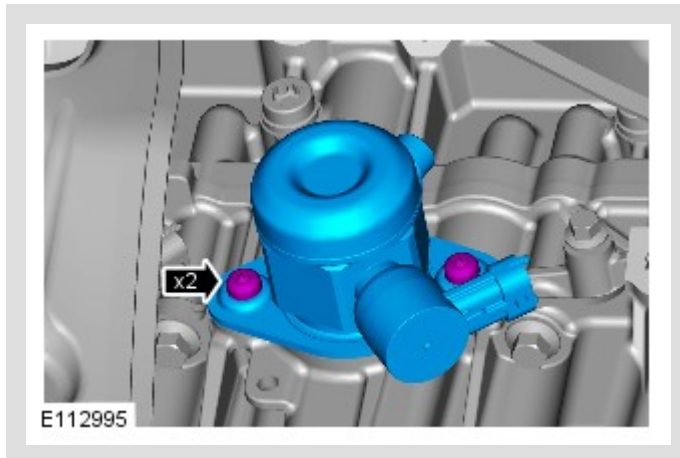

Loosen the Torx screws half a turn each.

4.

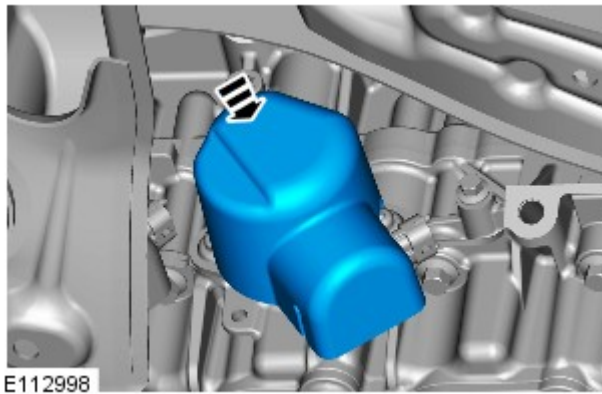

5.




CAUTIONS:

- Install new high-pressure fuel supply lines.
- Lubricate only the union threads with clean engine oil.



NOTES:

- Remove and discard the blanking caps.
- Engine shown removed for clarity.
- Install the bolt and unions fully finger tight before final tightening.

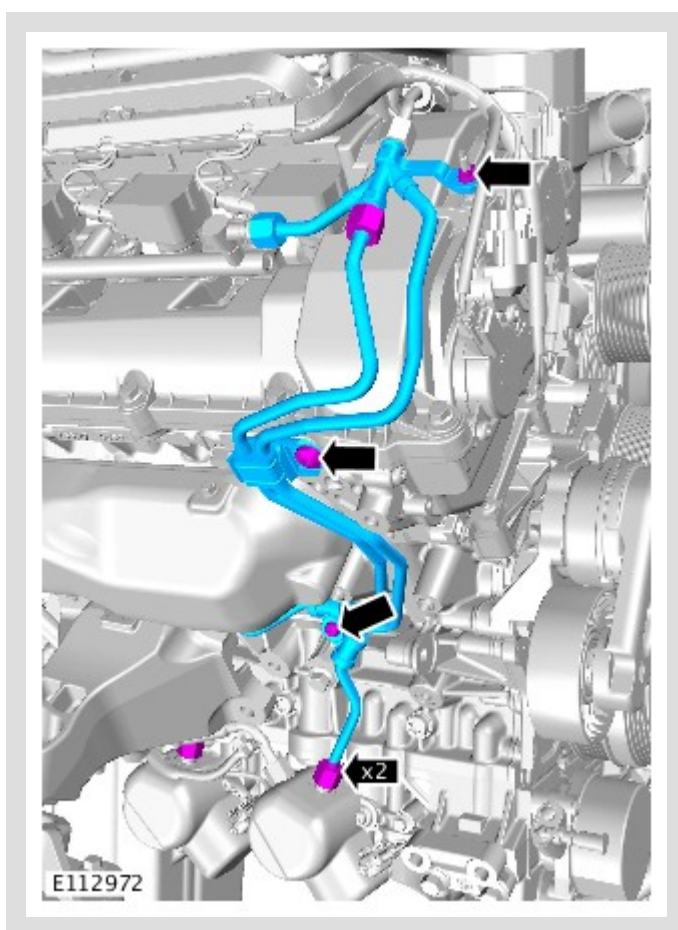

Renew Part: *Fuel injector high pressure pipe(s)* Quantity: 1 .

6.




CAUTION:

Care must be taken when positioning the fuel rail high-pressure fuel pump cover to one side.



NOTE:

Fuel rail high-pressure fuel pump cover shown removed for clarity.

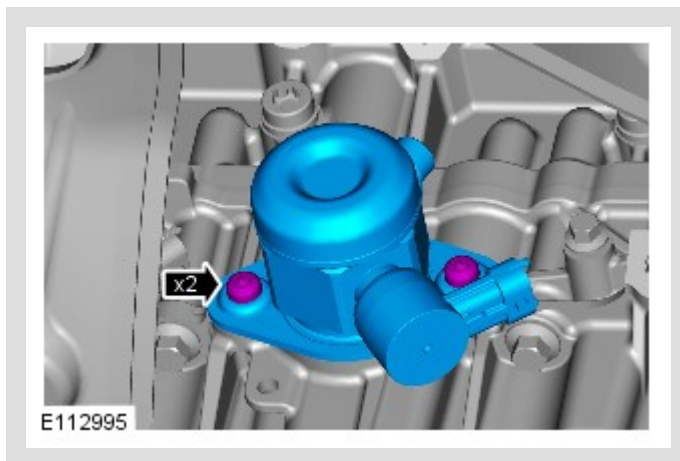


Torque: 11 Nm

-
7. Lower the vehicle.

8.

 NOTES:

- Do not tighten at this stage.
- Remove and discard the blanking caps.

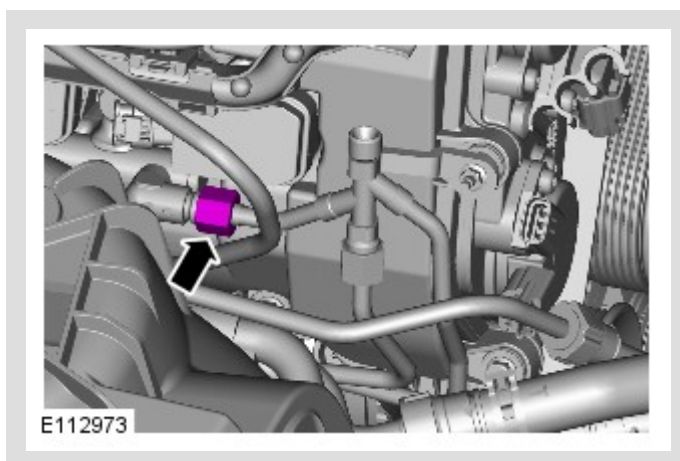

9.

**WARNING:**


Do not work on or under a vehicle supported only by a jack. Always support the vehicle on safety stands.

Raise and support the vehicle.

10.

**NOTE:**

Engine shown removed for clarity.

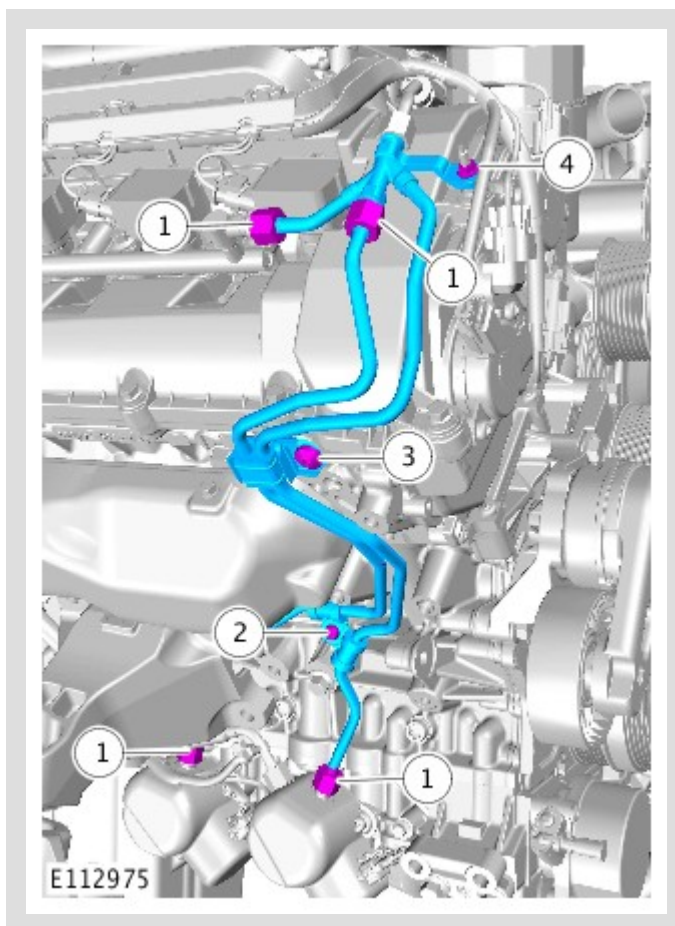

Torque:

Unions (1) **21 Nm**

M6 (2) **11 Nm**


M8 (3) **25 Nm**

M5 nut (4) **6 Nm**

11.

**NOTE:**

Engine shown removed for clarity.

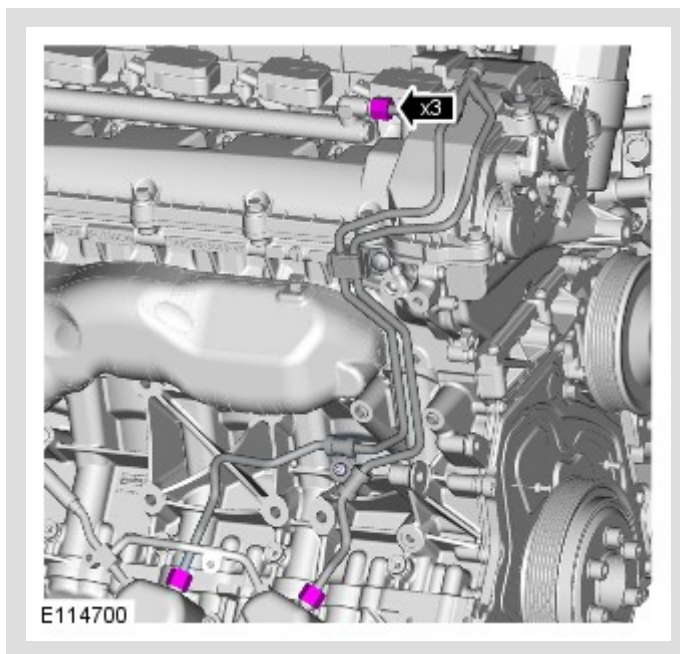


Torque: 21 Nm

12.

 NOTES:

- Install the bolt and unions finger tight before final tightening.
- Remove and discard the blanking caps.

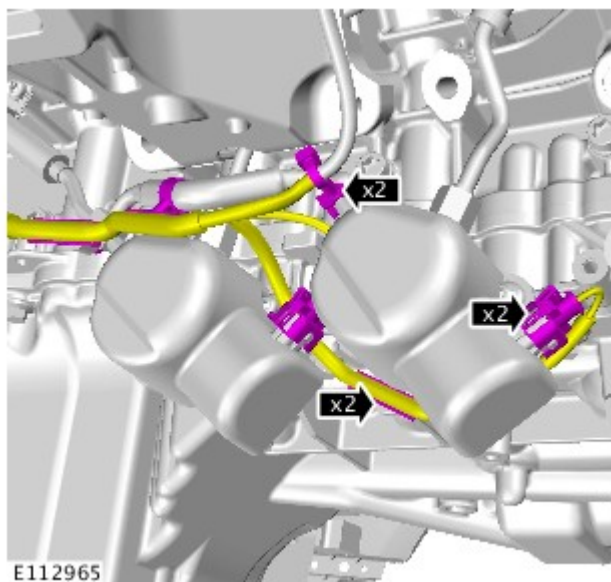


Torque:

Unions **21 Nm**

M6 **11 Nm**

13.

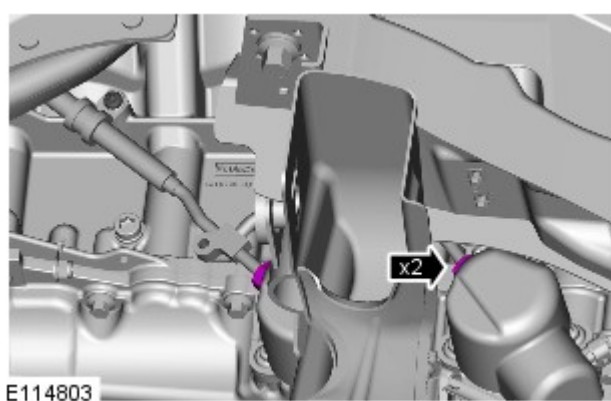



Torque: **21 Nm**

14.

 **NOTE:**

Engine shown removed for clarity.

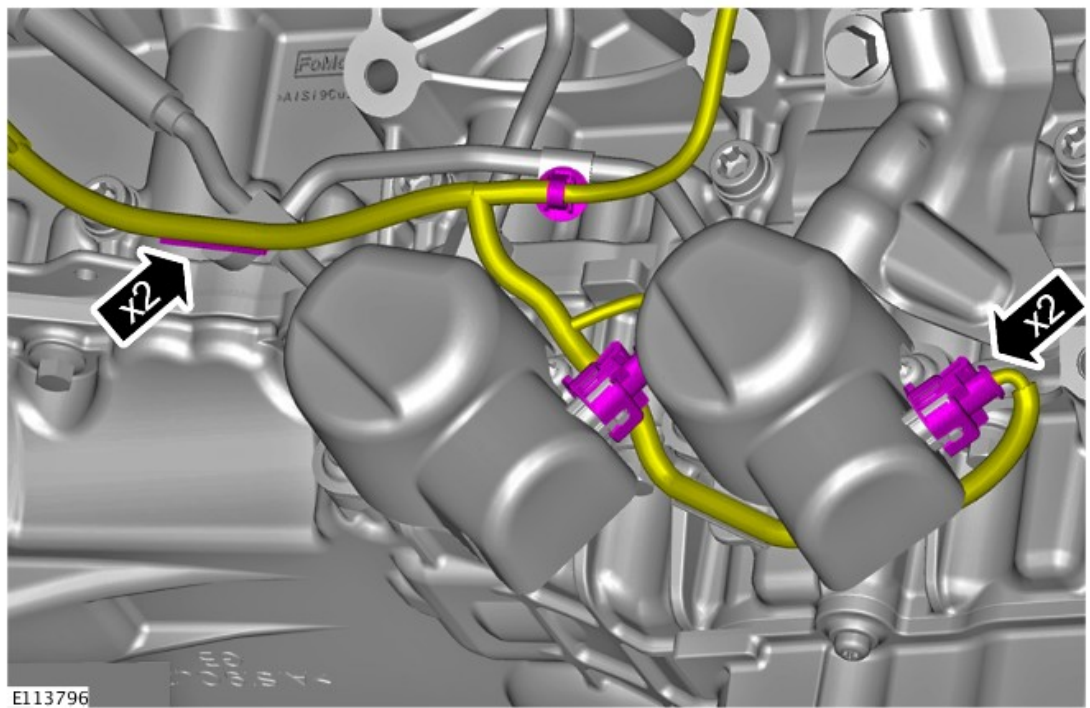

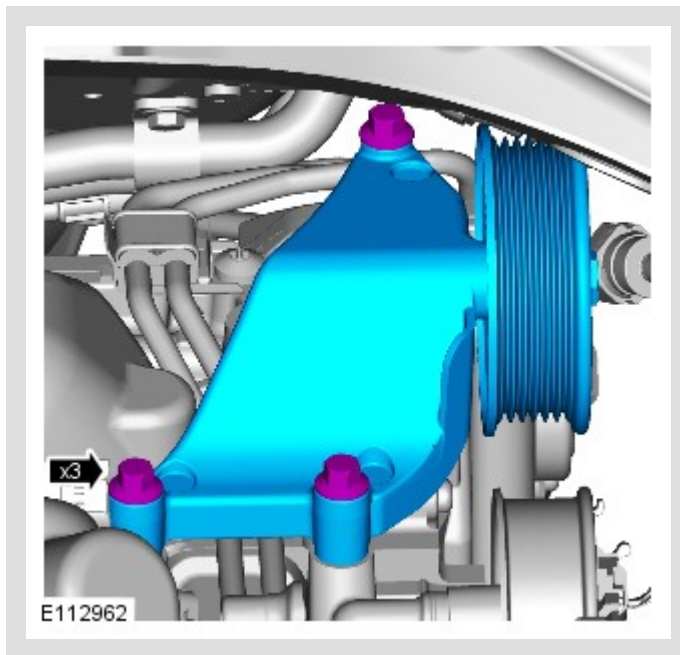


Torque: 25 Nm

16. Refer to: Generator (414-02C, Removal and Installation).

17. Lower the vehicle.

18.

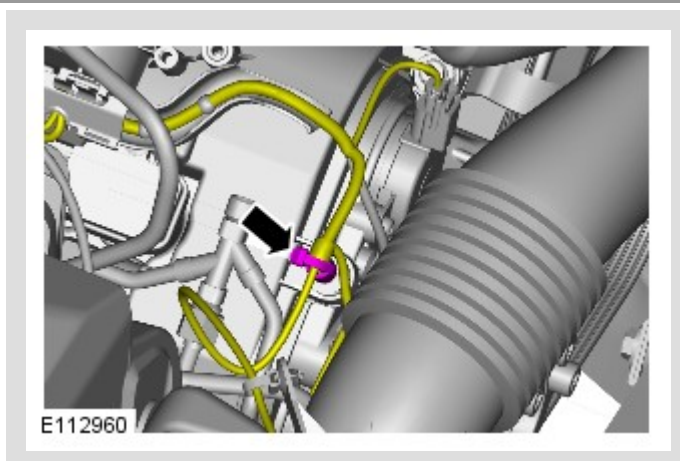


19.

**CAUTION:**


Lubricate only the union threads with clean engine oil.

**NOTES:**

- Do not tighten at this stage.
- Remove and discard the blanking caps.

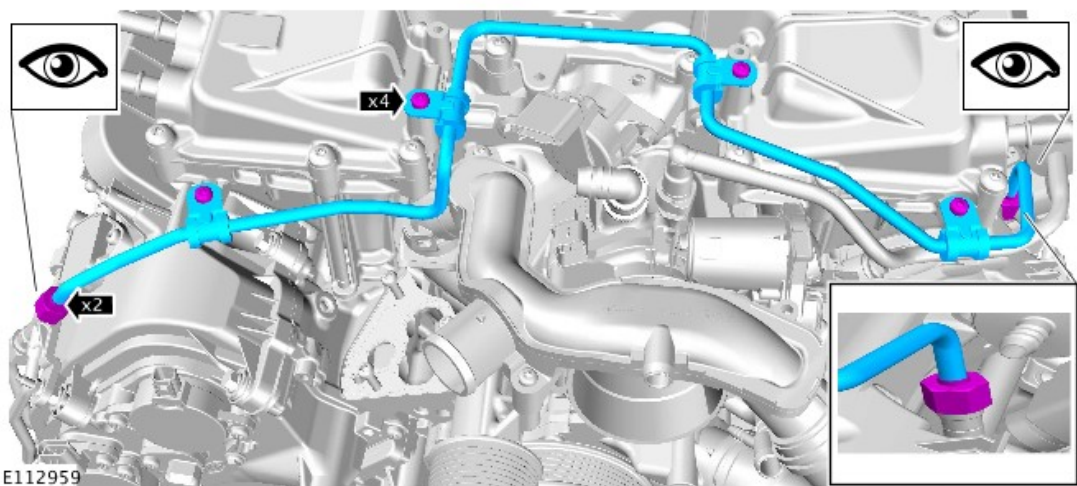

20.

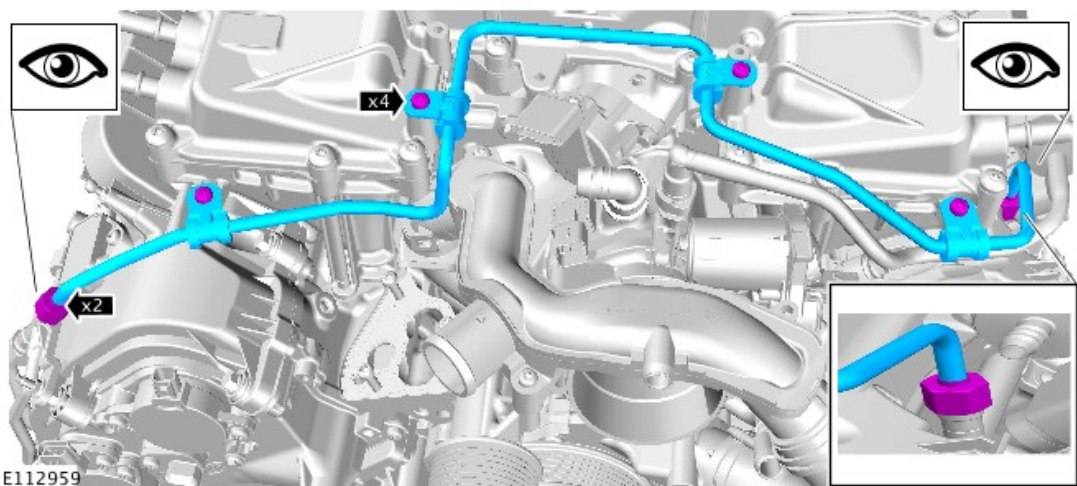


Torque:

Unions **21 Nm**


Bolts **8 Nm**

21.

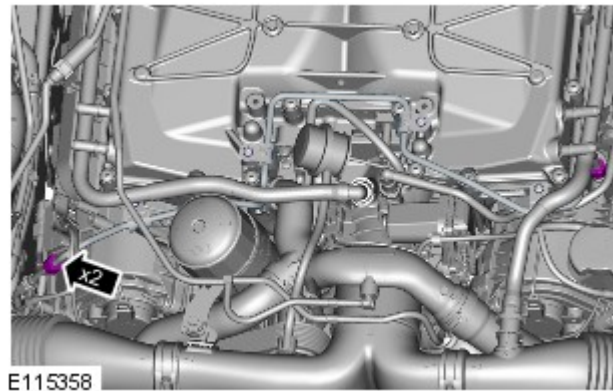


Torque: 21 Nm


22.

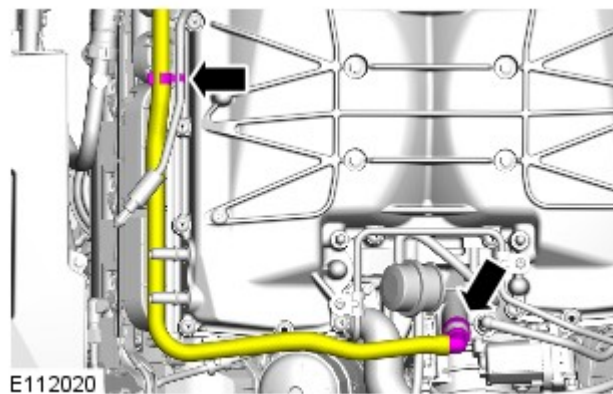


23.

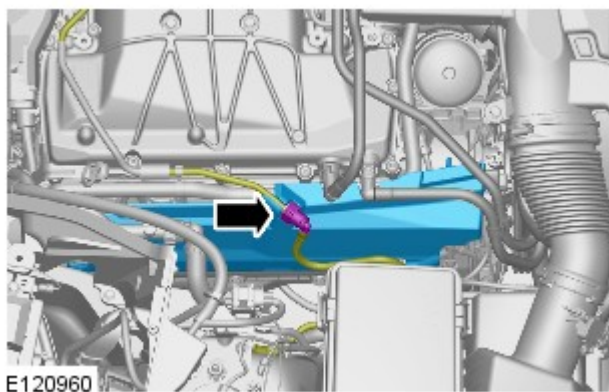


24.

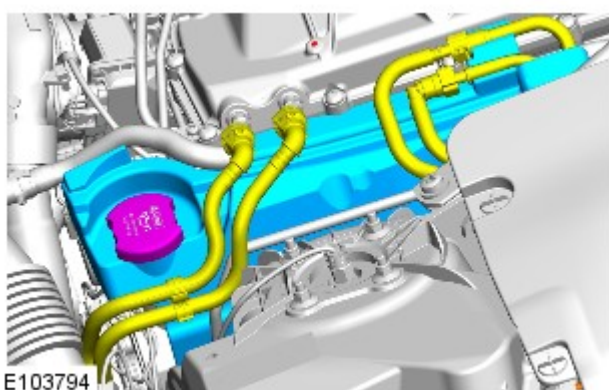


25.

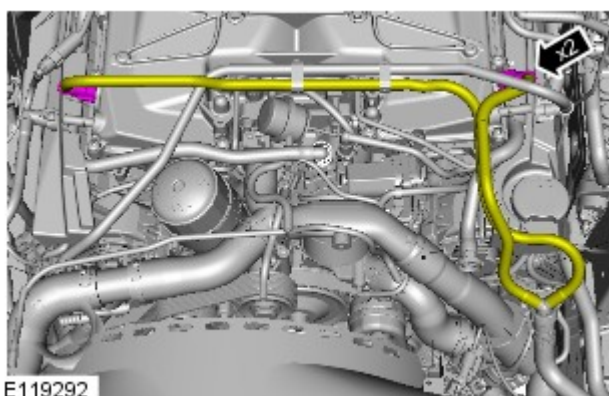

26.

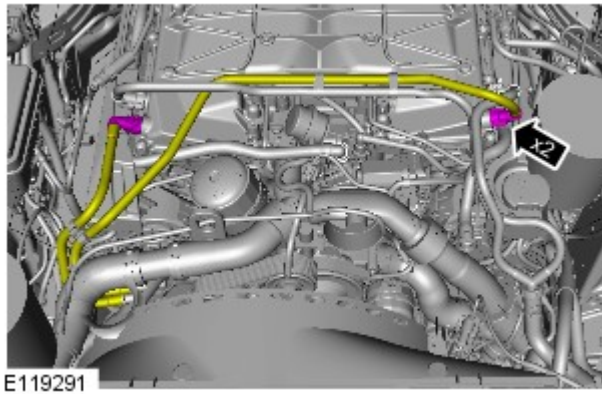

27.

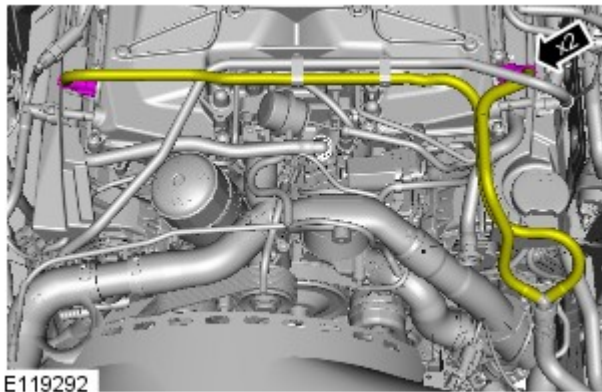

28. Refer to: Air Cleaner Outlet Pipe T-Connector (303-12C, Removal and Installation).

29. Refer to: Engine Undershield (501-02, Removal and Installation).

30. Connect the battery earth lead.
Refer to: Specifications (414-00, Specifications).

31.

- Start the engine and allow to run for 10 minutes, stop the engine.

- Check for leaks.


32.



CAUTIONS:


- Make sure that the selector lever and the gearshift mechanism are in the park (P) position.
 - Make sure that the hood is open.
-
- Set the ignition to the ON position.

33.

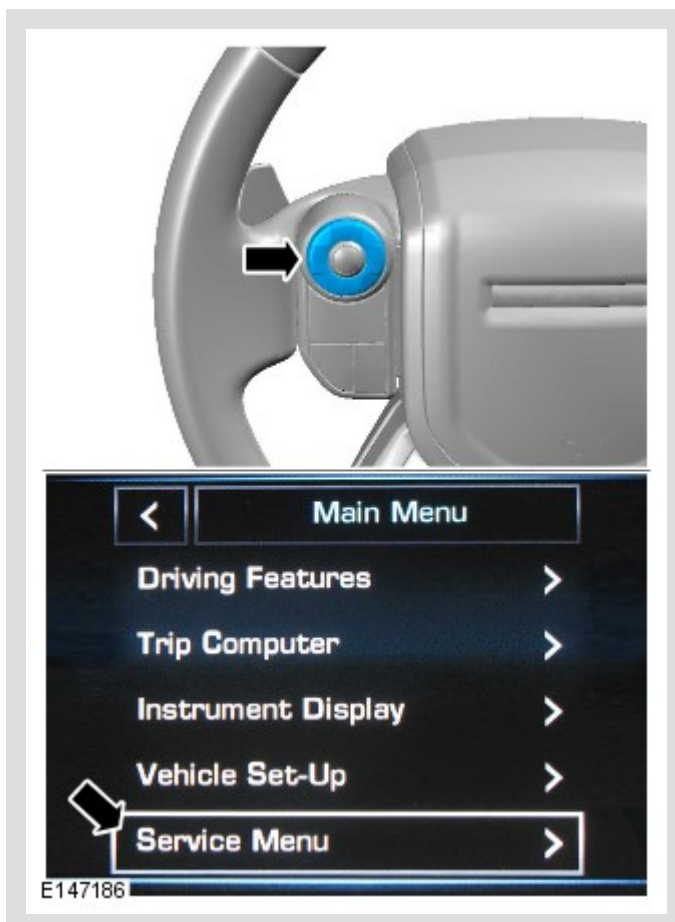


- Press the left hand directional button to access the instrument cluster menu. Select Service Menu.

34.

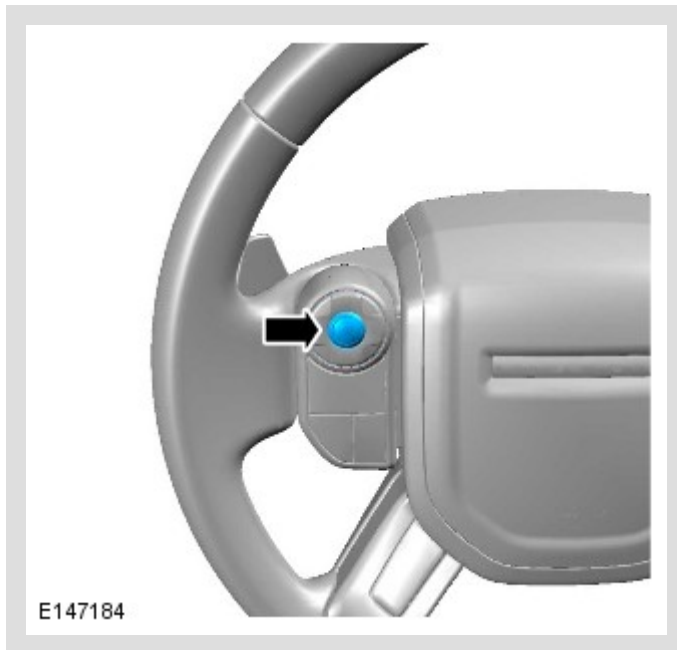

- Press the left hand OK button.

35.

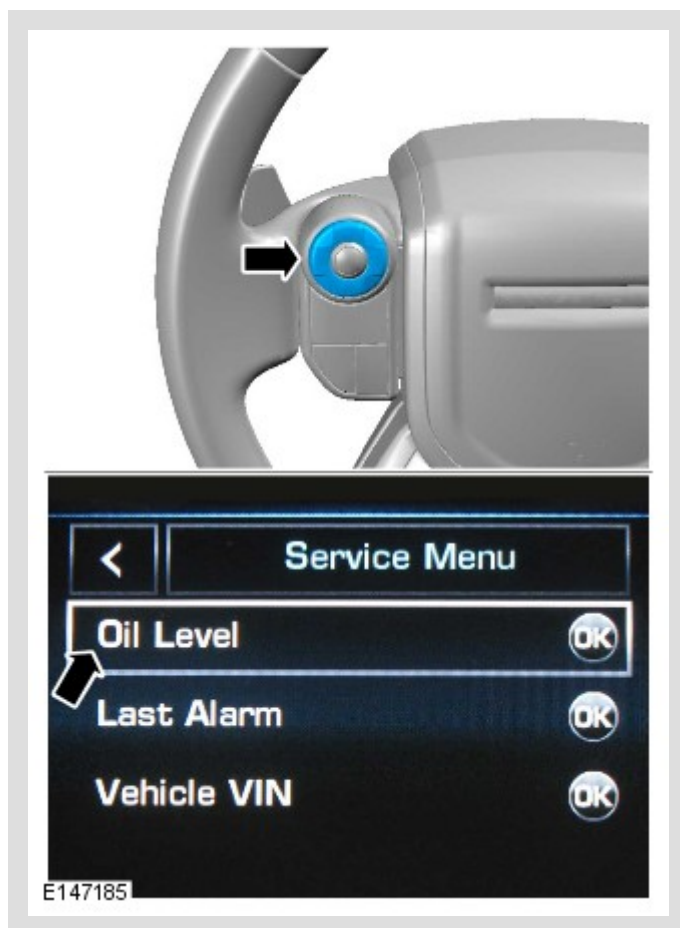

- Press the left-hand directional button to access the Oil Level Display.




- Press the left hand OK button and follow the instructions.

37.


⚠ CAUTION:

Make sure that the hood is open.

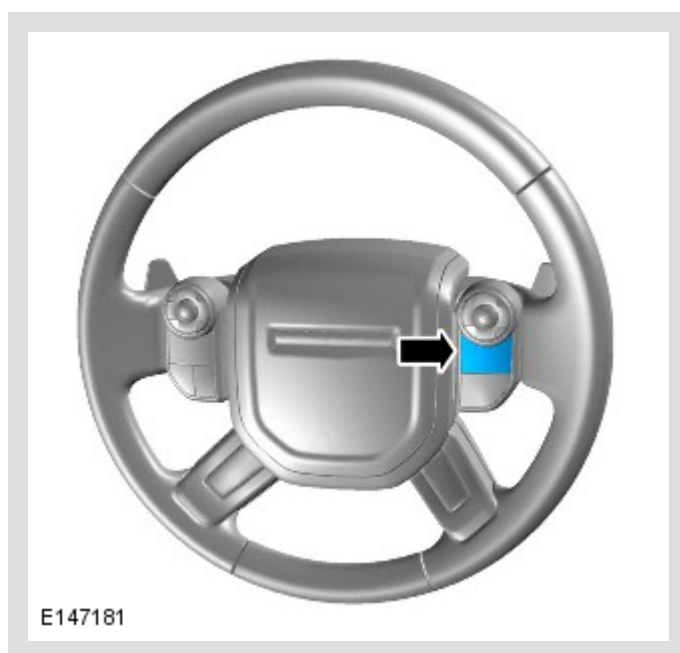

- Press the cruise control cancel button twice within 2 seconds.

38.

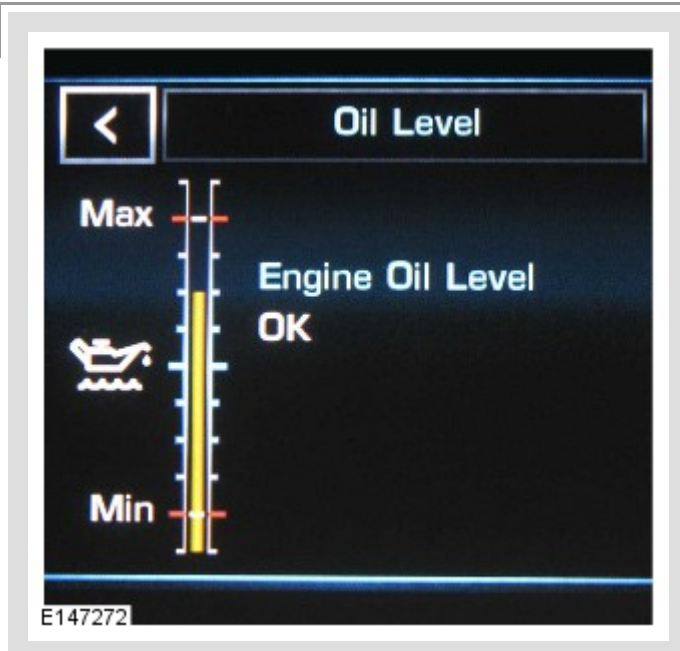

- Only after having started and run the engine for 10 minutes (as indicated in Step 31), switch off the engine, then stabilizing for 10 minutes, take a reading from the oil level display and, if necessary top up with engine oil.


39.

Set the ignition to the OFF position.

40. Allow 10 minutes for the engine oil level to stabilize if there has been additional oil top up.

41.  **NOTE:**


The following steps are to update the average oil level value.

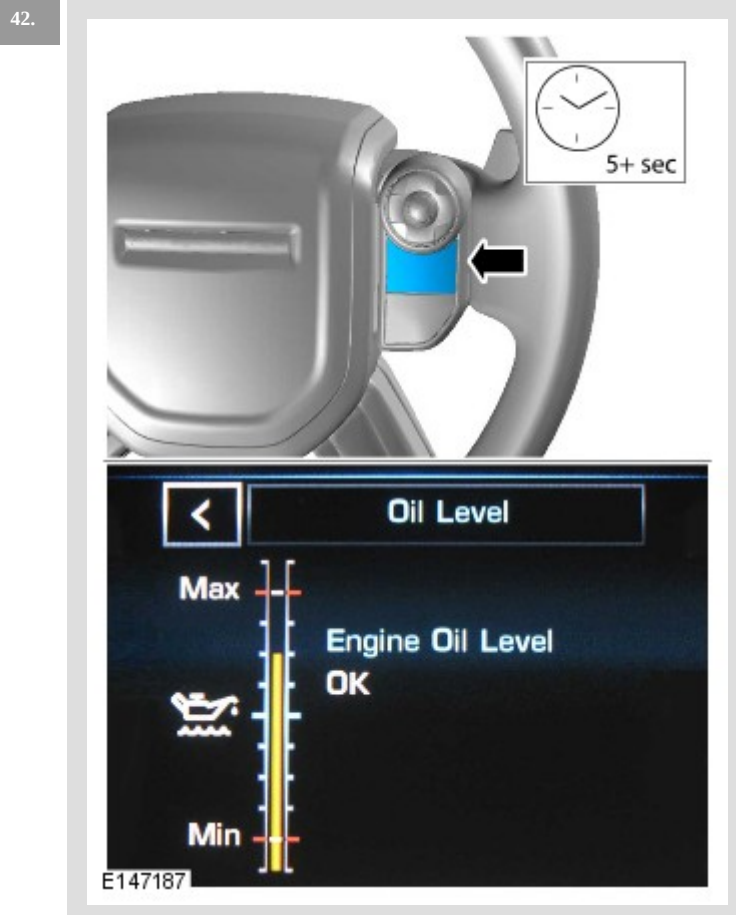


43. Set the ignition to the OFF position.

44. Set the ignition to the ON position.


- 45.

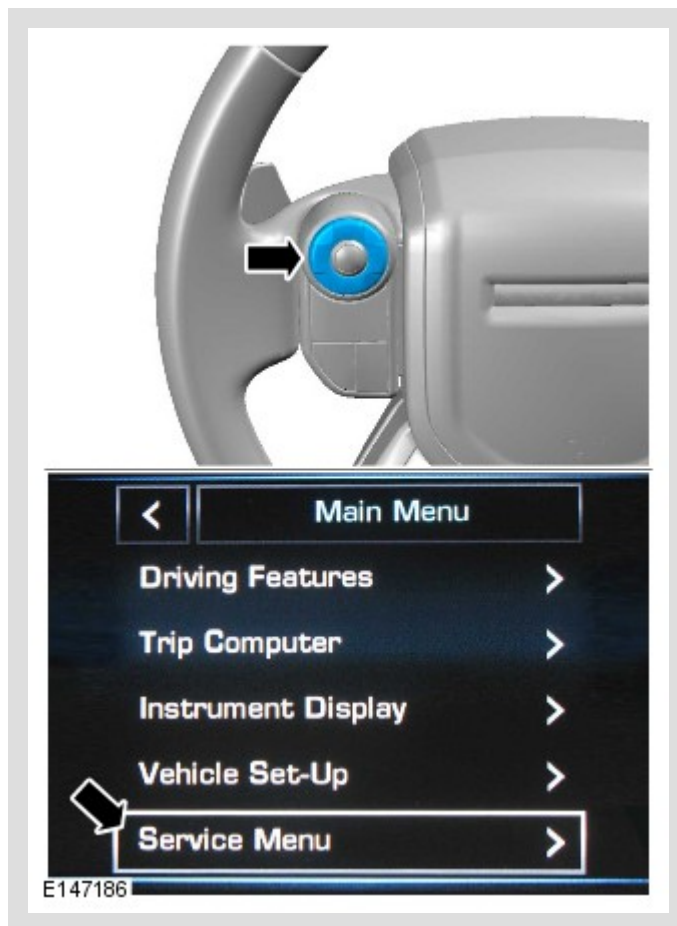

- Press the left hand directional button to access the instrument cluster menu. Select Service Menu.

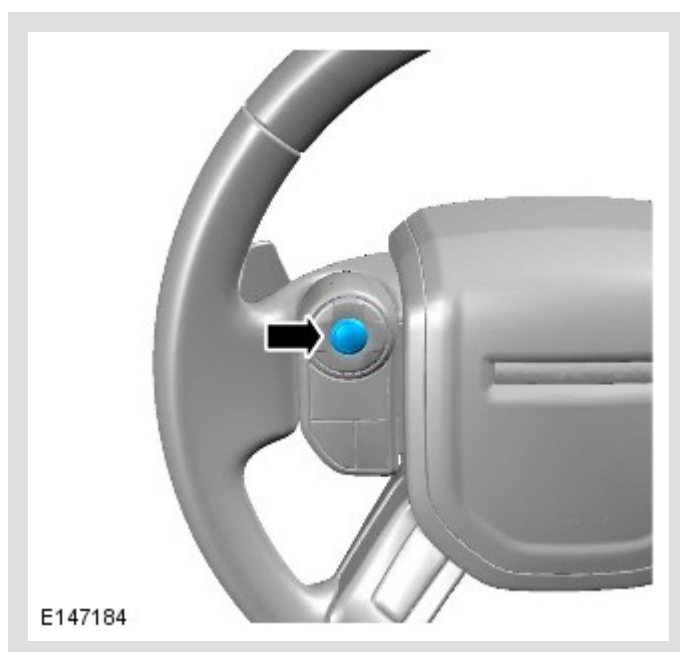

- Press the left hand OK button.

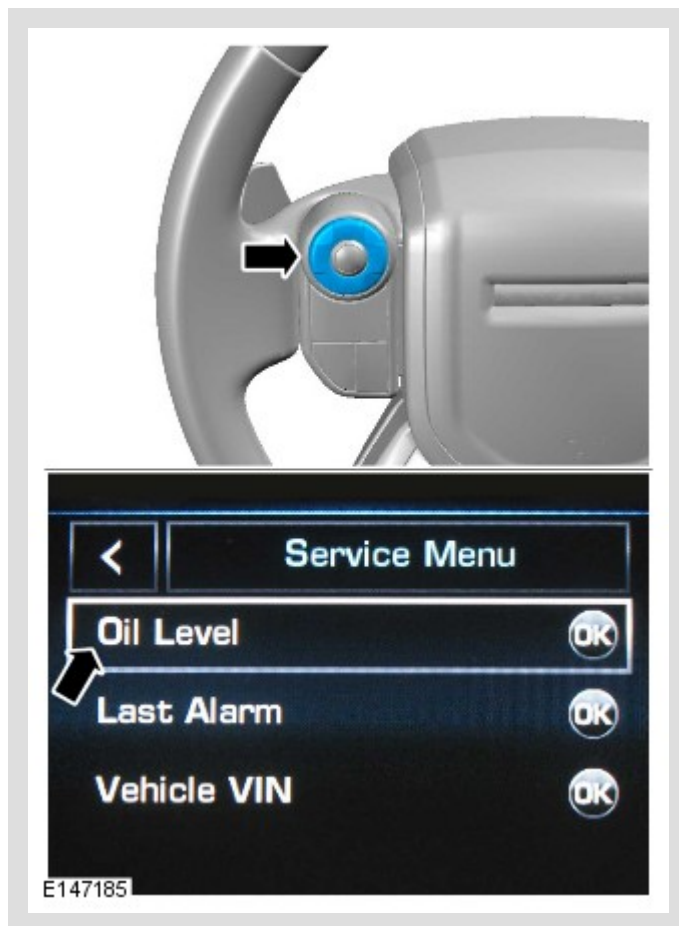

- Press the left-hand directional button to access the Oil Level Display.



- Make sure that the average oil level value has now been updated.
- Press the left hand OK button and follow the instructions.