

2016.0 RANGE ROVER (LG), 310-00

FUEL SYSTEM - GENERAL INFORMATION

FUEL TANK BAFFLE INSTALLATION - TDV6 3.0L DIESEL /TDV8 4.4L DIESEL

[G1923321]

GENERAL PROCEDURES


ACTIVATION

1. Remove the fuel pump and sender unit.

Refer to: Fuel Tank (310-01 Fuel Tank and Lines - TDV6 3.0L Diesel - Gen 1.5/TDV6 3.0L Diesel - Gen 2, Removal and Installation).

Refer to: Fuel Tank (310-01 Fuel Tank and Lines - TDV6 3.0L Diesel - Gen 1.5/TDV6 3.0L Diesel - Gen 2, Removal and Installation).

2.

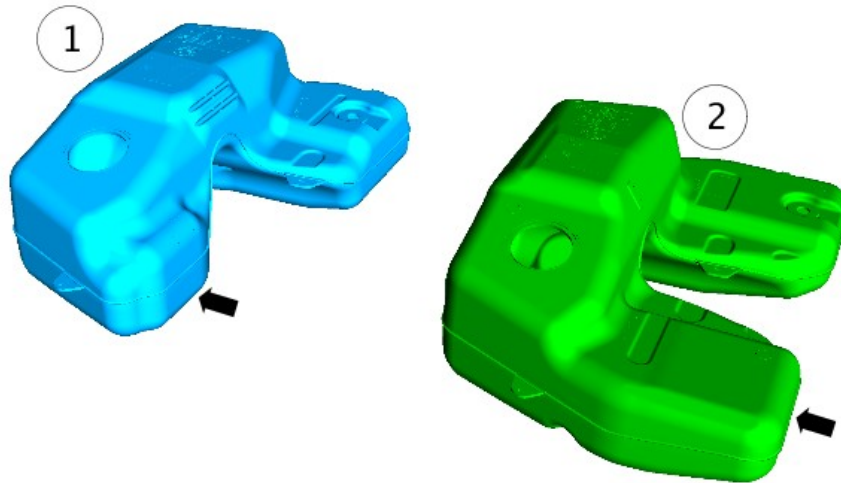


E187470

Check the fuel tank fitted to the vehicle. If the fuel tank has a shorter section on the right side of the vehicle (1) , then carry out steps 6-21. If the fuel tank has a longer section on the right side of the vehicle (2), then carry out steps 3-5.

3.

NOTES:

- Refer to the attached animation before starting the following procedure.
- Foam needs to be compressed as it is fed into the fuel filter location hole.

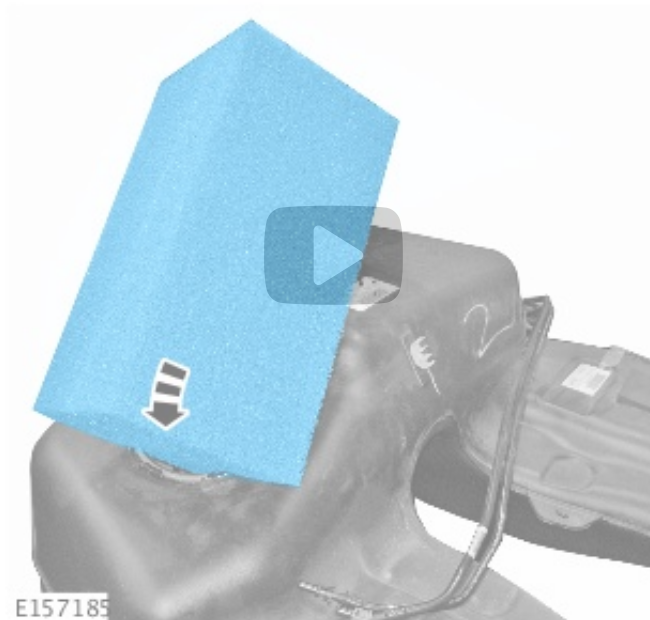


Insert the large foam pad from the fuel tank baffle kit into the tank.

4.

NOTE:


The cut away section of the fuel tank shown in the illustration is for extra clarity only.

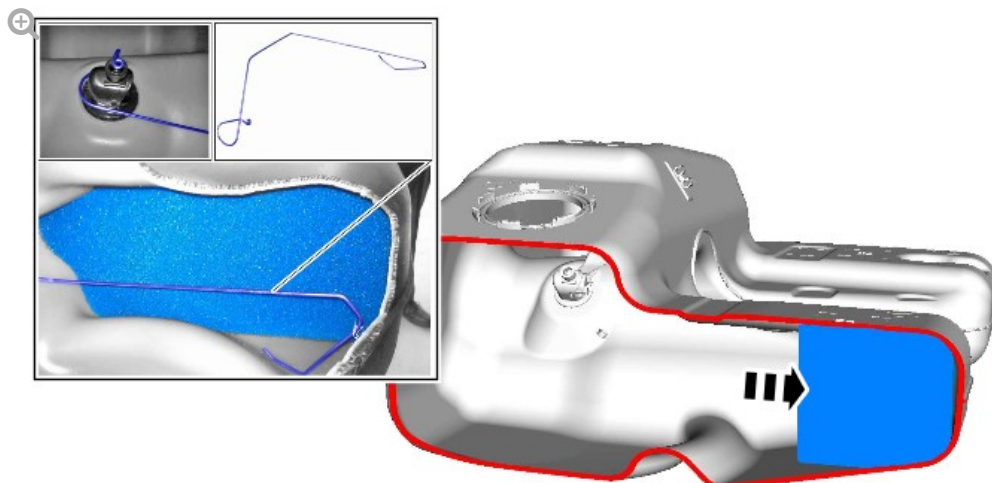

Position the foam pad within the tank and secure in place with wire

bracket from the fuel tank baffle kit as shown in illustration.

5.

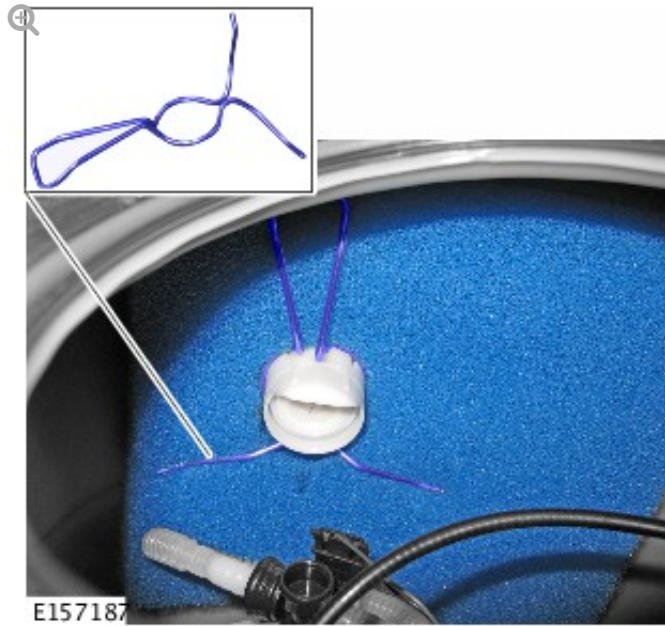

Insert the smaller foam pad over the fuel filler spout and secure with clip from the fuel tank baffle kit as shown in the illustration.


6.

CAUTION:

Make sure the foam baffle is not damaged during this step.

NOTE:


Refer to the attached animation before starting the following procedure.

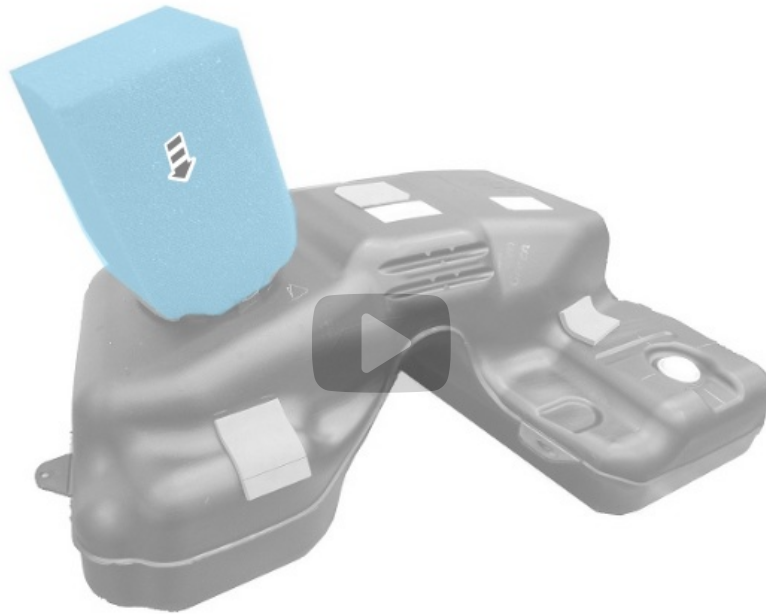

E165466

Install the large foam baffle into the active side of the fuel tank.


7.

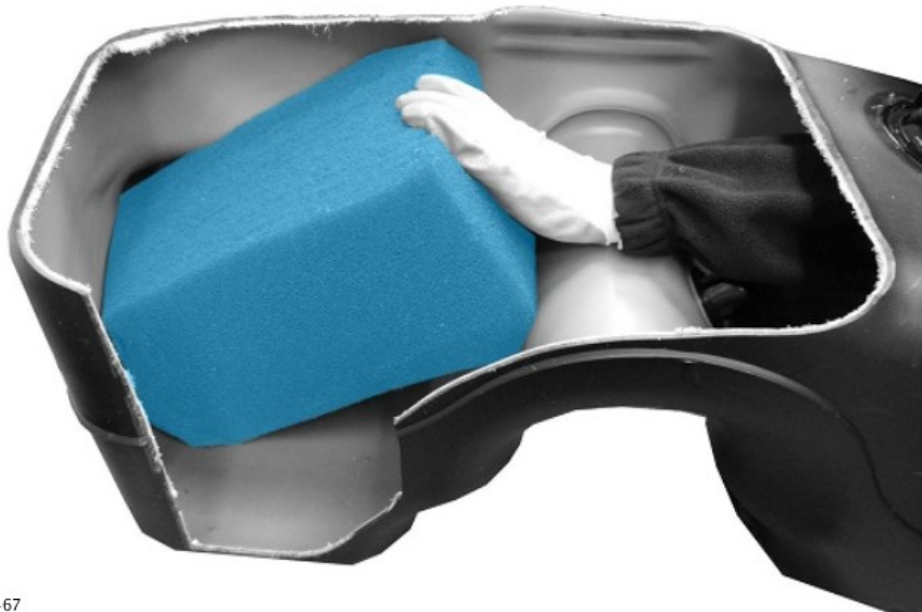

E165467

Position the foam baffle into the passive side of the fuel tank.

8.

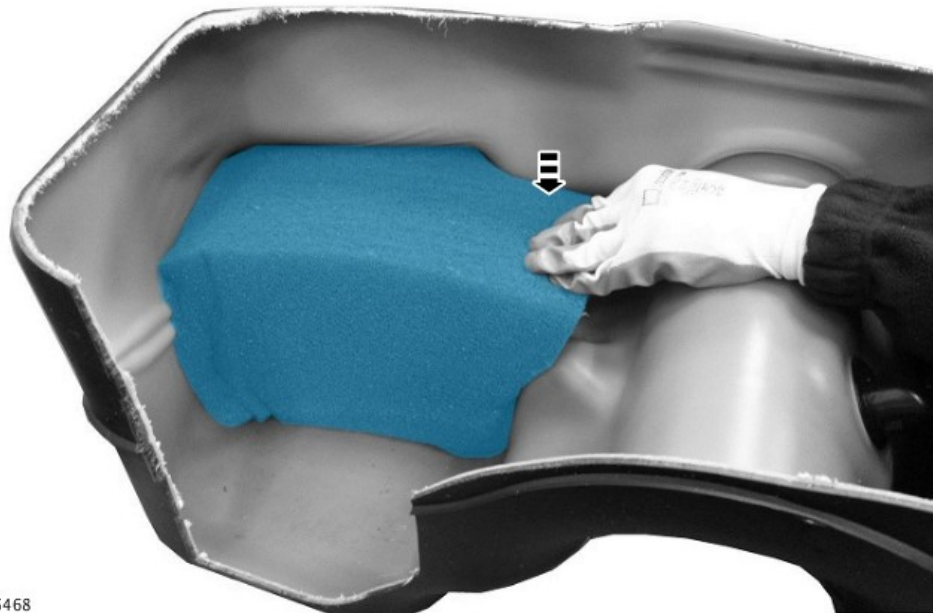


E165468

Make sure the foam baffle is located correctly, as shown in the illustration.

9.

NOTE:

It is essential that the foam baffle is parallel to the end of the fuel tank before proceeding with the next Step.

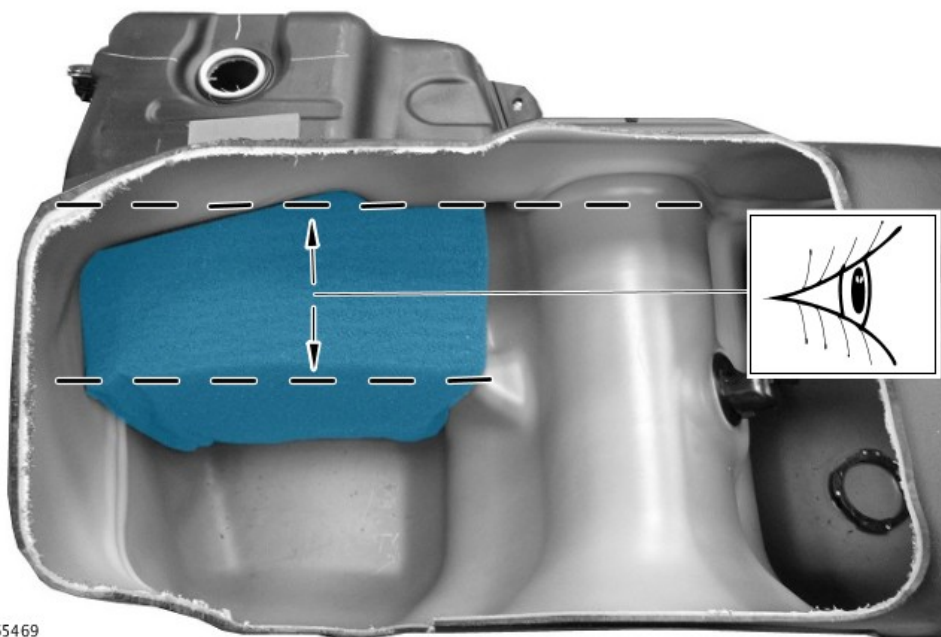

E165469

Make sure the foam baffle is aligned correctly, as shown in the

illustration.

10.




E165470

From the fuel tank baffle kit (refer to LT00668) , connect the hose adapter to the hose end, as shown in the illustration.

11.


NOTE:

A second polythene bag is provided in the fuel tank baffle kit should it be required.

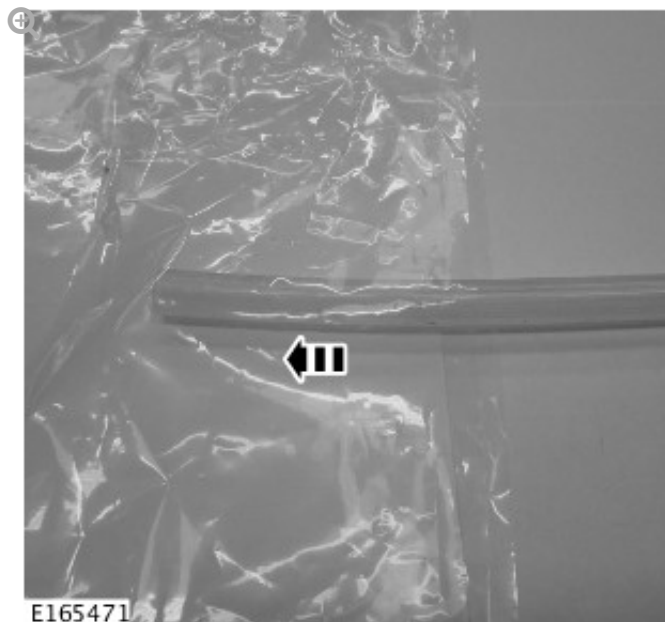

Install the hose inside the polythene bag supplied in the fuel tank baffle kit, as shown in the illustration.


12.

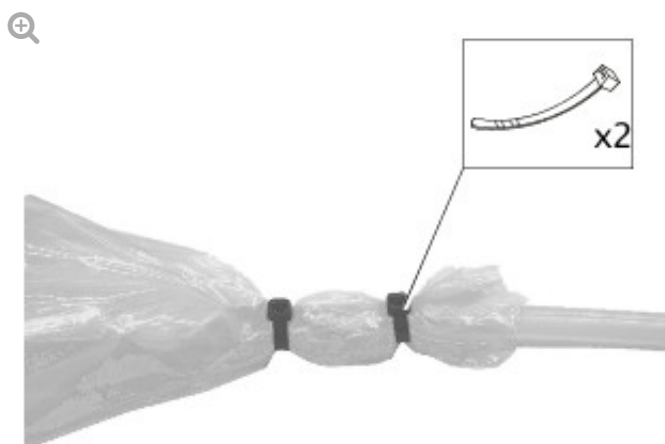

E165472

Secure the polythene bag to the hose using the cable ties from the fuel tank baffle kit, as shown in the illustration.


13.

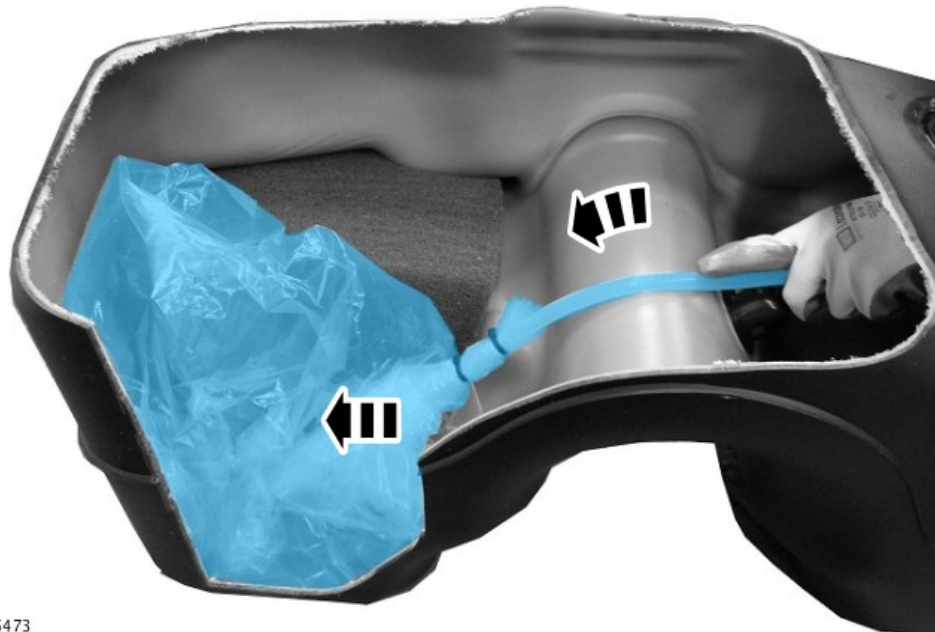

E165473

Install the polythene bag and hose assembly into the passive side of the fuel tank.


14.

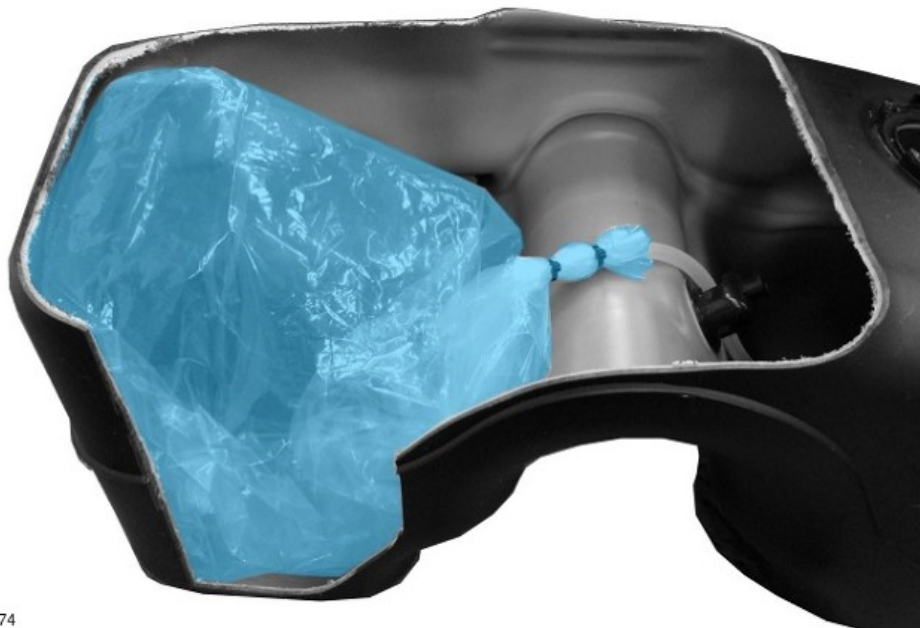

E165474

Inflate the polythene bag with a compressed air line and a tire inflator.

15.

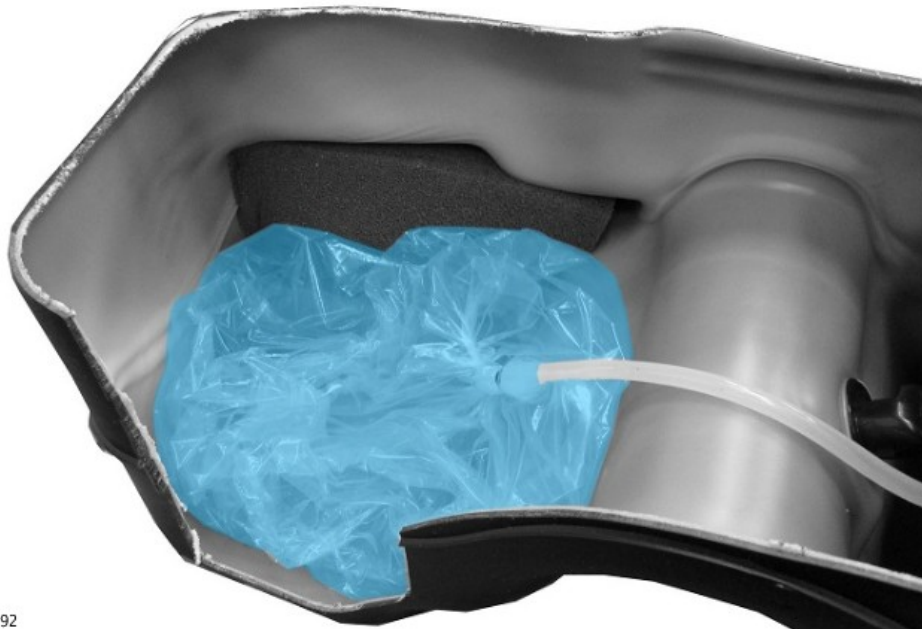


E166592

Inflate the polythene bag until the bag bursts and deflates. Remove the polythene bag and hose. Inspect the positioning of the foam baffle.

16.

NOTE:


A second polythene bag is provided in the fuel tank baffle kit should it be required.

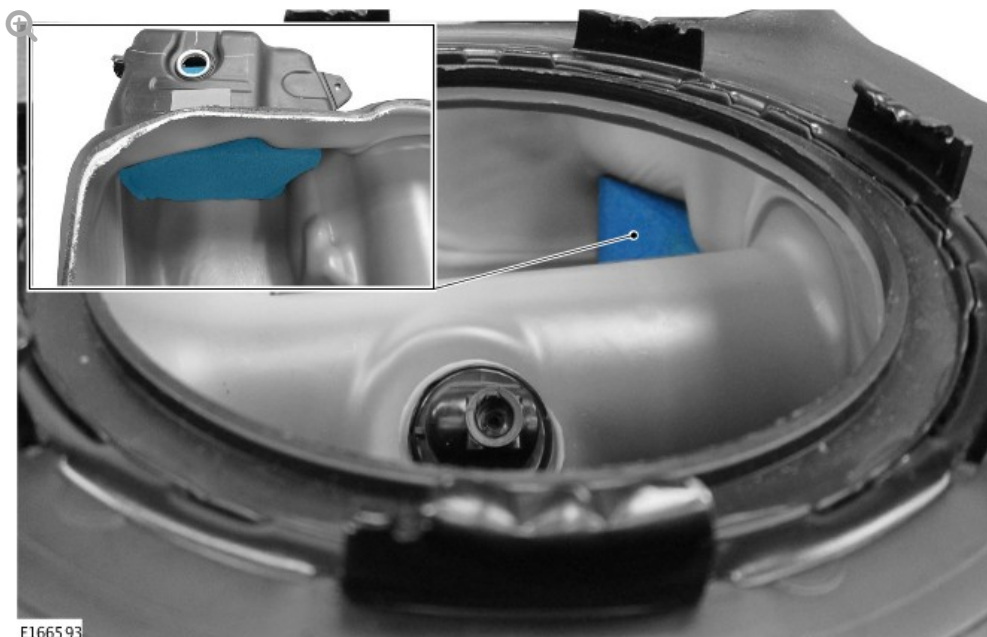

E166593


The foam baffle block should now be positioned as shown. If the block is not positioned as shown repeat Steps 8 to 12 and inspect again.

17.

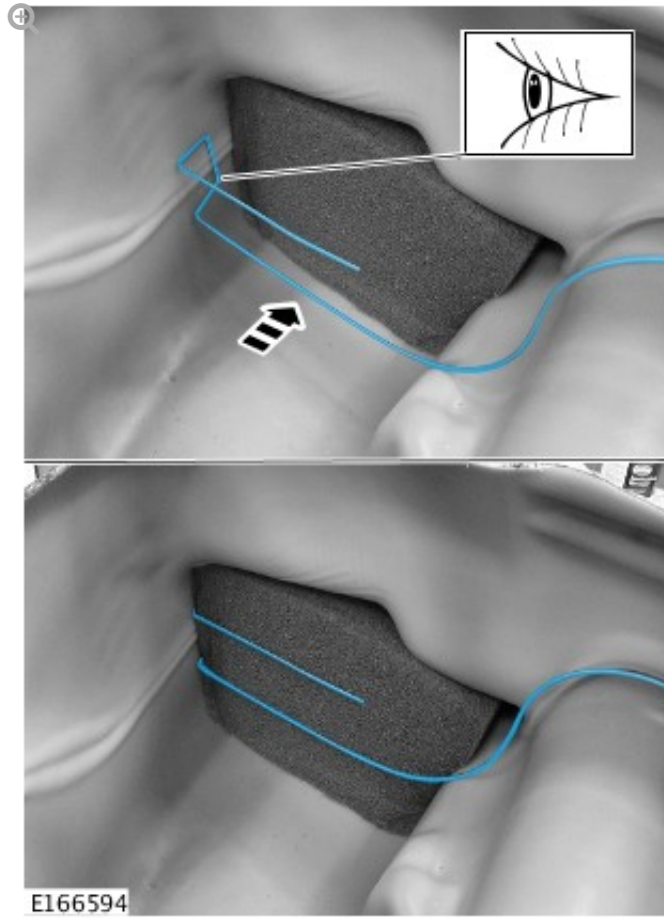

From the fuel tank baffle kit, install the retaining frame onto the foam baffle in the fuel tank.

18.

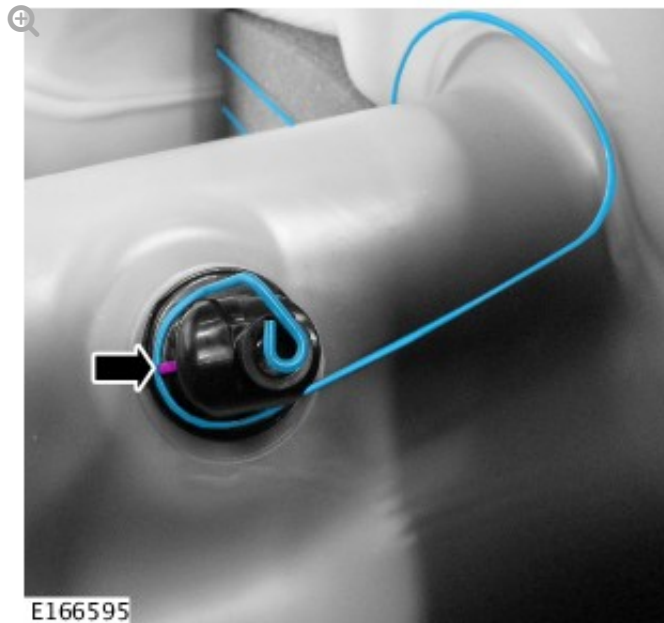

Install the retaining frame onto the tank, as shown in the illustration.


19. Install the passive side fuel level sender unit and carrier arm using the longer screw from the fuel tank baffle kit, (see TOPIx Workshop Manual section 310-01A).

20.



Install the small foam baffle in the active side of the fuel tank.

21.

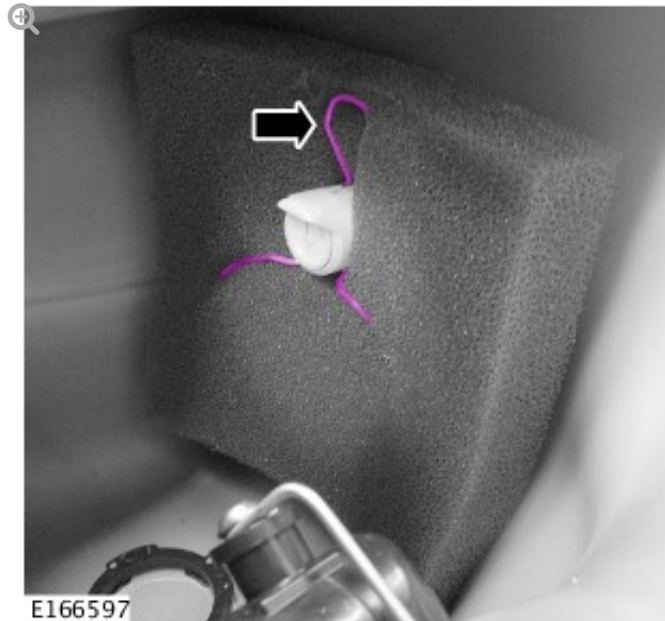

Install the retaining frame onto the smaller foam baffle in the fuel tank.

22. Insert the fuel pump and sender unit.

Refer to: Fuel Tank (310-01 Fuel Tank and Lines - TDV6 3.0L Diesel - Gen 1.5/TDV6 3.0L Diesel - Gen 2, Removal and Installation).

Refer to: Fuel Tank (310-01 Fuel Tank and Lines - TDV6 3.0L Diesel - Gen 1.5/TDV6 3.0L Diesel - Gen 2, Removal and Installation).