

2016.0 RANGE ROVER (LG), 310-00

FUEL SYSTEM - GENERAL INFORMATION

FUEL TANK DRAINING (G1549982)

GENERAL PROCEDURES

SPECIAL TOOL(S)



310-123

Locking Ring, Fuel
Tank

DRAINING

WARNINGS:

- Place the vehicle in a well ventilated, quarantined area and arrange ' No Smoking/Petrol Fumes' signs about the vehicle.
- Do not carry or operate cellular phones when working on or near any fuel related components. Highly flammable vapors are always present and may ignite. Failure to follow these instructions may result in personal injury.
- Do not smoke or carry lighted tobacco or open flame of any type when working on or near any fuel related components. Highly flammable vapors are always present and may ignite. Failure to follow these instructions may result in personal injury.
- The spilling of fuel is unavoidable during this operation. Ensure that all necessary precautions are taken to prevent fire and explosion.

CAUTION:

Before disconnecting or removing components, ensure the area around the joint faces and connections are clean. Plug open connections to prevent contamination.



All vehicles

1. Refer to: [Diesel Fuel System Health and Safety Precautions](#) (100-00 General Information, Description and Operation).
Refer to: [Petrol and Petrol-Ethanol Fuel Systems Health and Safety Precautions](#) (100-00 General Information, Description and Operation).



Vehicles with petrol engine

2. Refer to: [Fuel System Pressure Release - GTDi 2.0L Petrol/V6 S/C 3.0L Petrol /V8 N/A 5.0L Petrol/V8 S/C 5.0L Petrol](#) (310-00 Fuel System - General Information, General Procedures).




All vehicles

3. Disconnect the battery ground cable.
Refer to: [Specifications](#) (414-00 Battery and Charging System - General Information, Specifications).

4.


NOTE:

Some variation in the illustrations may occur, but the essential information is always correct.

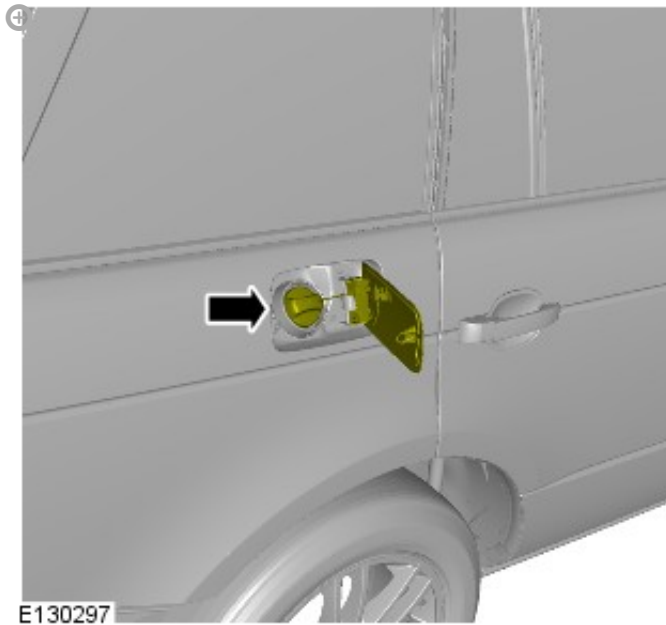


Vehicles without business seats


5.

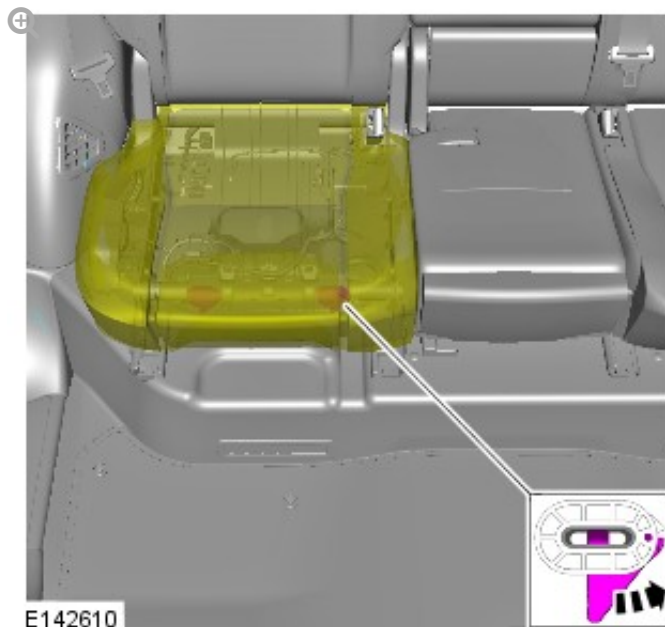


6.

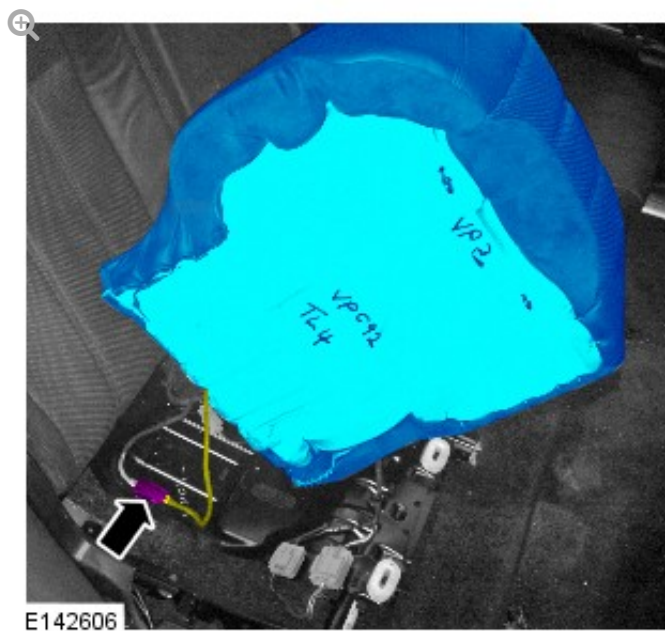

7.

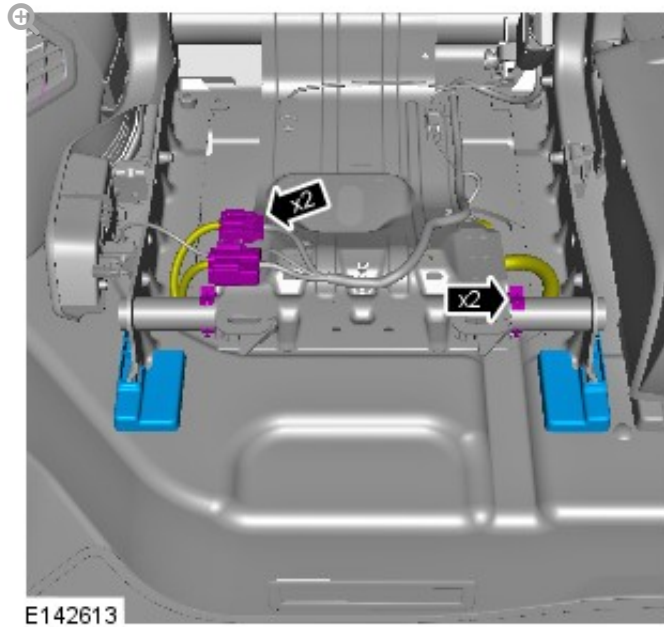

8.

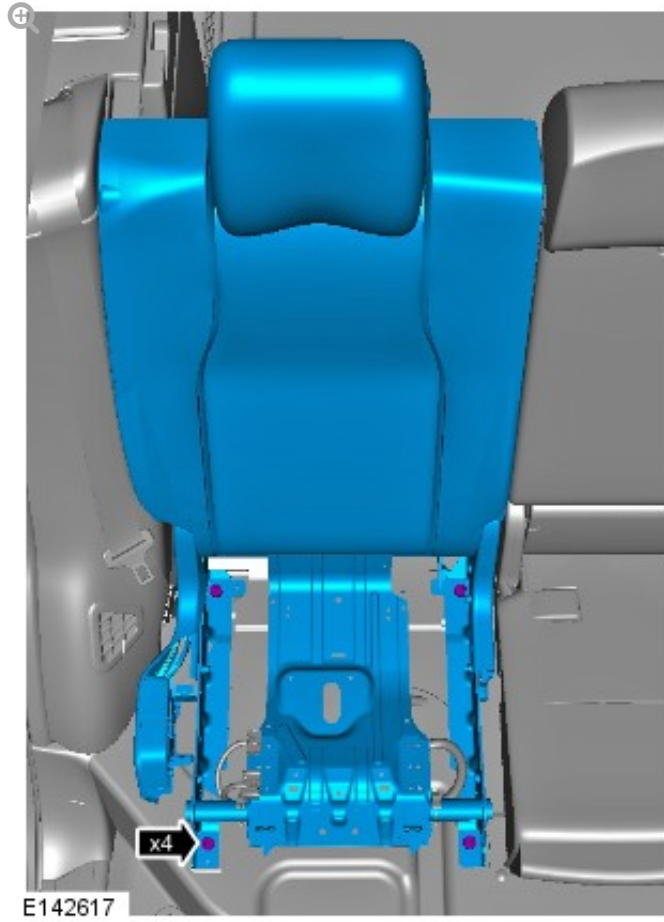


Torque: 50 Nm



Vehicles with business seats


9.

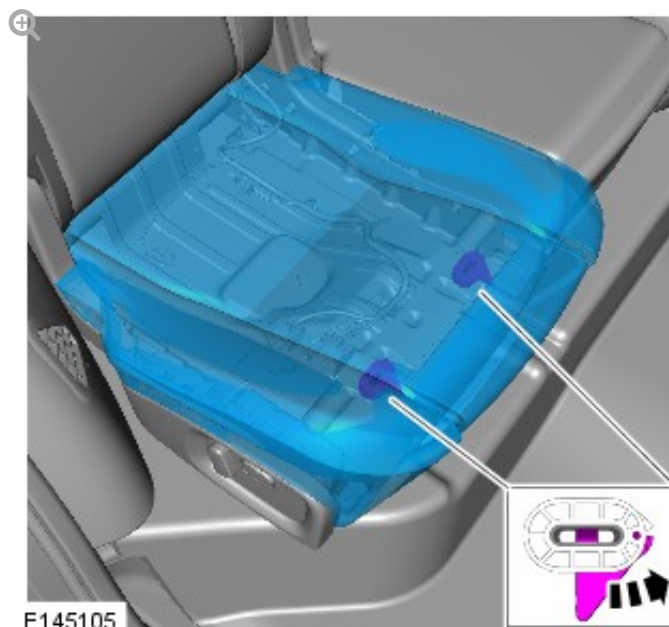

10.




11.

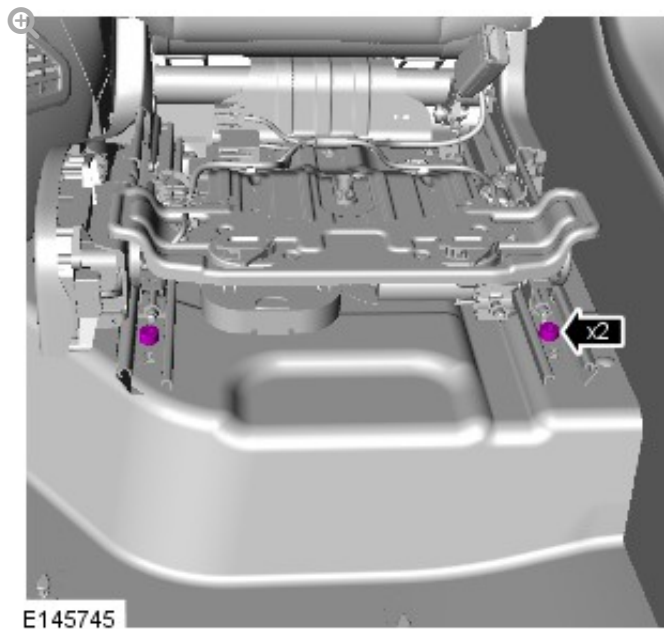

Torque: 50 Nm

12.

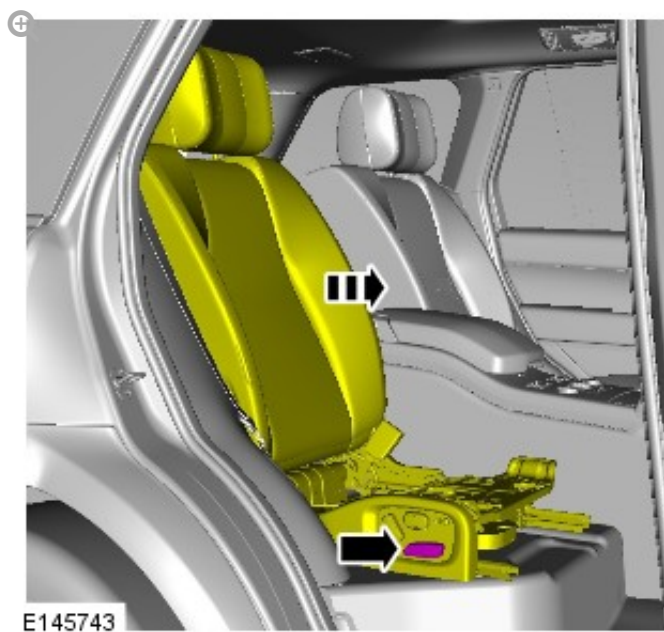


13.



E146116

Torque: 50 Nm

14.

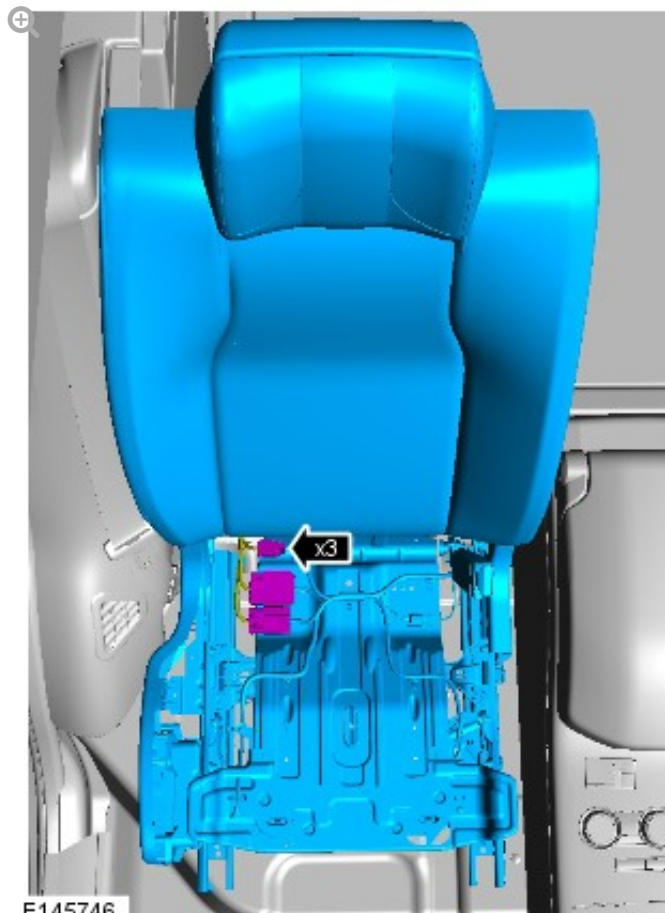


E145746





All vehicles

15.

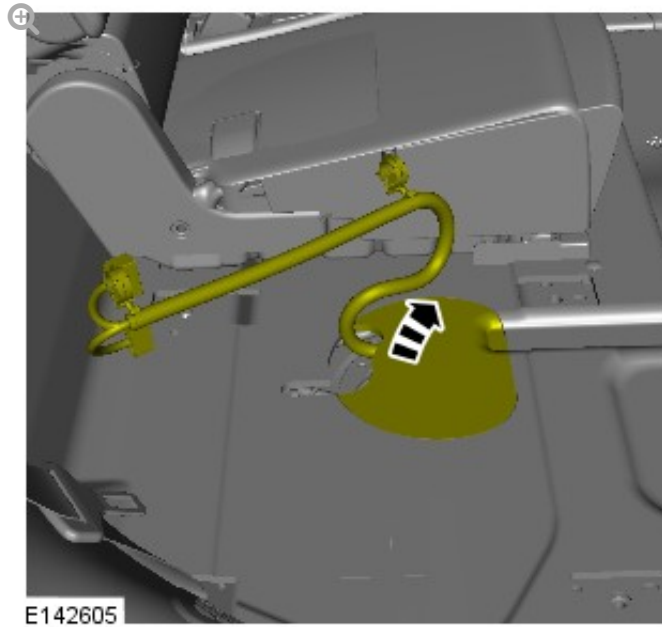

16.

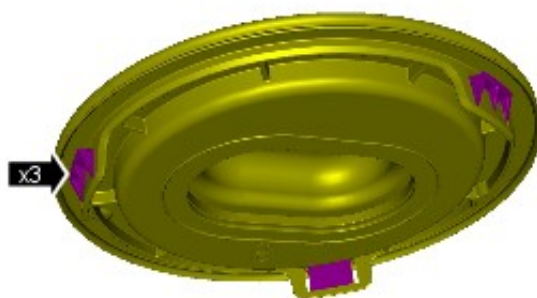
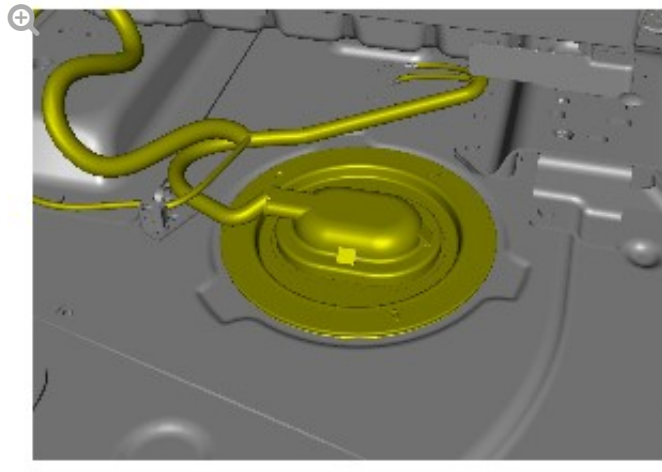


E142604



Vehicles with petrol engine

17.

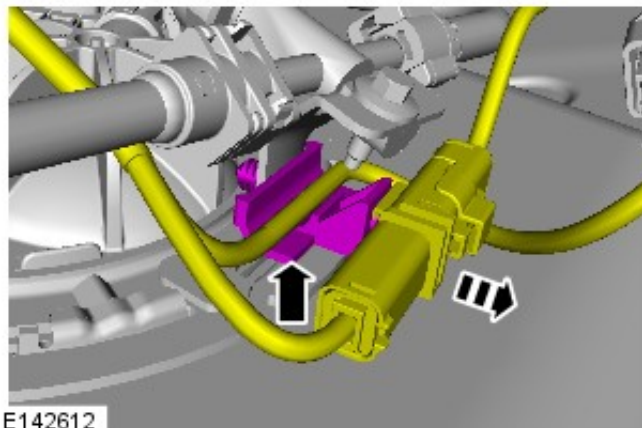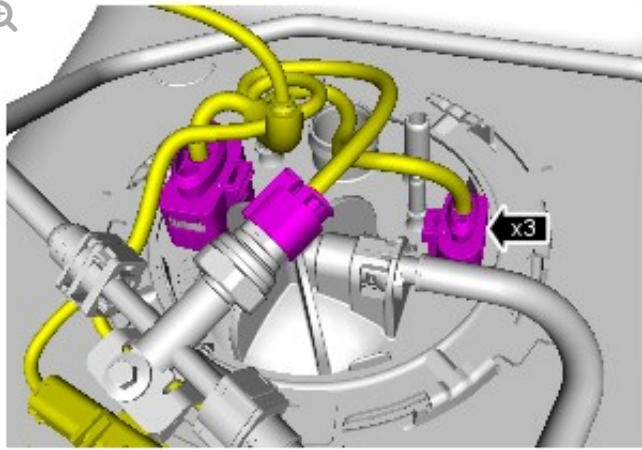


18.

CAUTION:

Be prepared to collect escaping fuel.

When removing the fuel feed pipe from the fuel tank flange, the O-ring seals may remain on the fuel pipe. If this occurs, DO NOT attempt to refit the seals into fuel tank flange. A new fuel tank flange must be installed.

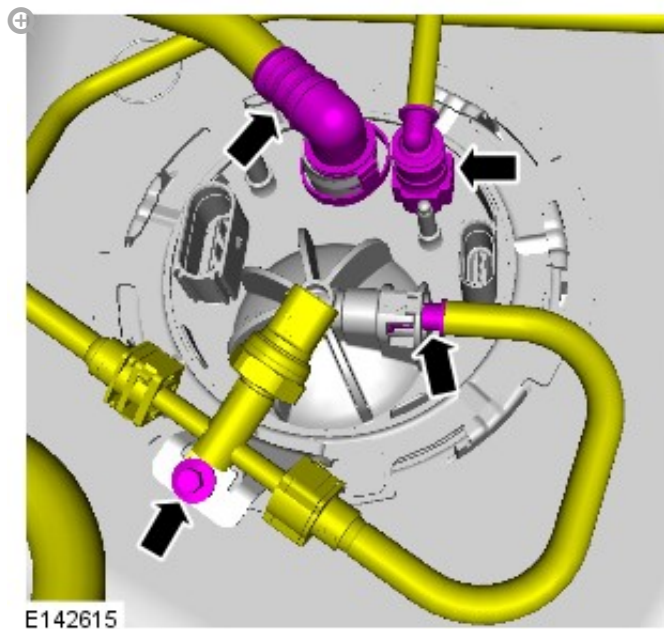

Torque: 7 Nm



Vehicles with diesel engine

19.




E142611

20.

CAUTION:

Be prepared to collect escaping fuel.

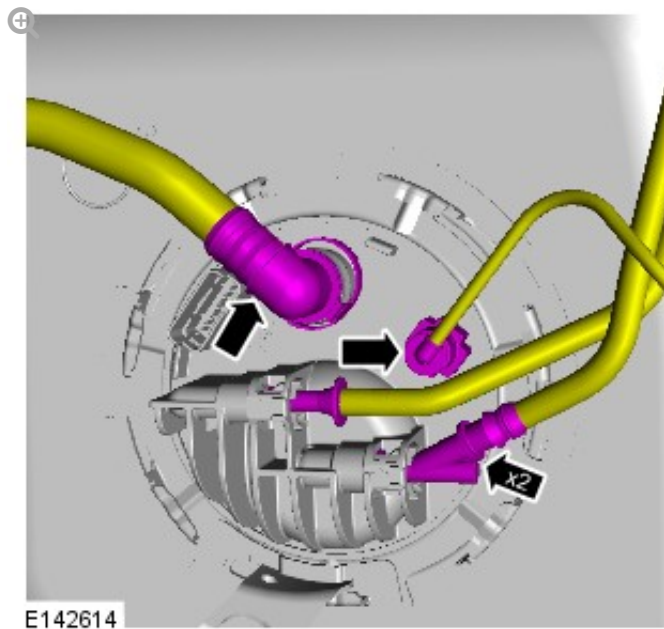

All vehicles


21.

NOTE:

Some variation in the illustrations may occur, but the essential information is always correct.



310-123

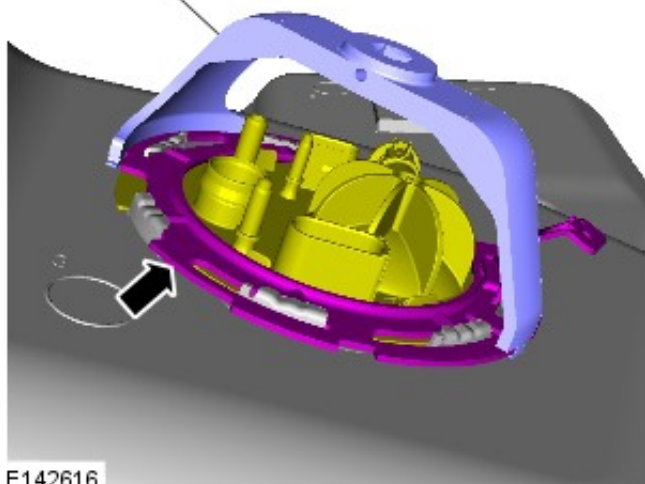




Vehicles with petrol engine

22.

CAUTION:

A new O-ring seal is to be installed.

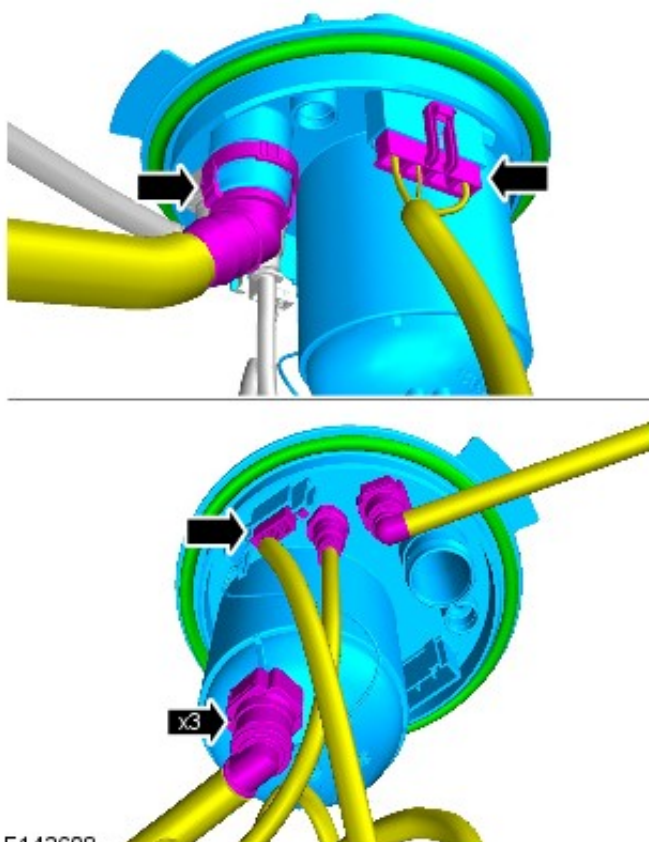

E142608




Vehicles with diesel engine

23.

CAUTION:

A new O-ring seal is to be installed.

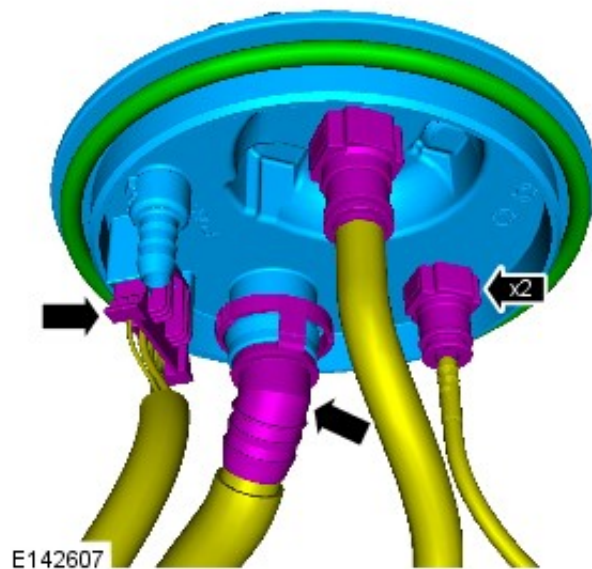

24. Connect the fuel tank drain equipment ground cable to the vehicle.


25.

CAUTION:

Follow the manufacturer's instructions.

NOTE:

Some variation in the illustrations may occur, but the essential information is always correct.

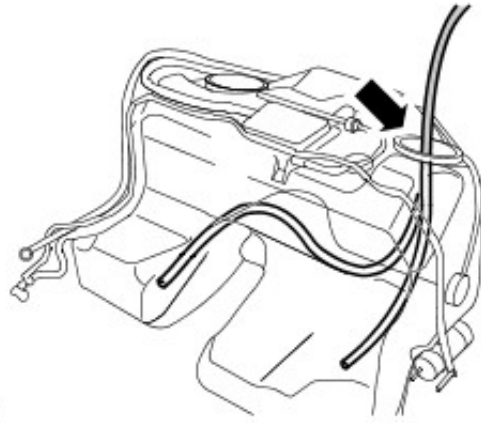

E61451

FILLING

WARNINGS:

- Place the vehicle in a well ventilated, quarantined area and arrange 'No Smoking/Petrol Fumes' signs about the vehicle.
- Do not carry or operate cellular phones when working on or near any fuel related components. Highly flammable vapors are always present and may ignite. Failure to follow these instructions may result in personal injury.
- Do not smoke or carry lighted tobacco or open flame of any type when working on or near any fuel related components. Highly flammable vapors are always present and may ignite. Failure to follow these instructions may result in personal injury.
- The spilling of fuel is unavoidable during this operation. Ensure that all necessary precautions are taken to prevent fire and explosion.

CAUTION:

Before disconnecting or removing components, ensure the area around the joint faces and connections are clean. Plug open connections to prevent contamination.

26. To install, reverse the removal procedure.