

2016.0 RANGE ROVER (LG), 310-01

FUEL TANK AND LINES - TDV6 3.0L DIESEL

FUEL COOLER (G1509635)

REMOVAL AND INSTALLATION

REMOVAL

WARNINGS:

- The spilling of fuel is unavoidable during this operation. Ensure that all necessary precautions are taken to prevent fire and explosion.
- Do not carry or operate cellular phones when working on or near any fuel related components. Highly flammable vapors are always present and may ignite. Failure to follow these instructions may result in personal injury.
- Do not smoke or carry lighted tobacco or open flame of any type when working on or near any fuel related components. Highly flammable mixtures are always present and may ignite. Failure to follow these instructions may result in personal injury.
- If fuel contacts the eyes, flush the eyes with cold water or eyewash solution and seek medical attention.

CAUTION:


Diesel fuel injection equipment is manufactured to very precise tolerances and fine clearances. It is therefore essential that absolute cleanliness is observed when working with these components. Always install blanking plugs to any open orifices or lines. Failure to follow this instruction may result in foreign matter ingress to the fuel injection system.

NOTES:

- Removal steps in this procedure may contain installation details.
- Some variation in the illustrations may occur, but the essential information is always correct.


1. Disconnect the battery ground cable.
Refer to: [Specifications](#) (414-00 Battery and Charging System - General Information, Specifications).
2. Refer to: [Left Air Cleaner](#) (303-12A Intake Air Distribution and Filtering - TDV6 3.0L Diesel - Gen 2/TDV6 3.0L Diesel, Removal and Installation).

3.

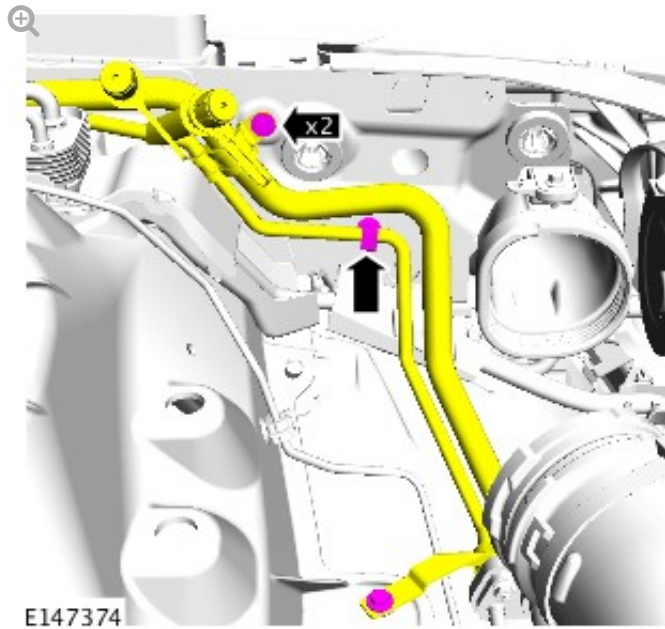

Torque: 10 Nm

4.

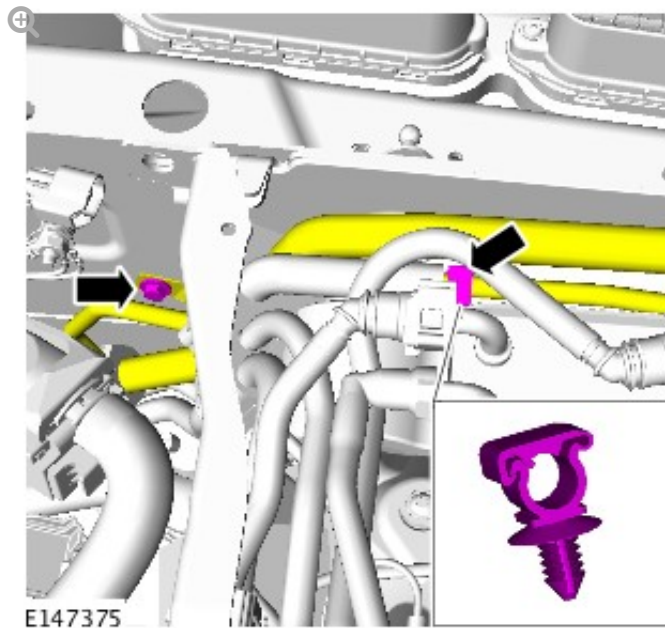

Torque: 10 Nm


5.

CAUTION:

Be prepared to collect escaping coolant.

NOTE:


Make sure that all openings are sealed. Use new blanking caps.

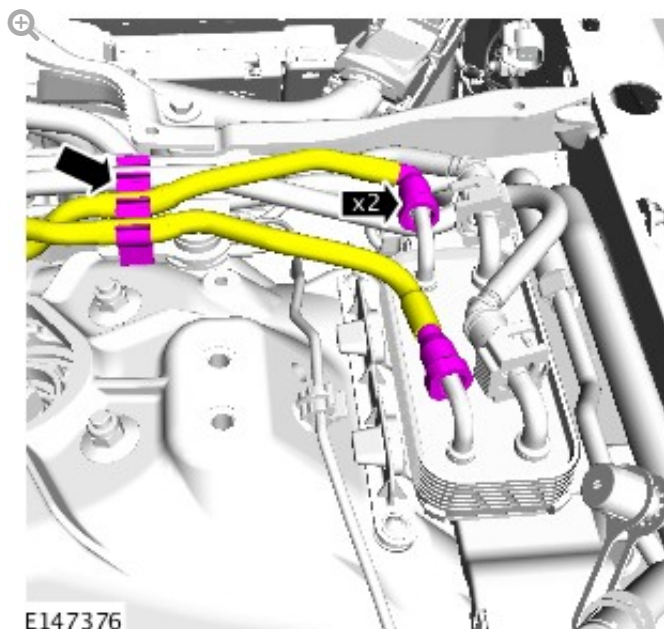


6.

CAUTIONS:

- Make sure that all openings are sealed. Use new blanking caps.
- Be prepared to collect escaping fuel.

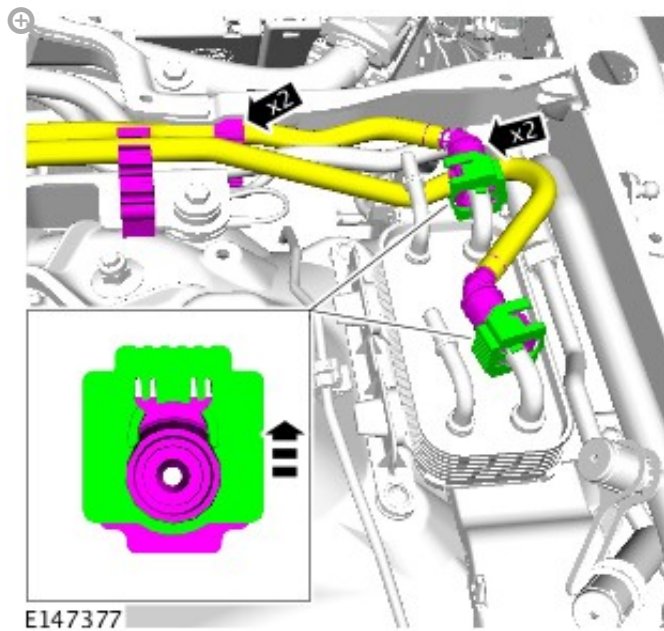

7.

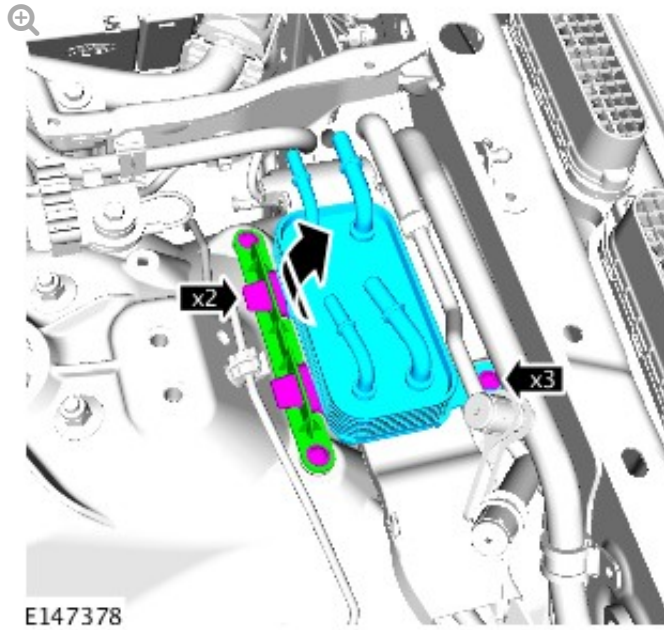

Torque: 10 Nm

INSTALLATION

1. To install, reverse the removal procedure.

