

2016.0 RANGE ROVER (LG), 310-01

FUEL TANK AND LINES - TDV6 3.0L DIESEL

FUEL TANK FILLER PIPE (G1509645)

REMOVAL AND INSTALLATION

REMOVAL

WARNINGS:

- The spilling of fuel is unavoidable during this operation. Ensure that all necessary precautions are taken to prevent fire and explosion.
- Do not carry or operate cellular phones when working on or near any fuel related components. Highly flammable vapors are always present and may ignite. Failure to follow these instructions may result in personal injury.
- Do not smoke or carry lighted tobacco or open flame of any type when working on or near any fuel related components. Highly flammable vapors are always present and may ignite. Failure to follow these instructions may result in personal injury.
- If fuel contacts the eyes, flush the eyes with cold water or eyewash solution and seek immediate medical attention.
- Wash hands thoroughly after fuel handling, as prolonged contact may cause irritation. Should irritation develop, seek medical attention.

NOTE:

Removal steps in this procedure may contain installation details.



All vehicles

1.

WARNING:

Make sure to support the vehicle with axle stands.

Raise and support the vehicle.

2. Refer to: [Petrol and Petrol-Ethanol Fuel Systems Health and Safety Precautions](#) (100-00 General Information, Description and Operation).

Refer to: [Diesel Fuel System Health and Safety Precautions](#) (100-00 General Information, Description and Operation).



Vehicles with petrol engine

3. Refer to: [Fuel System Pressure Release - GTDi 2.0L Petrol/V6 S/C 3.0L Petrol /V8 N/A 5.0L Petrol/V8 S/C 5.0L Petrol](#) (310-00 Fuel System - General Information, General Procedures).




All vehicles

4. Refer to: [Rear Subframe](#) (502-00 Uni-Body, Subframe and Mounting System, Removal and Installation).


5.

NOTE:


Some variation in the illustrations may occur, but the essential information is always correct.

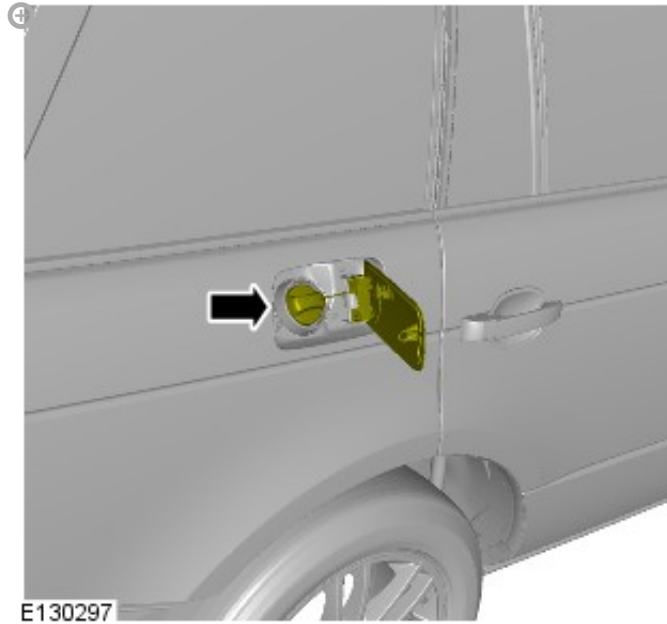


6.

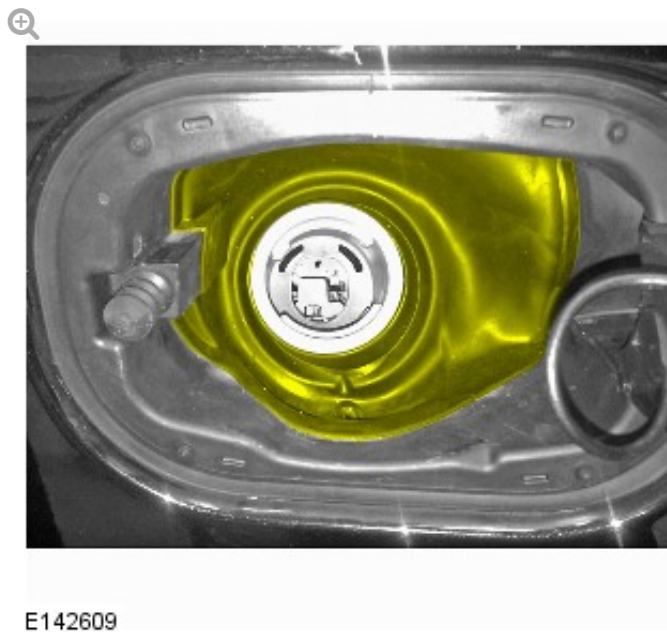


7.

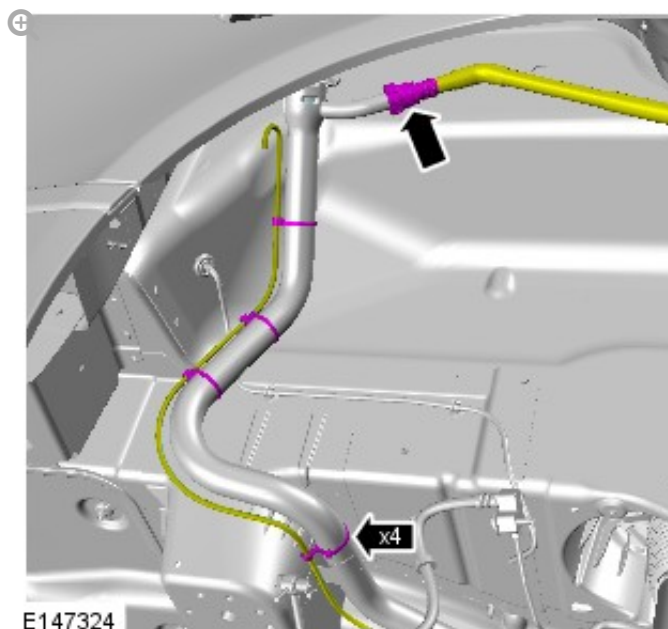


8.

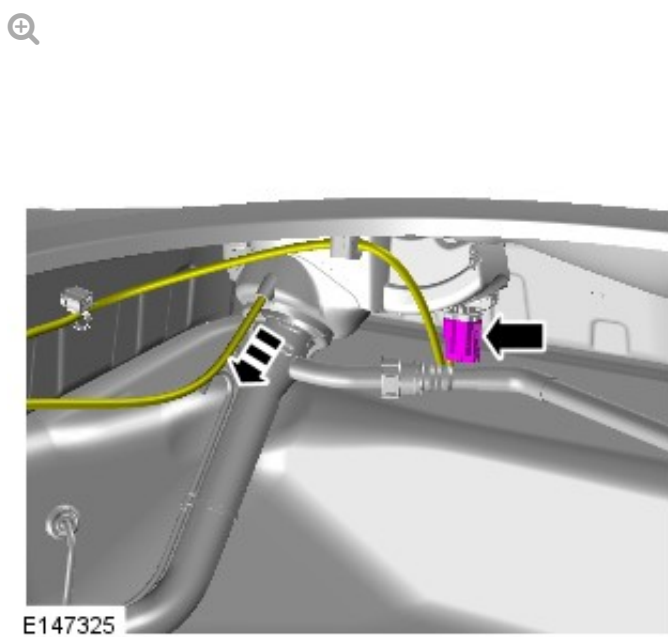

9.

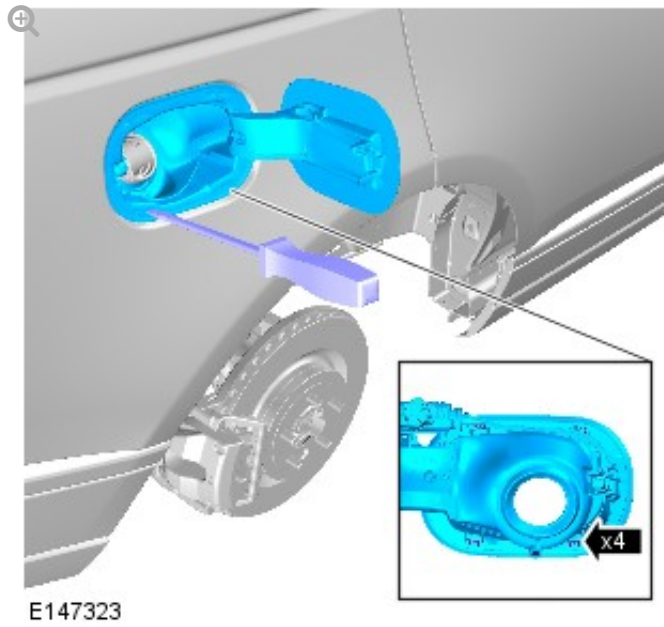

10.

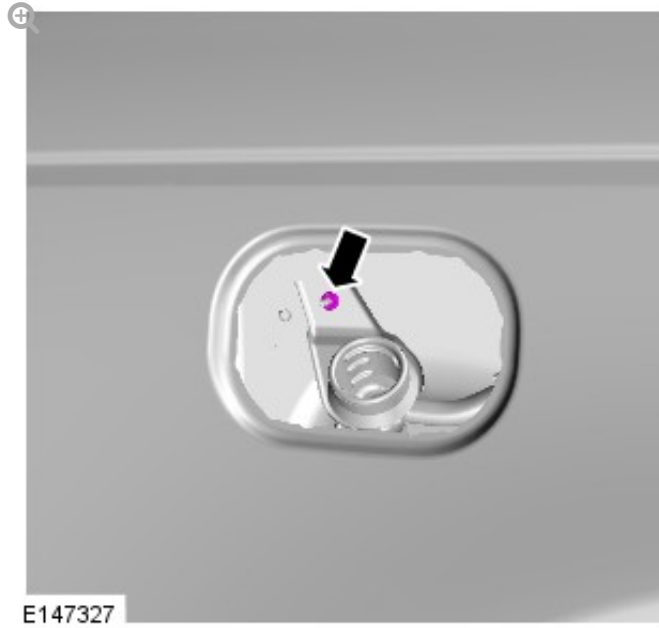


Torque: 10 Nm

11.

CAUTION:

Be prepared to collect escaping fuel.

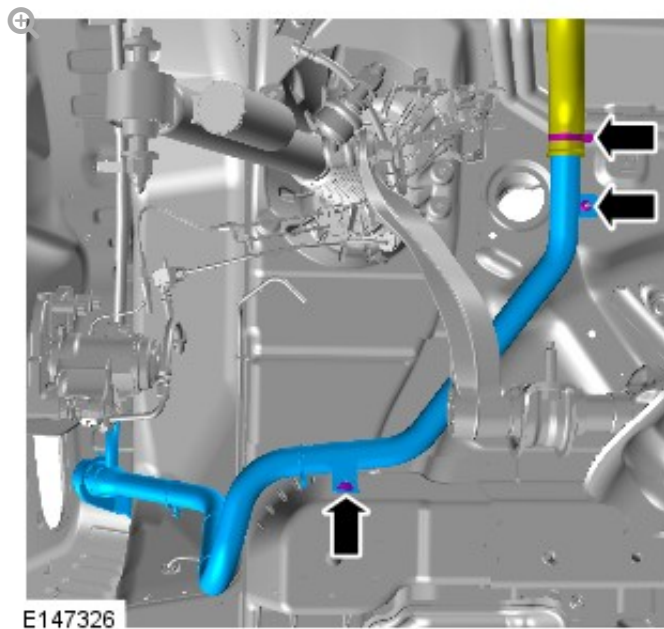

Torque:

M6 10 Nm

Clamp 3.5 Nm

INSTALLATION

1. To install, reverse the removal procedure.