

PUBLISHED: 09-DEC-2014
2015.0 RANGE ROVER (LG), 310-01

FUEL TANK AND LINES - TDV8 4.4L DIESEL

AUXILIARY FUEL COOLER (G1509641)

REMOVAL AND INSTALLATION

19.25.35	FUEL COOLER - AUXILIARY - RENEW	4400 CC, TDV8	0.7	USED WITHINS	
----------	--	------------------	-----	-----------------	--

REMOVAL



WARNINGS:

- The spilling of fuel is unavoidable during this operation. Ensure that all necessary precautions are taken to prevent fire and explosion.
- Do not carry or operate cellular phones when working on or near any fuel related components. Highly flammable vapors are always present and may ignite. Failure to follow these instructions may result in personal injury.
- Do not smoke or carry lighted tobacco or open flame of any type when working on or near any fuel related components. Highly flammable mixtures are always present and may ignite. Failure to follow these instructions may result in personal injury.
- If fuel contacts the eyes, flush the eyes with cold water or eyewash solution and seek medical attention.



CAUTION:


Diesel fuel injection equipment is manufactured to very precise tolerances and fine clearances. It is therefore essential that absolute cleanliness is observed when working with these components. Always install blanking plugs to any open orifices or lines. Failure to follow this instruction may result in foreign matter ingress to the fuel injection system.




NOTES:

- Removal steps in this procedure may contain installation details.
- Some variation in the illustrations may occur, but the essential information is always correct.


1. For additional information, refer to: [Cooling System Partial Draining and Vacuum Filling](#) (303-03A Engine Cooling - TDV6 3.0L Diesel - Gen 2/TDV6 3.0L Diesel - Gen 1.5, General Procedures).

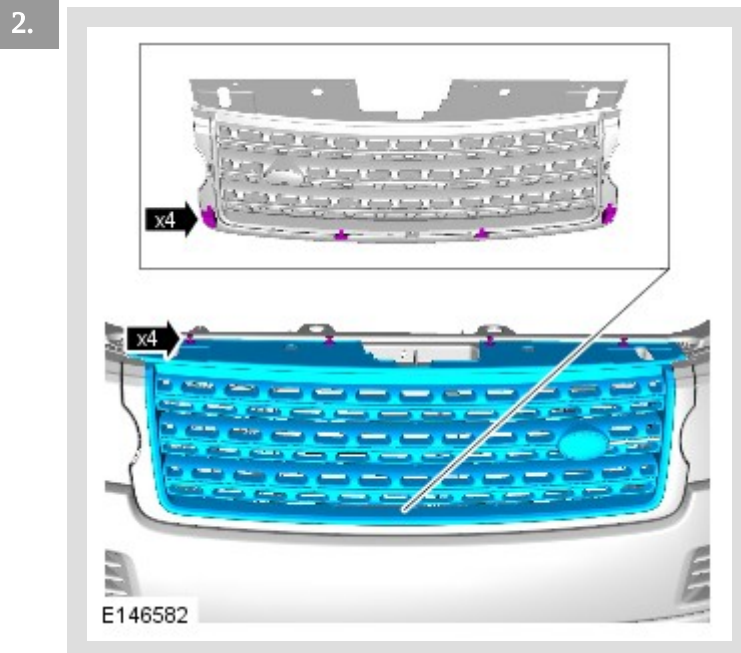

- 3.

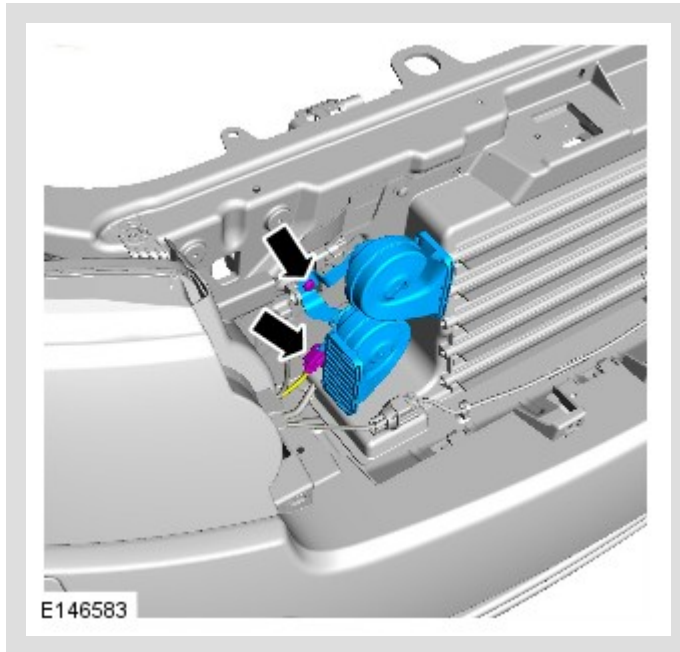

4.

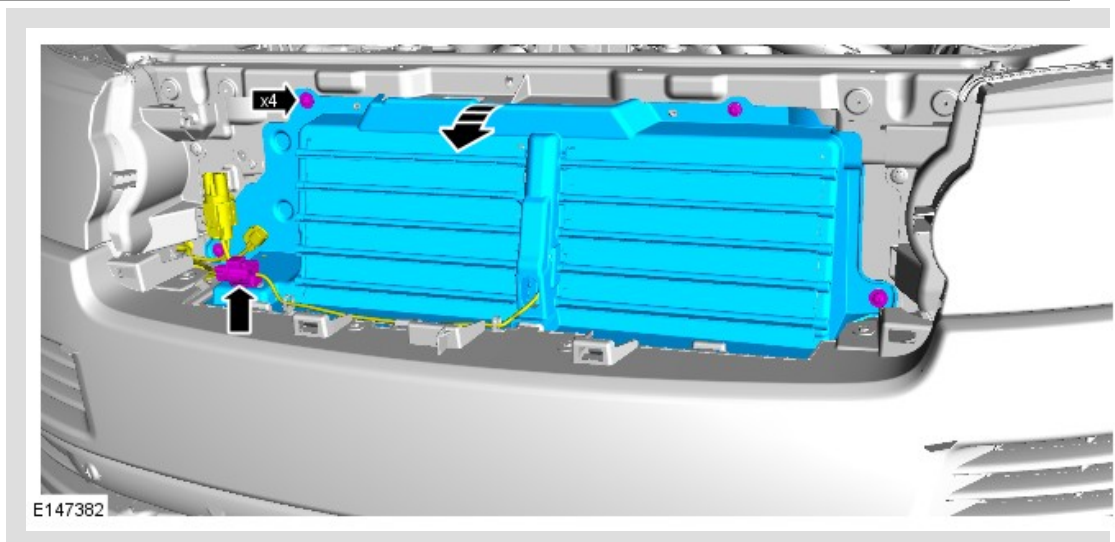

5.




WARNING:

The spilling of fuel is unavoidable during this operation. Make sure that all necessary precautions are taken to prevent fire and explosion.



NOTE:

Make sure that all openings are sealed. Use new blanking caps.

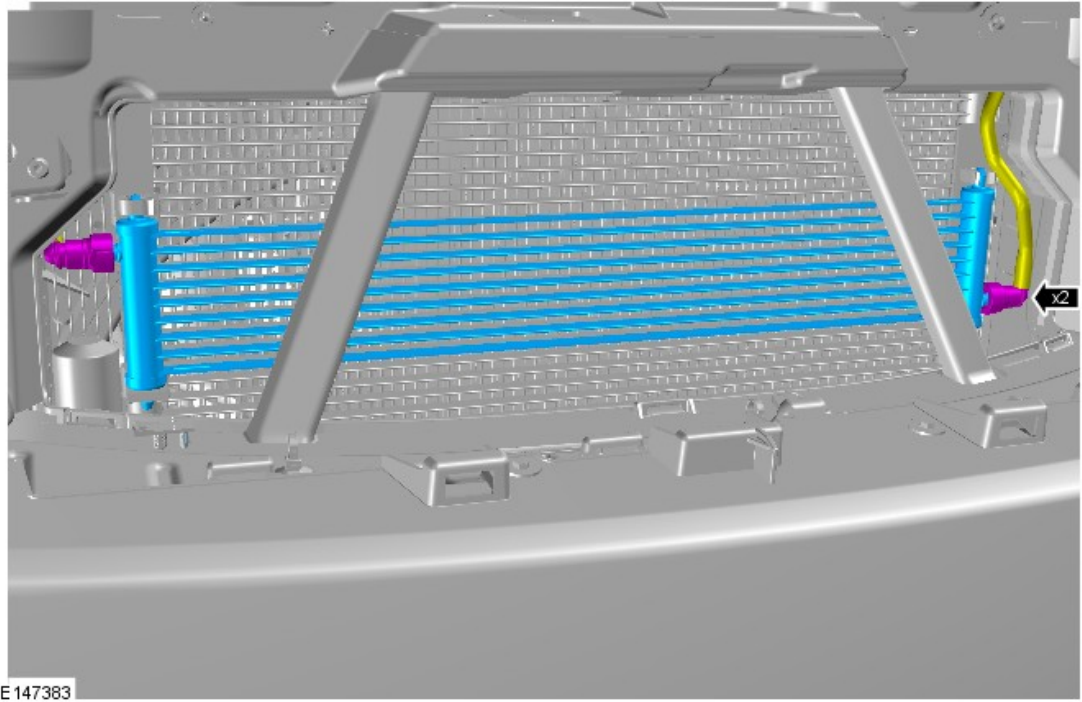

INSTALLATION

1. To install reverse the removal procedure.