

PUBLISHED: 15-DEC-2016
2015.0 RANGE ROVER (LG), 310-01

FUEL TANK AND LINES - TDV8 4.4L DIESEL

AUXILIARY FUEL PUMP (G2047174)

REMOVAL



WARNING:

Be prepared to collect escaping fuel.



CAUTION:

Before disconnecting or removing the components, make sure the area around the joint faces and connections are clean and dry. Plug open connections to prevent contamination.



NOTE:

This procedure contains illustrations showing certain components removed to provide extra clarity.

1.

Disconnect the battery ground cable.

Refer to: [Specifications](#) (414-00 Battery and Charging System - General Information, Specifications).

2.


Raise and support the vehicle.

3.

Remove the front left wheel.


Refer to: [Wheel and Tire - TDV6 3.0L Diesel - Gen 2/GTDi 2.0L Petrol/TDV6 3.0L Diesel - Gen 1.5/TDV8 4.4L Diesel/V6 S/C 3.0L Petrol /V8 N/A 5.0L Petrol /V8 S/C 5.0L Petrol](#) (204-04 Wheels and Tires, Removal and Installation).

4.

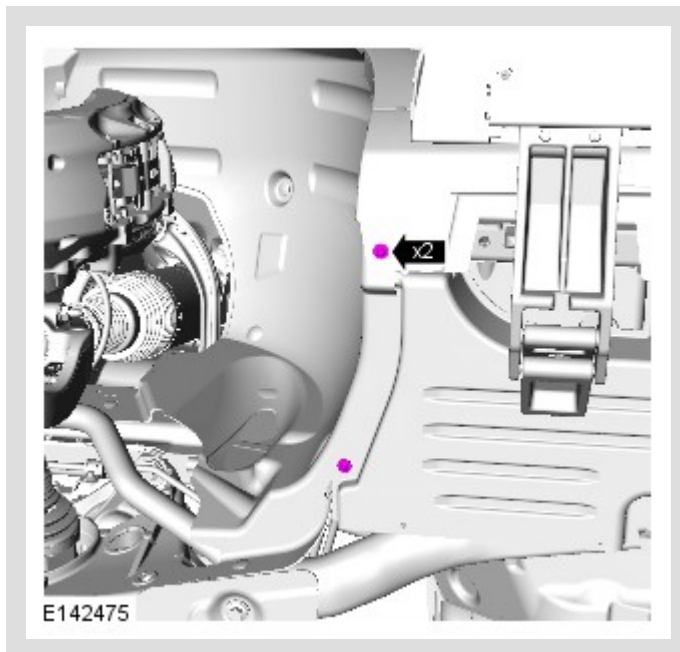

Remove the screws.

5.

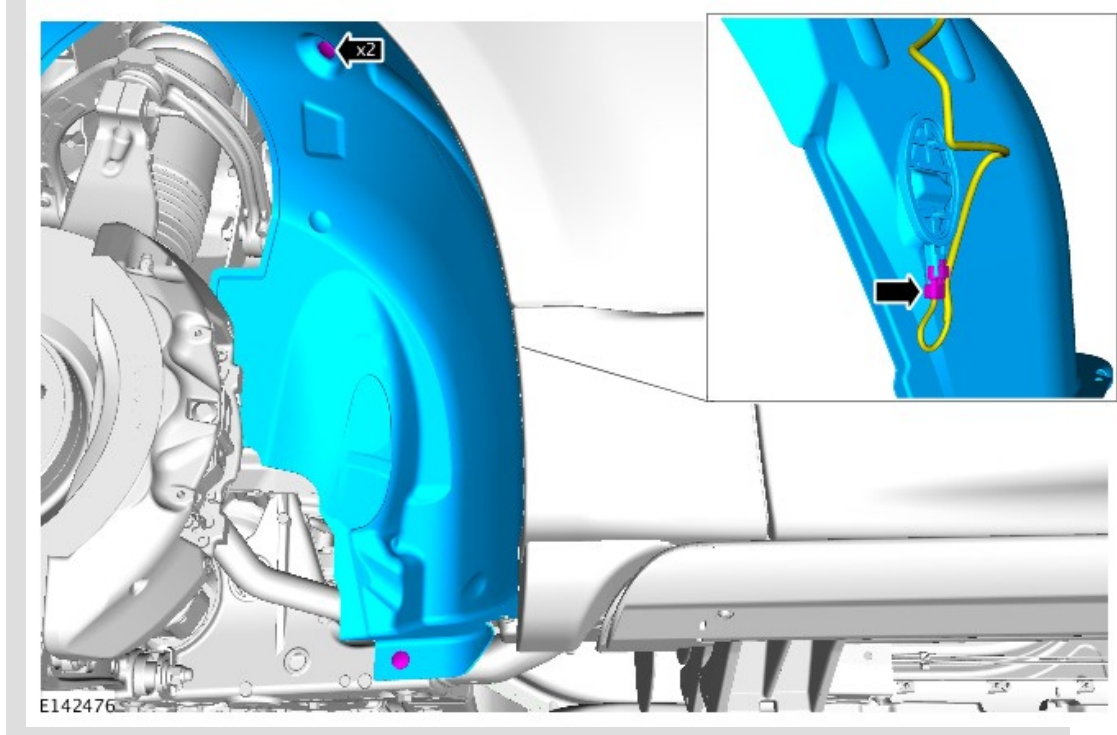


- Remove the clips.
- Disconnect the tire pressure monitoring system front antenna electrical connector.
- Remove the front left fender splash shield.

6.



WARNING:

Be prepared to collect escaping fuel.

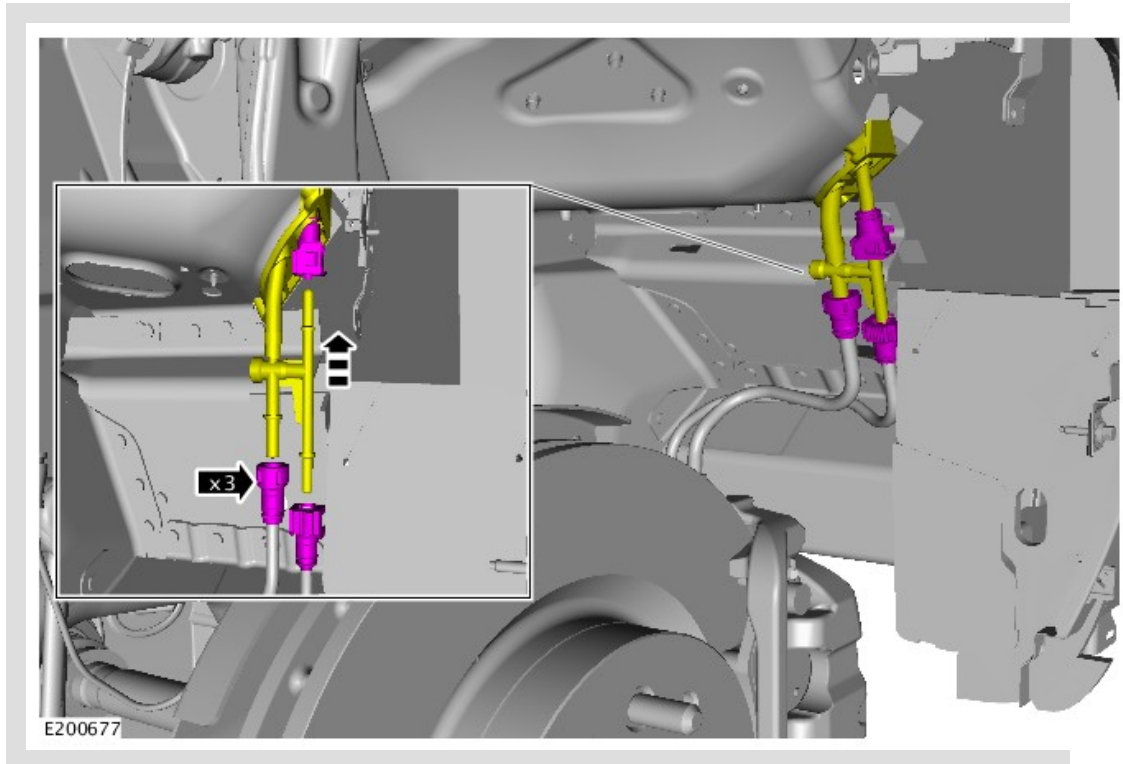

- Disconnect the fuel pipe from the clips.
- Push the pipe upwards.

7.

Lower the vehicle.

8.

Remove the Electronic Control Module (ECM).


Refer to: [Engine Control Module](#) (303-14E Electronic Engine Controls - TDV8 4.4L Diesel, Removal and Installation).

9.

Remove the secondary bulkhead left panel.

Refer to: [Secondary Bulkhead Left Panel](#) (501-02 Front End Body Panels, Removal and Installation).

10.

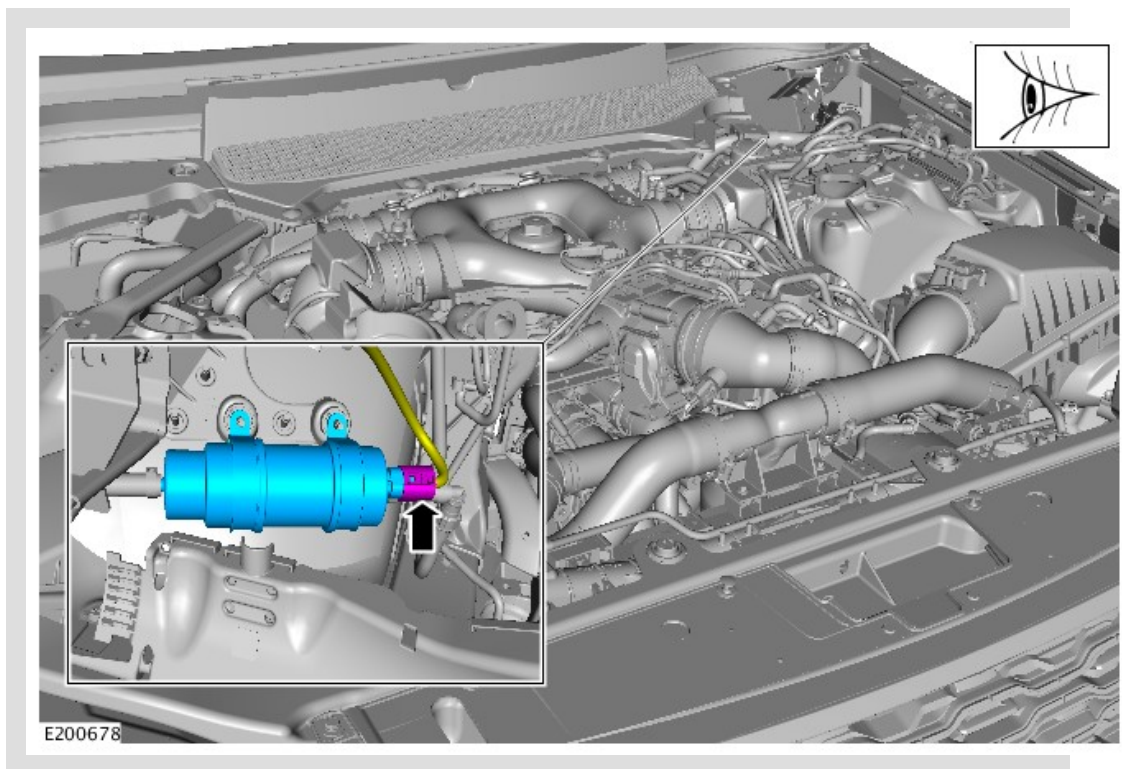


Disconnect the auxiliary fuel pump electrical connector.

11.




WARNING:


Be prepared to collect escaping fuel.

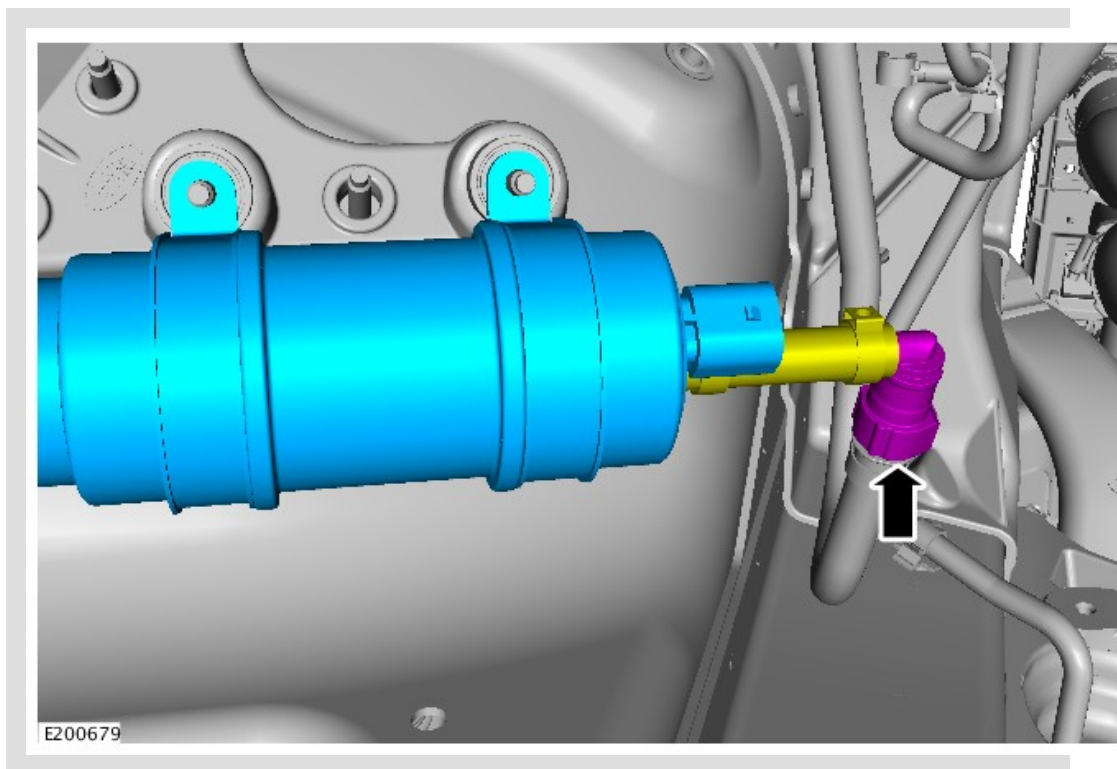

Disconnect the fuel pipe from the clip.

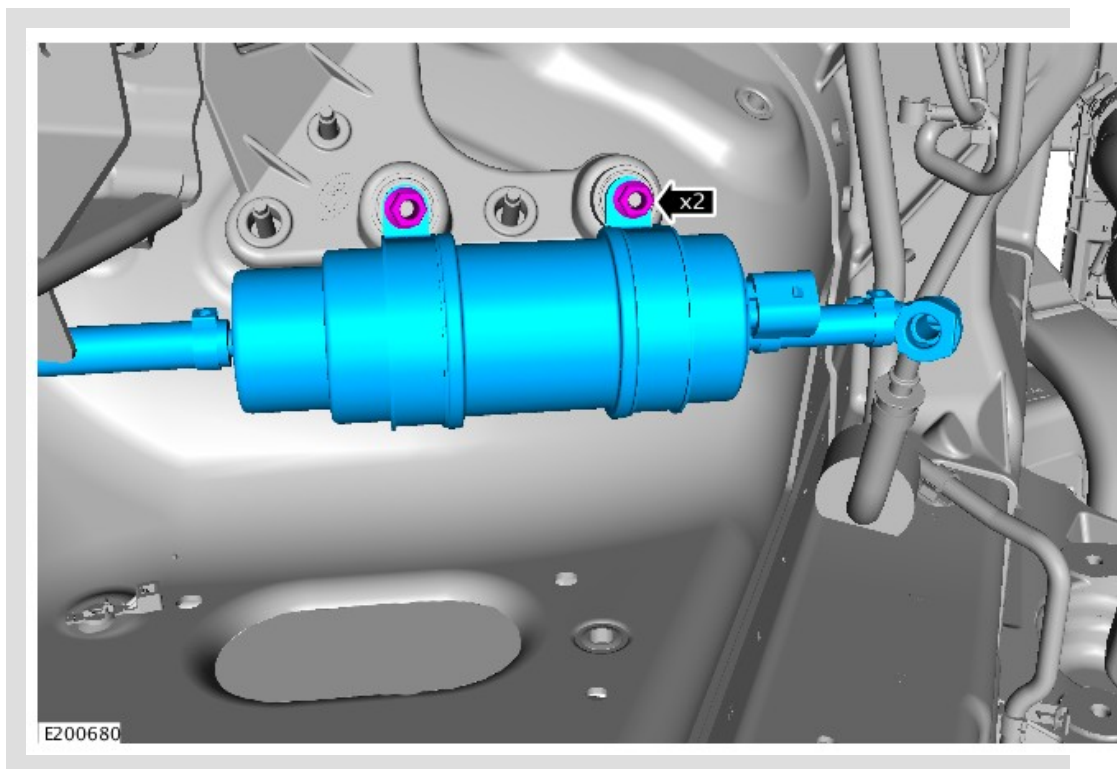


Remove the auxiliary fuel pump nuts.

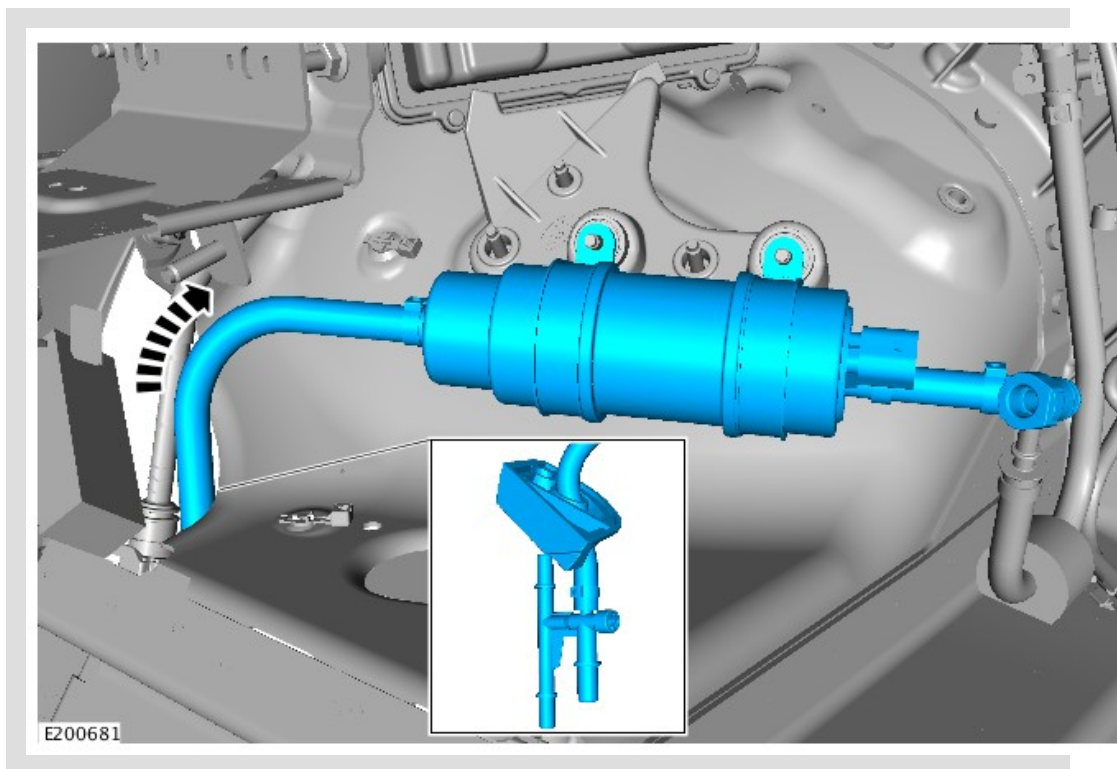

Remove the auxiliary fuel pump.

INSTALLATION

1.

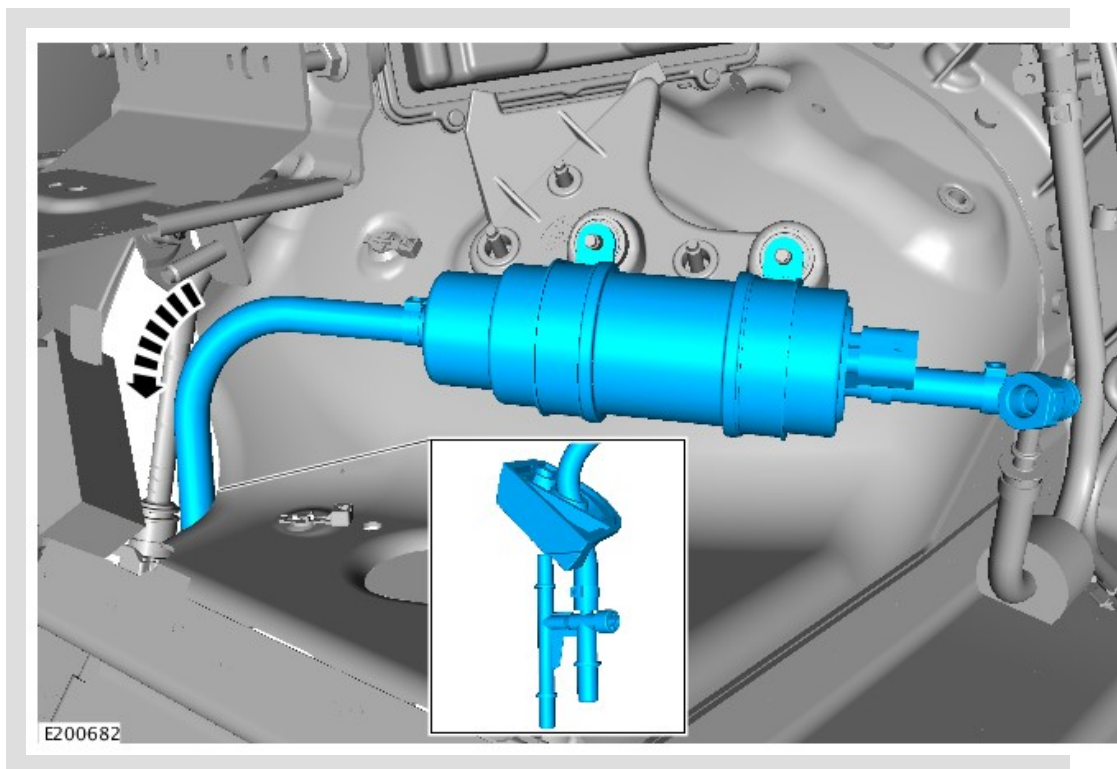

Install the auxiliary fuel pump.

2.
 - Install the auxiliary fuel pump nuts.
 - *Torque: 10 Nm*

3. Reconnect the fuel pipe clip.

4. Install the secondary bulkhead panel.
Refer to: [Secondary Bulkhead Left Panel](#) (501-02 Front End Body Panels, Removal and Installation).

5. Install the ECM.
Refer to: [Engine Control Module](#) (303-14E Electronic Engine Controls - TDV8 4.4L Diesel, Removal and Installation).

6. Raise the vehicle.

7. Reconnect the fuel pipe clips.

-
- 8.
- Install the front left fender splash shield.
 - Connect the tire pressure monitoring system front antenna electrical connector.
 - Install the clips.

9. Install the fender splash shield screws.

10. Install the front left wheel.
Refer to: [Wheel and Tire - TDV6 3.0L Diesel - Gen 2/GTDi 2.0L Petrol/TDV6 3.0L Diesel - Gen 1.5/TDV8 4.4L Diesel/V6 S/C 3.0L Petrol /V8 N/A 5.0L Petrol /V8 S/C 5.0L Petrol](#) (204-04 Wheels and Tires, Removal and Installation).

11. Connect the battery ground cable.
Refer to: [Specifications](#) (414-00 Battery and Charging System - General Information, Specifications).