

PUBLISHED: 07-JUN-2017
2015.0 RANGE ROVER (LG), 310-01

FUEL TANK AND LINES - TDV8 4.4L DIESEL

FUEL COOLER (G1509642)

19.55.04	DOOR - FUEL FILLER - RENEW	ALL DERIVATIVES	0.1	USED WITHINS
----------	-------------------------------------	--------------------	-----	-----------------

REMOVAL

**WARNINGS:**

- The spilling of fuel is unavoidable during this operation. Ensure that all necessary precautions are taken to prevent fire and explosion.
- Do not smoke or carry lighted tobacco or open flame of any type when working on or near any fuel related components. Highly flammable vapors are always present and may ignite. Failure to follow these instructions may result in personal injury.
- Do not carry or operate cellular phones when working on or near any fuel related components. Highly flammable vapors are always present and may ignite. Failure to follow these instructions may result in personal injury.
- Do not carry or operate cellular phones when working on or near any fuel related components. Highly flammable vapors are always present and may ignite. Failure to follow these instructions may result in personal injury.

**CAUTIONS:**

- Be prepared to collect escaping fuel.
- Before disconnecting or removing components, ensure the area around the joint faces and connections are clean. Plug open connections to prevent contamination.


**NOTE:**

Removal steps in this procedure may contain installation details.

1. Disconnect the battery ground cable.


Refer to: [Specifications](#) (414-00 Battery and Charging System - General Information, Specifications).

2. Refer to: [Left Air Cleaner](#) (303-12E Intake Air Distribution and Filtering - TDV8 4.4L Diesel, Removal and Installation).

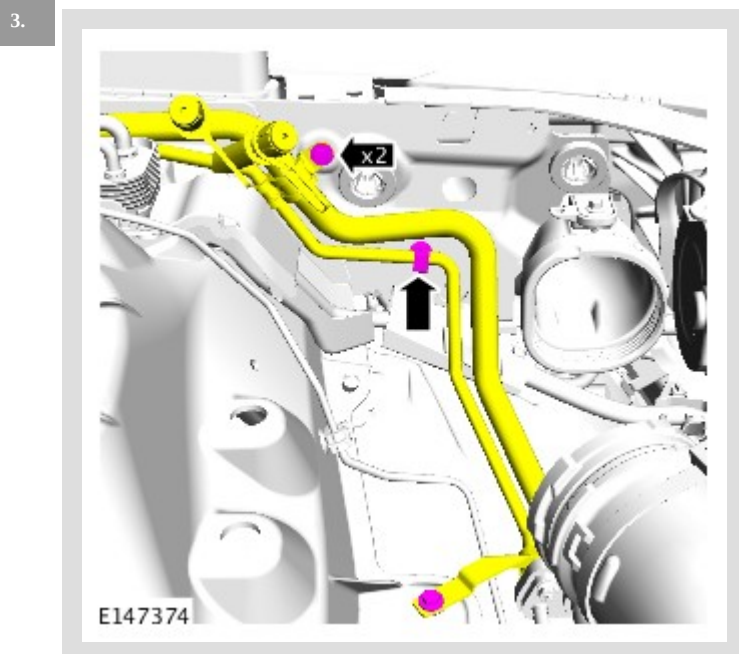

Torque: 10 Nm

- 4.

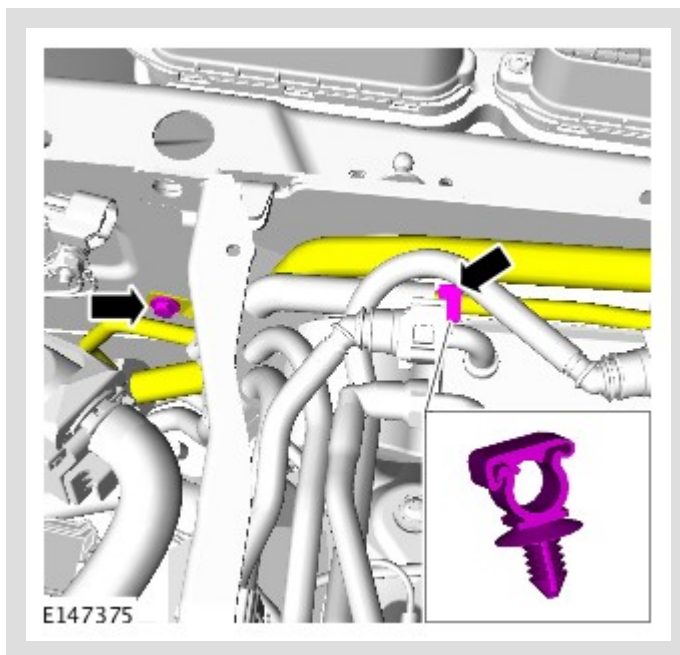


Torque: 10 Nm

5.

ⓘ CAUTIONS:

- Be prepared to collect escaping coolant.
- Before disconnecting any components, make sure the area is clean and free from foreign material. When disconnected all openings must be sealed.

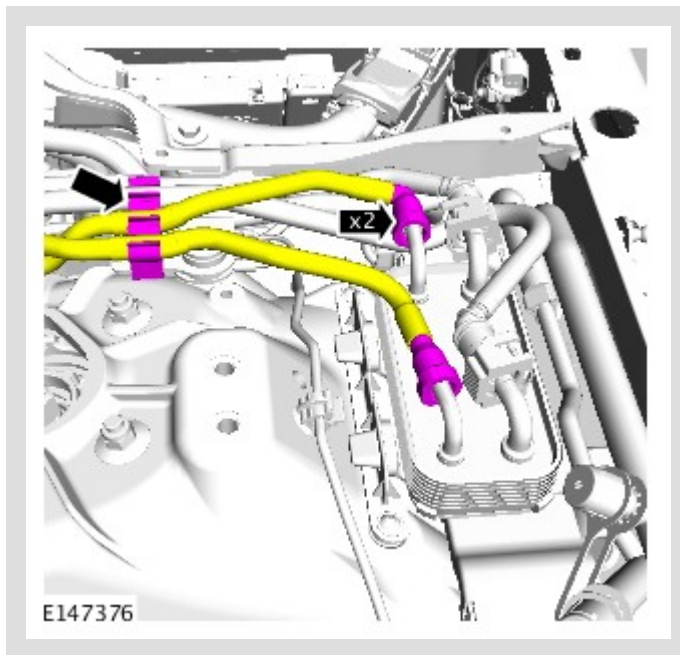


6.




CAUTIONS:

- Before disconnecting any components, make sure the area is clean and free from foreign material. When disconnected all openings must be sealed.
- Be prepared to collect escaping fuel.

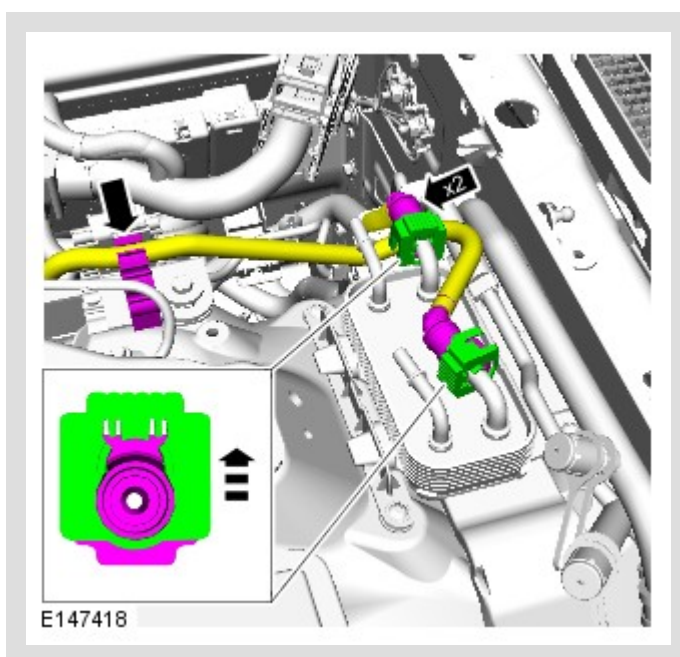

7.

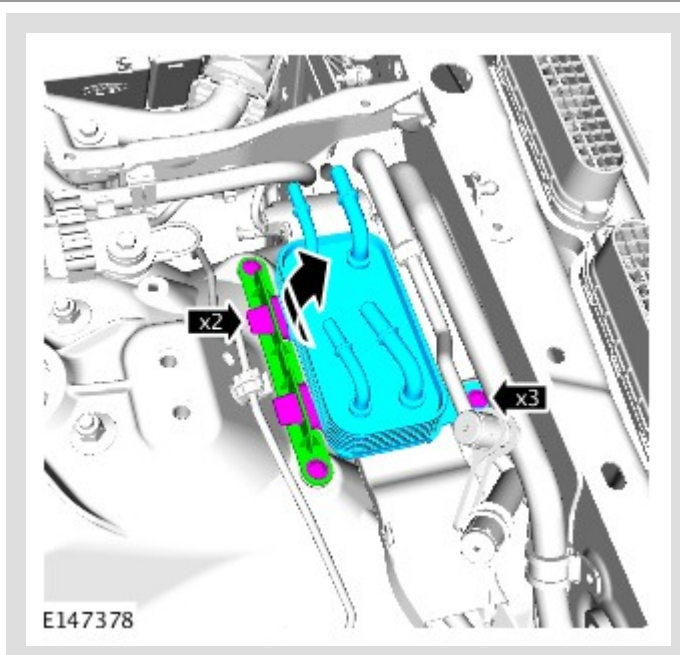

Torque: 10 Nm

INSTALLATION

1. To install reverse the removal procedure.