

PUBLISHED: 25-JUL-2017
2015.0 RANGE ROVER (LG), 310-01

FUEL TANK AND LINES - TDV8 4.4L DIESEL

FUEL TANK FILLER PIPE (G1509645)

REMOVAL AND INSTALLATION

19.55.07	FILLER PIPE - FUEL TANK - RENEW	4400 CC, TDV8, WITH PARTICULATE FILTER	2.9	USED WITHINS	
----------	---	---	-----	-----------------	--

GENERAL EQUIPMENT

EQUIPMENT NAME
Transmission jack

PART(S)

STEP	REPLACE PART / RENEW PART	PART NAME	
Installation Step 2	Renew Part	Rear subframe to body bolts	1
Installation Step 8	Renew Part	Shock absorber nut and bolt	1

REMOVAL



WARNINGS:

- The spilling of fuel is unavoidable during this operation. Ensure that all necessary precautions are taken to prevent fire and explosion.
- Do not carry or operate cellular phones when working on or near any fuel related components. Highly flammable vapors are always present and may ignite. Failure to follow these instructions may result in personal injury.
- Do not smoke or carry ignited tobacco or open flame of any type when working on or near any fuel related components. Highly flammable vapors are always present and may ignite. Failure to follow these instructions may result in personal injury.
- If fuel contacts the eyes, flush the eyes with cold water or eyewash solution and seek immediate medical attention.
- Wash hands thoroughly after fuel handling, as prolonged contact may cause irritation. Should irritation develop, seek medical attention.



NOTE:

Removal steps in this procedure may contain installation details.


1.

Refer to: [Petrol and Petrol-Ethanol Fuel Systems Health and Safety Precautions](#) (100-00 General Information, Description and Operation).
Refer to: [Diesel Fuel System Health and Safety Precautions](#) (100-00 General Information, Description and Operation).

2.

Using the Land Rover approved diagnostic system, depressurize the air suspension.
Refer to: [Air Suspension System Depressurize and Pressurize](#) (204-05 Vehicle Dynamic Suspension, General Procedures).

3.

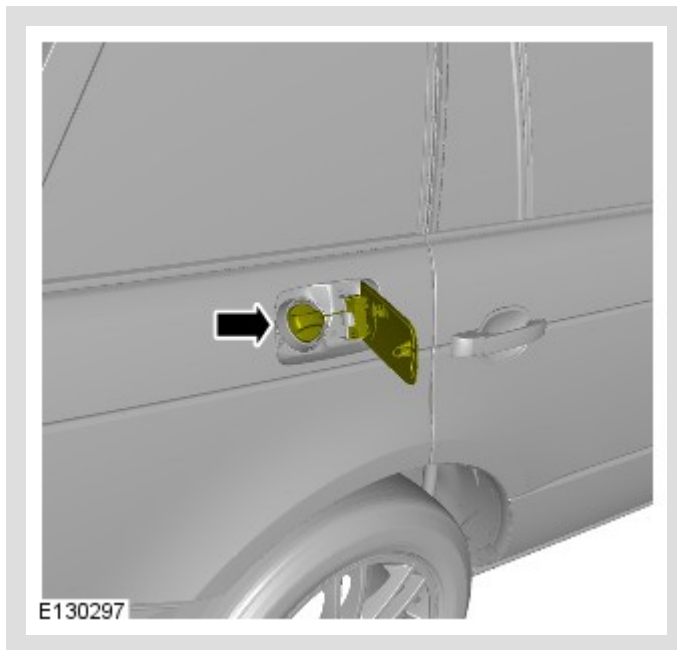

Remove the fuel filler cap.

4.




Remove the trim around the fuel filler pipe.

-
5. Raise and support the vehicle on a suitable 2 post lift.
Refer to: [Lifting](#) (100-02 Jacking and Lifting, Description and Operation).


 6. Remove the rear road wheels.
Refer to: [Wheel and Tire - TDV6 3.0L Diesel - Gen 2/GTDi 2.0L Petrol/TDV6 3.0L Diesel - Gen 1.5/TDV8 4.4L Diesel/V6 S/C 3.0L Petrol /V8 N/A 5.0L Petrol /V8 S/C 5.0L Petrol](#) (204-04 Wheels and Tires, Removal and Installation).

 7. Remove the right rear wheel arch liner.
Refer to: [Rear Wheel Arch Liner](#) (501-08 Exterior Trim and Ornamentation, Removal and Installation).

 - 8.

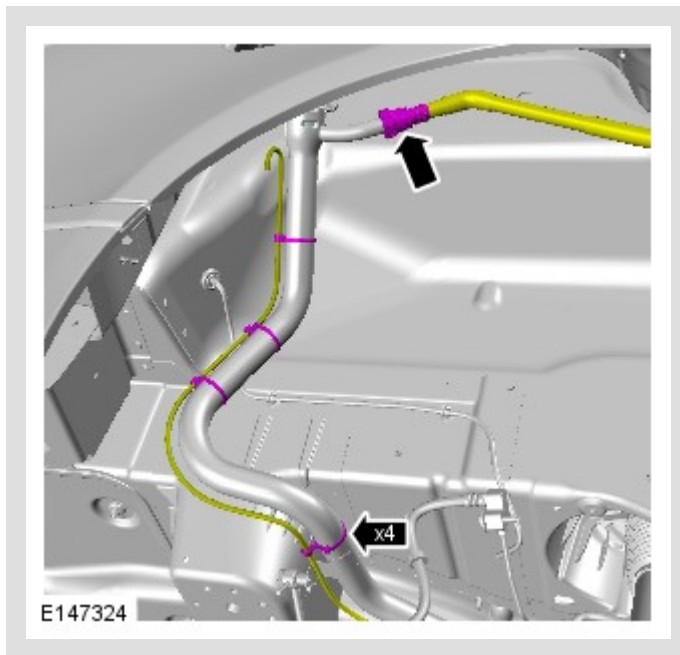

- Release the breather hose from the fuel filler pipe.
- Release the evaporative emission cannister hose.

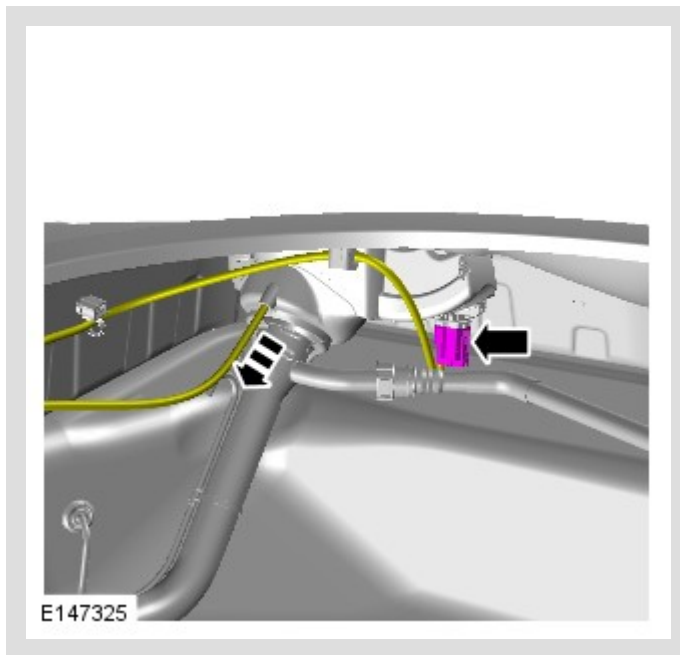


Disconnect the electrical connector.

10.


⚠ CAUTION:

Care must be taken not to damage the body paint work.

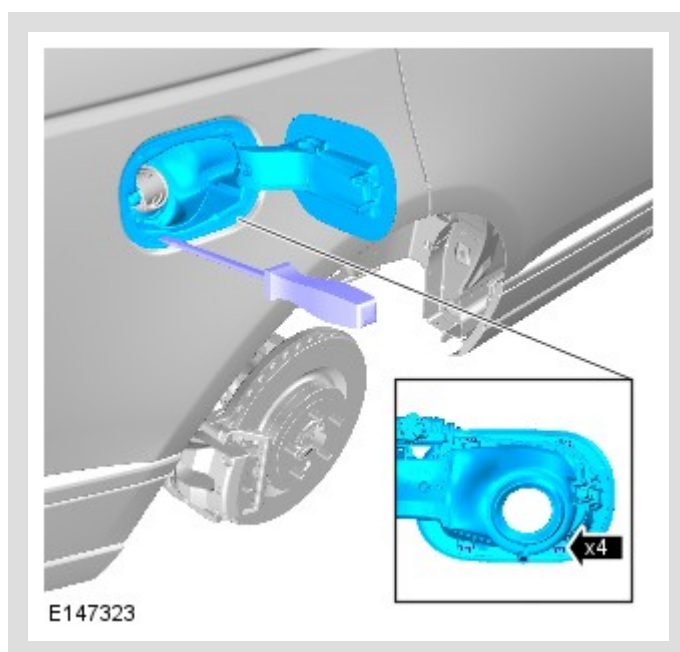

Remove the fuel filler flap assembly.

11.

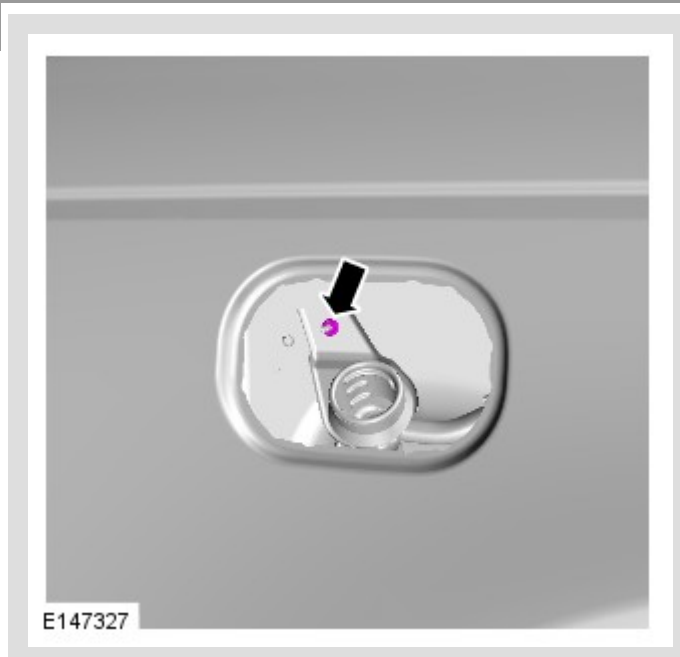


Remove the nut from the fuel filler pipe.

12.



NOTE:

Repeat this step for the other side.

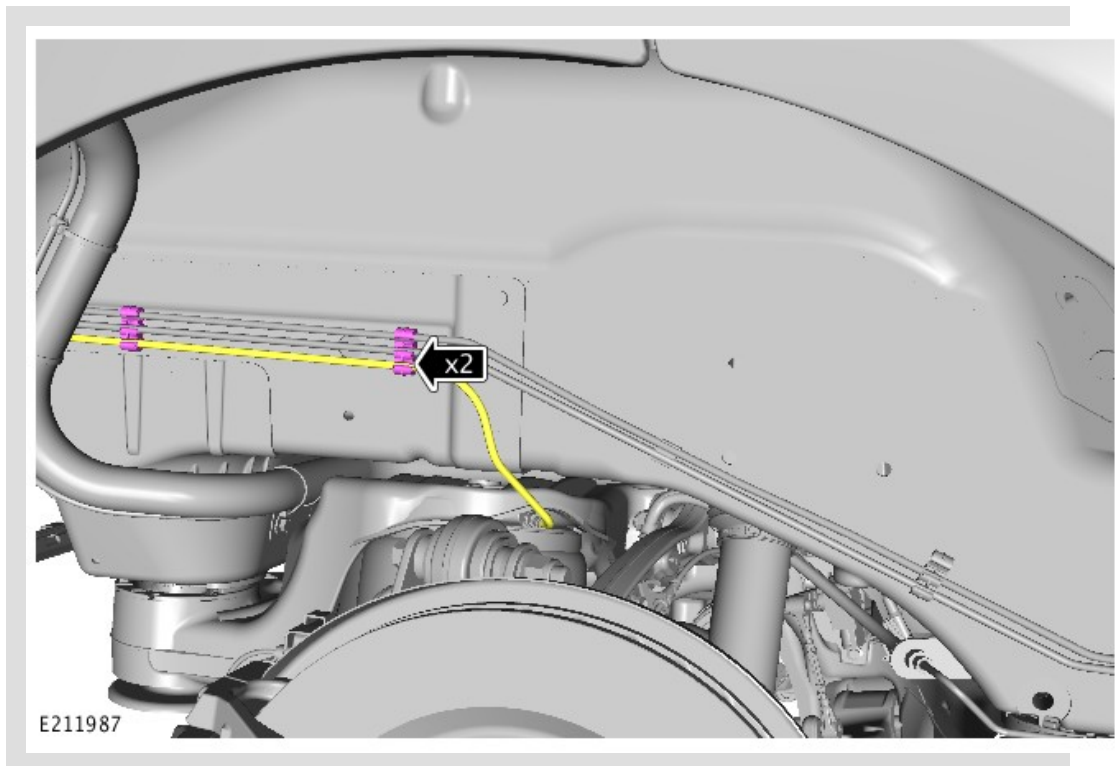

Release the air suspension hoses from the body.

13.




CAUTION:

Make sure to support the lower arm with suitable axle stands.



NOTE:

Repeat this step for the other side.

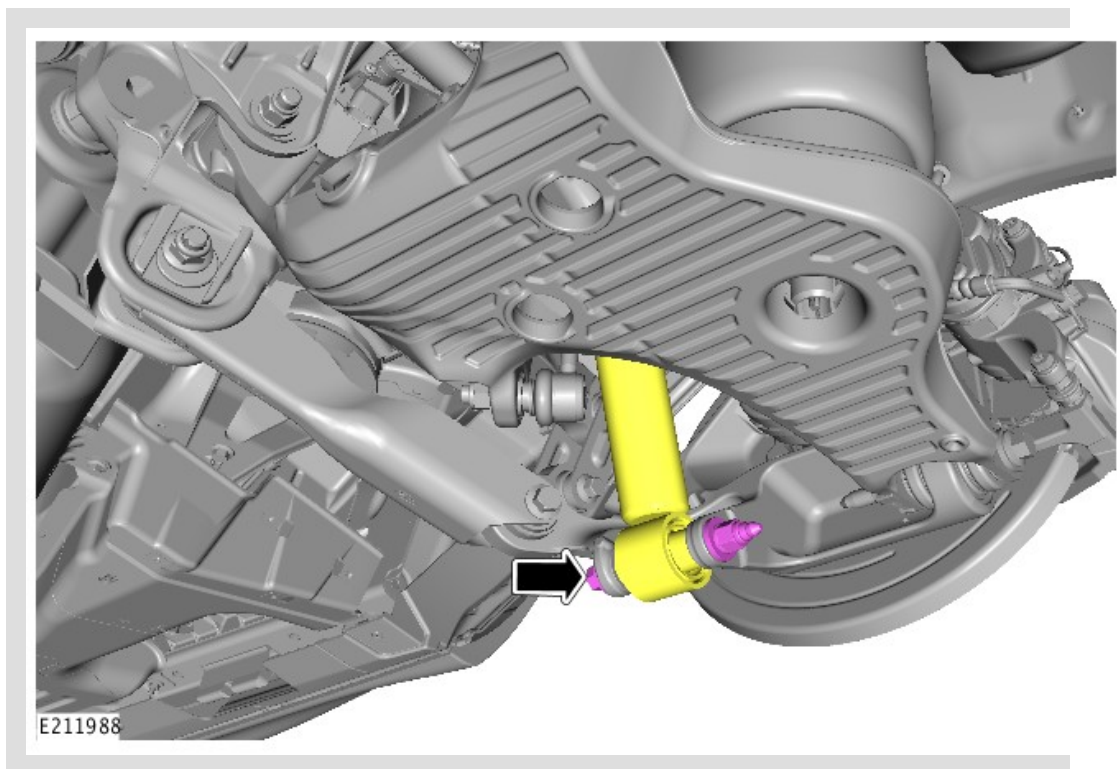

Remove and discard the nut and bolt.

14. Remove the driveshaft.

Refer to: [Rear Driveshaft - TDV6 3.0L Diesel - Gen 2/TDV6 3.0L Diesel - Gen 1.5](#) (205-01 Driveshaft, Removal and Installation).


Refer to: [Rear Driveshaft - SDV6 3.0L Diesel - Hybrid Electric Vehicle](#) (205-01 Driveshaft, Removal and Installation).

Refer to: [Rear Driveshaft - TDV8 4.4L Diesel](#) (205-01 Driveshaft, Removal and Installation).

Refer to: [Rear Driveshaft - V6 S/C 3.0L Petrol /V8 N/A 5.0L Petrol/V8 S/C 5.0 L Petrol](#) (205-01 Driveshaft, Removal and Installation).

Refer to: [Rear Driveshaft - GTDi 2.0L Petrol](#) (205-01 Driveshaft, Removal and Installation).

15.

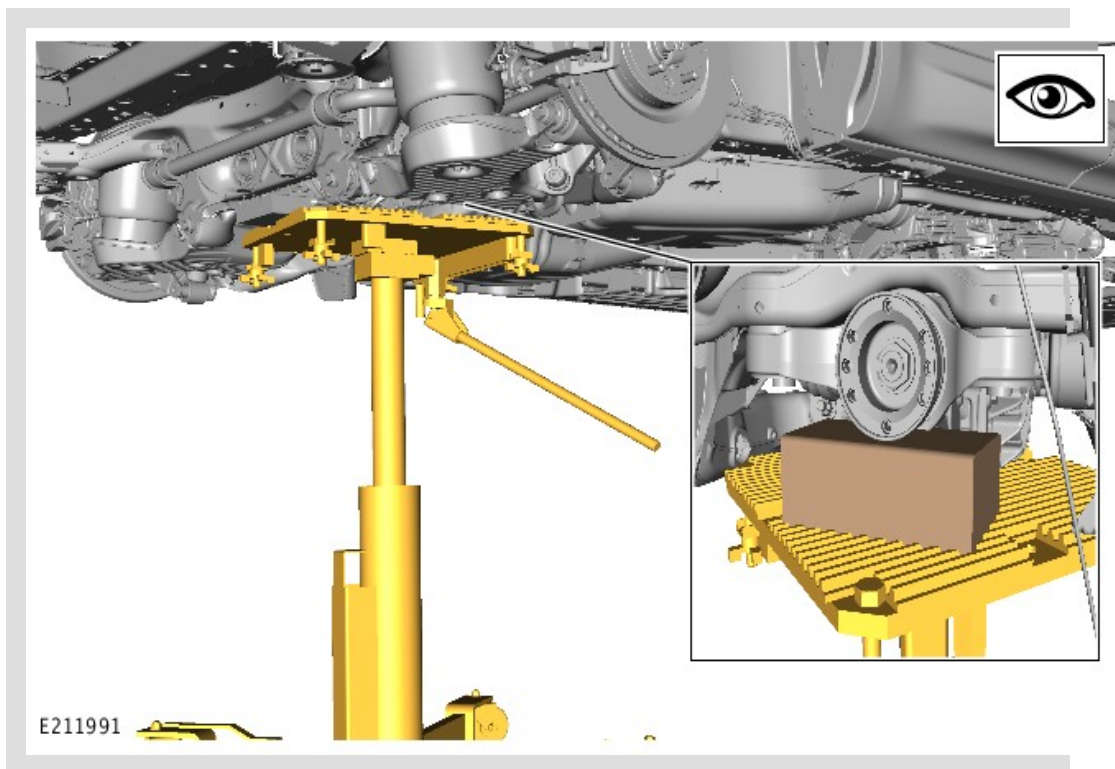


- Position a suitable transmission jack under the rear subframe assembly.
General Equipment: [Transmission jack](#)
- Support the rear differential with a suitable block.

16.



NOTE:

Repeat this step for the other side.

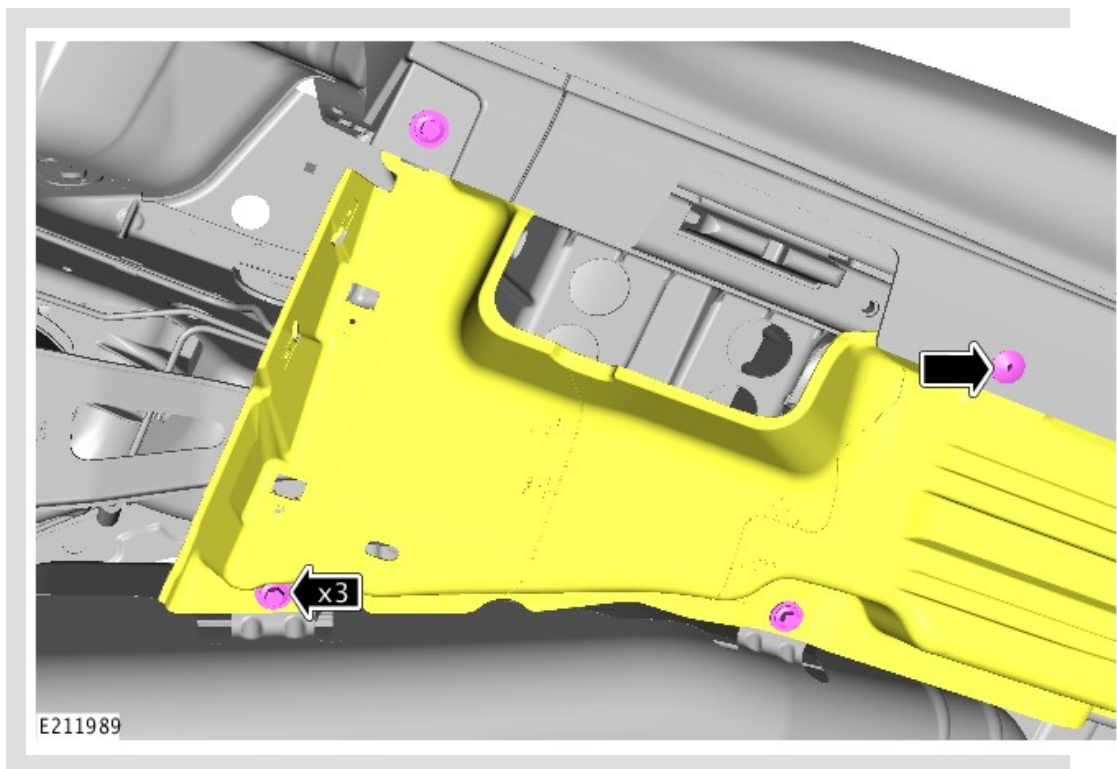


Remove the bolts and the clip .

17.



NOTE:

Repeat this step for the other side.

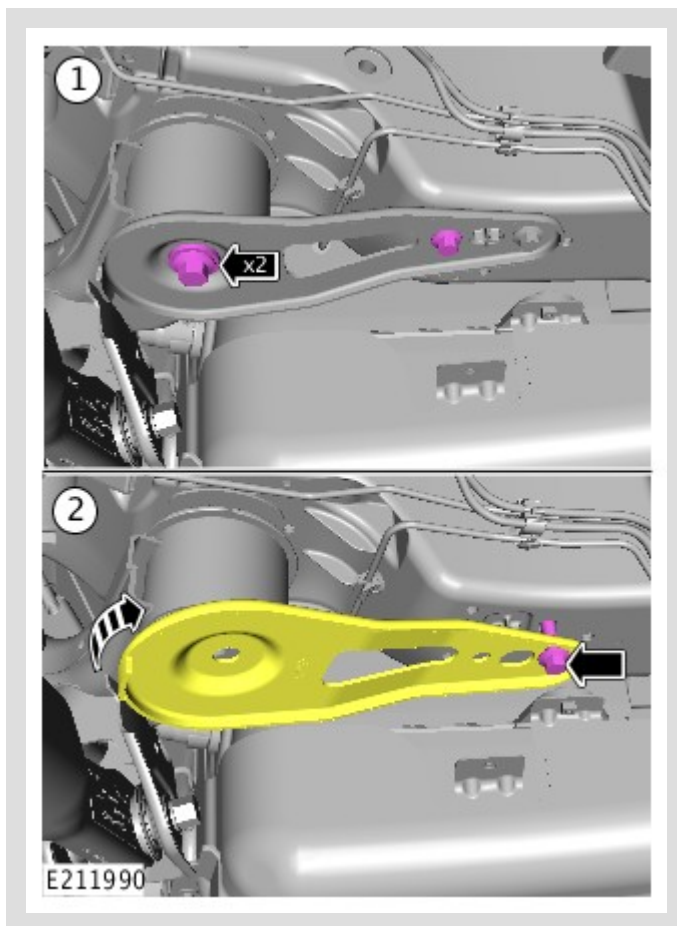


- Remove and discard the rear subframe bolts.
- Remove the support bracket bolts.
- Loosen the remaining support bracket bolt and move clear of the rear subframe.

18.



WARNING:

Make sure the rear subframe assembly is adequately supported.

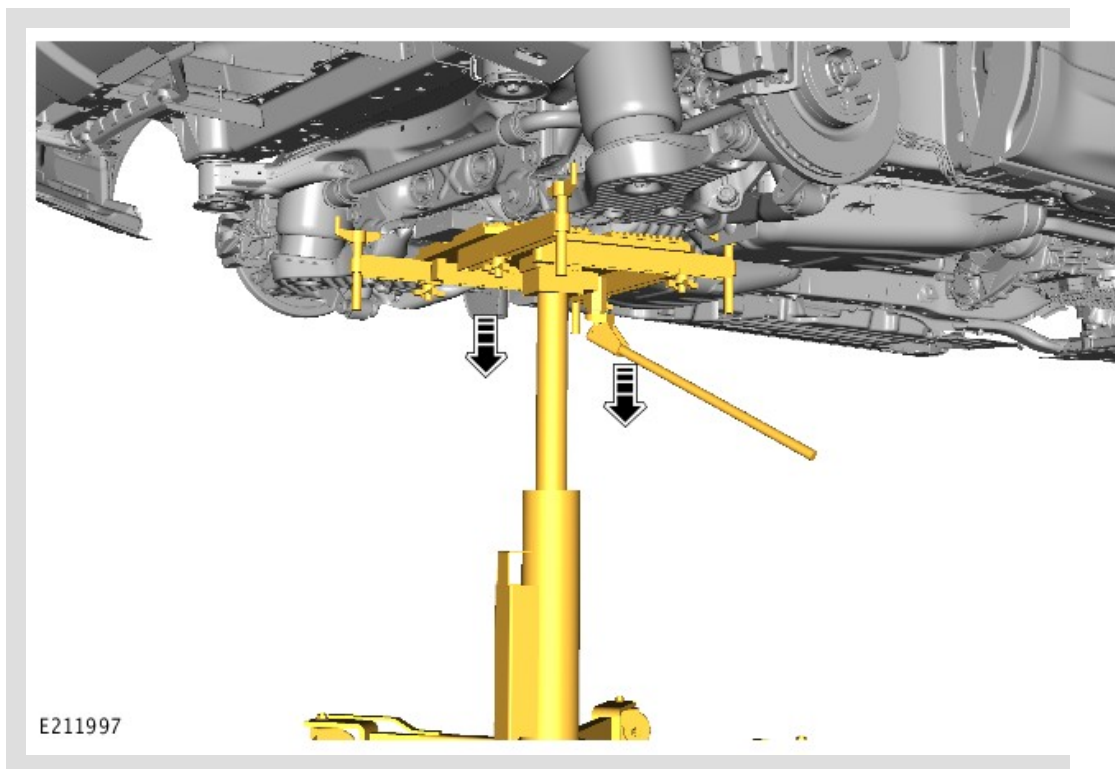

- Lower the transmission jack **slowly** .
- The rear subframe will lower from the front.

19.




WARNING:

Make sure the rear subframe assembly is adequately supported.



NOTE:

Repeat this step for the other side.

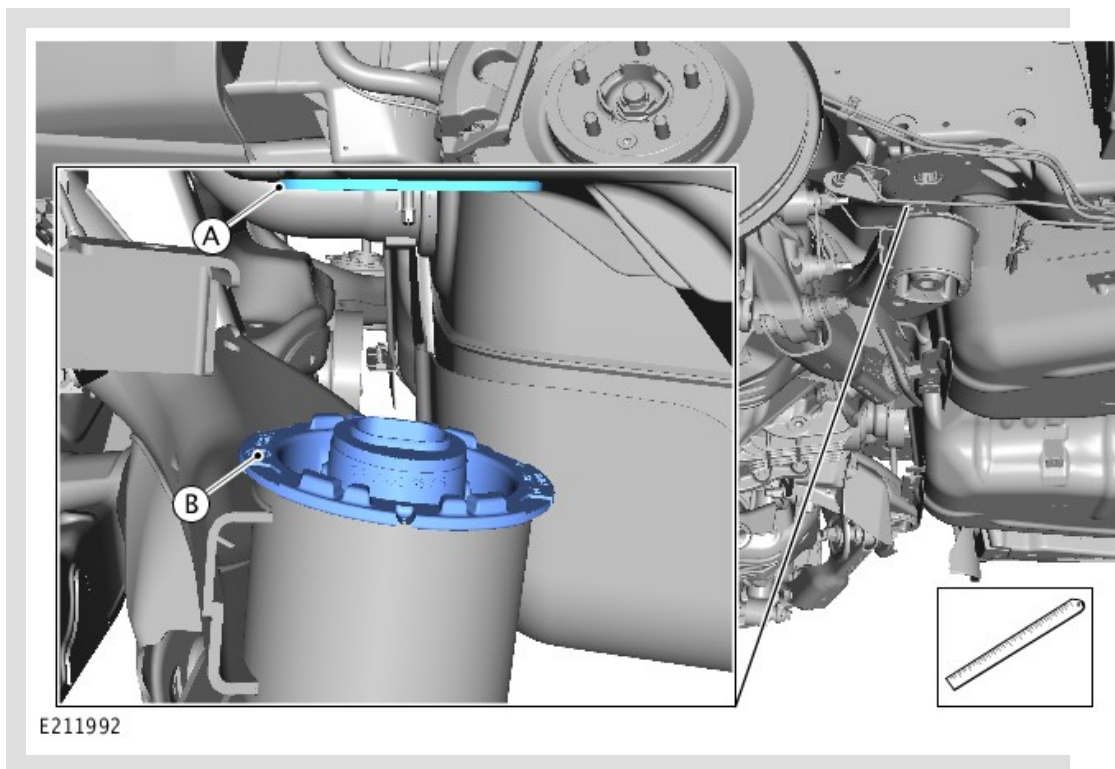

- Measure the distance between **point A** and **point B** . The distance **must not exceed 110mm** .
- If the distance is greater than 110mm **the transmission jack must be raised** .

20.



WARNING:

Make sure the rear subframe assembly is adequately supported.




CAUTION:

The subframe must not come in to contact with the bush cups as highlighted in the illustration.



NOTE:

Repeat this step for the other side.

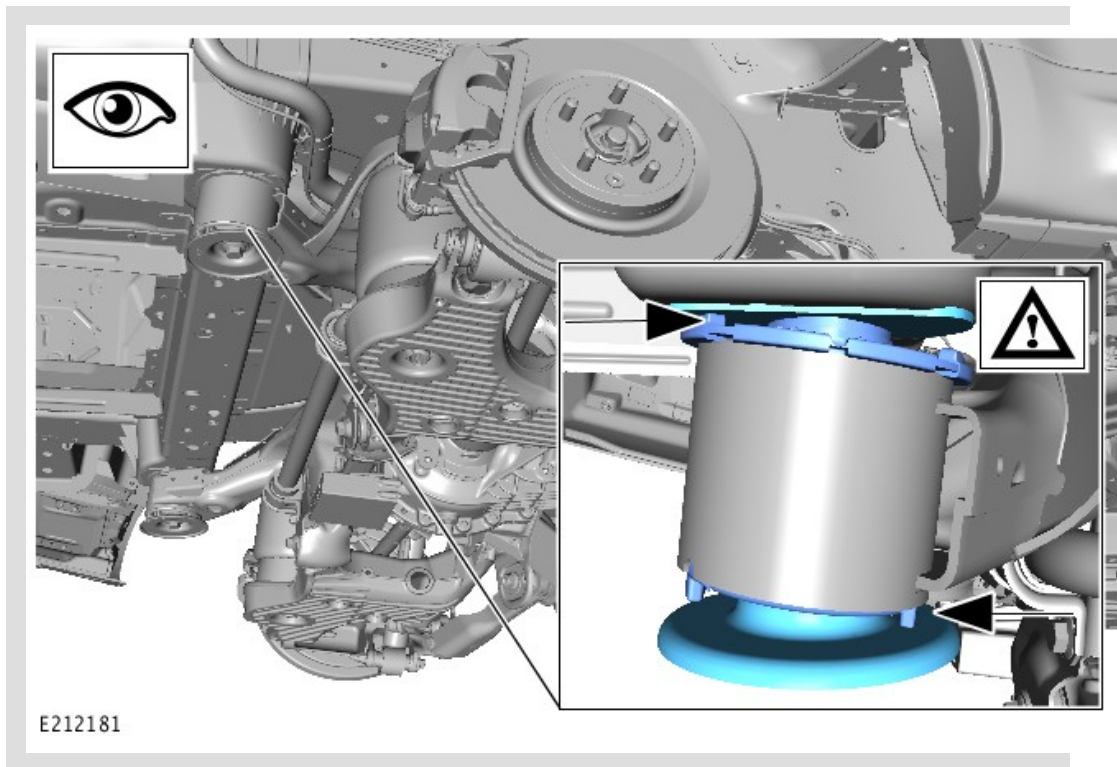


- Check for contact of the rear subframe and the rear subframe bush cups.
- If contact has occurred **the transmission jack must be raised** .

21.



WARNINGS:

- Make sure the rear subframe assembly is adequately supported.
- Be prepared to collect escaping fuel.

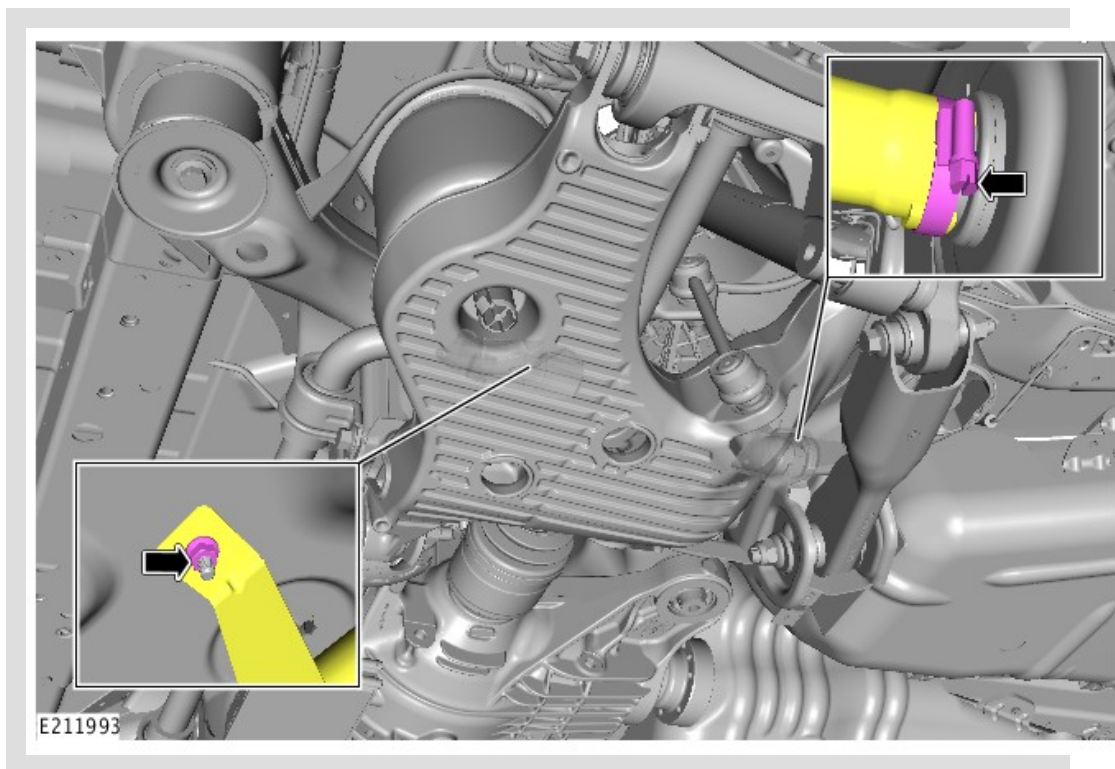


- Remove the nut.
- Remove the clip and release the fuel filler pipe from the fuel tank.

22.




WARNING:

Make sure the rear subframe assembly is adequately supported.

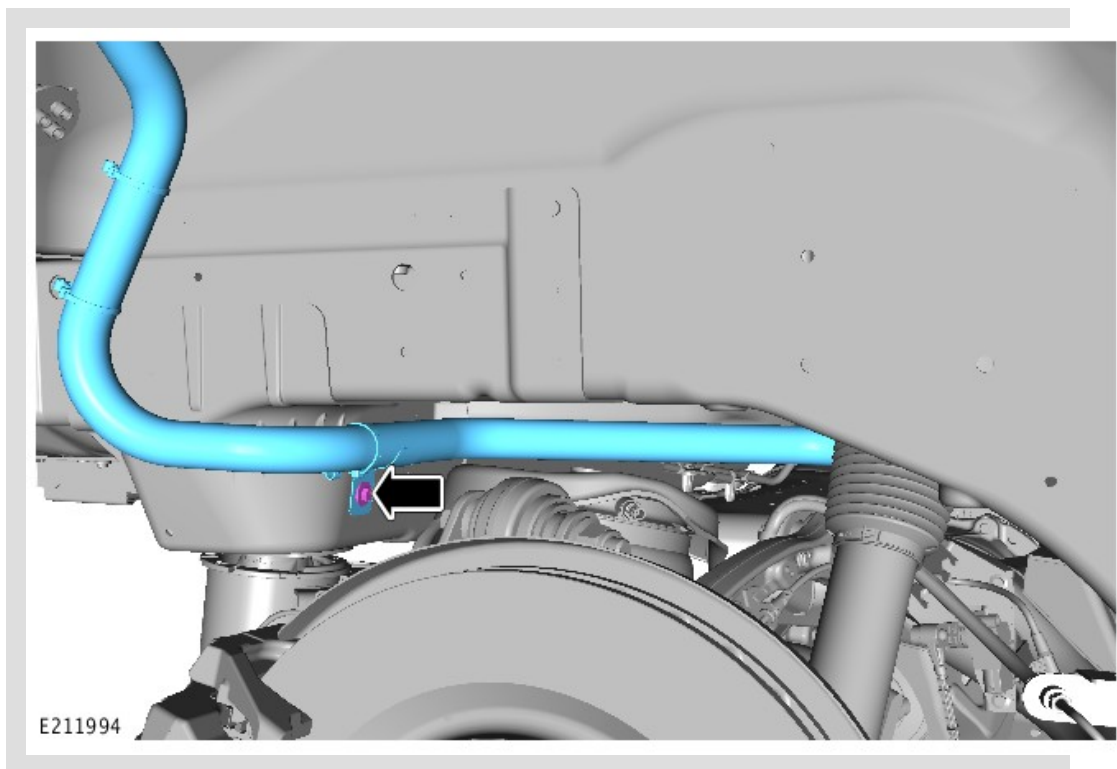

Remove the bolt.

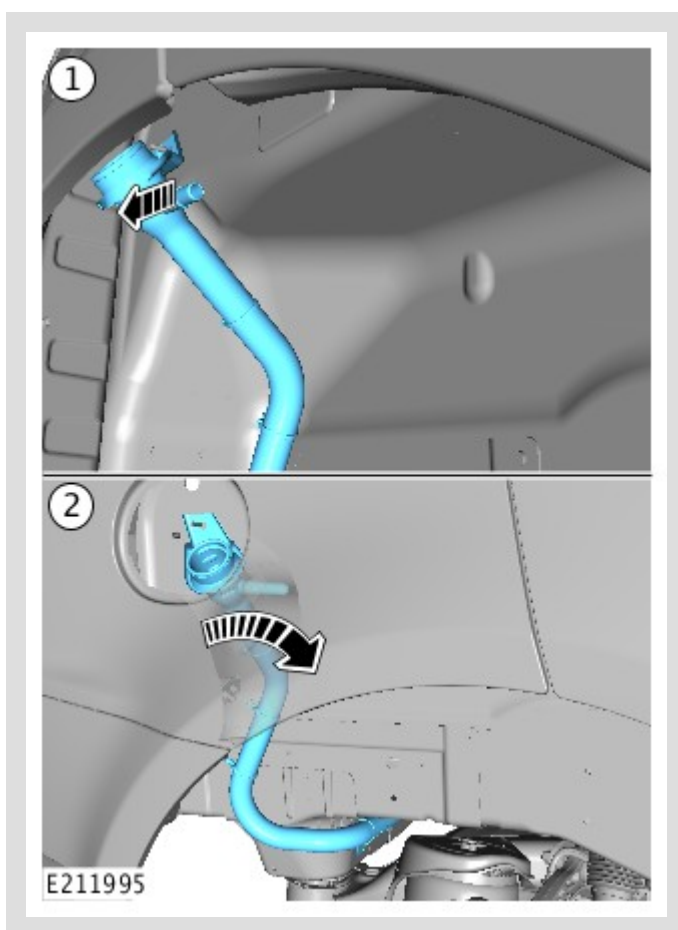

Release the fuel filler pipe from the stud and rotate as highlighted in the illustration.

24.

⚠ CAUTION:

Care must be taken not to damage the body paint work.



Remove the fuel filler pipe from the vehicle.

INSTALLATION

1.



CAUTION:

Care must be taken not to damage the body work.

- Install the fuel filler pipe.
- Tighten the nut and bolt.

Torque: 10 Nm

2.

Install new front subframe bolts finger tight.


Renew Part: [Rear subframe to body bolts : 1](#) .

3.



NOTE:

Repeat this step for the other side.

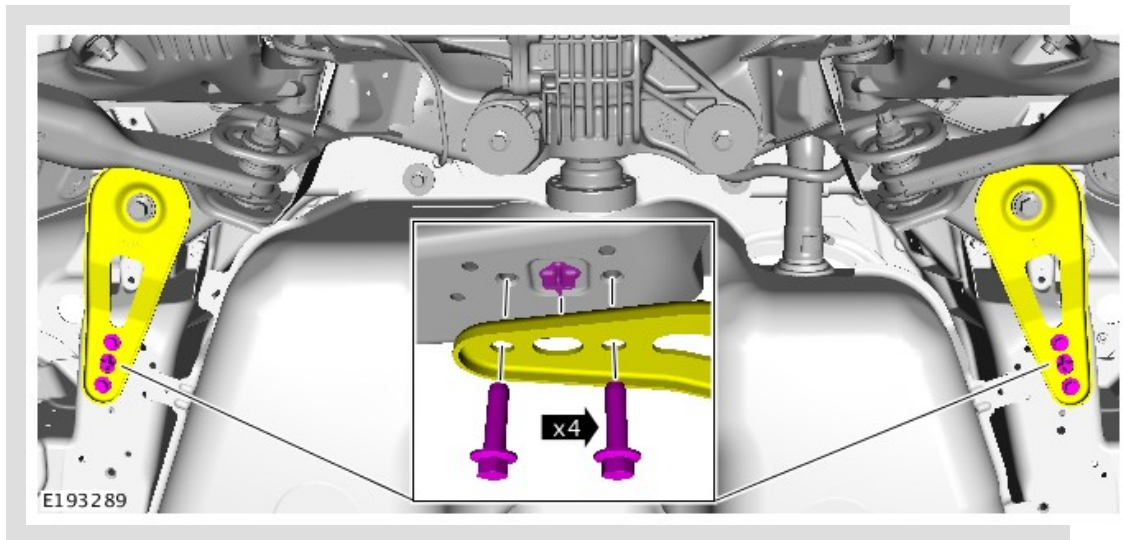

Install the front subframe support bracket bolts.

Torque: 60 Nm

4. Fully tighten the rear subframe bolts.

Torque: 170 Nm


5. Remove the transmission jack.

6.



NOTE:

Repeat this step for the other side.

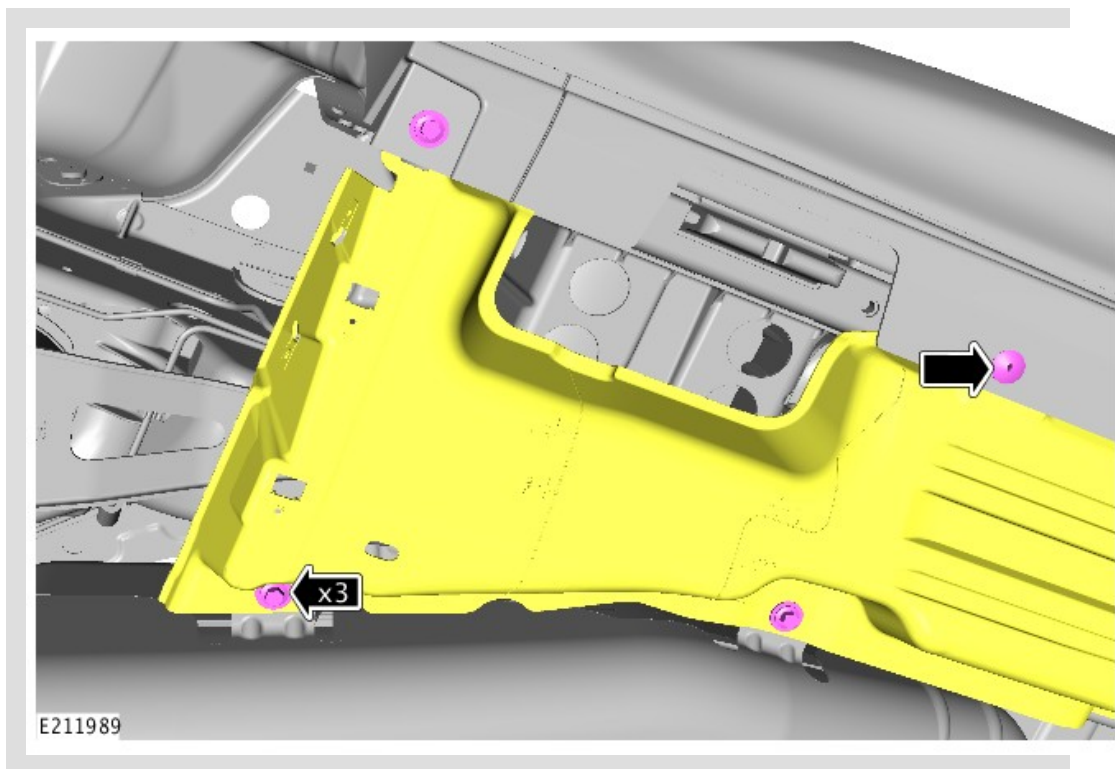

Install the bolts and clip .

7. Install the driveshaft.

Refer to: [Rear Driveshaft - TDV6 3.0L Diesel - Gen 2/TDV6 3.0L Diesel - Gen 1.5](#) (205-01 Driveshaft, Removal and Installation).

Refer to: [Rear Driveshaft - SDV6 3.0L Diesel - Hybrid Electric Vehicle](#) (205-01 Driveshaft, Removal and Installation).

Refer to: [Rear Driveshaft - TDV8 4.4L Diesel](#) (205-01 Driveshaft, Removal and Installation).

Refer to: [Rear Driveshaft - V6 S/C 3.0L Petrol /V8 N/A 5.0L Petrol/V8 S/C 5.0 L Petrol](#) (205-01 Driveshaft, Removal and Installation).

Refer to: [Rear Driveshaft - GTDi 2.0L Petrol](#) (205-01 Driveshaft, Removal and Installation).

8.

⚠ CAUTION:

Nuts and bolts must be tightened with vehicle at normal ride height.



NOTE:

Repeat this step for the other side.

- Support the lower arms with suitable axle stands.
- Install a new nut and bolt to the shock absorber.

Renew Part: [Shock absorber nut and bolt : 1](#) .

Torque:

Stage 1: **100 Nm**

Stage 2: **240°**

9.




NOTE:


Repeat this step for the other side.

Install the air suspension hoses to the body.

10.

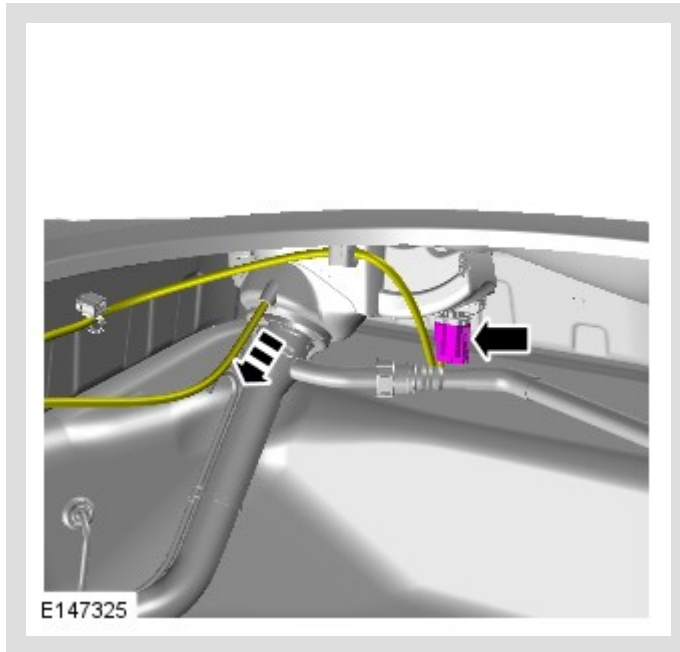

Connect the electrical connector.

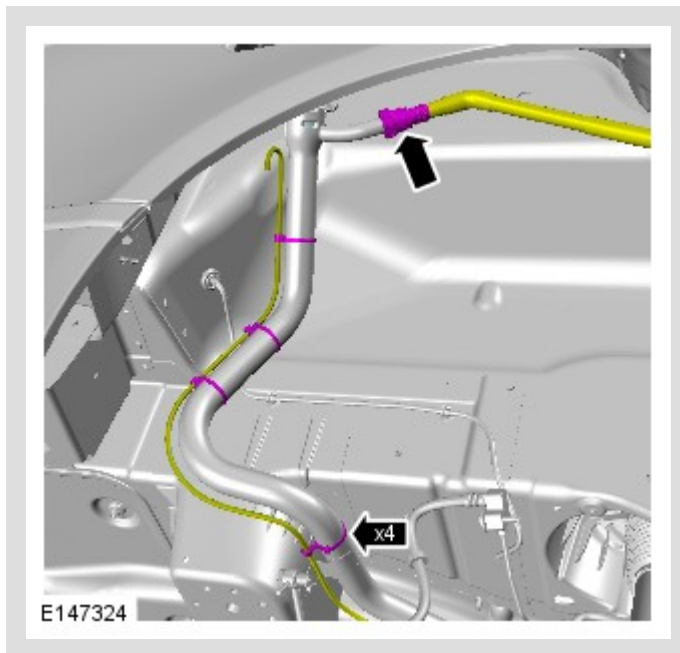

- Install the breather hose on to the fuel filler pipe.
- Install the evaporative emission canister hose.


12. Install the right rear wheel arch liners.

Refer to: [Rear Wheel Arch Liner](#) (501-08 Exterior Trim and Ornamentation, Removal and Installation).

13. Install the rear road wheels.

Refer to: [Wheel and Tire - TDV6 3.0L Diesel - Gen 2/GTDi 2.0L Petrol/TDV6 3.0L Diesel - Gen 1.5/TDV8 4.4L Diesel/V6 S/C 3.0L Petrol /V8 N/A 5.0L Petrol /V8 S/C 5.0L Petrol](#) (204-04 Wheels and Tires, Removal and Installation).

14.

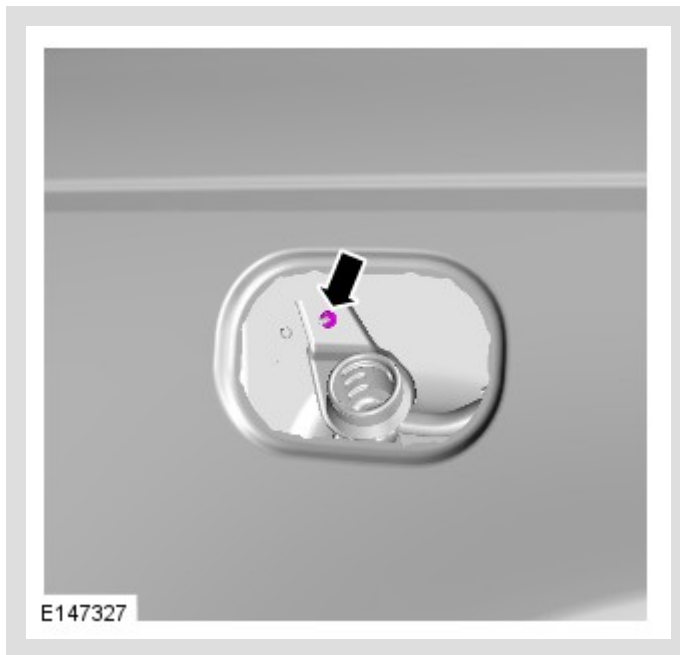

Instal the nut on to the fuel filler pipe.

15.

- Install the fuel filler flap assembly.
- Install the trim around the fuel filler pipe.
- Install the fuel filler cap.

16.

Using the Land Rover approved diagnostic system, pressurize the air suspension.

Refer to: [Air Suspension System Depressurize and Pressurize](#) (204-05 Vehicle Dynamic Suspension, General Procedures).