

PUBLISHED: 05-DEC-2013
2015.0 RANGE ROVER (LG), 310-01

FUEL TANK AND LINES - TDV8 4.4L DIESEL

FUEL TANK (G1676174)

REMOVAL AND INSTALLATION

19.55.01	TANK - RENEW	4400 CC, TDV8, WITH PARTICULATE FILTER	3.6	USED WITHINS
----------	-----------------	---	-----	-----------------

REMOVAL



WARNINGS:

- After carrying out repairs, the fuel system must be checked visually for leaks. Failure to follow this instruction may result in personal injury.
- This procedure involves fuel handling. Be prepared for fuel spillage at all times and always observe fuel handling precautions. Failure to follow these instructions may result in personal injury.
- The spilling of fuel is unavoidable during this operation. Ensure that all necessary precautions are taken to prevent fire and explosion.
- Do not carry or operate cellular phones when working on or near any fuel related components. Highly flammable vapors are always present and may ignite. Failure to follow these instructions may result in personal injury.
- Do not smoke or carry lighted tobacco or open flame of any type when working on or near any fuel related components. Highly flammable vapors are always present and may ignite. Failure to follow these instructions may result in personal injury.
- If fuel contacts the eyes, flush the eyes with cold water or eyewash solution and seek immediate medical attention.
- Wash hands thoroughly after fuel handling, as prolonged contact may cause irritation. Should irritation develop, seek medical attention.



CAUTION:

Make sure the workshop area in which the vehicle is being worked on is as clean and as dust free as possible. Foreign matter from work on clutches, brakes or from machining or welding operations can contaminate the fuel system and may result in later malfunction.

**NOTE:**

Removal steps in this procedure may contain installation details.

All vehicles

1.

**WARNING:**

Make sure to support the vehicle with axle stands.

Raise and support the vehicle.

2.

Refer to: [Diesel Fuel System Health and Safety Precautions](#) (100-00 General Information, Description and Operation).

3.

Disconnect the battery ground cable.

Refer to: [Specifications](#) (414-00 Battery and Charging System - General Information, Specifications).

4.

Refer to: [Fuel Tank Draining](#) (310-00 Fuel System - General Information, General Procedures).

5.

**NOTE:**

Repeat the procedure for the other side.

Refer to: [Rear Door Lower Moulding - Short Wheelbase](#) (501-08 Exterior Trim and Ornamentation, Removal and Installation).

Refer to: [Rear Rocker Panel Moulding - Long Wheelbase](#) (501-08 Exterior Trim and Ornamentation, Removal and Installation).

6.

Refer to: [Rear Driveshaft - TDV6 3.0L Diesel - Gen 2/TDV6 3.0L Diesel - Gen 1.5](#) (205-01 Driveshaft, Removal and Installation).

Refer to: [Rear Driveshaft - SDV6 3.0L Diesel - Hybrid Electric Vehicle](#) (205-01 Driveshaft, Removal and Installation).


Refer to: [Rear Driveshaft - TDV8 4.4L Diesel](#) (205-01 Driveshaft, Removal and Installation).

Short wheelbase

1.
-  **CAUTION:**

LH illustration shown, RH is similar.
-  **NOTE:**

Repeat the procedure for the other side.

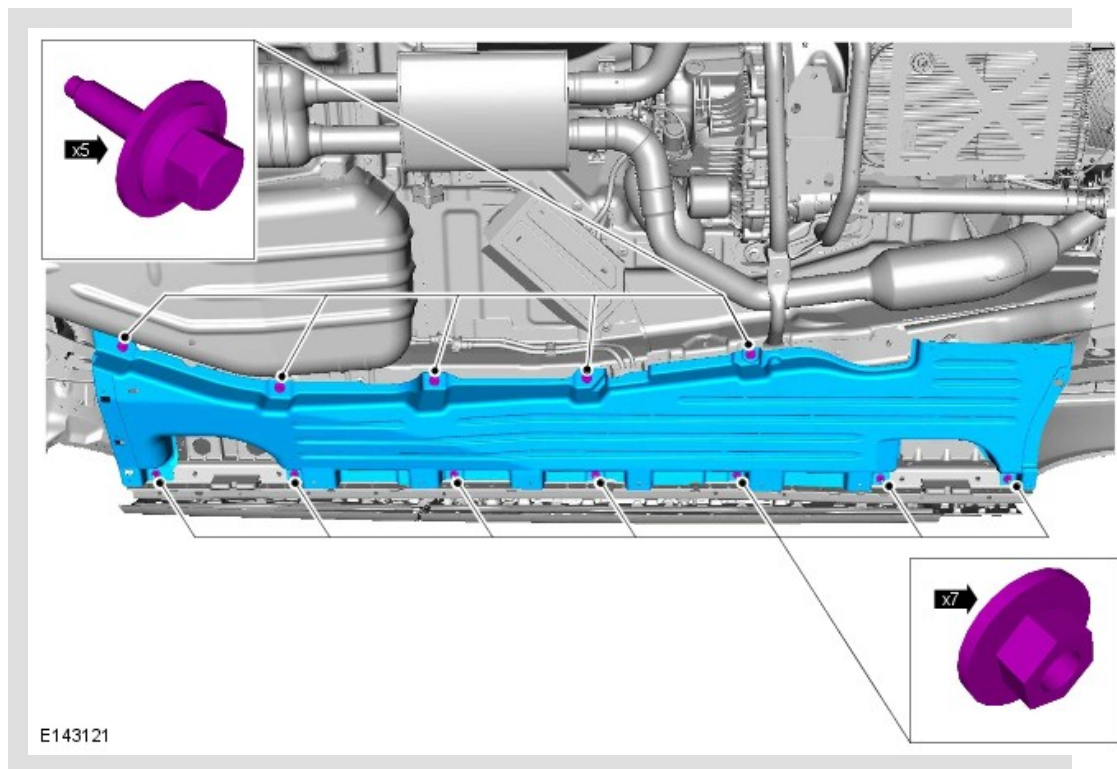

Long wheelbase

1.




CAUTION:

RH illustration shown, LH is similar.



NOTE:

Repeat the procedure for the other side.

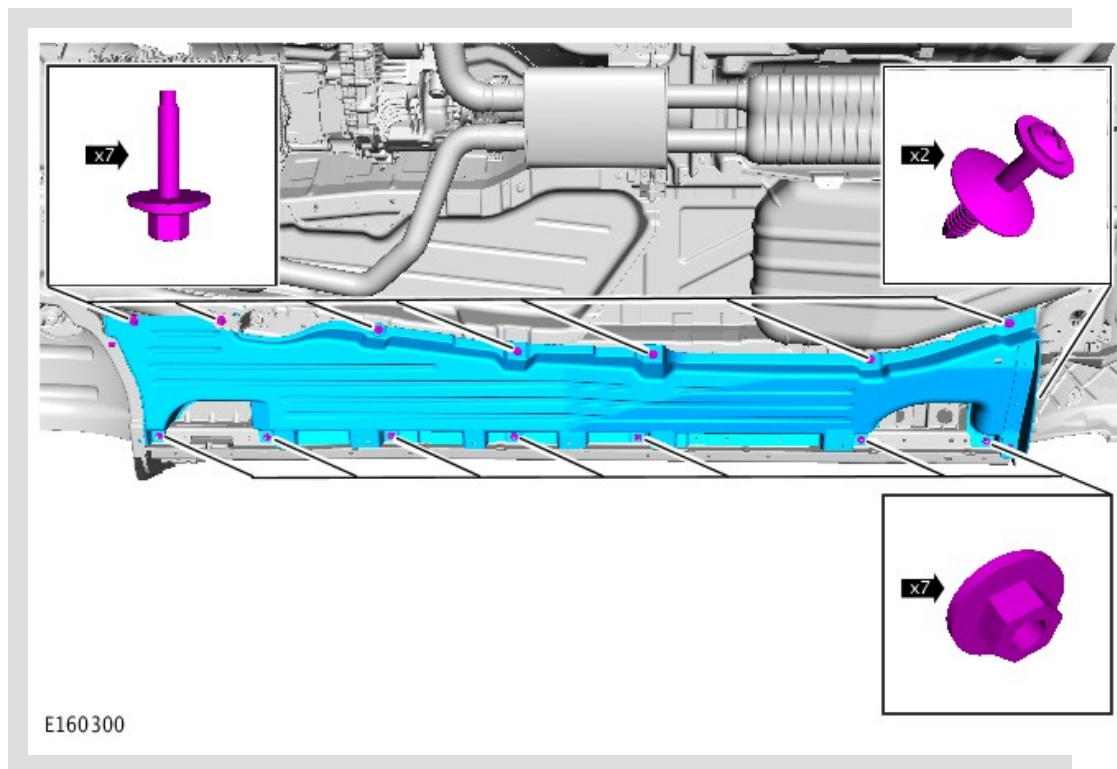


All vehicles

1.

⚠ CAUTION:

Be prepared to collect escaping fuel.

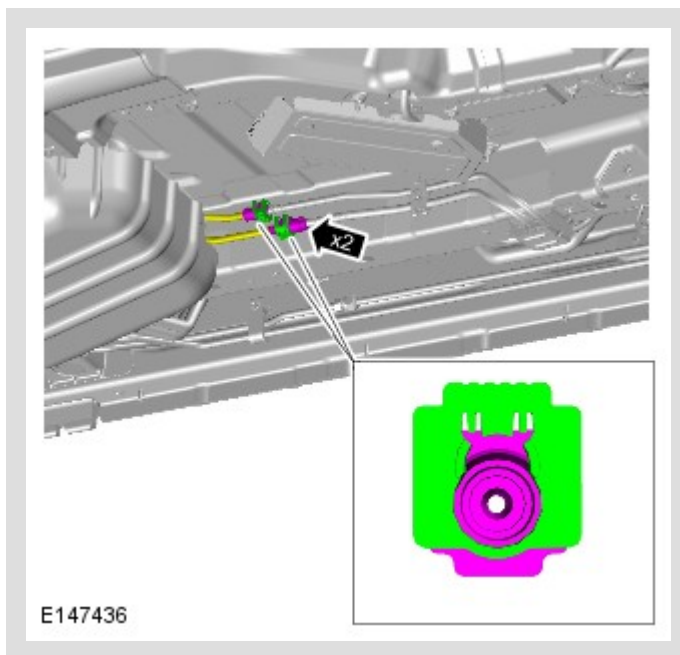


2.



NOTE:

Some variation in the illustrations may occur, but the essential information is always correct.

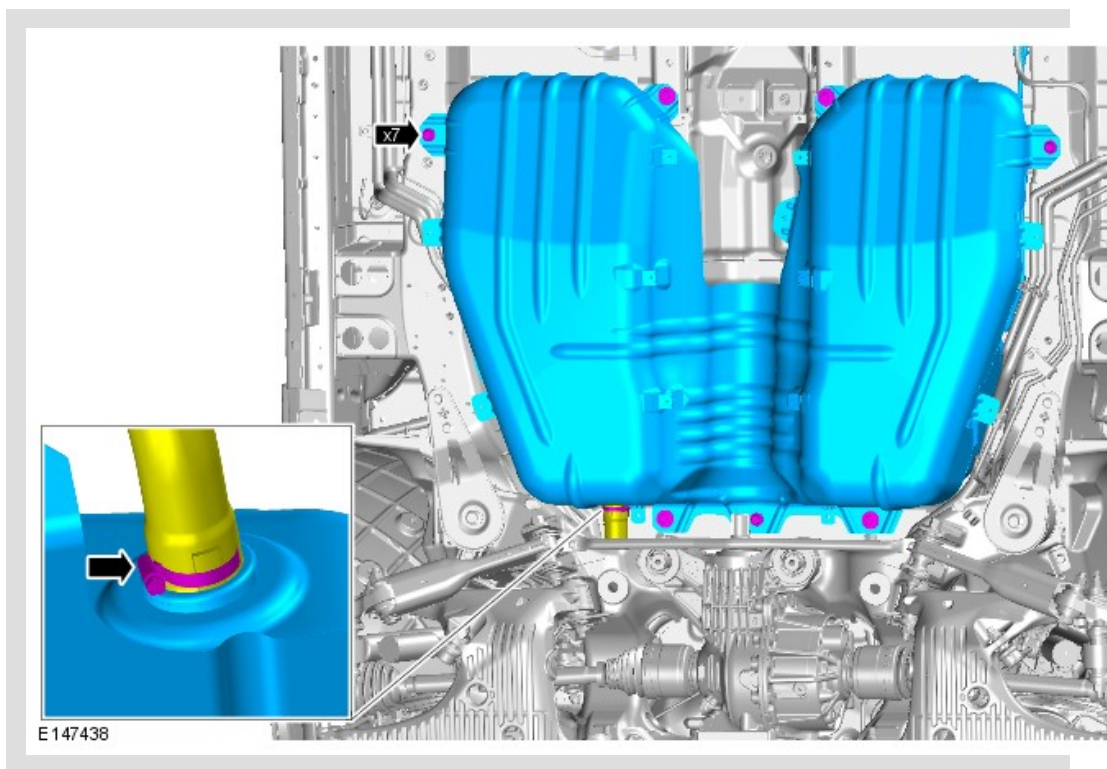

Torque: 45 Nm

3.



NOTE:

Do not disassemble further if the component is removed for access only.





4.



Torque: 10 Nm

5.

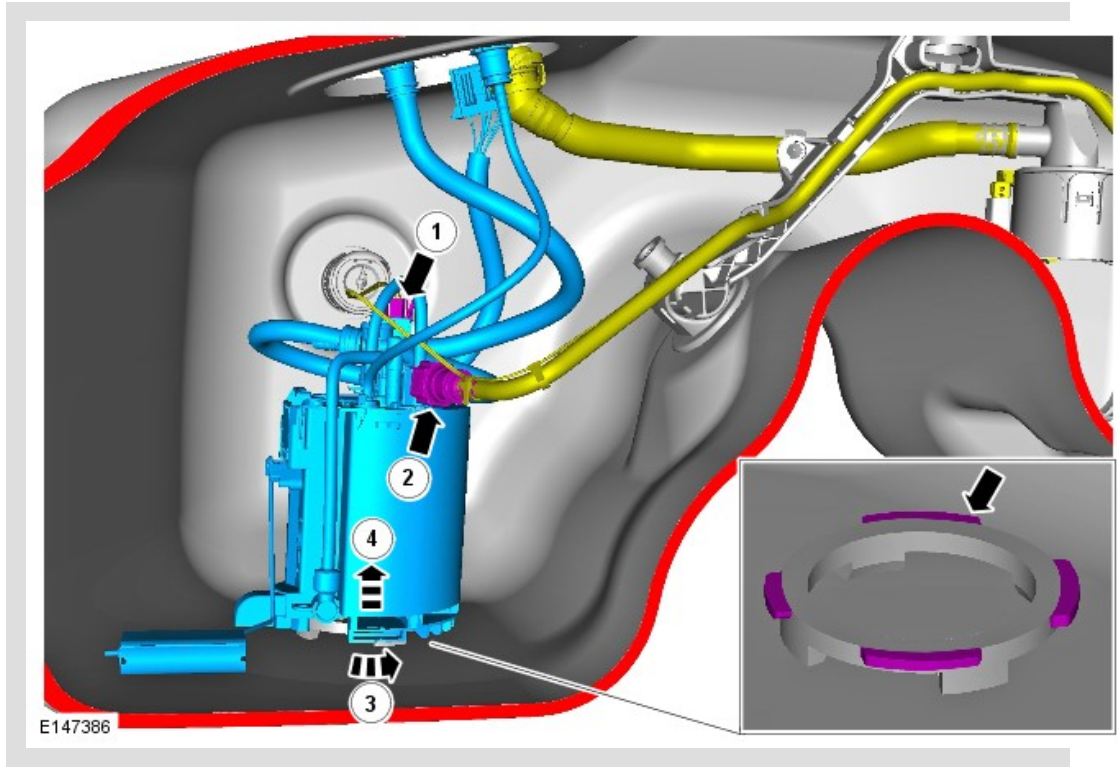

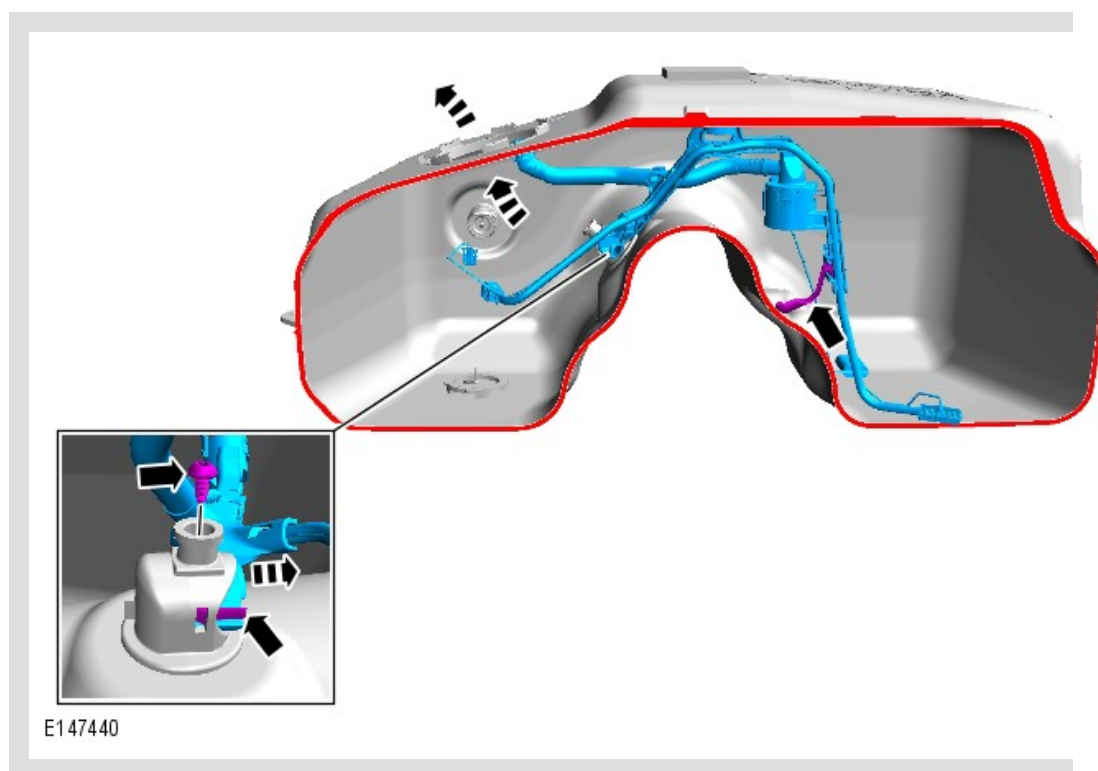

Torque: 7 Nm

INSTALLATION

1. To install, reverse the removal procedure.