


PUBLISHED: 15-MAY-2015  
2014.0 RANGE ROVER (LG), 310-01

FUEL TANK AND LINES - V8 N/A 5.0L PETROL/V8 S/C 5.0L PETROL

# **FUEL FILTER** (G1509662)

## SPECIAL TOOL(S)

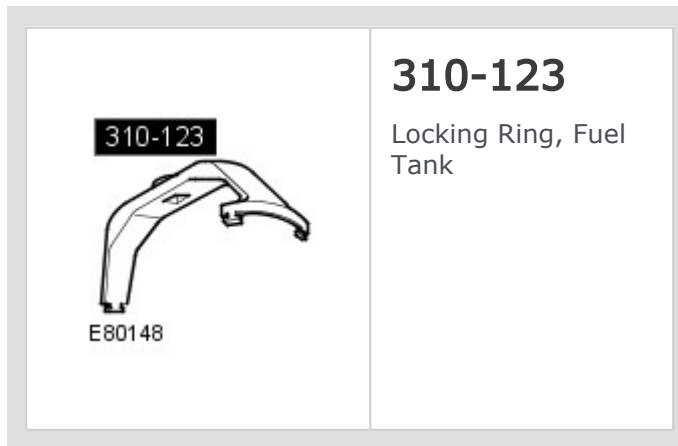

## REMOVAL



### WARNINGS:

- After carrying out repairs, the fuel system must be checked visually for leaks. Failure to follow this instruction may result in personal injury.
- This procedure involves fuel handling. Be prepared for fuel spillage at all times and always observe fuel handling precautions. Failure to follow these instructions may result in personal injury.



### CAUTIONS:

- Always carry out the cleaning process before carrying out any repairs to the fuel injection system components. Failure to follow this instruction may result in foreign matter ingress to the fuel injection system.

- Make sure the workshop area in which the vehicle is being worked on is as clean and as dust free as possible. Foreign matter from work on clutches, brakes or from machining or welding operations can contaminate the fuel system and may result in later malfunction.

 **NOTE:**


Removal steps in this procedure may contain installation details.

All vehicles

1. Refer to: Petrol and Petrol-Ethanol Fuel Systems Health and Safety Precautions (100-00 General Information, Description and Operation).
2. Disconnect the battery ground cable.  
Refer to: Specifications (414-00 Battery and Charging System - General Information, Specifications).
3. Refer to: Fuel System Pressure Release - GTDi 2.0L Petrol/V6 S/C 3.0L Petrol /V8 5.0L Petrol/V8 S/C 5.0L Petrol (310-00 Fuel System - General Information, General Procedures).


4.  **NOTE:**

Some variation in the illustrations may occur, but the essential information is always correct.

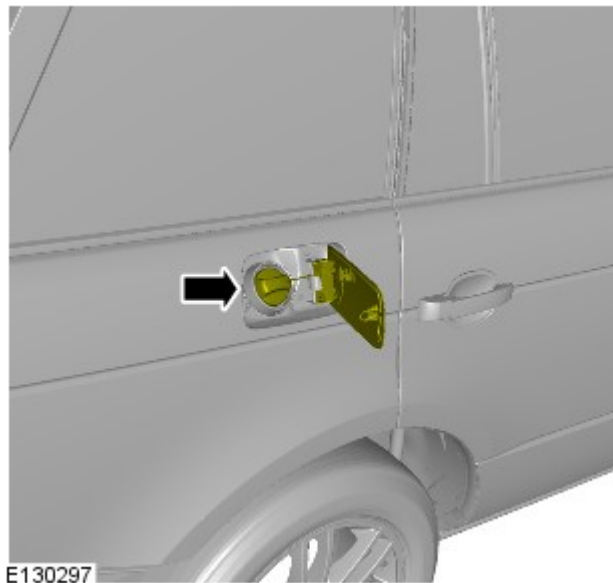


Vehicles without business seats


1.

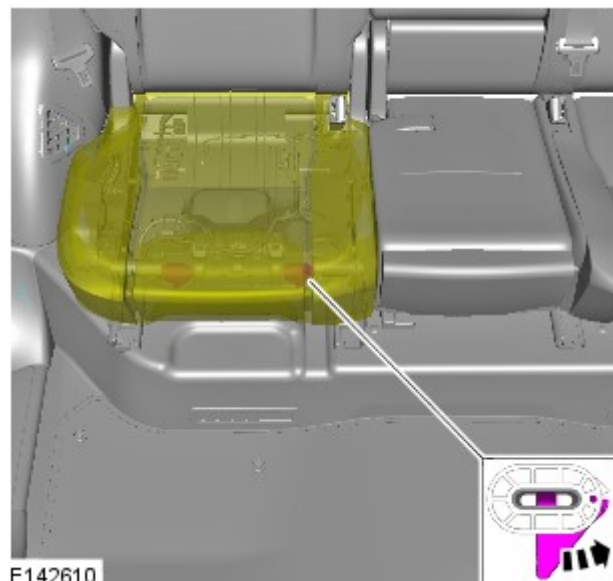


2.

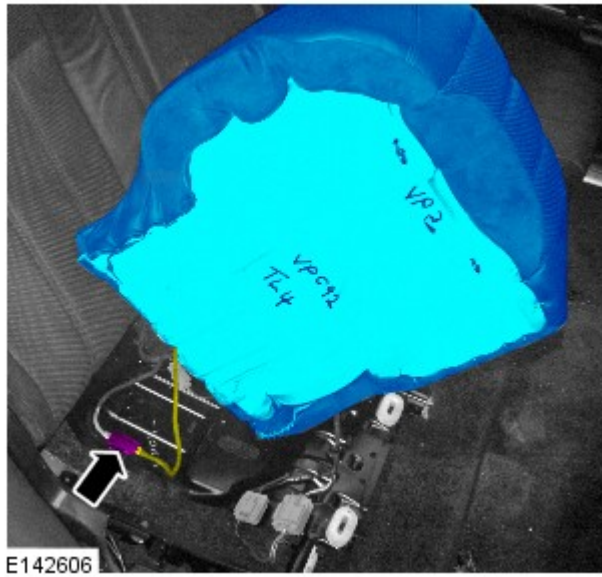

3.

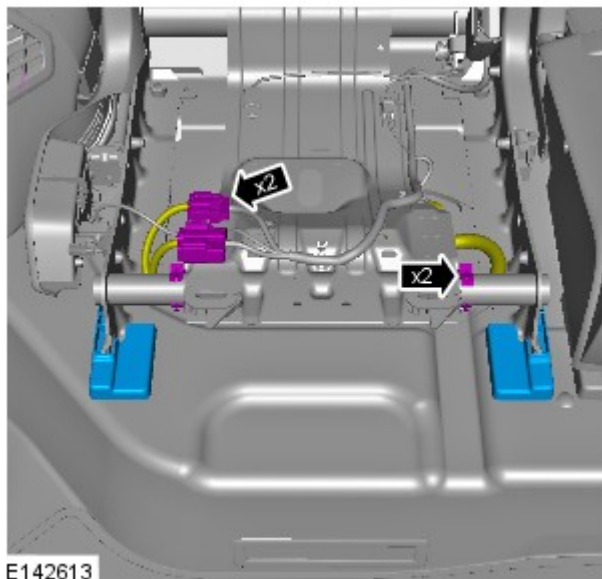


4.

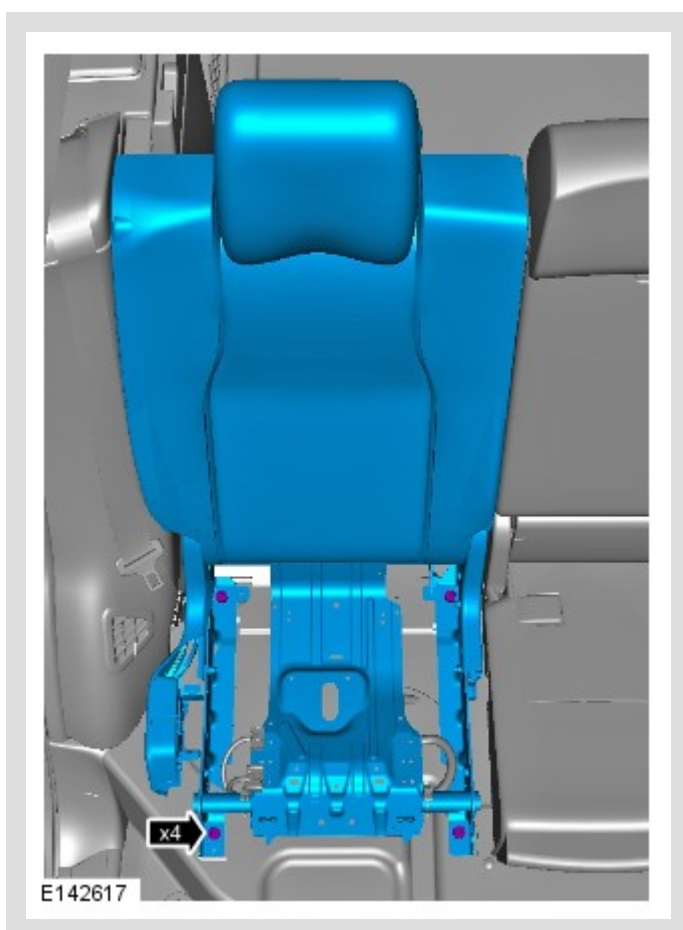

*Torque: 50 Nm*


Vehicles with business seats

1.

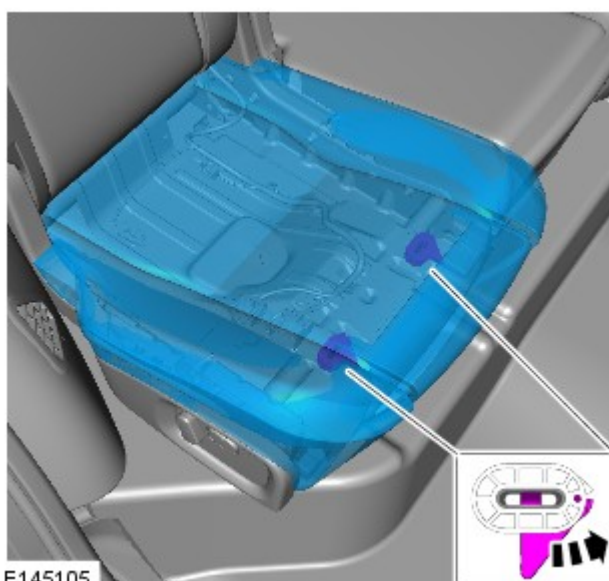


E145105

2.

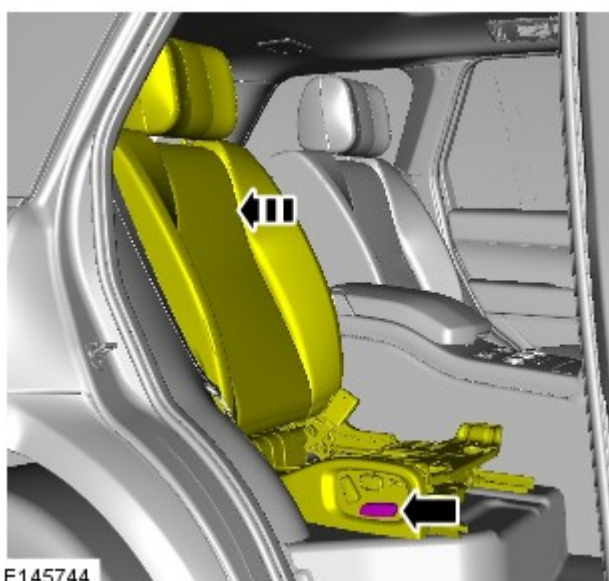


E145744

3.

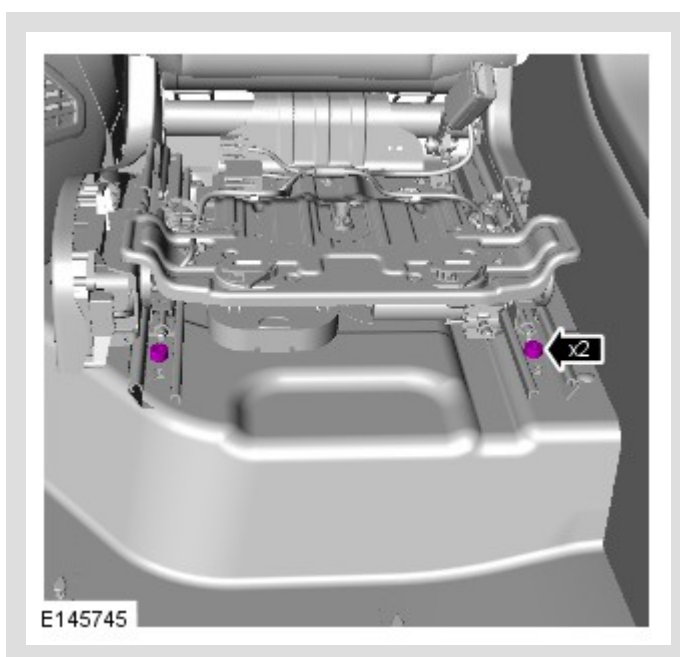


*Torque: 50 Nm*

4.

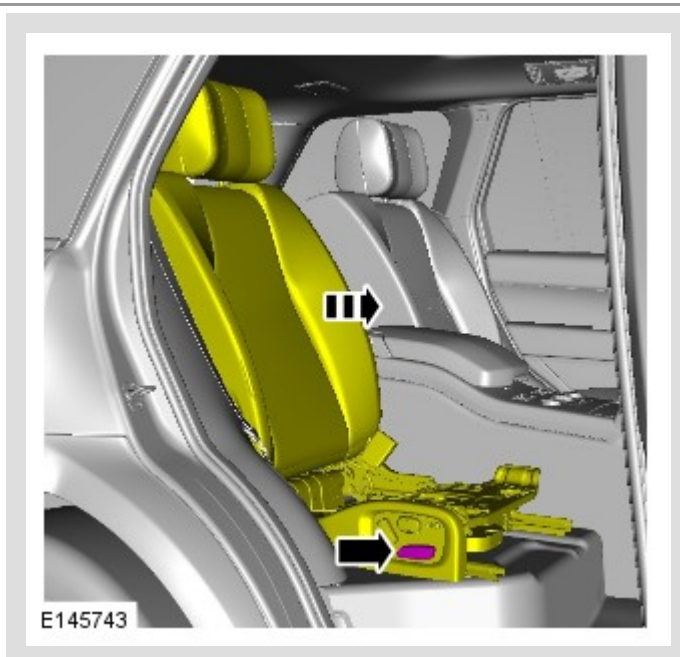


5.



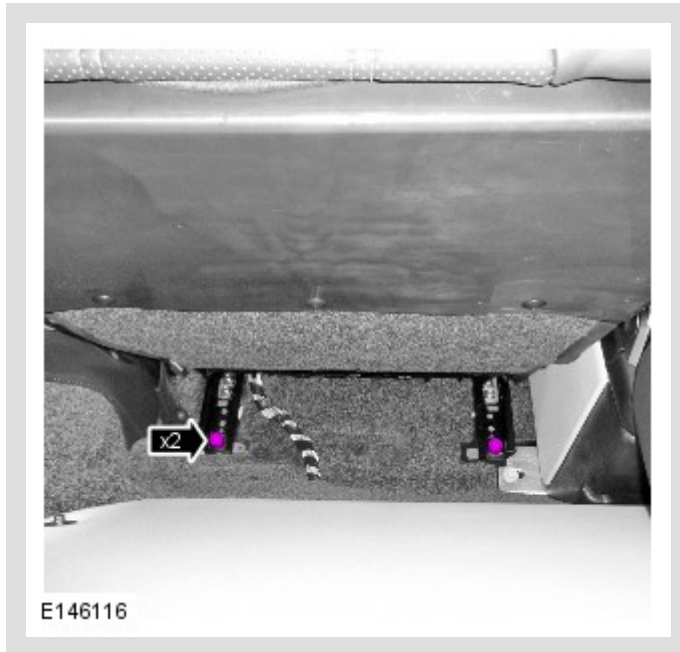




*Torque: 50 Nm*

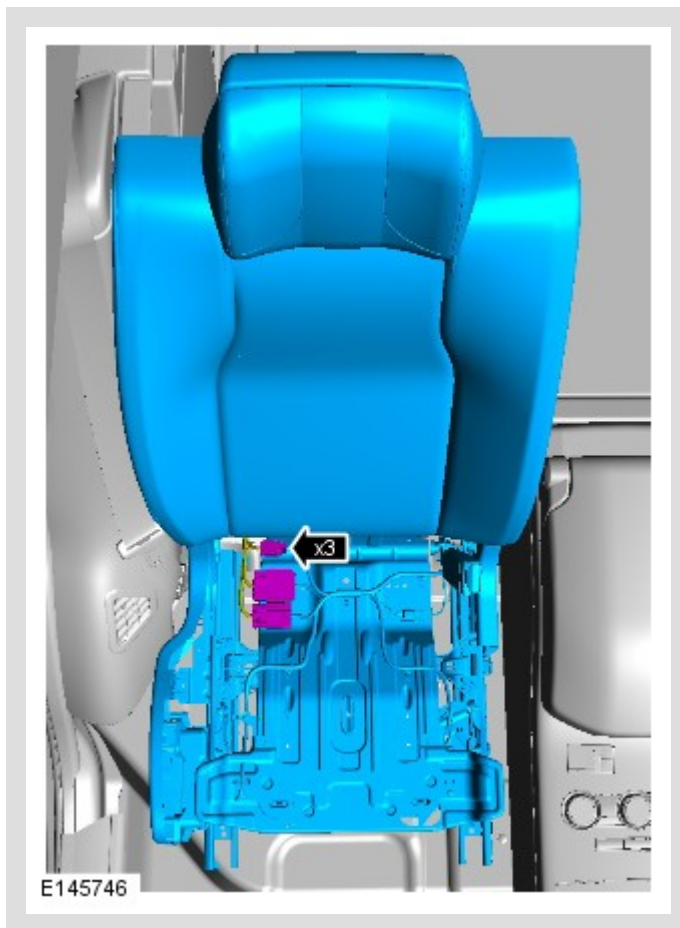


All vehicles

1.

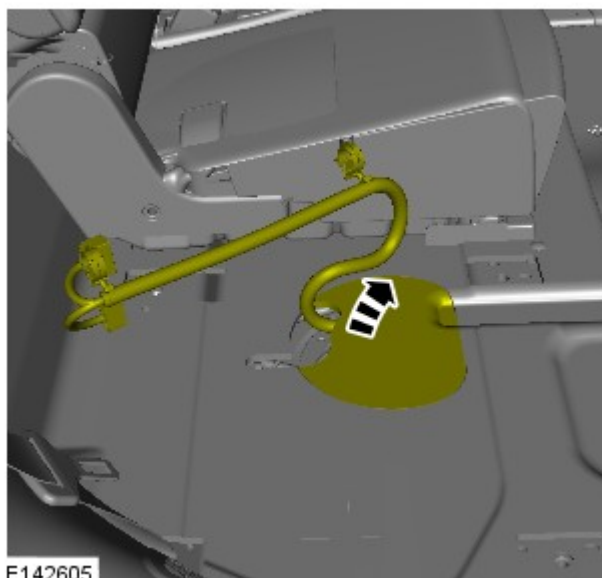

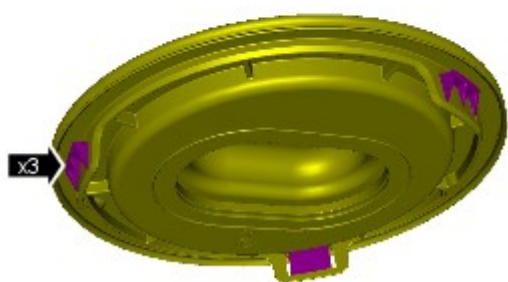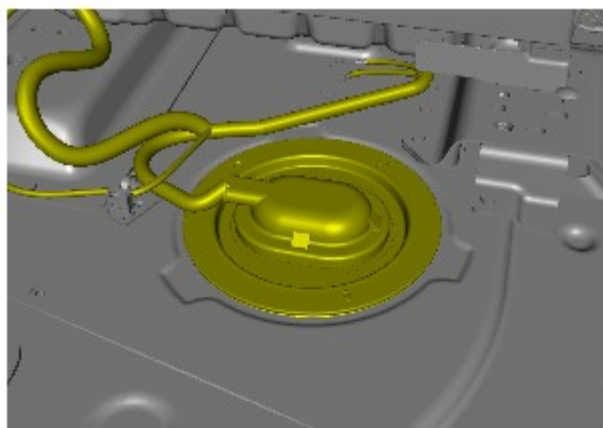

E142604

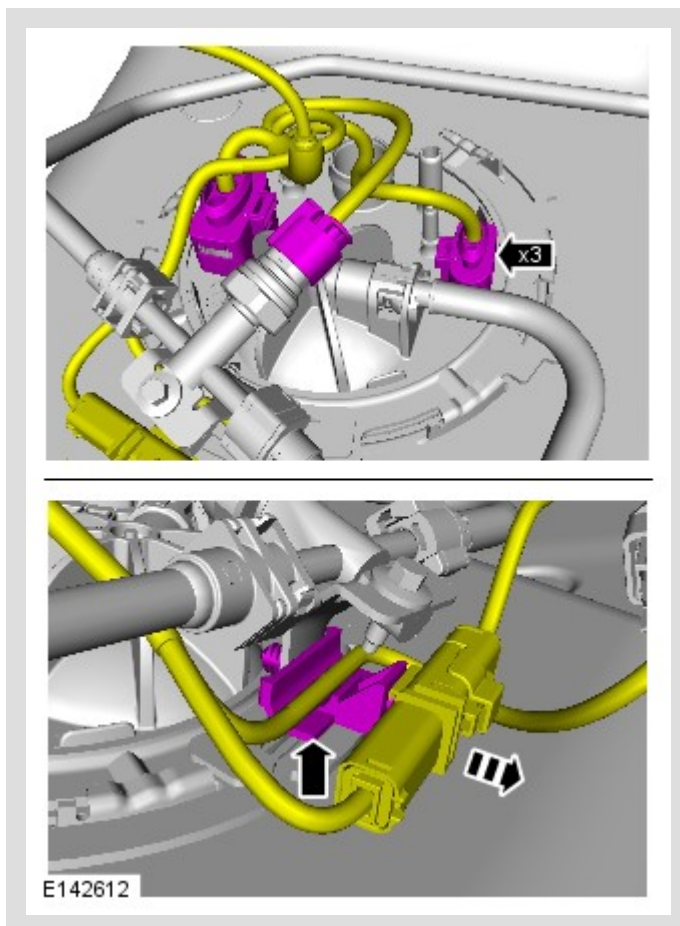


4.

**⚠ CAUTION:**

Be prepared to collect escaping fuel.

When removing the fuel feed pipe from the fuel tank flange, the O-ring seals may remain on the fuel pipe. If this occurs, DO NOT attempt to refit the seals into fuel tank flange. A new fuel tank flange must be installed.

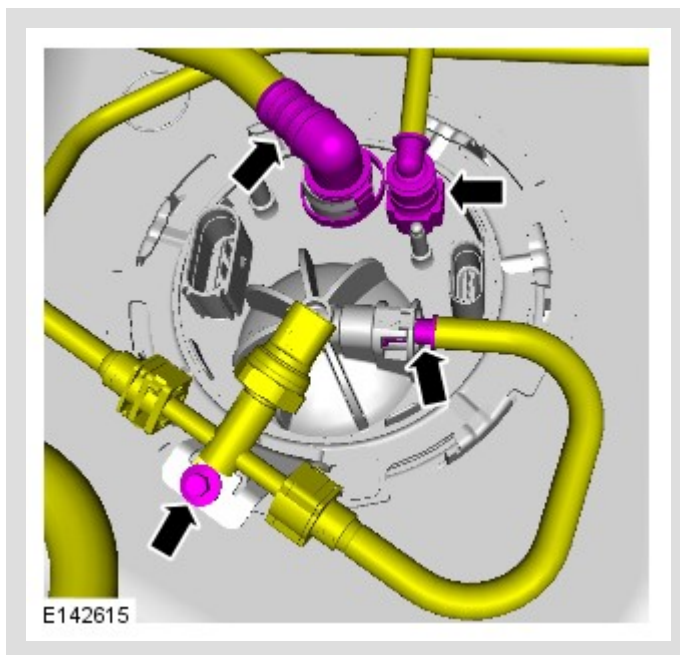


*Torque: 7 Nm*

5.

 **NOTE:**

Some variation in the illustrations may occur, but the essential information is always correct.

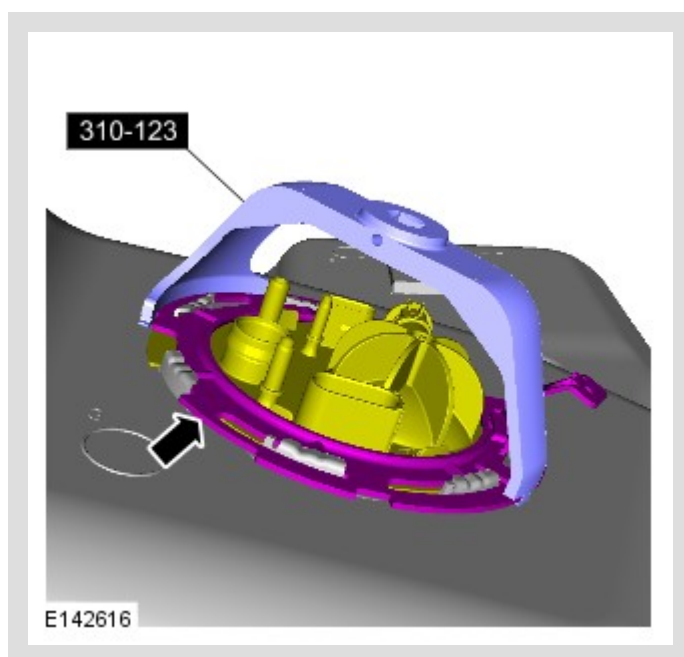


- *Special Tool(s):* [310-123](#)

6.

⚠ CAUTION:

A new O-ring seal is to be installed.

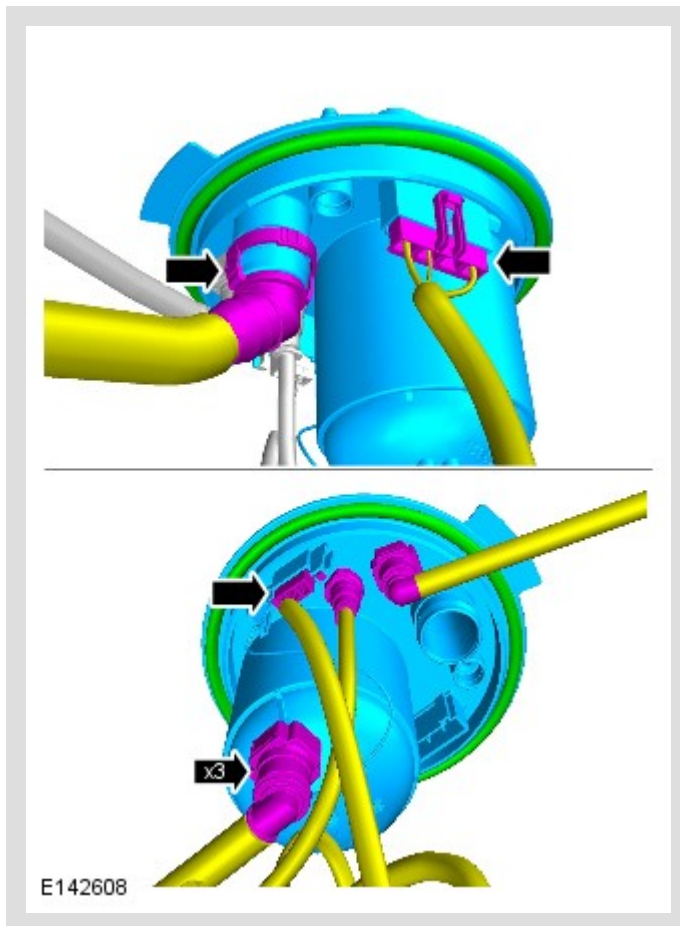

## INSTALLATION

1. To install, reverse the removal procedure.