

PUBLISHED: 12-SEP-2012
2014.0 RANGE ROVER (LG), 310-01

FUEL TANK AND LINES - V8 N/A 5.0L PETROL/V8 S/C 5.0L PETROL

FUEL LEVEL SENSOR (G1509660)

REMOVAL



WARNINGS:

- After carrying out repairs, the fuel system must be checked visually for leaks. Failure to follow this instruction may result in personal injury.
- This procedure involves fuel handling. Be prepared for fuel spillage at all times and always observe fuel handling precautions. Failure to follow these instructions may result in personal injury.
- The spilling of fuel is unavoidable during this operation. Ensure that all necessary precautions are taken to prevent fire and explosion.
- Do not carry or operate cellular phones when working on or near any fuel related components. Highly flammable vapors are always present and may ignite. Failure to follow these instructions may result in personal injury.
- Do not smoke or carry lighted tobacco or open flame of any type when working on or near any fuel related components. Highly flammable vapors are always present and may ignite. Failure to follow these instructions may result in personal injury.
- If fuel contacts the eyes, flush the eyes with cold water or eyewash solution and seek immediate medical attention.
- Wash hands thoroughly after fuel handling, as prolonged contact may cause irritation. Should irritation develop, seek medical attention.



CAUTION:

Make sure the workshop area in which the vehicle is being worked on is as clean and as dust free as possible. Foreign matter from work on clutches, brakes or from machining or welding operations can contaminate the fuel system and may result in later malfunction.



NOTE:

Removal steps in this procedure may contain installation details.

1.



WARNING:

Make sure to support the vehicle with axle stands.

Raise and support the vehicle.

2.

Refer to: Petrol and Petrol-Ethanol Fuel Systems Health and Safety Precautions (100-00, Description and Operation).

3.

Disconnect the battery ground cable.
Refer to: Specifications (414-00, Specifications).

4.


Refer to: Fuel Pump and Sender Unit (310-01, Removal and Installation).

5.



NOTE:

Some variation in the illustrations may occur, but the essential information is always correct.

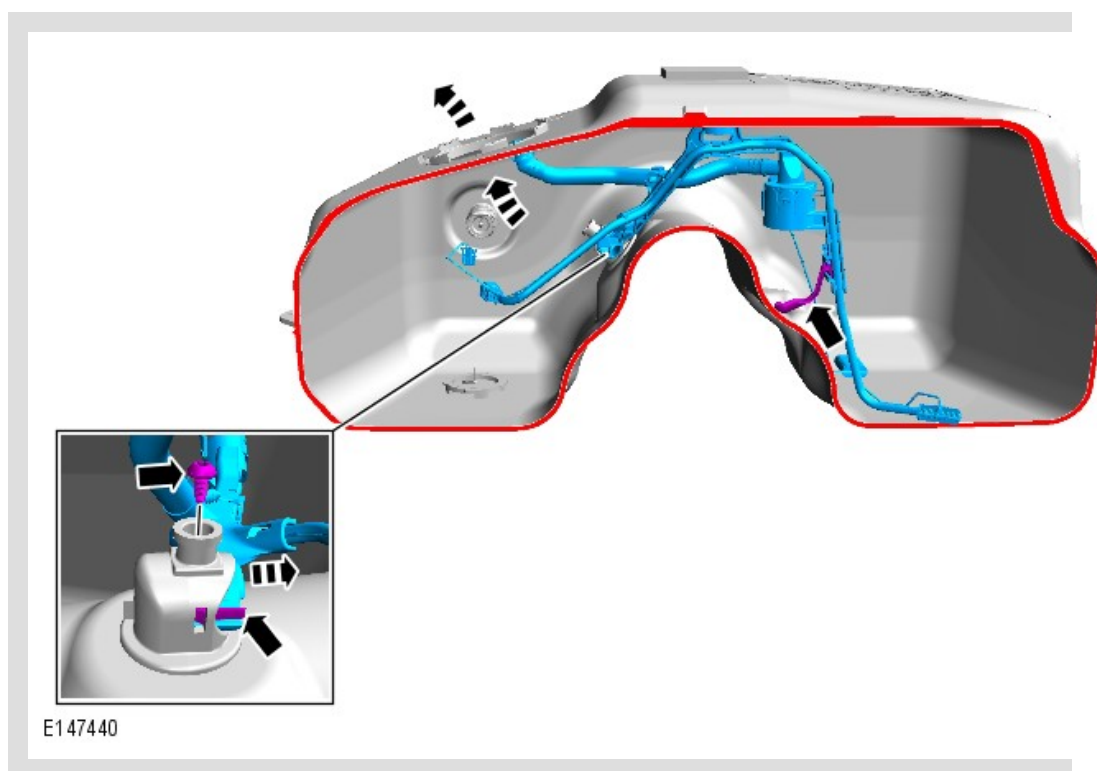

Torque: 7 Nm

INSTALLATION

1. To install, reverse the removal procedure.