

PUBLISHED: 16-AUG-2017
2014.0 RANGE ROVER (LG), 303-12

INTAKE AIR DISTRIBUTION AND FILTERING - V8 S/C 5.0L PETROL

CHARGE AIR COOLER (G1509544)

REMOVAL AND INSTALLATION

PART(S)

STEP	PART NAME	QUANTITY
Removal Step 19	Charge air cooler gasket	1

REMOVAL



WARNINGS:

- Do not smoke or carry lighted tobacco or open flame of any type when working on or near any fuel related components. Highly flammable vapors are always present and may ignite. Failure to follow these instructions may result in personal injury.
- After carrying out repairs, the fuel system must be checked visually for leaks. Failure to follow these instructions may result in personal injury.



CAUTION:

Make sure that all openings are sealed. Use new blanking caps.



NOTES:

- Some variation in the illustrations may occur, but the essential information is always correct.
- Removal steps in this procedure may contain installation details.

1.

Refer to: Petrol and Petrol-Ethanol Fuel Systems Health and Safety Precautions (100-00 General Information, Description and Operation).

2.

Refer to: Fuel System Pressure Release - V8 N/A 5.0L Petrol/V8 S/C 5.0L Petrol (310-00 Fuel System - General Information, General Procedures).

3. Disconnect the battery ground cable.

Refer to: Specifications (414-00 Battery and Charging System - General Information, Specifications).

4.



WARNING:

Make sure to support the vehicle with axle stands.

Raise and support the vehicle.

5.

Refer to: Fuel Injection Component Cleaning (303-04 Fuel Charging and Controls - V8 N/A 5.0L Petrol, General Procedures).


6.


Refer to: Cooling System Partial Draining and Vacuum Filling (303-03 Engine Cooling - TDV6 3.0L Diesel, General Procedures).

7.


Refer to: Cowl Panel Grille (501-02 Front End Body Panels, Removal and Installation).

8.

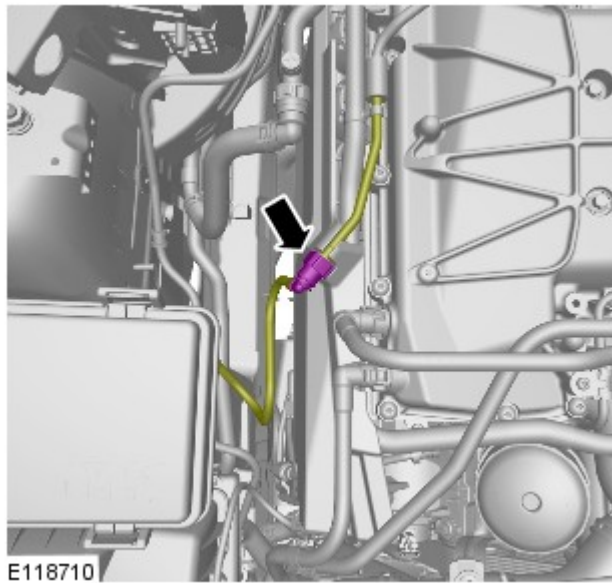

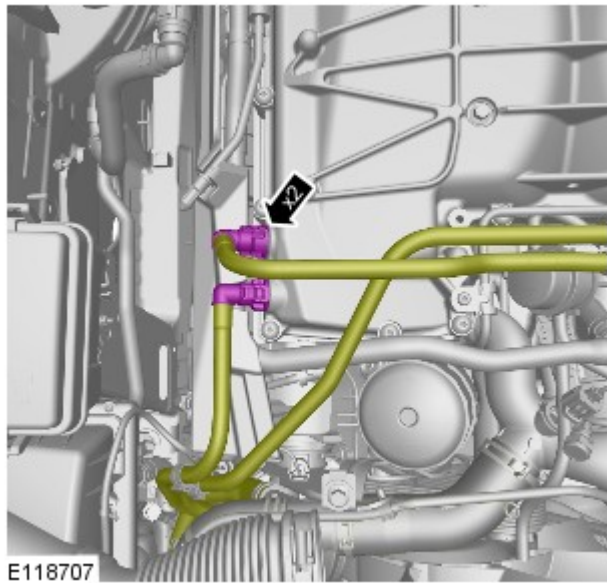


10.

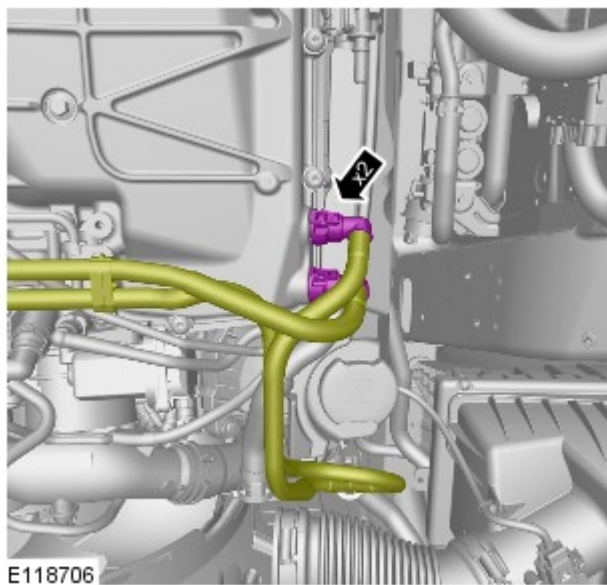


11.


⚠ CAUTION:

Be prepared to collect escaping fluids.

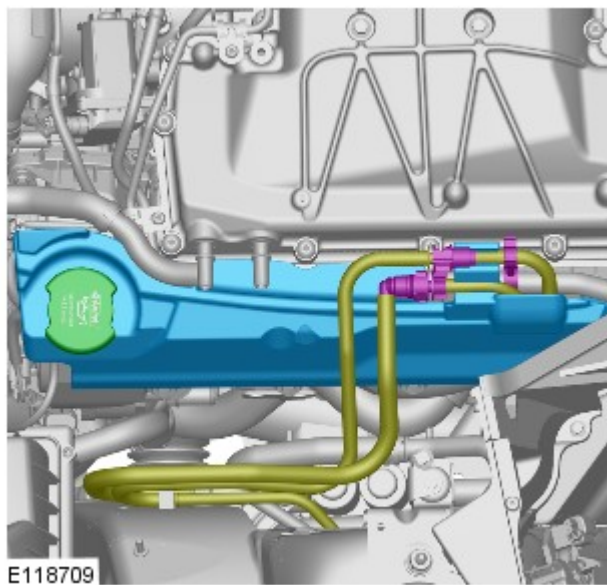


12.

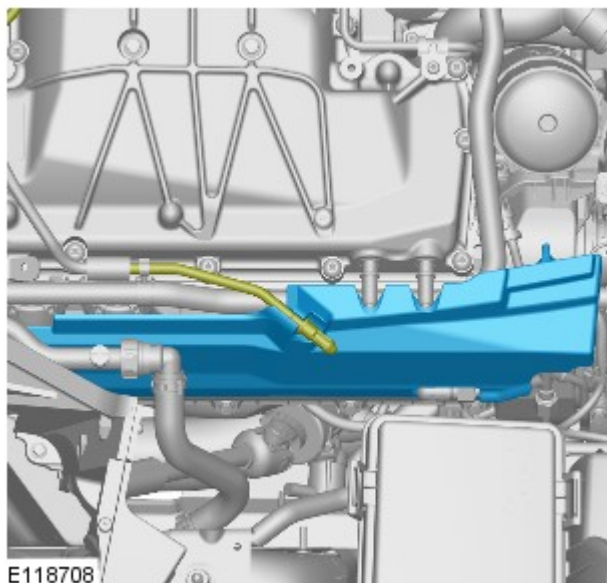


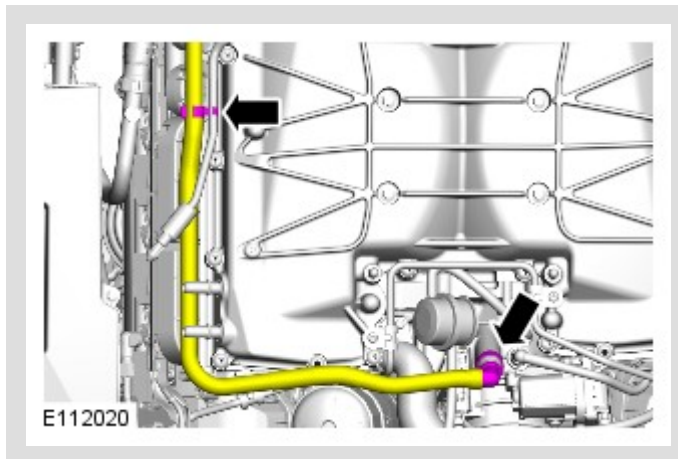

⚠ CAUTIONS:


- Make sure that the fuel line union does not rotate.
- Be prepared to collect escaping fluids.

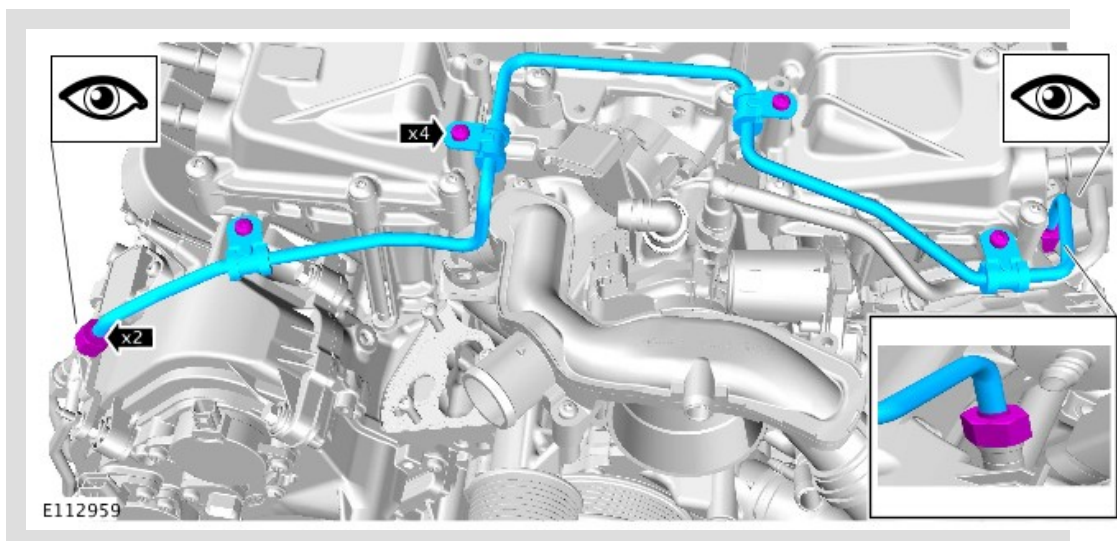

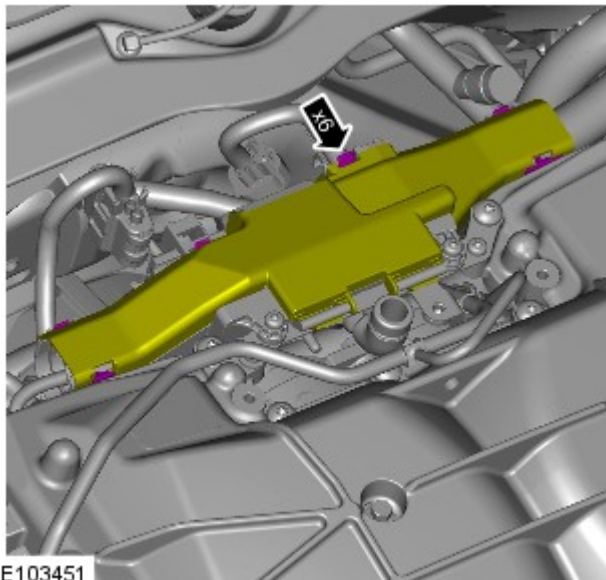

E103451


16.

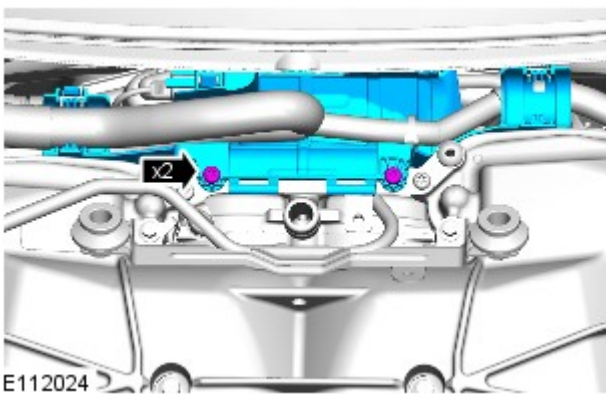

E112024


Torque: 10 Nm

17.

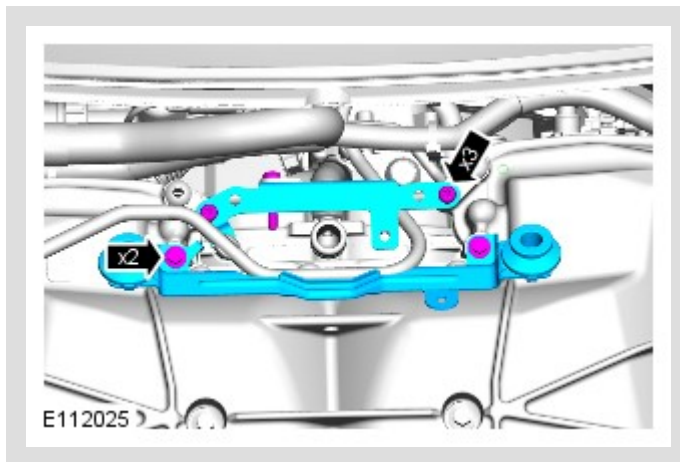

Torque: 10 Nm


18.

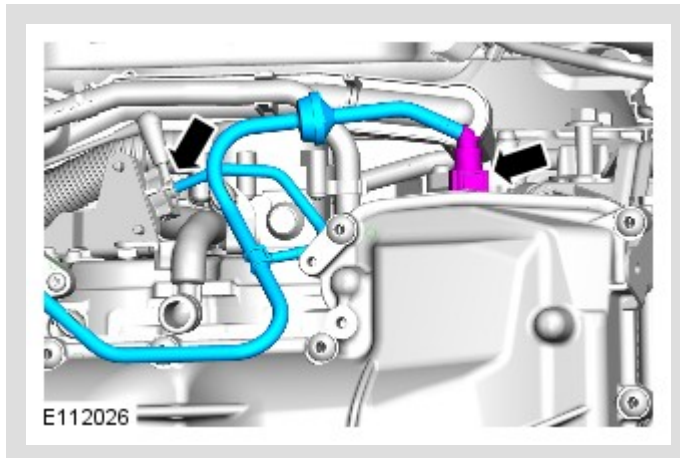

19.

 **NOTE:**

Remove and discard the gasket.

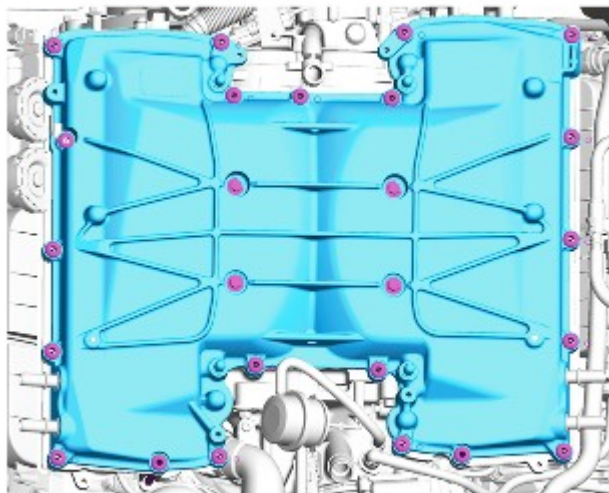

E120312


Renew Part: *Charge air cooler gasket* Quantity: 1 .

INSTALLATION

1.

NOTE:

Install a new gasket.

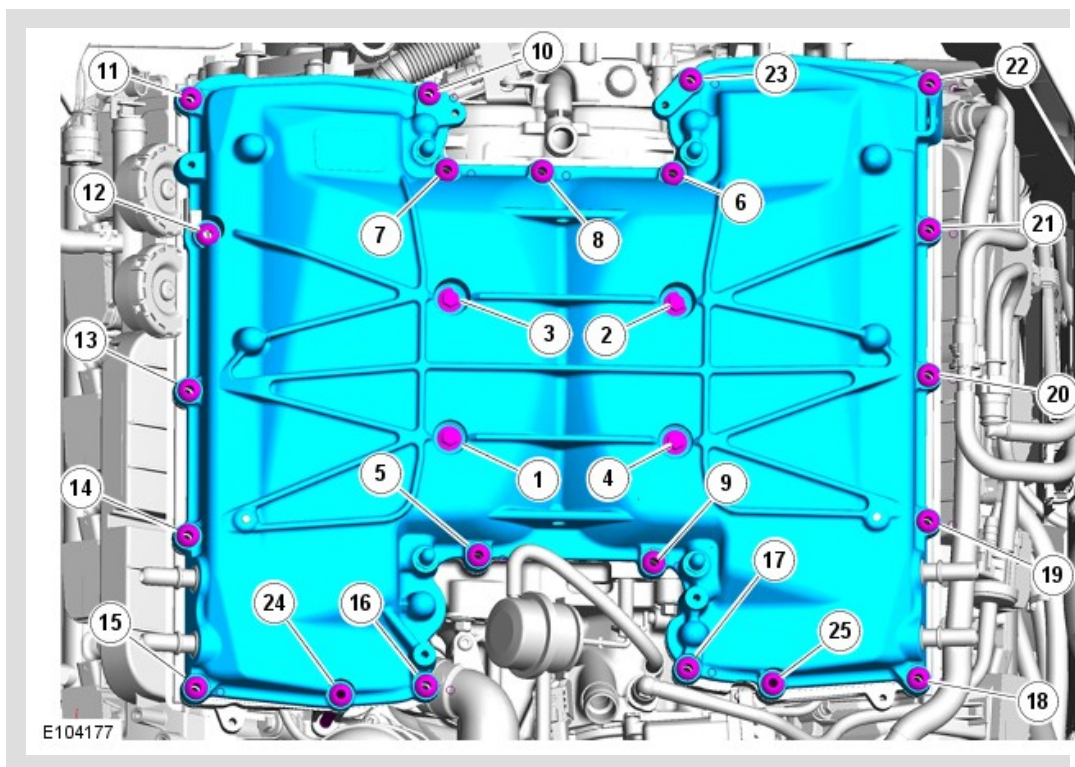

- Install and finger tighten bolts in sequence illustrated.
- Tighten the bolts in the indicated sequence.
Torque: 25 Nm

2.




CAUTION:

Lubricate only the union threads with clean engine oil.




NOTES:

- Do not tighten at this stage.
- Remove and discard the blanking caps.

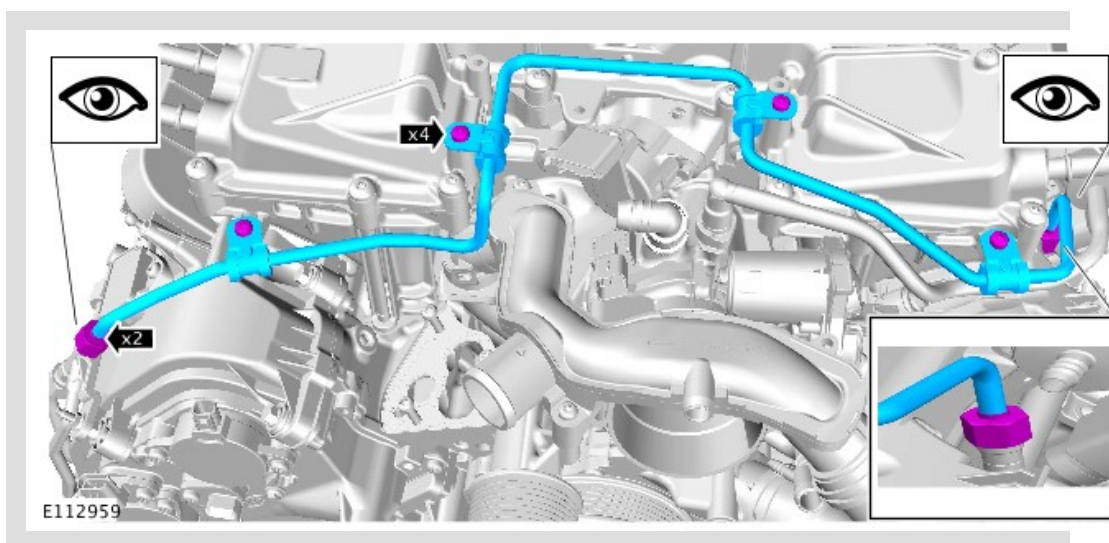

3.

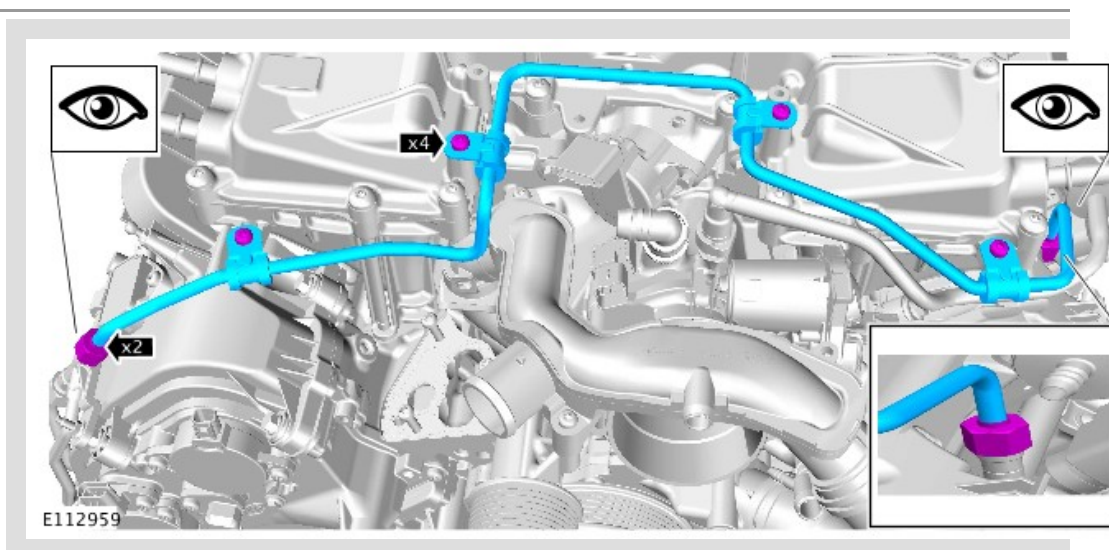


Torque:

Union 20 Nm

M6 12 Nm

4.

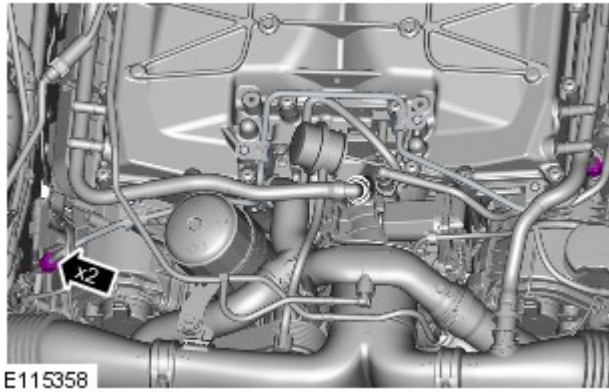

Torque: 21 Nm

-
5. To install, reverse the removal procedure.