

2016.0 RANGE ROVER (LG), 310-03

SPEED CONTROL - TDV6 3.0L DIESEL

SPEED CONTROL SENSOR ADJUSTMENT (G1509664)

GENERAL PROCEDURES

SPECIAL TOOL(S)



**501 –
F007**

Inclinometer

NOTES:

- Removal steps in this procedure may contain installation details.
- This procedure details how to adjust the speed control sensor vertically. There is no horizontal adjustment required.

1.

WARNING:

Make sure to support the vehicle with axle stands.

Raise and support the vehicle.

2.


Remove the front bumper cover.

Refer to: [Front Bumper Cover](#) (501-19 Bumpers, Removal and Installation).

3.

NOTE:

Make sure that the vehicle is standing on a level surface.

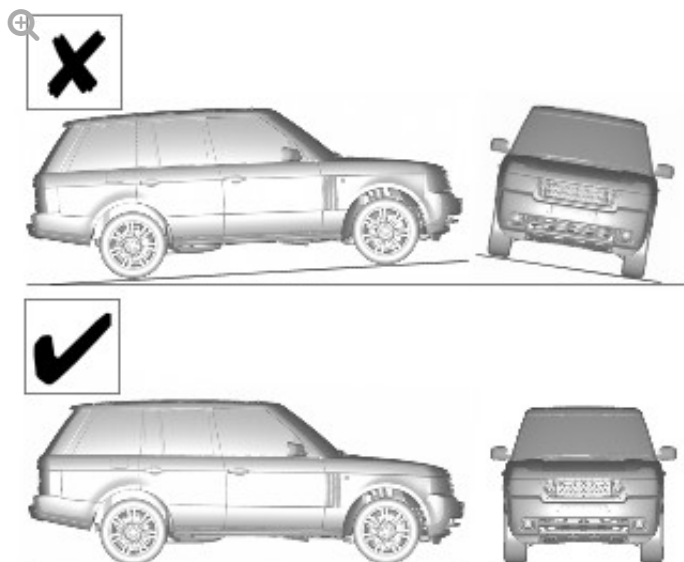


E122311

Set the air suspension ride height to the STANDARD setting.

4.

NOTE:

Make sure that the special tool is installed to the front of the speed control sensor as it is shown in the illustration to check the level.

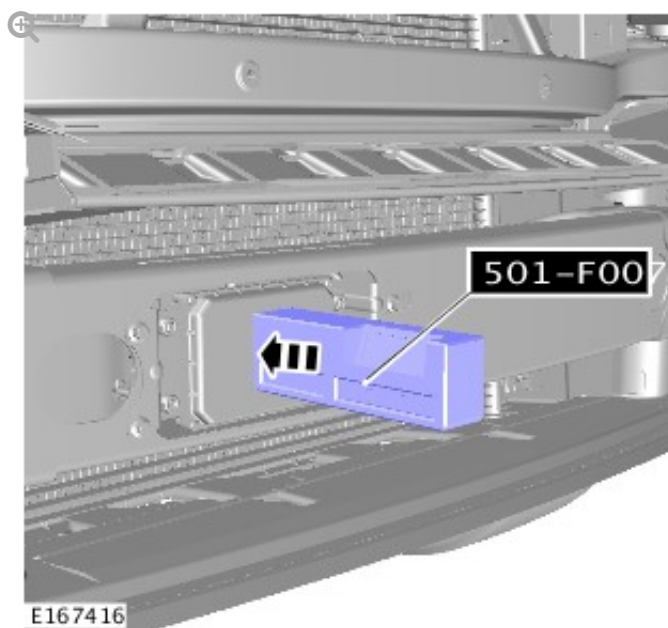

Using the special tool, check the speed control sensor is level, (+/-


0.5 degrees)

Special Tool(s): [501-F007](#)

5.

NOTE:

The speed sensor has no mechanical horizontal adjustment.

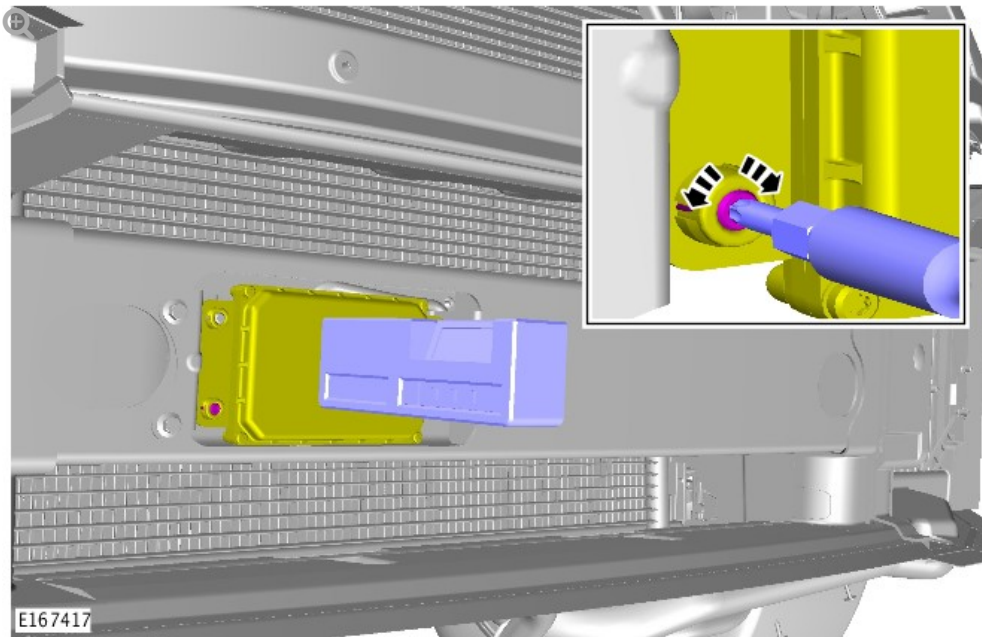

If necessary, adjust the Torx screw until the special tool indicates the speed control sensor is level (+/- 0.5 degrees).

Special Tool(s): [501-F007](#)

6. Install the front bumper cover.

Refer to: [Front Bumper Cover](#) (501-19 Bumpers, Removal and Installation).

- 7.
- From the diagnostic tool menu, select: Service Alignment Mode.
 - The follow indicator will now be flashing, this indicates that the vehicle is in "service alignment" and now requires driving.
 - The vehicle speed must be above 30 mph (48 kph).
 - Choose a road with plenty of stationary objects, like street

lights, road signs, or barriers. Use an inside or outside lane.

- Following vehicles too closely will obscure the stationary targets from the radar, a time gap of 2 seconds is recommended.
- A straight road will produce a quicker and better result, although the process will still operate on a curved road.
- When the flashing follow indicator light extinguishes, the ACC system is now functional, and a required vehicle speed can now be set by the driver and the ACC system will operate as normal.