

2016.0 RANGE ROVER (LG), 303-06

STARTING SYSTEM - TDV6 3.0L DIESEL

# STARTER MOTOR (G1509496)

## REMOVAL AND INSTALLATION

|          |                             |                  |     |                 |   |
|----------|-----------------------------|------------------|-----|-----------------|---|
| 86.60.01 | STARTER<br>MOTOR -<br>RENEW | 3000 CC,<br>TDV6 | 0.9 | USED<br>WITHINS | + |
|----------|-----------------------------|------------------|-----|-----------------|---|

## REMOVAL

### NOTES:

- Removal steps in this procedure may contain installation details.
- Some variation in the illustrations may occur, but the essential information is always correct.

1. Disconnect the battery ground cable.  
Refer to: [Specifications](#) (414-00 Battery and Charging System - General Information, Specifications).


### 2. **WARNING:**

Make sure to support the vehicle with axle stands.

Raise and support the vehicle.

3. Refer to: [Engine Undershield](#) (501-02 Front End Body Panels, Removal and Installation).

4.

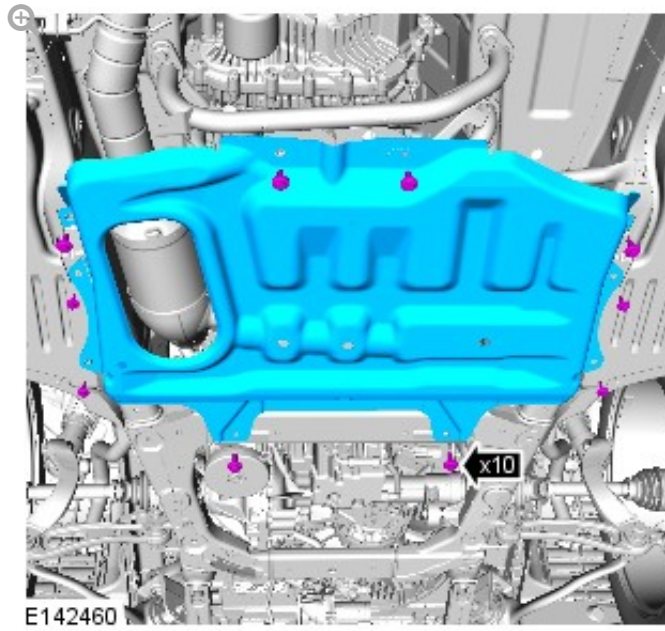


*Torque:*


M10 60 Nm

M6 10 Nm

5.

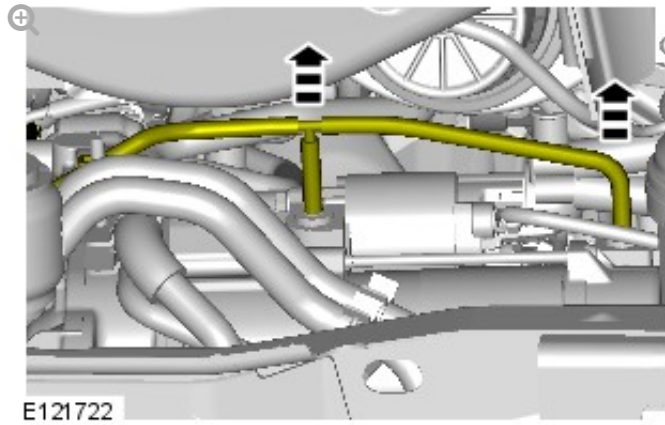

6.

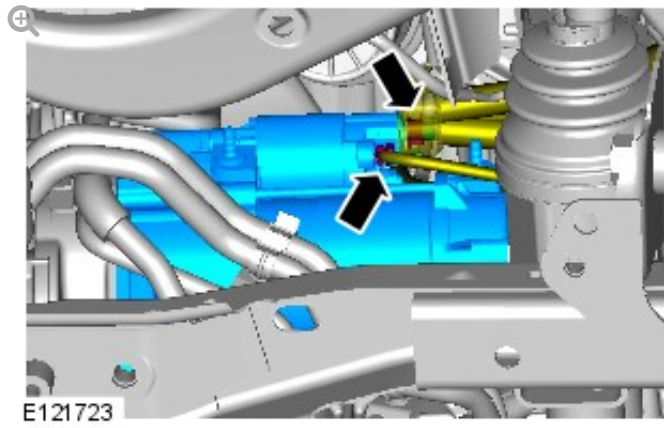

*Torque:*



M8 10 Nm

M6 7 Nm

7.

**NOTE:**

If equipped with TSS.

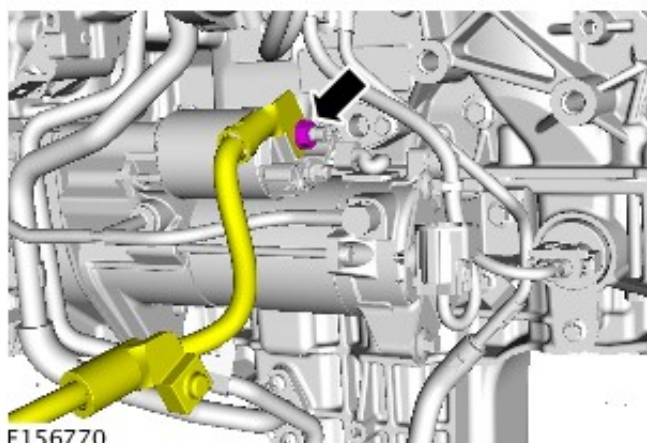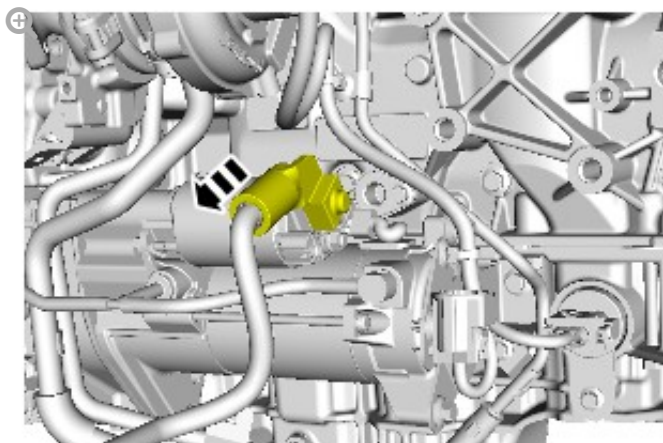


*Torque: 10 Nm*


8.

**NOTE:**

If equipped with TSS.

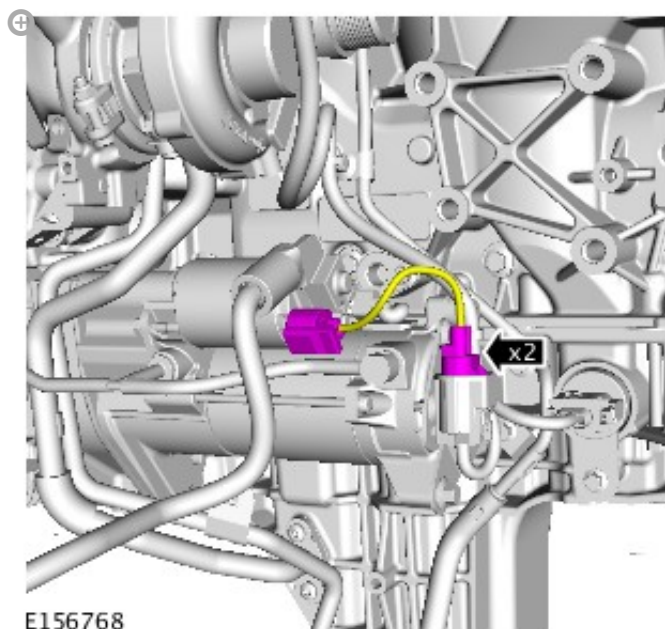

9.

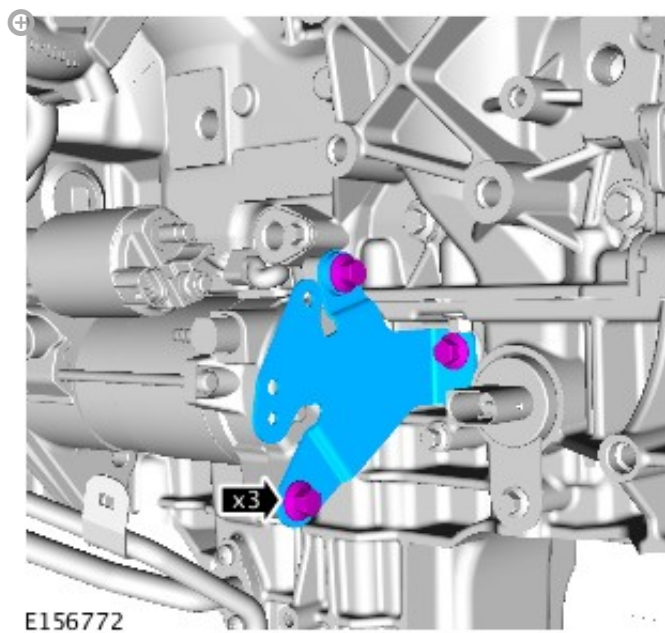


*Torque: 47 Nm*

10.

**NOTE:**

If equipped with TSS.

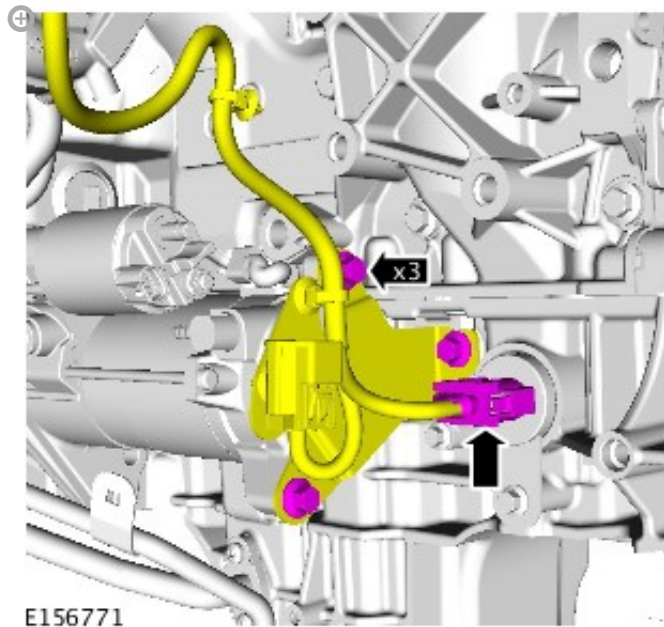


*Torque: 47 Nm*

11.

**NOTE:**

Components removed for clarity.

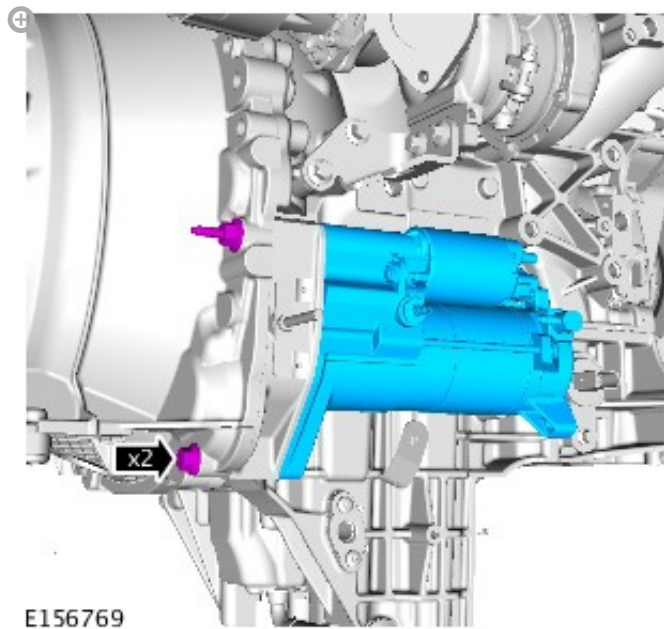

*Torque: 47 Nm*

---

## INSTALLATION

1. To install, reverse the removal procedure.