

2016.0 RANGE ROVER (LG), 308-07

TRANSFER CASE - VEHICLES WITH: SINGLE SPEED TRANSFER CASE

TRANSFER CASE FRONT OUTPUT SEAL (G1727530)

REMOVAL AND INSTALLATION

SPECIAL TOOL(S)



205-818

Installer, Seal



308-620

Installer, Seal



308-636

Installer



JLR-308-926

Support Tool,
Transfer Case



JLR-308-933

Remover, Transfer
Case Flange

PART(S)

STEP	REPLACE PART / RENEW PART	PART NAME
Installation Step 4	Renew Part	Transfer case front output shaft snap ring

REMOVAL

NOTE:

Some variation in the illustrations may occur, but the essential information is always correct.

1. Disconnect the battery ground cable.
Refer to: [Specifications](#) (414-00 Battery and Charging System - General Information, Specifications).

2. **WARNING:**

Make sure to support the vehicle with axle stands.

Raise and support the vehicle.


3. Refer to: [Transfer Case Draining and Filling](#) (308-07B Transfer Case - Vehicles With: Single Speed Transfer Case, General Procedures).
4. Refer to: [Transfer Case - GTDi 2.0L Petrol](#) (308-07B Transfer Case - Vehicles With: Single Speed Transfer Case, Removal).

5. **WARNING:**

Eye protection must be worn.

CAUTION:


Make sure the bolt holes are clean and free from swarf.

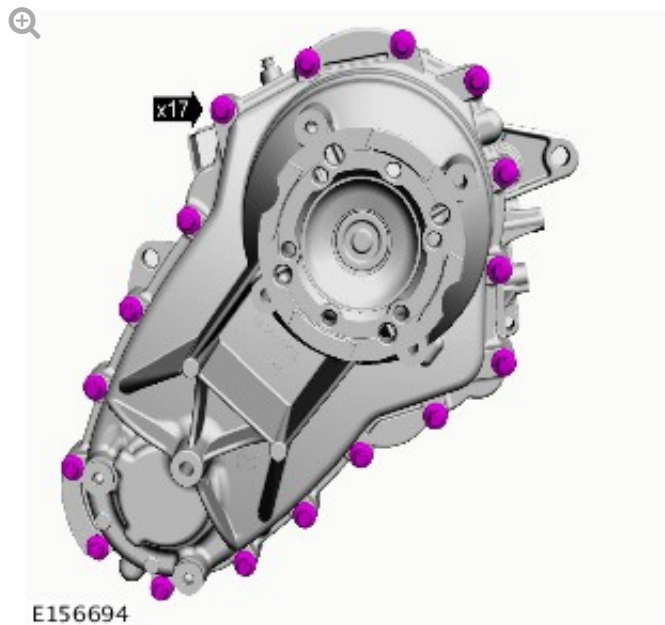

6.


CAUTION:

Care must be taken to avoid damage to the mating surfaces.

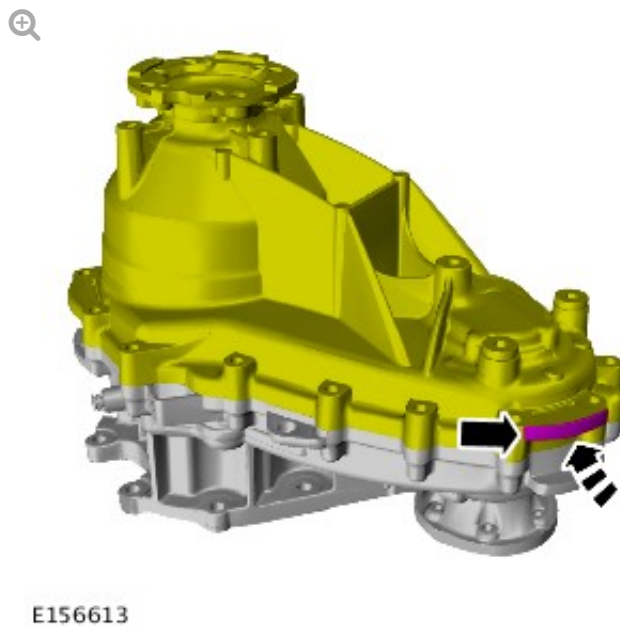

Using a soft faced mallet, release the rear casing.

7.

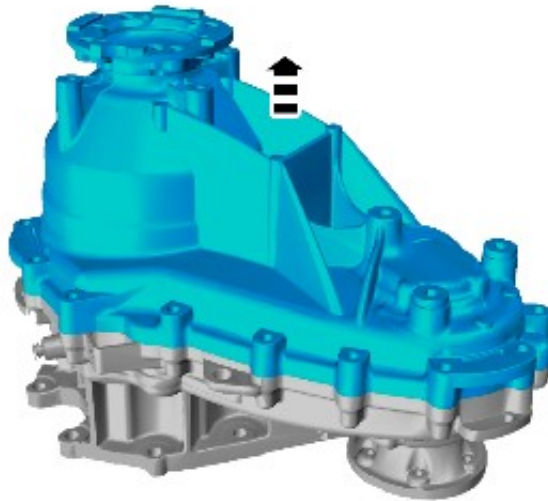

E156614

8.

CAUTION:


Make sure that the mating faces are clean and free of foreign material.

Remove the sealant from the transfer case mating faces.

9.

CAUTION:

Note the installed position of the component prior to removal.

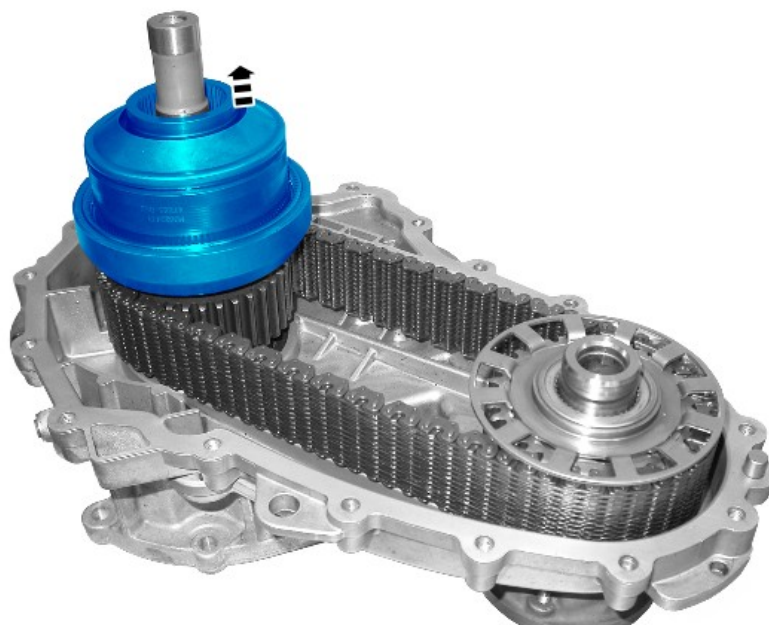


E156773

10.

CAUTION:

Note the installed position of the components prior to removal.

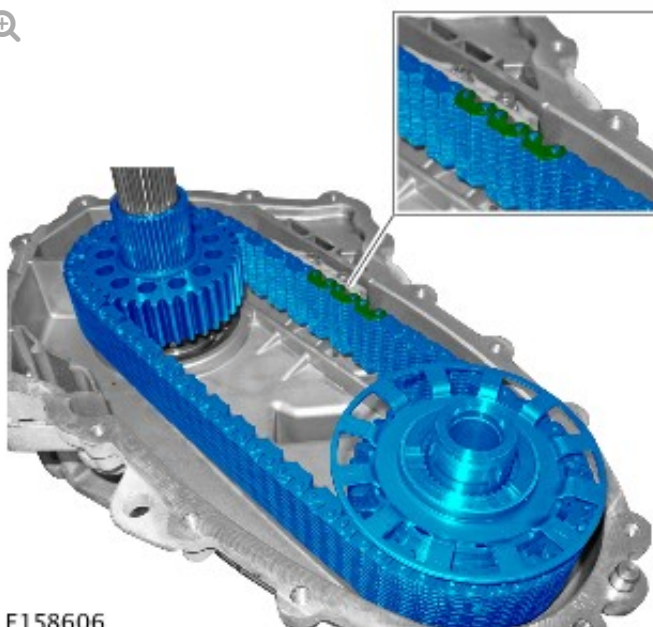


E158606


11.

CAUTION:

Note the installed position of the component prior to removal.

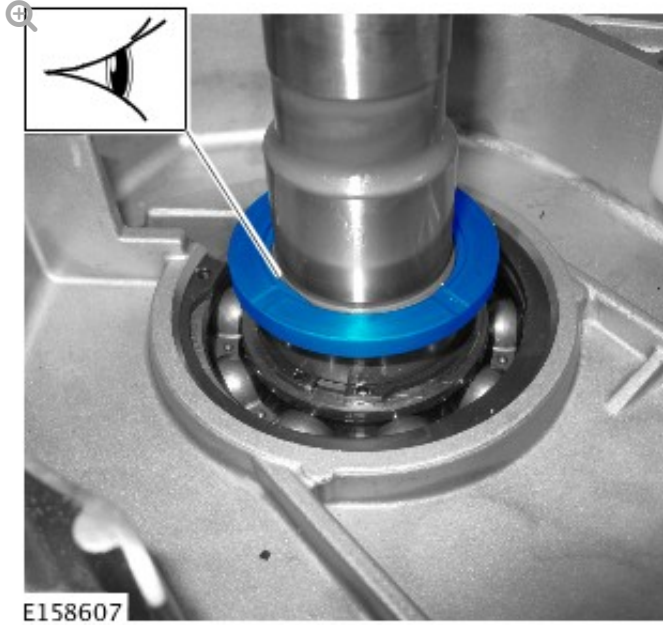

12.

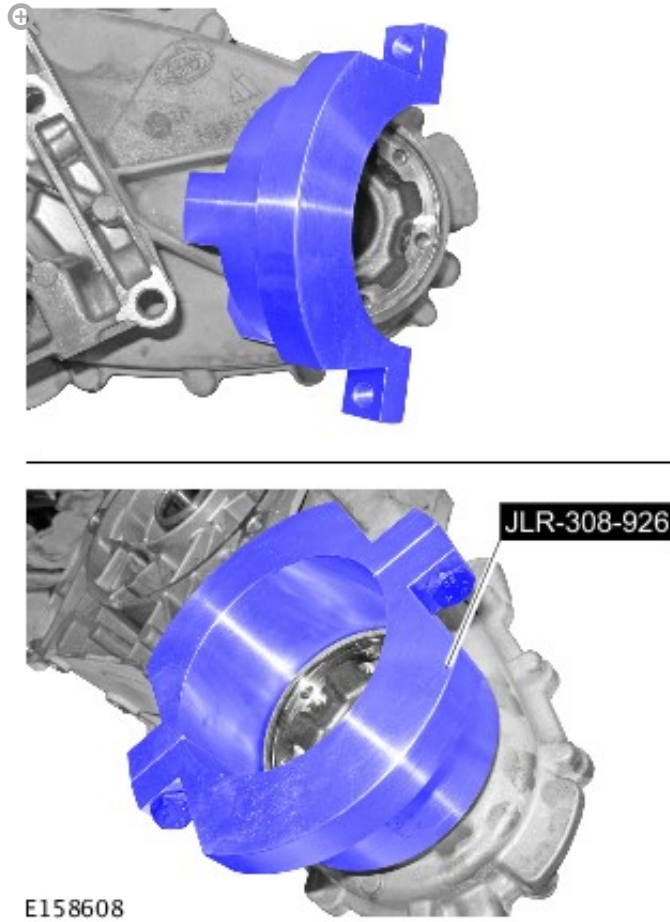


Special Tool(s): [JLR-308-926](#)

13.

CAUTION:

Make sure that the special tool is correctly located. This will make sure that the snap ring is fully compressed during the next step.

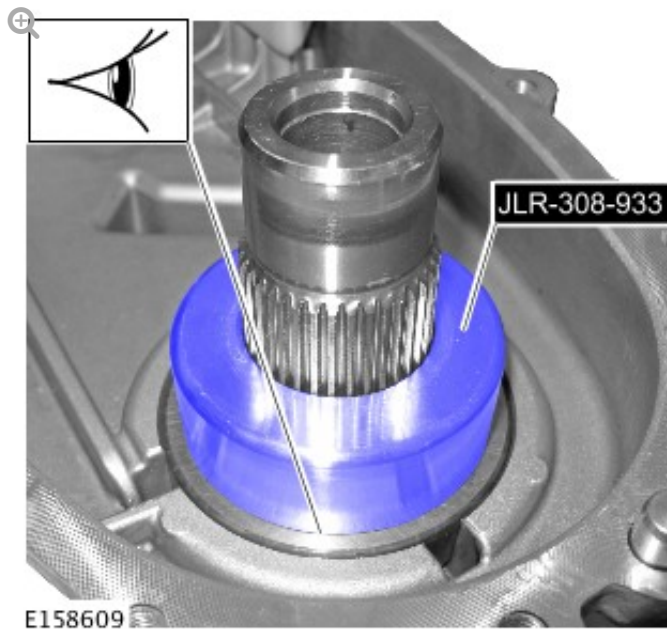


Special Tool(s): [JLR-308-933](#)

14.

CAUTIONS:

- Do not use excessive force whilst removing the flange assembly.
- Discard the snap ring.

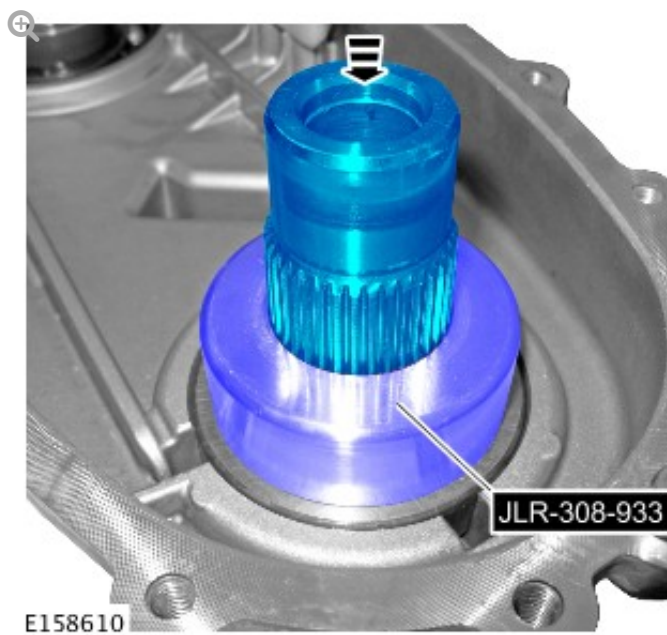

15.



E158611

16.



E158612

INSTALLATION

CAUTION:

During the installation, make sure that all components are clean and free from foreign material.

1.




Position the special tool as shown, to support the transfer casing during the next step.

Special Tool(s): [JLR-308-926](#)

2.

CAUTIONS:


- The chamfer on the bearing inner track must face the seal.
- The transfer casing must be supported by the special tool on a flat surface during the next step.

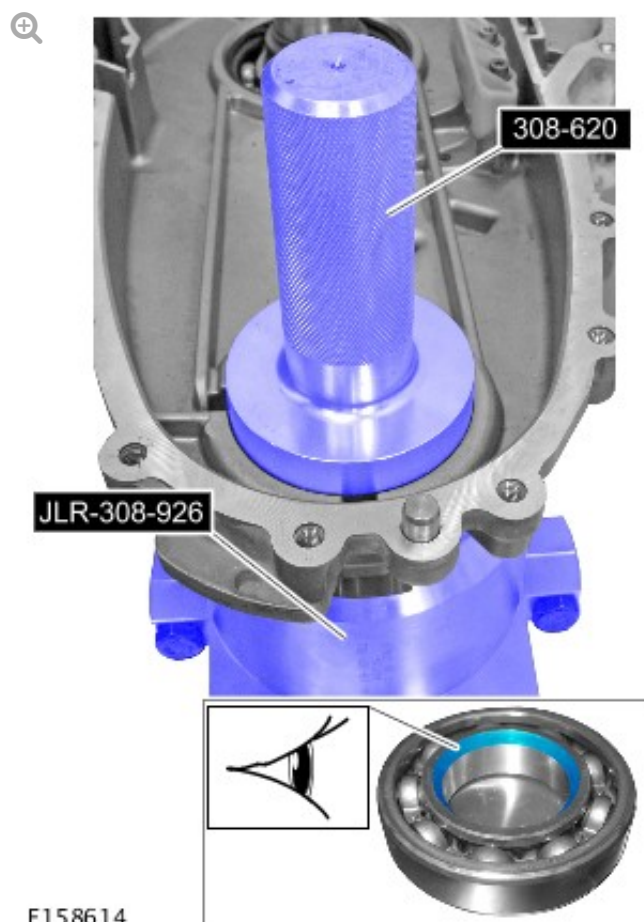

Install the bearing.

Special Tool(s): 308-620, JLR-308-926

3.

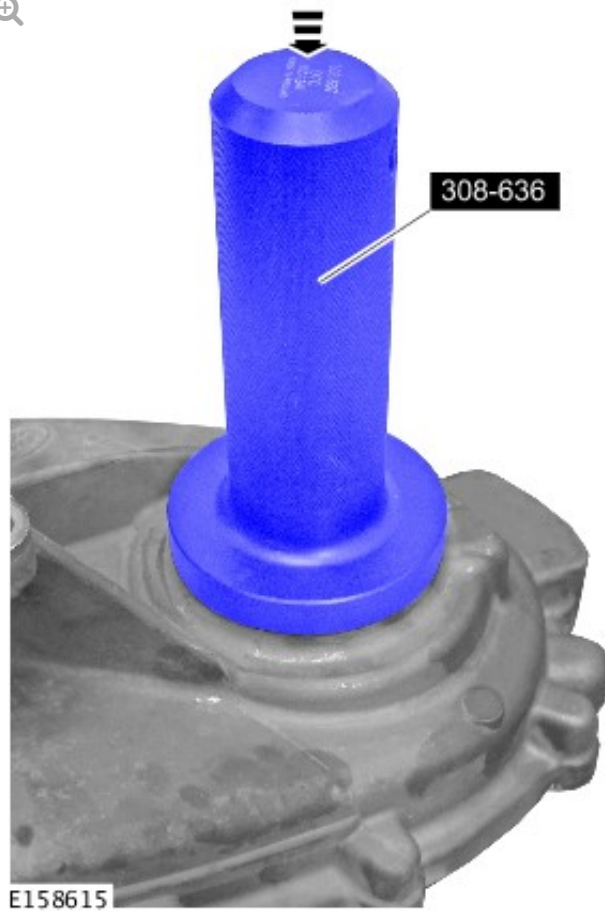


Install the seal.

Special Tool(s): [308-636](#)

4.

CAUTIONS:

- Centralise the snap ring in the snap ring groove before installing the output flange.
- Extreme care is necessary to make sure the snap ring enters the bearing squarely.
- Install a new snap ring.

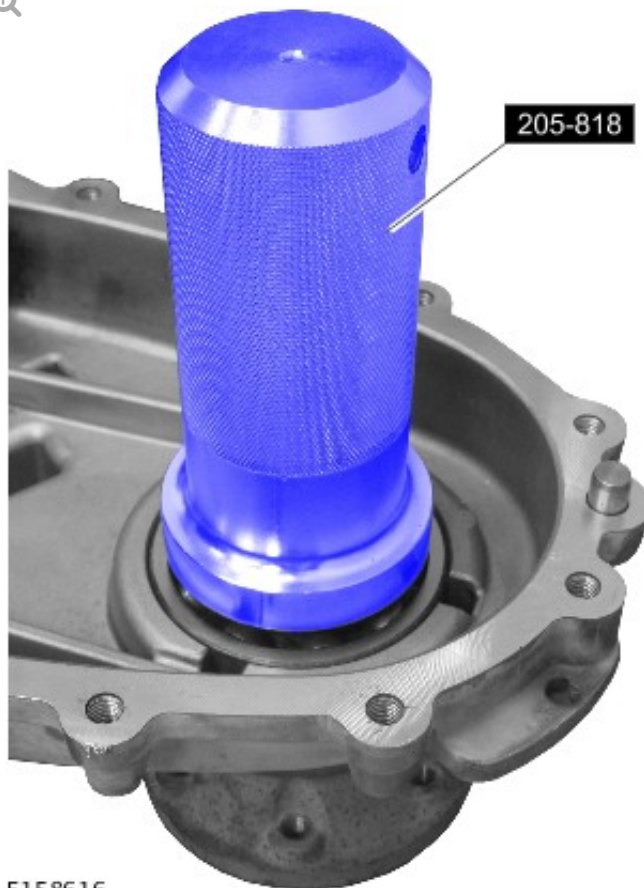

E158616

Using the special tool and with assistance, install the drive flange.


Special Tool(s): [205-818](#)

Renew Part: [Transfer case front output shaft snap ring.](#)

5.

CAUTION:


Make sure that the component is installed to the noted removal position.

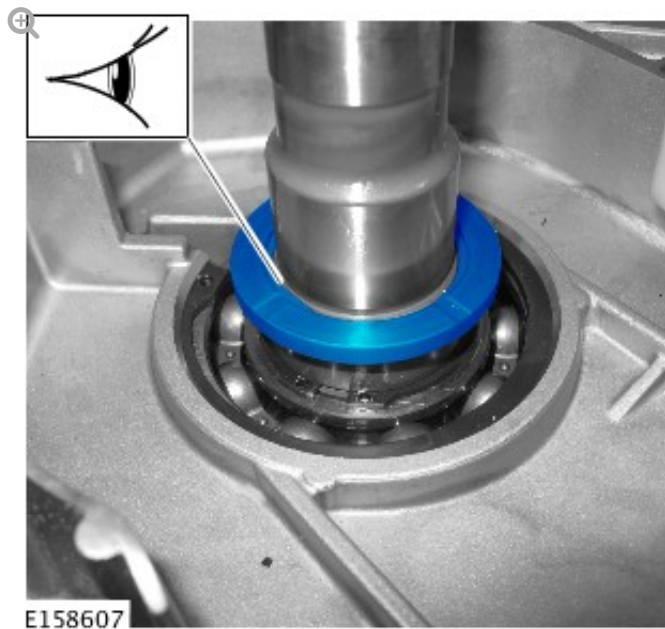

6.

CAUTIONS:


- Make sure that the components are installed to the noted removal position.
- The dark links in the chain face up as shown.

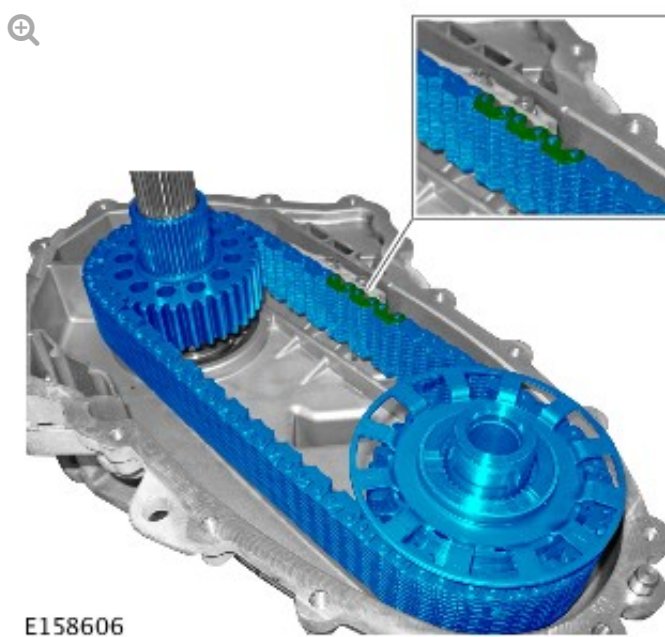

7.


CAUTION:

Make sure that the component is installed to the noted removal position.

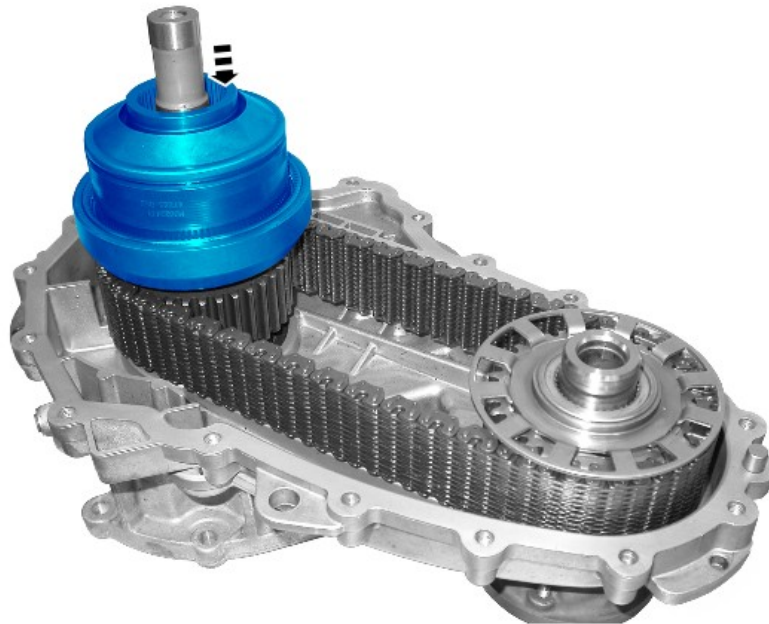

E156807


8.

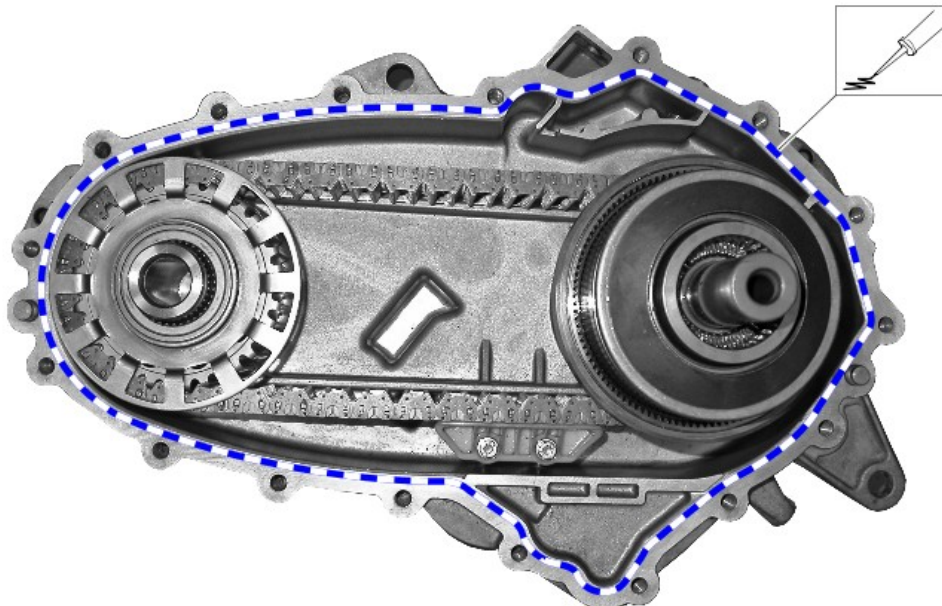

E156774

Apply a 2 mm bead of sealant to one surface of the transfer case mating face, as shown.

9.

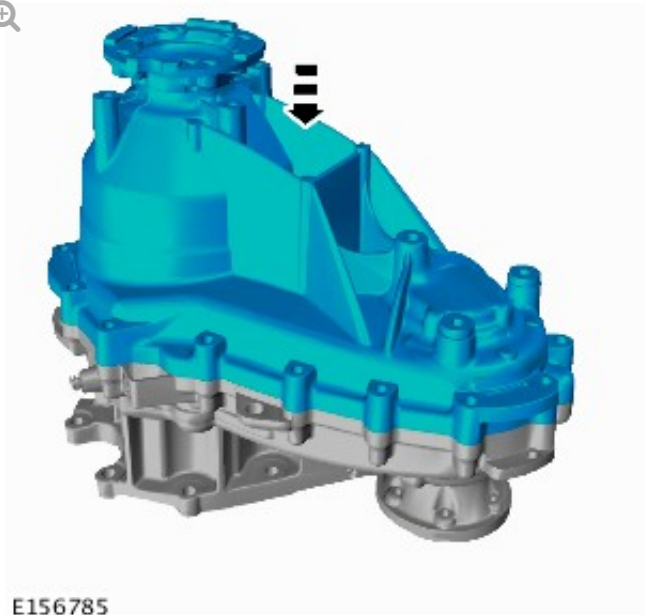


E156785

10.


CAUTION:

Only tighten the bolts finger-tight at this stage.

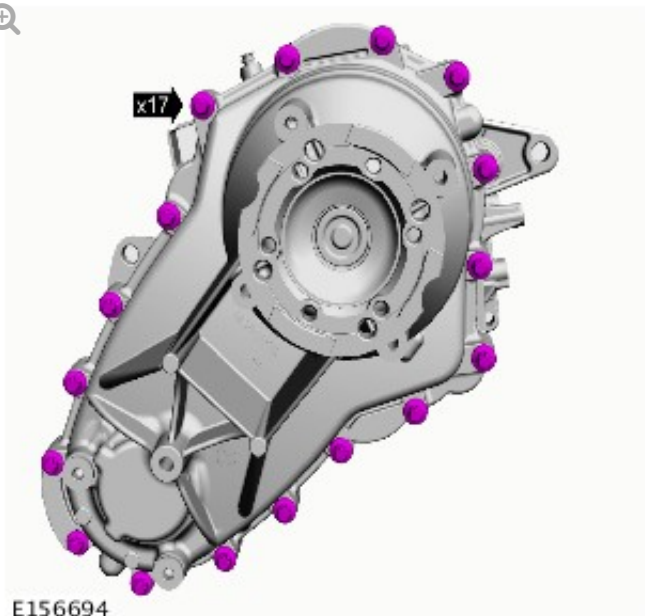


E156694

11.

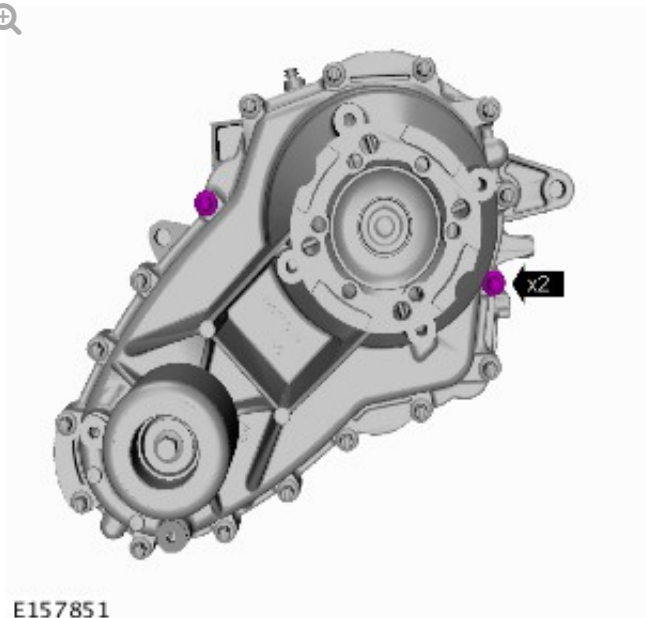

Torque: 10 Nm

12.

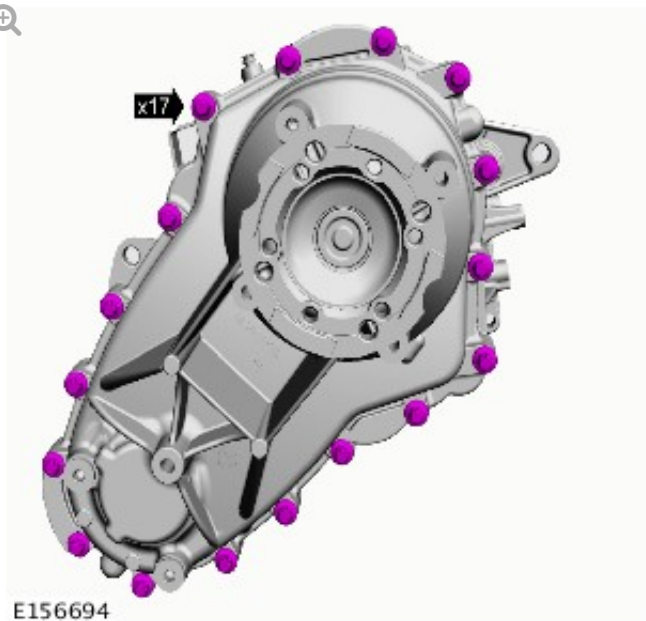

Torque: 35 Nm

13. Refer to: [Transfer Case - GTDi 2.0L Petrol](#) (308-07B Transfer Case - Vehicles With: Single Speed Transfer Case, Installation).
14. Refer to: [Transfer Case Draining and Filling](#) (308-07B Transfer Case - Vehicles With: Single Speed Transfer Case, General Procedures).

15. Connect the battery ground cable.

Refer to: [Specifications](#) (414-00 Battery and Charging System - General Information, Specifications).