

2016.0 RANGE ROVER (LG), 308-07

TRANSFER CASE - VEHICLES WITH: SINGLE SPEED TRANSFER CASE

TRANSFER CASE REAR OUTPUT SEAL (G1727532)

REMOVAL AND INSTALLATION

		3000 CC, TDV6, DIESEL, WITH PARTICULATE FILTER, WITH DIESEL EXHAUST FLUID			
41.20.54	OIL SEAL(S) - REAR OUTPUT SHAFT - RENEW		5.1	USED WITHINS	+

SPECIAL TOOL(S)



204-525-
1

Replacer, Drive
Flange



205-726




E87692

205-726

Remover/Installer,
Wheel Hub Bearing




308-637

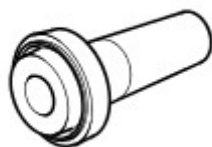

E55697

308-637


Installer

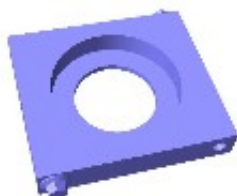

E15 8795

JLR-308-927

Support Tool,
Transfer Case

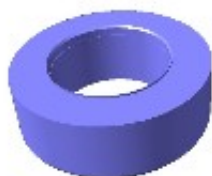

E15 8797

JLR-308-931

Remover, Transfer
Case Flange

PART(S)

STEP	REPLACE PART / RENEW PART	PART NAME
Installation Step 4	Renew Part	Transfer case rear output shaft snap ring

REMOVAL

NOTE:

Some variation in the illustrations may occur, but the essential information is always correct.

1. Disconnect the battery ground cable.
Refer to: [Specifications](#) (414-00 Battery and Charging System - General Information, Specifications).

2. **WARNING:**

Make sure to support the vehicle with axle stands.

Raise and support the vehicle.

3. Refer to: [Transfer Case Draining and Filling](#) (308-07B Transfer Case - Vehicles With: Single Speed Transfer Case, General Procedures).
4. Refer to: [Transfer Case - GTDi 2.0L Petrol](#) (308-07B Transfer Case - Vehicles With: Single Speed Transfer Case, Removal).


5.

WARNING:

Eye protection must be worn.

CAUTION:


Make sure the bolt holes are clean and free of swarf.

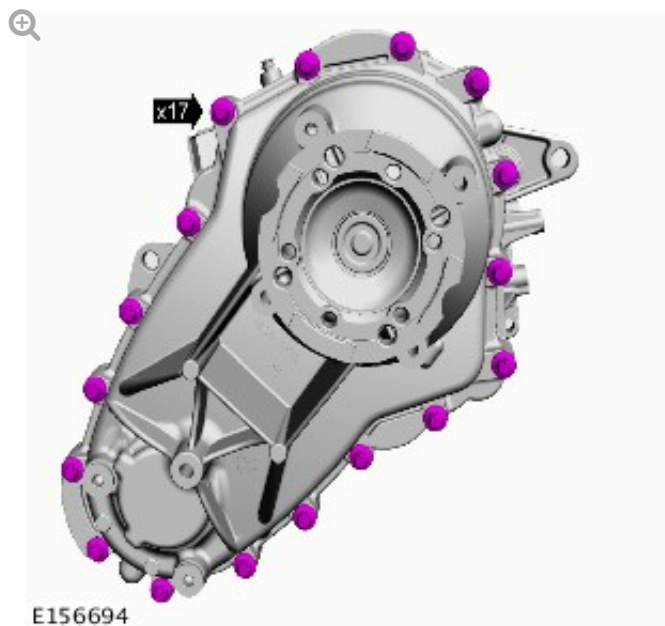

6.

CAUTION:


Care must be taken to avoid damage to the mating surfaces.

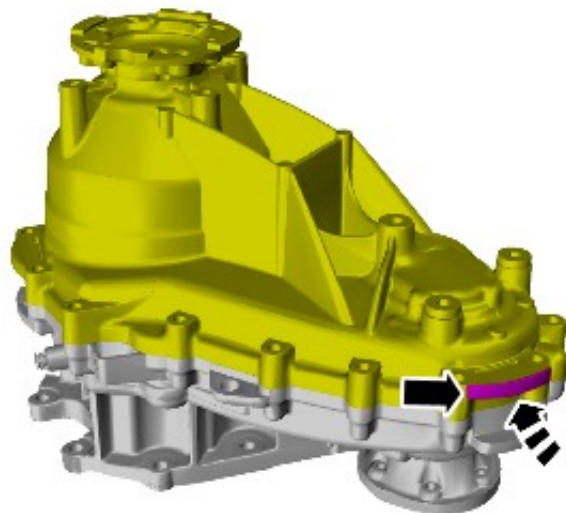

E156613

Using a soft faced mallet, release the rear casing.

7.

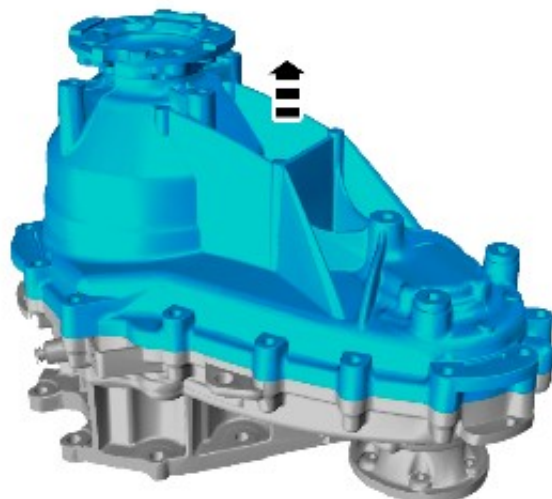

E156614


8.

CAUTION:

Make sure that the mating faces are clean and free of foreign material.

Remove the sealant from the transfer case mating faces.


9.

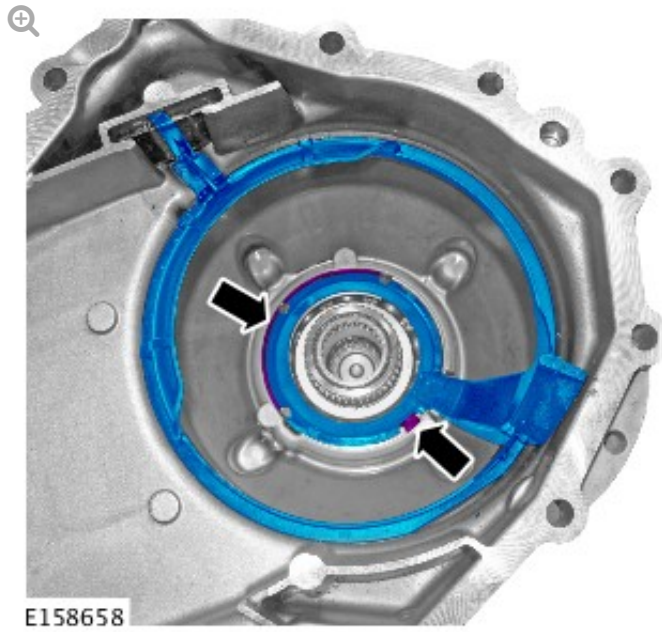


10.

NOTE:


Note the orientation of the component prior to removal.

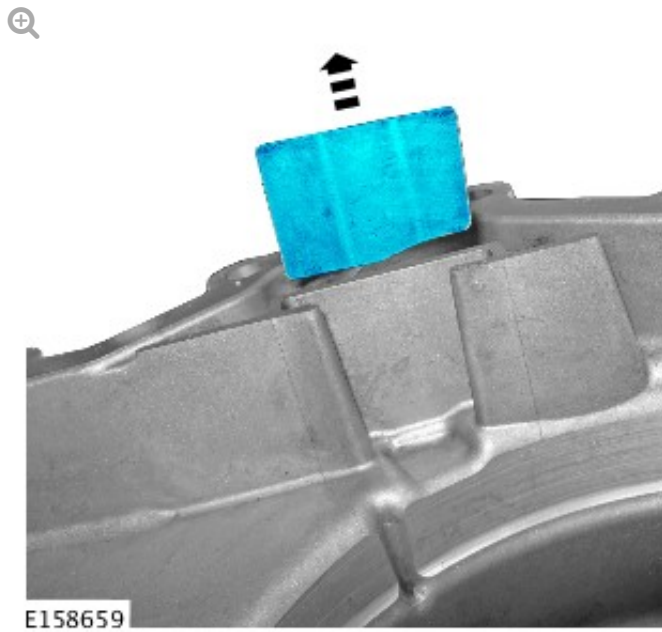

11.

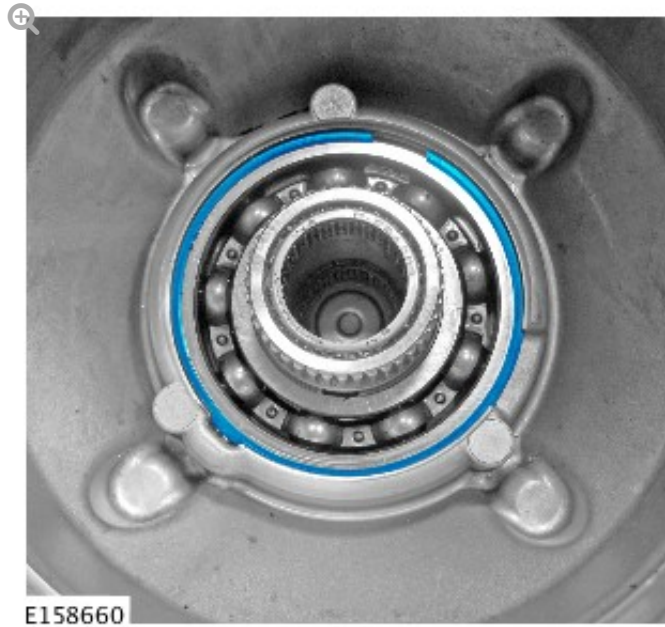

12.

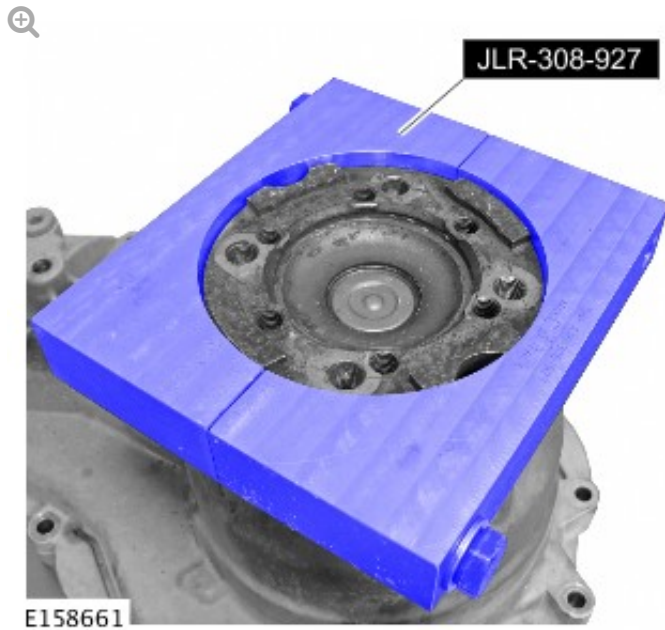


Special Tool(s): [JLR-308-927](#)

13.

CAUTION:

Make sure that the special tool is correctly located. This will make sure that the snap ring is fully compressed during the next step.

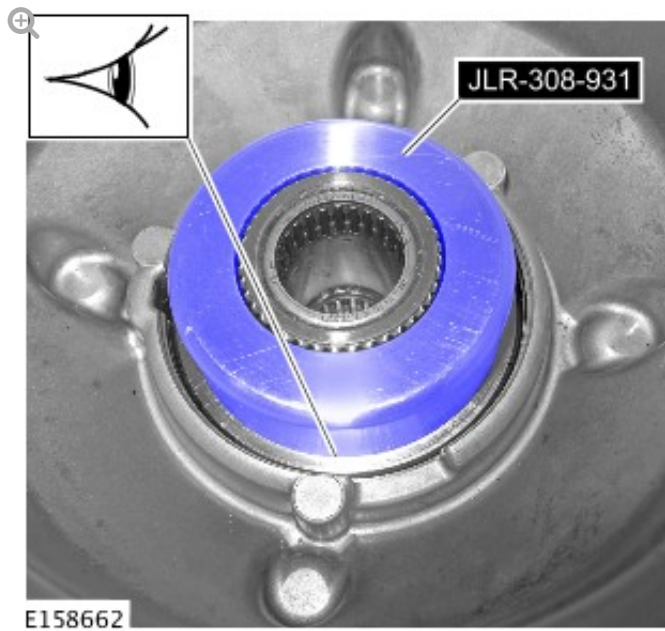


Special Tool(s): [JLR-308-931](#)

14.

CAUTIONS:

- Do not use excessive force whilst removing the flange assembly.
- Discard the snap ring.

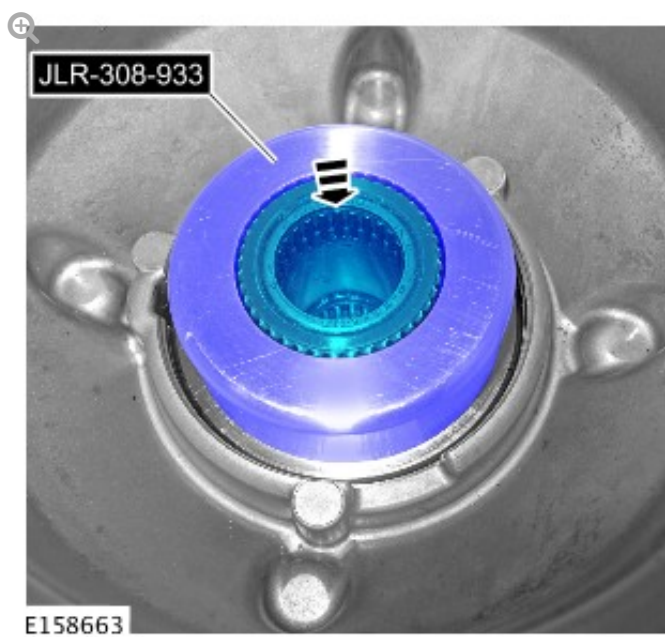

15.



E158664

16.




E158665

INSTALLATION

CAUTION:

During the installation, make sure that all components are clean and free from foreign material.

1.

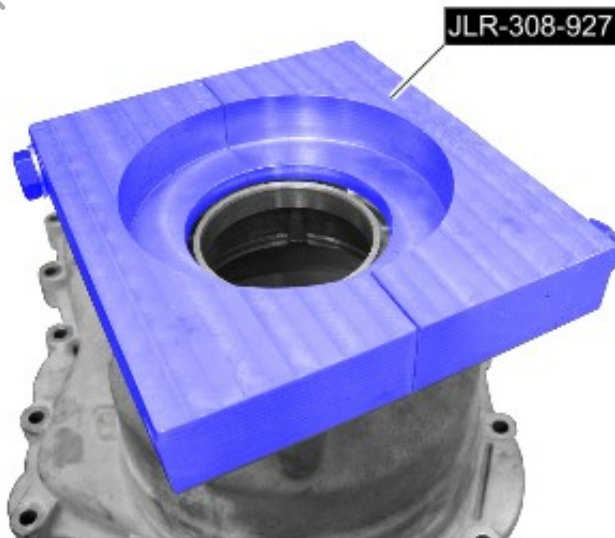

E158666

Position the special tool as shown, to support the transfer casing during the next step.

Special Tool(s): [JLR-308-927](#)

2.

CAUTION:

The chamfer on the bearing inner track must face the seal.



Install the bearing.

Special Tool(s): [205-726](#)

3.




Install the seal.

Special Tool(s): [308-637](#)

4.

CAUTIONS:

- Centralise the snap ring in the snap ring groove before installing the output flange.
- Extreme care is necessary to make sure the snap ring enters the bearing squarely.
- Install a new snap ring.

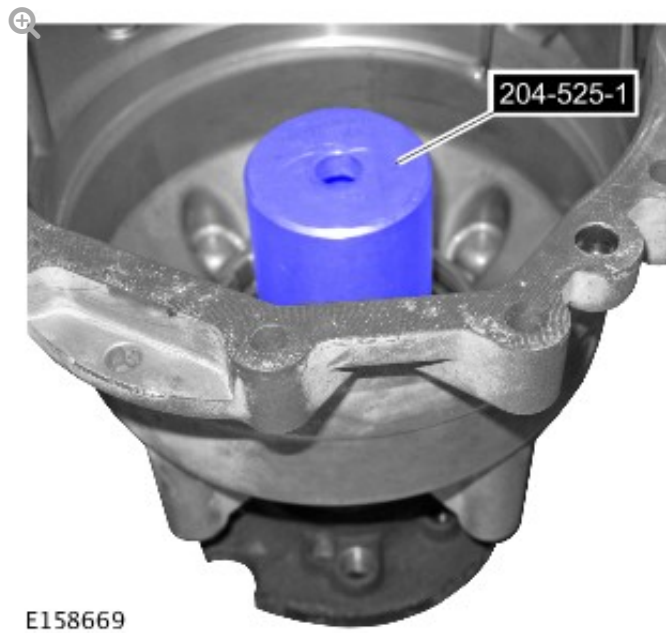


Using the special tool and with assistance, install the drive flange.

Special Tool(s): [204-525-1](#)

Renew Part: [Transfer case rear output shaft snap ring.](#)


5.

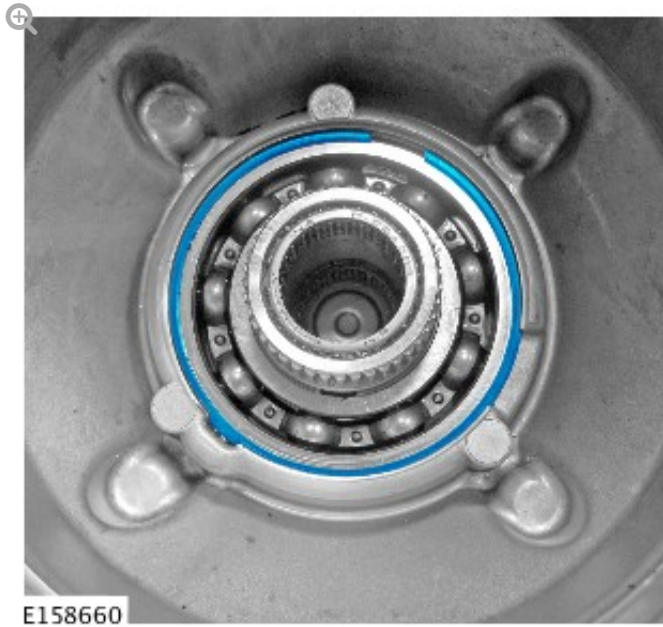

6.

CAUTIONS:

- Make sure that the component is installed to the noted removal position.
- Make sure that the component is clean and free of foreign material.

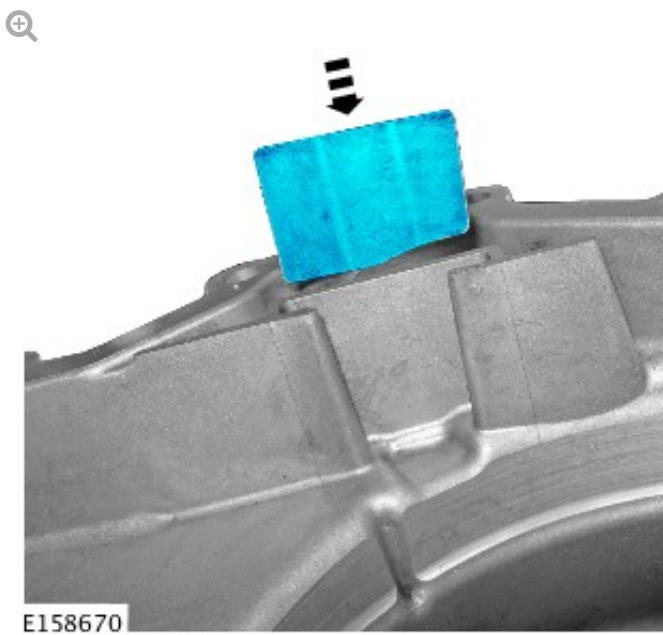


7.

CAUTION:


Make sure that the retaining tangs are installed correctly.

NOTE:

Make sure that the component is correctly installed.

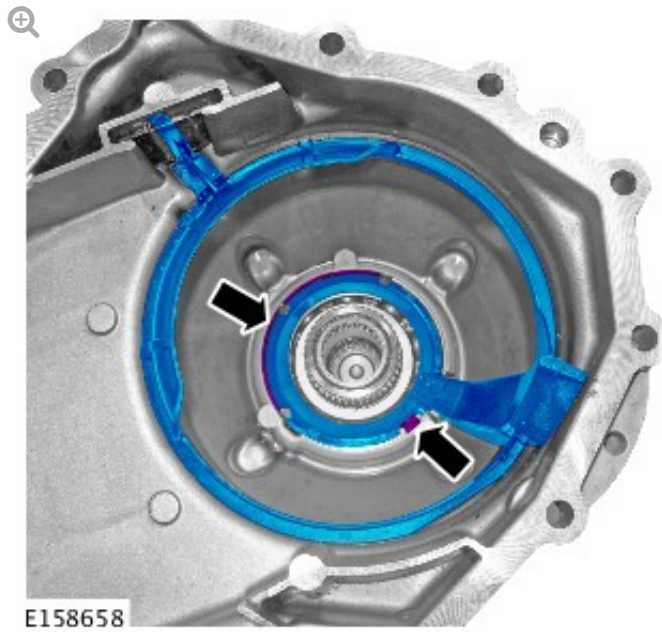


8.

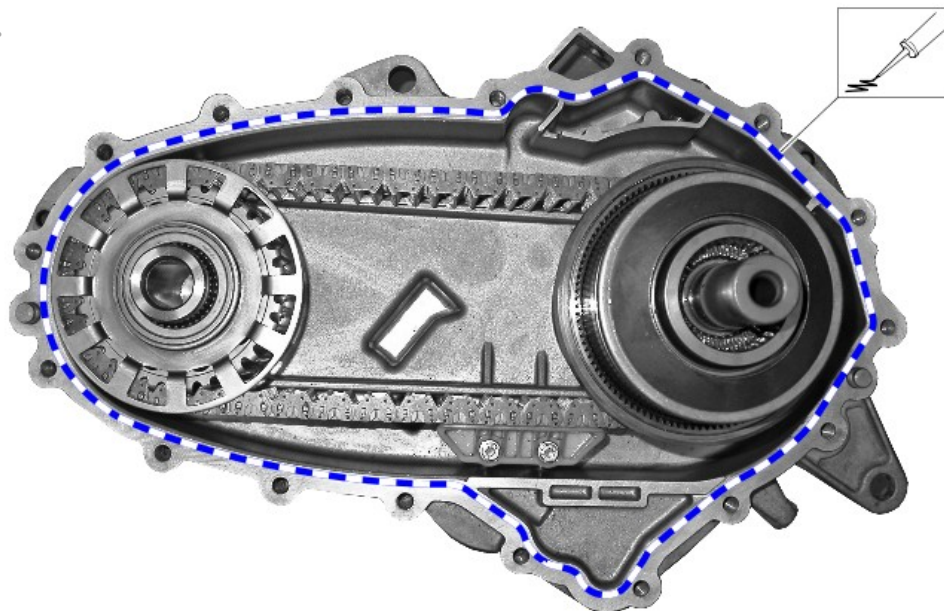

E156774

Apply a 2 mm bead of sealant to one surface of the transfer case mating face, as shown.

9.

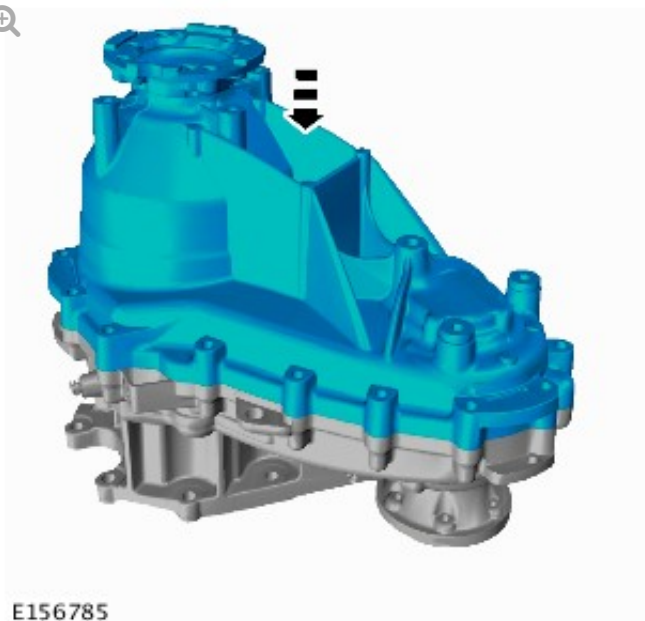


E156785


10.

CAUTION:

Only tighten the bolts finger-tight at this stage.

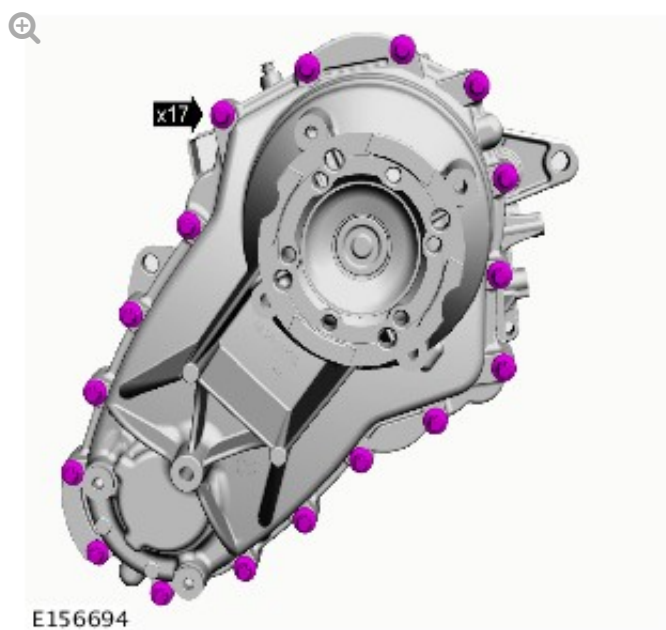


11.

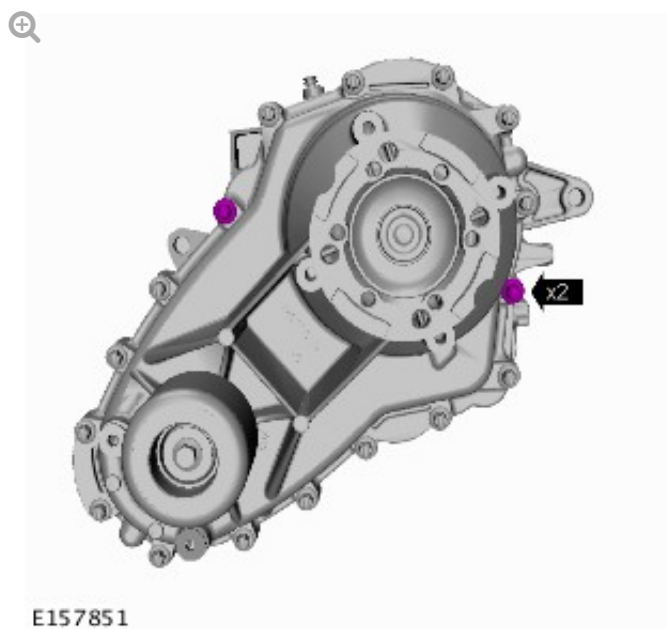

Torque: 10 Nm

12.

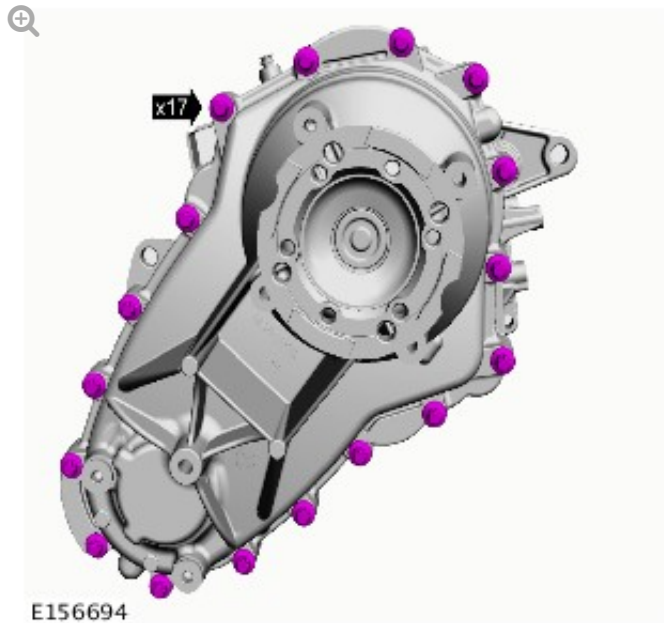

Torque: 35 Nm

13. Refer to: [Transfer Case - GTDi 2.0L Petrol](#) (308-07B Transfer Case - Vehicles With: Single Speed Transfer Case, Installation).
14. Refer to: [Transfer Case Draining and Filling](#) (308-07B Transfer Case - Vehicles With: Single Speed Transfer Case, General Procedures).
15. Refer to: [Specifications](#) (414-00 Battery and Charging System - General Information, Specifications).